

ATLANTA DIVISION TIMETABLE NO.1

EFFECTIVE THURSDAY, OCTOBER 1, 2015 AT 0001 HOURS CSX STANDARD TIME

M. McGee Division Manager

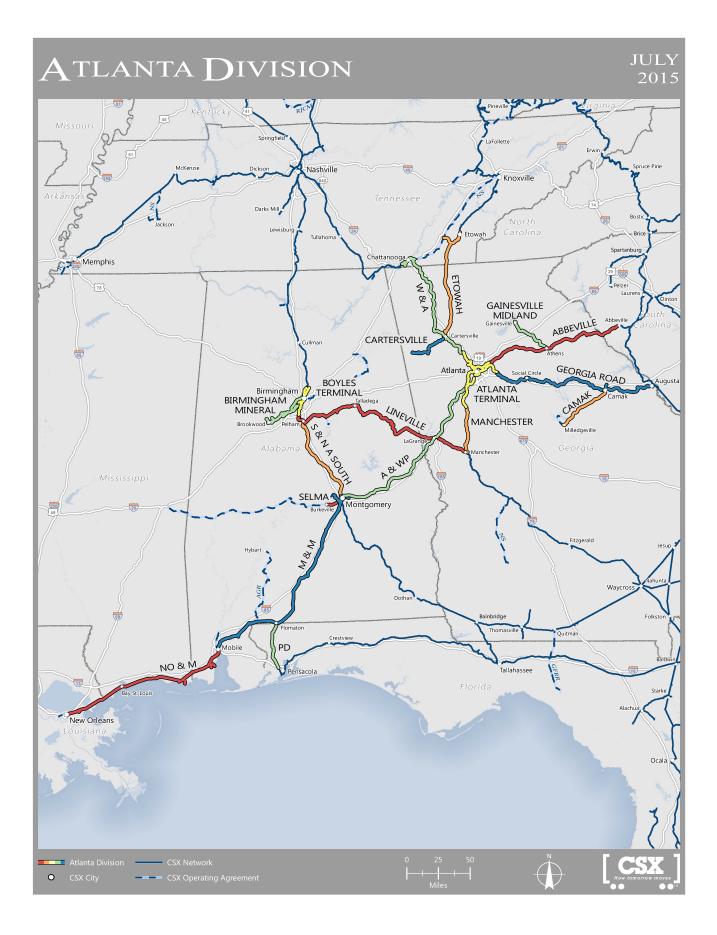


TABLE OF CONTENTS

GENERAL INFORMATION

NAME	PAGE
Table of Contents	I
Emergency Assistance	I
Timetable Legend	11
Sample Subdivision	111
Division Officers	IV
Division Dispatchers	IX

SUBDIVISIONS

NAME	CODE	DISP	PAGE
A&WP	AW	AE	1
ABBEVILLE	AV	AF	11
ATLANTA TERMINAL	AA	AD	19
BIRMINGHAM MINERAL	YB	AB	43
BOYLES TERMINAL	BU	AB	51
САМАК	CA	AF	61
CARTERSVILLE	ZA	AC	65
ETOWAH	ET	AC	69
GAINESVILLE MIDLAND	GM	AF	77
GEORGIA	GA	AF	81
LINEVILLE	LN	AE	87
M&M	MM	AA	99
MANCHESTER	MS	AD	111
NO&M	NM	AA	115
PD	PD	AA	131
S&NA SOUTH	SS	AB	135
SELMA	SA	AB	141
W&A	WA	AC	143

DIVISION SPECIAL INSTRUCTIONS

NAME	PAGE
ATLANTA	DSI 1

CONTACT NUMBERS

r		
EMERGENCY CONTACT VIA RADIO Using the Dispatcher Channel, press 9 on the DTMF Key Pad to initiate an emergency call into the Operations Center Office. (Former Conrail Territory will press 9-1-1 on the DTMF Key Pad)		
Network Operations		
	(RNX) 322-7551	
	(BELL) 904-359-7551	
Public Safety Coordination Center		
Police Fire Department		
Unsafe Motorist Reporting		
Company Hazardous Materials Hot Line		
	(BELL) 800-232-0144	
Employee Assistance Group		
	(BELL) 800-657-3366	

ATLANTA DIVISION CONTACT NUMBERS

Safety Hot Line

Accident Hot Line

(BELL) 800-232-0144

Hazardous Material Hot Line

(RNX) 377-2556

(BELL) 800-579-2563

Chief Train Dispatcher

(RNX) 377-2556 (BELL) 404-720-2556

Director Train Operations

(RNX) 377-2558 (BELL) 404-720-2558

STATION LISTING AND DIAGRAM PAGES

1 – HEADING

The subdivision is identified by name and by 2 character identifier.

2 – COLUMN HEADINGS AND LISTINGS

A. AUTHORIZED SPEED

The authorized speed permitted between mileposts listed may also include restrictions over road crossings or other defined locations. Where speeds differ between various classes of trains, they will be listed in separate columns.

Abbreviations used are (P) - Passenger,

(F) – Freight, (I) – Intermodal, (U) – Unit. Where speeds differ in multiple track territory, the speeds for individual tracks will be listed. City Ordinance speeds will be shown in shaded blocks.

B. MILEPOST

The alpha-numeric reference point identifying a specific track location on a subdivision. At locations to check speed indicators the mileposts may be listed without alpha prefixes and will be shown with a wide border.

		20.0
c.	STATION	29.0

A named reference point identifying a specific track location on a subdivision.

D. TRACK DIAGRAM

The timetable assigned direction from the first listing to the last is defined above the track diagram by arrows and direction.

E. AUTH FOR MOVE (AUTHORITY FOR MOVEMENT)

The authority for movement rules applicable to the subdivision are listed below this box.

F. NOTES

Where station page information may need to be further defined, a number will refer to "STATION PAGE NOTES" listed at the end of the diagram.

3 – SYMBOLS USED

A. TRACK

N – North S – So	uth E – East W – West
YL – Yard Limits	
NB – Northbound	NE - North End
SB – Southbound	SE - South End
EB – Eastbound	EE - East End
WB- Westbound	WE - West End

B. SPEED REFERENCES

SP – Refer to Speed Tables

Where a speed is shown in the Authorized Speed Column of the Station Listing and Diagram pages or the Additional Speed Table, the speed shown is the maximum speed and does not supersede any additional requirements that may be imposed by Rules, System Bulletins, Division Bulletins, Dispatcher messages or form EC-1.

C. ABBREVIATIONS SHOWN BELOW ARE ALSO FOUND IN SPECIAL INSTRUCTION PAGES

ABS	Automatic Block Signal Rules
CONN	Connection Track
Cont	Continuous
CPS	Control Point Signal Rules
CSDG	Controlled Siding
DB	Drawbridge
DD	Defect Detector
FP	Facing Point
HE	Head End Only
HP	Hold Point
HIWI	Clearance Detector
IND	Industry Track
ΟΤΜΤ	Other Than Main Track
(P)	Passenger Station
PAS	Power Assisted Switch
PM	Passenger Main
RCS	Remote Control Switch
RRX	Railroad Crossing at Grade
SDF	Slide Detector Fence
SDS	Slide Detector Signal
SG	Single
SR	Self Restoring Power Operated Switch
SS	Spring Switch
STG	Storage
SSDG	Signaled Siding
то	Turnout
WID	Wheel Impact Detector
XOVER	Crossover
YD	Yard

D. ROAD CROSSINGS

Crossing Types:	
FQ – Four Quadrant Gates	

- **Types of Activation:** C – Conventional Track Circuits
- LO Location PB – Public Crossing
- M Motion Sensor P – Speed Predictor
- PC Private Crossing
- PD Pedestrian Crossing
- PS Passenger Station

E. DEFECT AND CLEARANCE DETECTORS

HBD – Hot Box Detector

DED – Dragging Equipment Detector


HIWI – High or Wide Clearance Detector

F. COMMUNICATIONS TEXT BOXES

Communications text boxes show Dispatcher, Operator, Yardmaster or other station. AAR channel, call-in tone and where used, the number of "clicks" to call the station. If there is a separate road channel it will be shown as "RD –".

CM DISP	
094-7	
RD - 008	

LEGEND - SAMPLE SUBDIVISION - SS

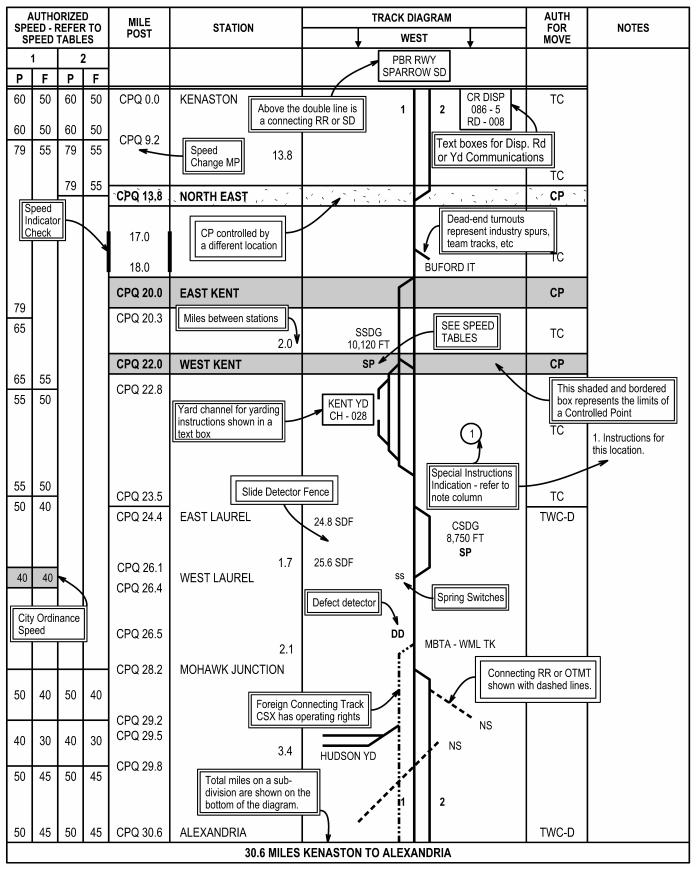

Atlanta 1590 Marietta Blvd, N.W. Atlanta,GA 30318

M. McGee Division Manager

Division Phone Numbers		
	RNX	BELL
Division Manager	377-5075	404-350-5075
Assistant Division Manager	377-5147	404-350-5147
Manager of Safety and Operating Practices	377-5340	404-350-5340
Superintendent Train Operations	377-2559	404-720-2559
Senior Road Foreman of Engines	377-5066	404-350-5066
Division Engineer	377-5074	404-350-5074
Division Signal Engineer	377-5380	404-350-5380
Mechanical Superintendent	377-5312	404-350-5312
Engineer Track - Atlanta North	377-5288	404-350-5288
Engineer Track - Atlanta East	377-5393	404-350-5393
Engineer Track - Birmingham	296-2491	205-849-2491
Engineer Track - Mobile	299-1409	251-434-1409
Staff Engineer	377-5274	404-350-5274
Assistant Division Engineer, Structures	377-5151	404-350-5151

	Tilford Yard 1590 Marietta Blvd Atlanta, GA 30318-3699	
TITLE	<u>RNX</u>	BELL
Terminal Superintendent	377-5270	404-350-5270
Assistant Terminal Superintendent	377-5335	404-350-5335
Terminal Trainmaster	377-5313	404-350-5313
Trainmaster	377-5045	404-350-5045/850-324-6228

	Mobile 2000 Industrial Canal Rd Mobile, AL 36602		
TITLE	RNX	BELL	
Terminal Manager	299-1300	251-434-1300	
Terminal Trainmaster	299-1390	251-434-1390	

	New Orleans	
	6701 Almonaster	
	New Orleans, LA 70126	
TITLE	<u>RNX</u>	BELL
Terminal Manager	295-7816	504-243-7816
Terminal Trainmaster	295-4340	504-244-4340
	Etowah	
	P.O. Box 331	
	Etowah, TN 37331	
TITLE	BELL	
Trainmaster	423-263-7	7991
	Fairburn	
	CSX Intermodal - Fairburn Terminal	
	Fairburn, GA 30213	
TITLE	BELL	
Trainmaster	770-964-6	6420
	Athens	
	900 East College Street	
	Athens, GA 30601	
TITLE	BELL	
Trainmaster	800-241-3	3657
	Calera	
	7907 Hwy 31 P.O. Box 153	
	Calera, AL 35040	
TITLE	BELL	
Trainmaster	205-668-4	117
1	Birmingham	
	Biringilan	
	2800 Seaboard Rd	
	2800 Seaboard Rd Birmingham, AL 35217	
	2800 Seaboard Rd Birmingham, AL 35217	
TITLE	2800 Seaboard Rd Birmingham, AL 35217 <u>RNX</u>	BELL
Terminal Superintendent	2800 Seaboard Rd Birmingham, AL 35217 <u>RNX</u> 296-2503	205-849-2503
	2800 Seaboard Rd Birmingham, AL 35217 <u>RNX</u>	

	Bessemer	
	571 Powder Plant Rd	
	Bessemer, AL 35022	
TITLE	RNX	BELL
Trainmaster	292-6950	205-417-6950
Trainmaster	292-6912	205-417-6912
	Montgomery	
	1250 Louisville St	
	Montgomery, AL 36104	
TITLE	RNX	BELL
Terminal Manager	284-9297	334-241-9297
Terminal Trainmaster	284-9230/284-9231	334-241-9230/334-241-9231
	Manchester 110 Depot St	
	Manchester, GA 31816	
<u>TITLE</u>	<u>RNX</u>	BELL
Trainmaster	354-0238	706-846-0238
	Social Circle	
	200 South Dogwood Ave	
	Social Circle, GA 30025-9688	
TITLE	BELL	
Trainmaster	 770-464-:	2877
	Pascagoula	
	5404 Denny Ave Pascagoula, MS 39581	
	Fascayoula, No 59501	
TITLE	BELL	
Trainmaster	228-762-2	2355
	Greenwood 203 Burnett Rd	
	Greenwood, SC 29646	
<u>TITLE</u>	BELL	0400
Trainmaster	864-227-	9489

Cartersville 150 West Porter Street Cartersville, GA 30120

<u>TITLE</u> Trainmaster

<u>BELL</u> 770-607-0779

	Line of Road Trainmasters									
OFFICE LOCATION	SUBDIVISION(S)	<u>RNX</u>	BELL							
Athens, GA	AV	354-6517	706-543-6517							
Bessemer, AL	YB	292-6950	205-417-6950							
Calera, AL	SS		502-954-2944							
Cartersville, GA	WA		770-607-0779							
Etowah, TN	ET, ZA		423-263-7883							
Social Circle, GA	GA		770-482-5123							
Manchester, GA	LN, MS	354-0223	706-846-0223							
Mobile, AL	MM, PD		251-296-5178							
Mobile, AL	NM		251-296-2612							
Montgomery, AL	AW, SA	284-9202	334-241-9202							
Pascagoula, MS	NM		228-762-2355							
Social Circle, GA	CA, GA		707-464-2877							
Talladega, AL	LN		256-362-0198							
Tucker, GA	GM	294-2280	678-985-2280							

Road Foreman of Engines										
OFFICE LOCATION	SUBDIVISION(S)	<u>RNX</u>	BELL							
Dacula, GA	AV, GM		678-985-3618							
Birmingham, AL	BU, SS, YB	296-2529	205-849-2529							
Cartersville, GA	AA, WA		770-607-0779							
Etowah, TN	ET, ZA	354-7991	423-623-7991							
Social Circle, GA	CA, GA		770-464-0452							
Mobile, AL	NM	299-1389	251-434-1389							
Montgomery, AL	MM, PD	284-9203	334-241-9203							
Montgomery, AL	AW, SA	284-9282	334-241-9282							
Manchester, GA	AW, LN, MS	354-0238	706-846-0238							

Roadmasters								
OFFICE LOCATION	RNX	BELL						
Bay St. Louis		228-467-4232						
Mont. MM	284-9238	334-241-9238						
Flomaton	356-3602	251-296-3602						
Mobile	299-1307	251-434-1307						
Talladega	354-0196	256-362-0196						
Birmingham (Boyles)	296-2499	205-849-2411						
Mont. AW	284-9275	334-705-4997						
Social Circle		770-464-4570						
Camak		706-465-3554						
Atlanta / Tilford	377-5336	404-350-5336						
Athens		706-369-9052						
Cartersville	352-5329	770-386-3096						
Etowah	354-1475	423-263-1475						
Union City	391-4987	770-306-4987						
Lagrange	354-0823	706-884-0823						
Birmingham SS/YB	296-2411	205-849-2411						

Mechanical Department								
OFFICE LOCATION	BELL							
Atlanta	404-350-5233 / 404-350-5213 / 404-350-5302							
Birmingham	205-849-2424 / 205-849-2597 / 205-849-2527							
Montgomery	334-241-9254							
Mobile	251-434-1445							
New Orleans	504-244-4367							

Train Dispatch	ing Operations								
1590 Marietta Blvd, N.W. Atlanta, GA 30318 Director Train Operations 377-2558(Rnx) 404-720-2558(Bell) Chief Train Dispatcher									
TITLE	RNX	BELL	FAX						
AA Dispatcher M&M, NO&M, PD	377-2550 377-2663	404-720-2550 404-720-2663 800-628-4729							
AB Dispatcher Boyles Terminal, S&NA South, Birmingham Mineral, Selma	377-2551 377-2664	404-720-2551 404-720-2664 800-445-5506							
AC Dispatcher Cartersville, Etowah, W&A	377-2552 377-2566	404-720-2552 404-720-2566 800-445-5517							
AD Dispatcher Atlanta Terminal, Manchester	377-2553 377-2567	404-720-2553 404-720-2567 800-854-5697							
AE Dispatcher A&WP, Lineville	377-2554 377-2568	404-720-2554 404-720-2568 800-445-5512							
AF Dispatcher Abbeville, Camak, Gainesville Midland, Georgia	377-2555 377-2569	404-720-2555 404-720-2569 800-628-4704							

Notes

SPE	UTHO ED - F PEED 1	REFEF	₹ТО	MILE POST	STATION	TRACK DI		AUTH FOR MOVE	NOTES
SIN	1 GLE	2	2				&M SD		
Ρ	F	Ρ	F						
30	30	30	30	000 665.2	SIBERT	AA DISP		СР	
					0.2	094 - 3 RD 084	SSDG 7,100 FT SP	TC	
				000 665.4	ALABAMA STATE DOCKS	TASD	TASD YD	СР	
30 45	30 45	30 30	30 30	000 666.0	1.6	1	2	тс	
		30	30	000 667.0	CHOCTAW			СР	
					1.4	000 668.2	CHOCTAW YD TASD MCDUFFIE ISLAND	TC	
				000 668.4	IC INTERLOCKING	CNIC		СР	
					1.3	000 668.5	MCDUFFIE ISLAND (BAYSIDE) CNIC	тс	
				000 669.7	NE BROOKLEY	\sim	*	СР	
45 75 79	45 60			000 670.0 000 671.5	2.1	SSDG 10,395 FT SP	BROOKLEY IND PARK	тс	
				000 671.8	SE BROOKLEY	L L		СР	
				672.0				тс	
				673.0 000 674.9		DD			
					13.8	SEA-PAK	000 675.7		
						000 679.2			
				000 000 5		000 679.5			
				000 683.5 000 685.6	NE SAINT ELMO	DD		TC CP	
				000 000.0		HOUSE		UF	
					1.7	TRK CSDG 8,800 FT		тс	
				000 687.3	SE SAINT ELMO	SP		СР	
				000 001.3				TC	
79	60								

SPE	ED - F	DRIZED REFER TO TABLES	MILE POST	STATION	TRACK DIAGRAM	AUTH FOR MOVE	NOTES
SING		2			•	•	
P	F	PF					
79	60		000 696.5	10.0	DD		
60			000 698.9	12.0		TC	
			000 699.3	NE ORANGE GROVE	CSDG	СР	
				1.9	8,910 FT SP	TC	
			000 701.2	SE ORANGE GROVE		СР	
	60 50		000 703.0			TOTE TC TRK NDUSTRIAL PARK	
				5.3	BAYOU CASSOTTE YD 000 704.0		
60	50						
45	45		000 704.8		MSE 000 706	5.0 TC	
			000 706.5	NORTH PASCAGOULA		СР	
45	45			0.5	NAVY TRK	то	
30	25		000 706.8	0.5	DB	TC	
	20		000 706.9				
60	45		000 707.0	SOUTH PASCAGOULA	SP	СР	
79	50		000 707.2	2.8		YATTS YD TC	
60	50		000 709.3				
79	60		000 709.8	NE GAUTIER	DD	СР	
				1.7	CSDG 7,760 FT SP	тс	
			000 711.5	SE GAUTIER	Ч	СР	
79	60				GAUTIER ROCK V 000 712	тс	

SPE	ED - F	ORIZED REFER TO TABLES	MILE POST	STATION	TRACK D	IAGRAM	AUTH FOR MOVE	NOTES
					↓ 300	5111 \	MOVE	
SIN		2						
Р	F	ΡF					_	
79	60		000 718.3					
	50		000 719.3	10.8	DD		то	
79	00		000 720.0				тс	
45	45		000 720.0 000 722.3	NE OCEAN SPRINGS			СР	
45	45		000 122.0		0000		01	
60	50		000 722.4		CSDG 3,000 FT			
00	50			0.8	SP		тс	
				0.0	COASTAL			
			000 723.0		STG 5 CARS			
			000 723.1	SE OCEAN SPRINGS			СР	
60	50		000 724.3		DB		тс	
30	25				55			
60	60		000 724.4					
60	60		000 725.4	7.1				
45	45			7.1				
45	45							
60	50		000 728.0				TC	
			000 730.2	NE BEAUVOIR			СР	
				1.7	CSDG 7,930 FT SP		тс	
			000 731.9	SE BEAUVOIR			СР	
			000 734.5		DD		тс	
60	50		000 735.8					
45	45				MISSISSIPPI CITY			
			000 739.3			000 735.9		
			000 739.4	13.1	KCS			
			000 700.4		100			
					LUMBER YD			
45	45					000 741.7		
60	50		000 744.4				TC	
			000 745.0	NE HARBIN			СР	
				1.9	HARRISON COUNTY SPUR 000 746.3	CSDG 8,880 FT SP	тс	
			000 746.9	SE HARBIN	000 / 40.0		СР	
60	50							
45	45		000 748.5				тс	

SPE		ORIZED REFER TO	MILE	STATION	TRACK D	IAGRAM	AUTH FOR	NOTES
SF	PEED	TABLES	POST		soi	лтн 🕇	FOR MOVE	
SIN	1 GLE	2						
Ρ	F	ΡF						
45	45		000 749.7		DD		тс	
60	60		000 750.2					
30	25		000 752.5		DB			
60	60	1	000 752.7	7.7				
45	45		000 754.0					
					BAY ST LOUIS HOUSE TRK	000 754.5	тс	
			000 754.6	NE NICHOLSON AVE			СР	
45 60	45 50		000 755.1	1.8	CSDG 8,580 FT SP		тс	
00	50		000 756.4	SE NICHOLSON AVE	3F		СР	
60							TC	
79			000 756.9		WAVELAND HOUSE TRK	000 758.1		
	50 60	-	000 758.5	9.8				
	60		000 761.7		DD			
			000 764.1		PBVR		тс	
			000 766.2	NE CLAIBORNE			СР	
				1.9	SSDG 9,000 FT SP		тс	
_			000 768.1	SE CLAIBORNE			СР	
79	60 25	-	000 768.6				тс	
30 79	25 60	-	000 768.8					
19	00		000 768.9		DB			
			000 770.9		DD	NORTHSIDE		
79	60				000 773.5	NORTHSIDE STG TRK 45 CARS		
79 60	60 45	1	000 774.5	12.1	000773.5			
		1	000 775.3					
30	25		000 775.4		DB			
79	60	1	000 775.6					
79	60						тс	

SPE	ED - F	orize Refef Tabli	а то	MILE POST	STATION	TRACK D			F	JTH OR OVE	NOTES
SIN P	1 GLE F	2 P	2 F								
79	60			000 776.3			5	RIGOLETS HOUSE TRK	Т	Ċ	1. Between 000 799.2
				000 780.2	NE LAKE CATHERINE				C	P	North Gentilly and
					1.7			SSDG 7,400 FT SP	Т	C	000 802.7 (NE Tower) EC-1E authority will be obtained by contacting the
				000 781.9	SE LAKE CATHERINE	DD	\mathbf{N}		C	P	Gentilly Yardmaster.
				000 787.1					Т	С	
79	60			000 787.1		DB					
30	25			000 787.3							
60	60				11.2						
79				000 787.7							
				789.0 790.0							
				000 791.8		DD			т	C	
79	60			000 793.1	MICHOUD			2		P	
60	60	40	40		2.8	000 793.3 000 793.9		MICHOUD IND SPUR MICHOUD STG 30 CARS	Т	Ċ	
				000 795.9	PARIS ROAD				C	P	
					3.3	1		2	Т	Ċ	
60	60	40	40	000 799.2	NORTH GENTILLY	SP			С	P	
40	20				2.2	000 799.3 000 800.0 000 800.5 CSX TRANSFLO		GENTILLY YD	T (Yl	C S)	
		20	20	000 801.2 000 801.3 000 801.4 000 801.5	INDUSTRIAL CANAL NOPB	NOPB 1 DB SP	/ 1 /	NOPB 2 NOPB	C	P	
40	20	20	20		1.3	1		2	1 TC (YL-S)	2 COT (YL-S)	

SPE	AUTHO ED - F PEED	REFEF	а то 🛛	MILE POST	STATION	TRACK DIAGRAM		FC	ITH DR DVE	NOTES		
SIN	1 GLE		2									
Р	F	Ρ	F									
40	20	20	20	000 802.7	NO&NE TOWER INTERLOCKING (NS CONTROLLED)		·	==- (1	1	2	2. Between 000 802.7 (NE Tower) and
40	20	20	20	000 803.5	1.0			NS CHART	2	TC (YL-S)	COT (YL-S)	000 803.7 (NOT Junction) on track authority will be obtained by contacting NS Dispatcher and receiving
15	15	15	15	000 803.7	NOT JUNCTION		1	2				T-A-1.1 track authority by calling 205-451-4742.
\vdash					138.5 MILE	NS S SIBERT TO NO						

NO&M SUBDIVISION - NM BACK BELT - NS

AUTHO		MILE	STATION	TRACK DIAGRAM	AUTH	NOTES
SPEED		POST	STATION	south	FOR MOVE	NOTES
SOUTH BOUND	NORTH BOUND		CSX ST ROCH	NS	NS RULES	1. Between Carrolton Road
30	30	, 7.0	ELYSIAN FIELDS	NS 08-08	RULES	NS Milepost 2.4A and Labar Road NS Milepost 0.8A, do not use the engine horn or bell except in emergency.
			0.3	RD 056		2. CNIC Dispatcher Radio Channel is 054-054.
		6.7	FRENCHMAN ST	SP		
			0.8			
		5.9	PARIS (NS CONTROLLED)			
		5.3	0.6 DENTAL SCHOOL 1.1	SOUTHWARD		
		4.2	MARCONI DR	NORTHWARD		
		, 3.7 3.5A	EAST CITY JCT EAST CITY (NS CONTROLLED)	SP FAST CITY JCT		
			0.8			
30 RESTRICT	30 ED SPEED	2.7A 2.2A	17TH ST CANAL 0.5 METARIË RD (NS CÓNTROLLED)	âb, J		
			1.6	KCS		
		0.6A	SHREWSBURY (NS CONTROLLED)			
		0.0A	0.6 IC CONNECTION IC MAYS YD (NS CONTROLLED)	CNIC KCS CNIC 2 E BRIDGE NOPB TOWER W MAIN		
		UP	TO HUEY	ЛОРВ	NS	
		AVONDALE	P LONG	E MAIN	RULES	

NO&M SUBDIVISION SPECIAL INSTRUCTIONS

1. INSTRUCTIONS RELATING TO OPERATING RULES

AUTHORIZED SPEEDS -- NO&M

Trk	MP/Location	Р	F
Both	000 665.2 - 666.0	30	30
1	000 666.0 - 667.0	45	45
2	000 666.0 - 667.0	30	30
SG	000 667.0 - 670.0	45	45
SG	000 670.0 - 671.5	75	
SG	000 671.5 - 698.9	79	60
SG	000 698.9 - 703.0		
SG	000 703.0 - 704.8	60	50
SG	000 704.8 - 706.8	45	45
SG	000 706.8 - 706.9	30	25
SG	000 706.9 - 707.2	60	45
SG	000 707.2 - 709.3	79	- 0
SG	000 709.3 - 709.8	60	50
SG	000 709.8 - 718.3	=0	60
SG	000 718.3 - 720.0	79	50
SG	000 720.0 - 722.4	45	45
SG	000 722.4 - 724.3	60	50
SG	000 724.3 - 724.4	30	25
SG	000 724.4 - 725.4	60	60
SG	000 725.4 - 728.0	45	45
SG	000 728.0 - 735.8	60	50
SG	000 735.8 - 744.4	45	45
SG	000 744.4 - 748.5	60	50
SG	000 748.5 - 750.2	45	45
SG	000 750.2 - 752.5	60	60
SG	000 752.5 - 752.7	30	25
SG	000 752.7 - 754.0	60	60
SG	000 754.0 - 755.1	45	45
SG	000 755.1 - 756.9	60	50
SG	000 756.9 - 758.5	70	50
SG	000 758.5 - 768.6	79	60
SG	000 768.6 - 768.8	30	25
SG	000 768.8 - 774.5	79	60
SG	000 774.5 - 775.3	60	45
SG	000 775.3 - 775.6	30	25
SG	000 775.6 - 787.2	79	60
SG	000 787.2 - 787.3	30	25
SG	000 787.3 - 787.7	60	
SG	000 787.7 - 793.1	79	60
1	000 793.1 - 799.2	60	
2	000 793.1 - 799.2		40
SG	000 799.2 - 801.4	40	
1	000 801.4 - 803.5		20
2	000 801.4 - 803.5	20	
Both	000 803.5 - 803.7	15	15

AUTHORIZED SPEEDS -- BACK BELT - NS

Trk	MP/Location	F
Both	7.0 - 2.2 (NB)	20
Both	7.0 - 2.2 (SB)	30

ADDITIONAL SPEEDS (SP) -- NO&M

Location	Track Type	F
000 665.2 - 665.4	SSDG	30
000 669.7 - 671.8	3300	
000 685.6 - 687.3	CSDG	25
000 699.3 - 701.2	CSDG	
000 707.0 - 707.0	TO	10
000 709.8 - 711.5		25
000 722.3 - 723.1		10
000 730.2 - 731.9	CSDG	
000 745.0 - 746.9		25
000 754.6 - 756.4		
000 766.2 - 768.1	SSDG	30
000 780.2 - 781.9	3306	
000 799.2 - 799.2	XOVER	10
000 801.5 - 801.5	XOVER	10

ADDITIONAL SPEEDS (SP) -- BACK BELT - NS

Location	Track Type	F
7.0 - 7.0		
6.7 - 6.7	XOVER	15
3.7 - 3.7		
2.7 - 2.7	TO	20

302.1 LOCATIONS THAT MUST BE APPROACHED PREPARED TO STOP

MP	Location	Hours Attended
000 706.8	Pascagoula River	
000 724.3	Biloxi Bay	Cont
000 752.5	Bay St Louis	
000 768.9	Pearl River	0600-2200
000 775.4	Rigolets	
000 787.2	Chef Menteur	Cont
000 801.4	Ind Canal	

When controlled block signal indicates Stop, in addition to securing permission of train dispatcher to pass such signal, no part of train may be moved on the bridge until proceed signal 12 C is received from the drawbridge tender with green flag by day and yellow light by night or verbal permission is received from drawbridge tender that bridge is in safe condition for movement.

When a bridge tender is not on duty and the bridge is lined for rail movement and permission has been received from the Train Dispatcher to pass such signal as prescribed by Rule 606.1, a member of the crew must ascertain that the draw span and lift rails are in proper position before movement is allowed to proceed.

311 RAILROAD CROSSINGS AT GRADE

MP	Location	RR	Туре	Rule
000 668.4	IC	CNIC	Automatic*	
	Interlocking			504.25
000 739.4	Gulfport	KCS	Automatic	
000 801.5	NOPB	NOPB	Remotely	504.24
	Interlocking		Controlled	

MP	Location	RR	Туре	Rule
000 802.7	NO & NE	NS	Remotely	504.24
	Interlocking		Controlled	

*See instructions in box.

312 HIGHWAY-RAIL CROSSINGS AT GRADE

MP	Location	Instruction
	operating on OTMT & auxiliary trks	Crews must approach xings prepared to stop & not foul the xing until
	operating on CSDG &	warning devices are functioning or flag protection is provided

312.2 HIGHWAY-RAIL CROSSINGS AT GRADE

MP	Location	Instruction
000 672.60	Mobile, AL Navco Rd	Crews will coordinate mvmts with dispatcher & yardmaster at Sibert Yd to avoid blocking xing
000 746.35	Espy Ave Harbin, MS	Crews will coordinate mvmts with dispatcher & other crews to avoid blocking xing

405 SWITCHING EQUIPMENT

MP	Location	Instruction
000 746.3		When making a pick up at this location & the cars have not been shoved to the Main Trk, proceed down the spur to pick up cars. If you are making a setoff, cars must be shoved to clear yellow crosstie approx 45 car lengths from mainline

409 SECUREMENT OF CARS

The following exceptions apply:

MP	Location	Minimum Tested Hand Brakes Required
000 665.2 - 000 799.2	Entire SD	2 on all trains or cars left unattended
000 680.0	Theodore Rock	1 when picking up or
000 703.0	Bayou Cassotte Yard	setting off at this
000 712.0	Gautier Rock	location on cars left standing on mainline or OTMT
000 740.0	Gulfport	3 on any count of cars left unattended in the KCS Yard

MP	Location	Minimum Tested Hand Brakes Required
000 746.3	Harrison County Spur	1 when picking up or setting off at this location on cars left standing on mainline or OTMT
000 801.0	Gentilly Yard	1 on equip left standing when switching in North or South Yards

902.1 REMOTE CONTROL ZONES

Yard Name	Zone Name	Description of Zone
Sibert	North	Begins at a point 20 Ft north of the Kimberly Clark Switch on the Drill Trk to the clearance point in Trk S15, 150 Ft south of Switch 14B
	of South	Southward into Passing Trk, 5- Ft south of the switch giving access to the passing trk at the north end xovers to, but not including the Middle Xover
New Orleans Terminal	of North Yard	Southward into Passing Trk, 50 Ft south of northward dwarf signal on Passing Trk at North Gentilly to, but not including the North End Xover
		Northward into Trk S25, 50 Ft north of switch giving access to Storage Trks to, but not including the Ready Trk Switch

Sign and radio channel information for defined Remote Control Zones:

Yard	Zone	Sign Locations		Radio Channel
Sibert	North	20 Ft north of the Kimberly clark Switch on the Drill Trk & at a point adjacent to 14B Switch, includes the Drill Trk & up to the yellow tie in Trks A1A, S1B & S01 - S15	Cont	018
New Orleans Terminal	North End of South Yard	Southward into Passing Trk, 5- Ft south of the switch giving access to the passing trk at the north end xovers to, but not including the Middle Xover		

Yard	Zone	Sign Locations	Sign Display	Radio Channel
New Orleans Terminal	North End of North Yard	Southward into Passing Trk, 50 Ft south of northward dwarf signal on Passing Trk at North Gentilly to, but not including the North End Xover	Cont	018
	South End of North Yard	Northward into Trk S25, 50 Ft north of switch giving access to Storage Trks to, but not including the Ready Trk Switch		

902.5 INSTRUCTIONS FOR TRAINS, ENGINES, AND ON-TRACK EQUIPMENT

Movements Arriving or Departing Mobile Terminal -Trains, engines or on-track equipment arriving Mobile Terminal will not proceed past Aladocks (000 663.0) without contacting the yardmaster to determine if the remote control zone is activated.

Movements Arriving New Orleans Terminal – Movements into New Orleans Terminal will not pass the following locations without contacting the Yardmaster at Gentilly Yard:

A. Southward from the NO&M SD - south Absolute Signal North Gentilly

B. Northward from the NO&M SD - north Absolute Signal Industrial Canal drawbridge.

All movements will approach the middle crossovers and north end crossovers expecting to find switches locked with a green lock indicating that a remote control zone (RCZ) is activated. If switches are found locked in this manner, contact the remote control operator foreman (RCOF) to obtain permission to enter his zone. No entry into the RCZ will be allowed until authorized by the RCOF.

903 POSITIVE STOP PROTECTION

Positive Stop Protection (PSP) is installed on the North Zone Tracks

Drill Tracks

Locomotive - PSP equipment is installed on the following Mobile Terminal locomotives: CSXT 1144, CSXT 1149, CSXT 2545, CSXT 8212 and CSXT 8214. When PSP locomotives are used in a consist, the PSP equipped locomotive must be the north unit. The First Puck is located at 000 664.3 and the Stop Puck is located at 000 663.5.

1003.6 GENERAL RADIO RULES

MP	Location	Hours	Channels Assigned	Type Station
000 664.3	Mobile		018, 066, 084, 094-3	Terminal

MP	Location	Hours	Channels Assigned	Type Station	
000 665.0	Mobile TASD		066	Terminal	
	Theodore		084, 094-3	Wayside	
000 679.0	Theodore Ind Park		018	Terminal	
000 686.0	St. Elmo		084, 094-3	Wayside	
000 703.0	Pascagoula Ind Lead		018		
000 704.0	Bayou Cassotte Yard		018	Terminal	
000 704.0	Pascagoula - MSE		074		
000 707.0	Watts Yard		018		
000 716.4	Fountainbleau		084, 094-3	Wayside	
000 739.0	KCS		029	Terminal	
000 739.3	Gulfport	Cont	084, 094-3	Wayside	
000 760.4	PBVR	Cont	039	Terminal	
000 764.2	Ansley		084, 094-3	Wayside	
000 799.0	Gentilly		018, 051		
	Gentilly North Yard		051		
	Gentilly South Yatd		018 Termin 084		
000 800.0	Gentilly "RD' & "B" Yards				
	Gentilly		094, 056		
	New Orleans		084, 094-3	Wayside	
000 001 0	New Oleans - NS		008, 056		
000 801.0	New Orleans - CNIC		054	Terminal	

2. INSTRUCTIONS RELATING TO SAFETY RULES

GS-13 RIDING EQUIPMENT

Employees are prohibited from riding the side of equipment at the locations listed in the table below. It is permissible to ride on the platforms of locomotives. It is permissible to ride on the end of a car when conditions meet and are in compliance with Rule GS-13.

MP	Location
000 665.2	Sibert Yard - Do not ride on side of cars in Trks S16 thru S23
000 801.0	Gentilly - South Yard - Employees are prohibited from riding sides of rolling equipment on all trks

3. INSTRUCTIONS RELATING TO HAZARDOUS MATERIALS

HIGH THREAT URBAN AREA LIMITS LISTED IN TABLE BELOW:

MP	Instruction	
000 764.8 - 000 803.7	In Effect - All Tracks	

LOCATIONS WHERE TIMETABLE AUTHORIZED SPEED EXCEEDS 40 MPH WITHIN THE LIMITS OF A HIGH THREAT URBAN AREA.

Any train identified as restricted to 40 MPH within the limits of a High Threat Urban Area when required by train documents or rule must not exceed 40 MPH at these locations.

From MP	From [TYPE]	To MP	To [TYPE]
000 764.1	[MilePost]	000 799.2	[CP]
			North Gentilly

4. INSTRUCTIONS RELATING TO EQUIPMENT HANDLING RULES

4300 DEFECT DETECTORS AND CLEARANCE DETECTORS

MP	Location	Туре	Note
000 674.9	George		None
000 683.5	Speedway		None
000 696.5	Pecan		HIWI
000 709.8	Gautier		
000 719.3	Ocean Springs		
000 734.5	Beauvoir	1	
000 749.7	Pass Christian		
000 761.7	Lake Shore		None
000 770.9	English Lookout		
000 781.9	Lake Catherine		
000 787.1	Chef Menteur		
000 791.8	Recovery		

4305 AFTER PASSING CLEARANCE DETECTOR

000 696.5 Pecan Defect Detector is also a clearance detector. Refer to 4305 and 4306 for instructions.

4400 THRU TRUSS BRIDGES

Thru Truss Bridges are at the following locations:

MP	Location
000 706.8	Pascagoula MS
000 724.3	Biloxi Bay
000 752.5	Bay St Louis MS
000 768.9	Pearl River LA
000 775.4	Rigolets LA
000 787.2	Chef Menteur LA
000 801.4	Industrial Canal

5. INSTRUCTIONS RELATING TO AIR BRAKE AND TRAIN HANDLING RULES

5557 SWITCHING

When switching cars, the following tonnage/car counts must be adhered to. When this tonnage/car count is exceeded, the minimum cars with air cut-in must be used.

Locomotive	Tonnage	Minimum Cars with Air
Single & two or more	Less than 8,000	0
locomotives	More than 8,000	5

Exceptions: Mobile

1 to 40 cars - 0 cars required with air 41 to 64 cars - 3 cars required with air More than 65 cars - 5 cars required with air

6. INSTRUCTIONS RELATING TO RESTRICTED EQUIPMENT

MP	Location	Equipment	Restriction
000 670.0	Brookley Ind Trks		
000 671.6	Atlas Cold Stg		
000 675.6	Sea-Pac		
000 703.0	Jackson County Spur	6-Axle Locomotives	
	Mississippi Phosphate		Prohibited
	Port of Pascagoula	Locomotives	
	Ammonia Trk		
	Chevron, 1,2 and 3 Trks		
000 793.1	Michoud Ind Spur		

7. CLOSE CLEARANCE

MP	Location	Remarks
000 670.0	Spill Tech	Unloading spot
000 670.0	Ampac	Dock
000 670.0	Recycle Fibers	All
000 670.0	Mobile Moving & Stg	
000 670.0	Jenkins Brick	Dock
000 670.0	Ind Water Service	All
000 670.0	Premdor Corp	
000 670.0	McEwan Lumber Co	Dock
000 670.0	Bender Ship Bldg	DOCK
000 671.6	Atlas Cold Stg	All
000 675.7	SEA-PAK	Creat
000 680.0	Norden Paper	Spot
000 703.0	Mississippi Phosphate	Fence gate
000 703.0	First Chemical	Fence gate to shove thru & spot inside structure
000 703.0	Chevron	Fence gate
000 707.3	Port of Pascagoula	Fence gate to shove thru & spot inside structure
000 707.3	Port of Pascagoula (2nd Warehouse)	Spot
000 741.7	Lumber Yard	Fence gate
000 746.3		Rock Pit
000 746.3	Harrison County Spur	Bridge 30 cars from switch - no walkway
000 800.5	Transflo	Fence Gate

8. MISCELLANEOUS

EXCEPTED TRACK

MP	Location	Track
000 671.0	Brookley Ind Park	All
000 707.3	S Pascagoula - Watts Yard	Empty Trks 1-6 Grain Yard Trks 1-9

GENERAL MISCELLANEOUS

000 680.0 Theodore – Yelvington Rock Trains into Theodore must use the Mainline for all movements.

000 665.0 Mobile Switching Instructions – Automatic Switch Board

When switching cars on the north end of Sibert Yard, crews will comply with the following instructions:

1. The automatic switch board signals will not be relied upon to determine if cars are in the clear of tracks.

2. No more than 3 loaded cars or 5 empty cars will be cut off at one time.

3. During RCO operations, cuts will not exceed 50 cars when pulling out onto Three Mile Bridge.

4. Cuts of cars exceeding 40 total cars will have 3 cars of air.

5. Point protection must be provided if crews override or alter the Positive Stop Protection system at any time.

6. Do not cut a car off until the route is seen to be clear and the route is lined.

7. Do not change a route for a car after it is rolling under its own momentum except in an emergency.

8. If you encounter switch trouble with the automatic switches, report it to the yardmaster at the time of occurrence.

9. Yardmaster will call C&S Support desk RNX 388-2194.

10. Car inspectors will request permission from yardmaster before locking out class tracks S05 - S15 including 14B. Yardmaster will notify switching crew of request and document occurrence on prescribed form. After completion of lock out the car inspector will report clear and place the power back to the automatic switch, and yardmaster will document on prescribed form.

000 801.0 Gentilly Yard

Shove Lights Instructions - The RD Yard is equipped with shove signal indicators located on the south end of Tracks R1A, RD2, RD3, RD4, RD5, and RD6. The shove light controlling each track is located on the west side approximately 20 feet from the switch. The shove light is equipped with a dual indicator light that can be viewed from either direction (north or south). Shove indicator lights remain in the illuminated position until the track circuit on the north end is occupied. Once the shove light is extinguished (dark), the cut of cars must be stopped prior to shoving 6 car lengths of 300 feet without fouling the clearance point on the

north end of the track being shoved.

The employee providing protection at the shove light is responsible for the movement. This employee must keep in constant communication with the person controlling the locomotive. This person must inform the person controlling the locomotive that the light is still illuminated, and this must be done every five car lenghts. If you start to shove a track and the light is extinguished (dark) the employee must comply with Rule 406. Under no circumstances will a track with a dark shove light be shoved without the required protection being provided.

TASD Railroad Mobile, AL - including the following:

- 1. McDuffie Island
- 2. TASD Interchange
- 3. West Coal Tracks

When a CSX Crew is operating on the TASD property they are to contact the TASD Yardmaster via radio on Channel 066. At this time the crew will notify the TASD where they are and the location they are going. After getting permission from the TASD Yardmaster to proceed and make your moves, the TASD Yardmaster will notify any TASD crew what you are doing and stop any movement on adjacent track when you are switching or coupling tracks.

At McDuffie, when doubling a coal train out, the TASD Yardmaster will notify all concerned at this location that a CSX Crew is pulling empties or placing a train at the island. Movement will stop until you report in the clear or your move has been completed.

Movements on McDuffie Island will not exceed 5 MPH.

When you have cleared the TASD property you must notify the TASD Yardmaster via radio that you are clear of the TASD property. When you do this you must give the train or yard ID and engine number.

The following relates to the Terminal Railway Alabama State Docks:

All train movements will be governed by the yardmaster on duty. Unless otherwise provided, employees of foreign lines will be governed by TASD operating rules and special instructions while performing service on TASD Tracks.

Unless otherwise provided, TASD employees will be governed by timetables, rules and special instructions of foreign lines while performing service on foreign line tracks. Before a TASD crew occupies CSX Property they are to contact the CSX Sibert Yardmaster via radio on Channel 084. At this time the crew will notify the CSX Sibert Yardmaster where they are and at what location they are going to. While on CSX Property TASD must monitor Channel 084-084.

Foreign railroads given permission by the control station to deliver or pull tracks on property must do so within thirty minutes of granted permission. Failure to deliver or pull tracks within this thirty minutes will require foreign railroads to again receive permission from the control station to deliver or pull track on property.

Road Crossing:

When coal trains are pulling south through Choctaw Yard to place train on McDuffie Terminal, T&E crews are to leave road crossing located on north end of Ratcliff Yard open while yarding the head end of the train and returning with engines to the rear portion of train. This will allow vehicle access to local industries while Virginia Street is blocked.

TASD Interchange, Yard and McDuffie Tracks

TASD Yardmaster must be contacted by Foreign Line carriers for permission before pulling, delivering or performing work on or about any TASD tracks;

1. Foreign Line crews must promptly advise the TASD Yardmaster if any cars are not pulled from their receiving track before leaving TASD property and give reason for cars not being pulled.

2. Foreign Line crews must provide the TASD Yardmaster with a list (including Hazmat Information) of any cars being delivered to the TASD or other carriers.

3. Foreign Line Mechanical personnel must contact the TASD Yardmaster before installing locks and blue flags to any TASD tracks and also must advise the TASD Yardmaster when locks and flags are removed.

4. Foreign Line MOW EIC must contact the TASD Yardmaster for permission before placing flags and derails on any TASD tracks and also must report to the TASD Yardmaster when removed. The TASD Yardmaster must arrange for a TASD EIC to assist the Foreign Line EIS when their protection involves TASD tracks.

9. HIGHWAY ROAD CROSSINGS

203.2 LOCOMOTIVE BELL AND HORN

The following locomotive bell and horn requirements apply when approaching and passing through the highway-rail crossings identified in this table

The locomotive bell and horn must be operated, as prescribed by applicable Operating Rules, when any of the following conditions are encountered

- In cases of an emergency, or
- When Roadway Workers are present, or
- When people are present, or
- When notified of a highway-rail crossing malfunction.

MP / Location	Xing Type	DOT#	Horn	Bell	Hours
000 666.00 / Adams St		None			
000 666.20 / St. Anthony St		none			
000 666.40 / Dauphin St		877474J			
000 666.60 / Government St	РВ	351419D	No	Yes	Cont
000 666.80 / Monroe St		922883Y			
000 666.90 / Eslava St		351420X			
000 751.72 / 3rd Ave		340289D			

ROAD CROSSINGS AT GRADE EQUIPPED WITH AUTOMATIC WARNING DEVICES

MP	Location	DOT#	Туре
000 666.42	Dauphin St	877474J	
000 666.57	Government St	351419D	
000 666.80	Monroe St	922883Y	Р
000 666.89	Eslava St	351420X	Г
000 666.98	Madison St	351421E	
000 667.08	Canal St	351422L	
000 667.18	Palmetto St	351423T	М
000 667.56	Elmira St	351426N	Р
000 668.03	Virginia St	351427V	
000 668.14	Conception St	351428C	
000 668.35	Pillans St	351429J	М
000 668.42	Lawrence	351430D	
000 669.72	Hurtel/ Duval	351433Y	
000 672.60	Navco Rd	351437B	
000 673.85	Old Bay Shore Rd	351440J	
000 674.00	Wooley Rd	351441R	
000 674.00	Lipscomb Landing Rd	351453K	
000 674.20	Rivere Du Chien	351453K	Р
000 676.21	Higgins Rd	351456F	
	Kooiman Rd		
000 677.67	Jackson La	351457M	
		351458U	N 4
000 679.20	Range Line Rd S	351476S	М
000 679.23	Hamilton Blvd	351459B	_
000 679.67	Cary Hamilton Rd	351460V	Р
000 679.89	Belingrath Rd	351461C	
000 682.30	Padget Switch	351462J	М
000 684.50	Irvington Blvd Hwy	351463R	
000 685.74	Argyle Rd	351465E	Р
000 687.98	Fernland Rd	351467T	М
000 689.28	Ramsey Rd	351469G	
000 690.95	188 SR	351470B	Р
000 691.26	Potter Track Rd	351471H	м
000 692.31	Saeger Rd	351472P	101
000 693.00	Paul Warden Rd	351473W	
000 696.70	Pecan Rd	340100S	Р
000 698.99	Haley Circle	340101Y	
000 699.35	Orange Grove Rd	340102F	М
000 701.77	Chevron Rd	340103M	
000 704.26	Chicot Rd	340138N	
000 704.96	Hospital St	340139V	Р
000 705.28	14th St	340140P	
000 705.91	Market	340141W	
000 706.40	Pascagoula St	340142D	
000 706.53	Magnolia St	340144S	М
000 706.66	Frederic St	340150V	
000 707.18	Grain Elevator Rd	340156L	Р
000 709.89	Graveline Rd	340160B	
000 711.93	Ladnier	340161H	М
000 712.74	Dolphin Dr	340162P	
000 712.74		340162P	Р
	Fountainbleau Honshow Pd		
000 718.69	Henshaw Rd	340165K	
000 720.41	Ocean Springs Rd	340166S	
000 720.99	Hanley Rd	340167Y	М
000 721.62	Bechtel Blvd	340168F	
000 721.71	Thorn Ave	340169M	

MP	Location	DOT#	Туре
000 721.88	Holcomb Blvd	877531V	
000 722.40	M.L. King Jr	340170G	
000 722.94	Washington Ave	340171N	М
000 723.00	Church St	340172V	
000 723.07	Cox Ave	340173C	
000 725.52	Oak St	340177E	_
000 725.69	Crawford St	340178L	Р
000 725.97	Dorries St	340179T	
000 726.17	Keller Ave	340181U	М
000 726.25	Lee St	340182B	
000 726.61	Main St	340185W	
000 726.70	Lameuse St	340186D	Р
000 726.89	Reynoir St	340190T	
000 727.01	Caillavet St	340191A	
000 727.11	Bohn St	340193N	М
000 727.19	Hopkins Rd	340194V	
000 727.48	Benachi St	340197R	Р
000 727.58	Porter Ave	340199E	
000 727.69	Gill Ave	340200W	М
000 728.14	White Ave	340202K	
000 729.53	Iberville Dr	340204Y	Р
000 729.78	Rodenberg Ave	340205F	М
000 730.19	McDonnel Ave	340206M	Р
000 730.29	Veterans Ave	340207U	Р
000 730.83	Iris St	340208B	М
000 731.85	Beauvoir Rd	340209H	Р
000 733.02	Eisenhower Dr	340210C	М
000 733.54	Debuys Rd	340211J	
000 734.62	Anniston Ave	340213X	
000 735.15	Cowan Rd	340214E	Р
000 735.68	Teagarden Rd	340215L	Г
000 736.03	Walston Ave	340216T	
000 736.21	Courthouse Rd	340217A	
000 736.40	Texas Ave	340218G	М
000 737.20	Hewes Ave	340221P	
000 737.51	Gulf Ave	340223D	Р
000 738.00	Kelly Ave	340225S	
000 738.30	Thornton Ave	340226Y	
000 738.50	Pratt Ave	340227F	М
000 738.90	20th Ave	340230N	Р
000 739.00	22nd Ave	340232C	'
000 739.10	23rd Ave	340233J	
000 739.20	24th Ave	340234R	М
000 739.30	25th Ave	340235X	
000 739.60	30th Ave	340238T	
000 739.80	33rd Ave	340241B	
000 740.20	38th Ave	340243P	
000 740.40	42nd St	340247S	
000 740.70	Broad St	340249F	
000 740.74	Camp Ave	340250A	
000 740.99	Fournier Ave	340252N	Р
000 741.42	Lewis Ave	340257X	
000 741.80	Richard Ave	340259L	
000 742.10	Beach Park Ave	340260F	
000 742.50	Nicholson Ave	340261M	
000 742.70	Cleveland Ave	340262U	
000 743.00	Jeff Davis Ave	340263B	
000 743.40	Girard Ave	340264H	

MP	Location	DOT#	Туре
000 743.70	Trautman Ave	340265P	м
000 744.00	Island View Ave	340266W	IVI
000 745.10	White Harbor Rd	340269S	
000 746.35	Espy Ave	340270L	
000 747.20	Menge Ave	340271T	Р
000 748.30	Oak Park Dr	340274N	
000 748.70	Fleitas Ave	340276C	
000 748.90	Davis Ave	340277J	М
000 749.22	Market St	340279X	Р
000 749.30	Clark Ave	340280S	М
000 749.67	Church St	340282F	
000 749.80	Henderson Ave	340283M	
000 749.90	Clarence Ave	340284U	
000 750.16	Magnolia Ave	340285B	
000 750.70	Cedar Ave	340286H	Р
000 751.70	3rd Ave	340289D	
000 754.00	Beach Blvd	340075L	
000 754.20	S Second St	340076T	
000 754.50	Bookter Ave	340079N	
000 754.70	Sycamore St	340080H	М
000 754.80	Washington St	340081P	
000 755.10	St Charles St	340084K	
000 755.62	Webb St	340086Y	Р
000 756.50	Nicholson Ave	340087F	
000 757.20	Coleman Ave	340088M	
000 758.20	Waveland Ave	340090N	м
000 760.20	Clermont Rd	340092C	IVI
000 761.70	Lakeshore Rd	340093J	Р
000 792.00	Recovery Dr	341040N	М
000 793.30	Industrial Pkwy	341041V	
000 793.90	Gentilly	341059F	
000 795.20	Michoud Blvd	341062N	
000 796.10	I-510 On Ramp	928654A	
000 796.11	West Frontage Rd	877319E	-
000 797.80	Read Rd	352562S	Р
000 798.60	Old Hwy 90	341064C	
000 801.50	Almonaster Blvd	341070F	
000 801.60	France	341069L	
000 802.00	Louisa	341072U	

10. TERMINAL INSTRUCTIONS

TERMINAL AND YARD INSTRUCTIONS

000 665.0 Mobile Terminal

1. Southward trains will not leave Aladocks and northward trains will not leave Brookley without contacting the yardmaster.

2. Road Crossing – When coal trains are pulling south through Choctaw Yard to place train on McDuffie Terminal, T&E crews are to leave road crossing located on north end of Radcliff Yard open while yarding the head end of train and returning with engines to the rear portion of train. This will allow vehicle access to local industries while Virginia Street is blocked.

3. Derails are located on the north end of west coal No 3 and on the crossover from the north end of west lead to west

coal No 2. The derail in west coal No 3 is located 164 feet south of west coal No 3 switch; the derail on the crossover from the west lead to west coal No 3 is located 104 feet south of the west coal No 3 switch.

4. Sibert Yard - The designated locomotive servicing tracks at Mobile are as follows and will be protected by shop locks and derails when workmen are on or moving locomotives in this area:

Tracks: RS1, RS2, RS3, Diesel Shop Lead, Tony Lead.

5. Work Instructions in Mobile Terminal

Road trains enroute Mobile arriving "AKKA" or "Brookley" will contact the yardmaster for instructions pertaining to the operation of their train within the terminal. Trains that have instructions to set out or pickup cars within the terminal will stop at the yard track switch governing the move for a setout/pickup and contact the yardmaster for an updated job briefing before occupying any yard track.

Road trains and locals that originate within Mobile terminal will receive instructions from the yardmaster prior to leaving their on duty point and will also stop and have an updated job briefing with yardmaster prior to occupying any yard track to couple locomotives to their train.

6. Sibert Yard Securement Procedures – Crews will be responsible for checking securement in tracks S16-S23 (The Backside) before switching cars into these tracks. Crews working on the north end of Sibert will check with crews on the south end of Sibert for securement prior to switching cars into S05 through S15. In the absence of a crew in position on the south end, the crew on the north end will be entirely responsible. Proper securement for these tracks will be 2 hand brakes on the South End at least 3 car lengths north of the yellow tie (clearance point).

7. Sibert Yard - When lining the switch on the north end of the pocket track for use, the switch on the south end of track 14-B must be lined for movement to 14-B.

8. Sibert Yard - Any switch with a red target must be lined for straight away movement when not in use.

9. Sibert Yard - When switching cars on the north end, crews will comply with the following instructions:

A. The automatic switch board signals will not be relied upon to determine if cars are in the clear of tracks.

B. No more than 3 loaded cars or 5 empty cars will be cut off at one time.

C. During RCO operations, cuts will not exceed 50 cars when pulling out onto Three Mile Bridge.

D. Cuts of cars exceeding 40 total cars will have 3 cars of air.

E. Do not cut a car off until the route is seen to be clear and the route is lined.

F. Do not change a route for a car after it is rolling under its own momentum except in an emergency.

G. If you encounter switch trouble with the automatic switches, report it to the yardmaster at the time of occurrence, and provide as much details as possible.

H. Yardmaster will log defects on the prescribed form.

I. Mechanical Department will secure permission from the yardmaster before locking S05 - S15 including 14B. Yardmaster will notify switching crews and log request on

prescribed form. After the Mechanical Department reports clear and power is restored to the automatic switches, yardmaster will update the log.

000 801.0 New Orleans Terminal

1. All southward trains will contact Gentilly Yardmaster when going by the coffee house at Michoud, notifying them of train location and if any engine problems are noted. All outbound train crews going on duty at Gentilly will notify yardmaster they are on duty and ask for instructions.

2. All movements on Main Track(s) between North Gentilly and Not Junction are authorized by the yardmaster at Gentilly and such movements are governed by Rule 507.

3. Interlocking Rules govern movements within the NOPB Junction, NO&NE and Not Junction Interlockings.

4. Southward and northward movements against the current of traffic between south switch siding Gentilly and Not Junction will be made on verbal instruction and protection of the NS South End Train Dispatcher.

5. Movements between Not Junction and New Orleans Union Passenger Station will be governed by the rules and special instruction of the NS and the New Orleans Union Passenger Terminal Co.

11. LOADED UNIT CRUDE OIL TRAINS

NONE

Notes