

# NATIONAL TRANSPORTATION SAFETY BOARD

Office of Aviation Safety Washington, D.C. 20594

October 1, 2014

# Attachment 9 – A320 Aural Indicators

# **OPERATIONAL FACTORS**

DCA14MA081

Source: USAirways A320 TM, 10.1.4 Electronic Centralized Aircraft Monitoring (ECAM).

## **System Description**

#### Aural Indicators.

WARNING SIGNAL	CONDITION	DURATION	SILENCING <sup>1</sup>
CONTINUOUS REPETITIVE CHIME	REDWARNINGS	PERMANENT	Depress <sup>1</sup> MASTER WARN It
SINGLECHIME	AMBER CAUTION	1/2 second	
CAVALRY CHARGE <sup>2</sup>	A/PDISCONNECTION BYTAKEOVERpb	1.5 seconds	Second push on TAKE OVER pb
	A/P DISCONNECTION DUE TO FAILURE	PERMANENT	Depress MASTER WARN It or TAKE OVER pb
CLICK	LANDING CAPABILITY CHANGE	1/2 second (3 pulses)	NIL
Triple CLICK (enhance aircraft)	Landing capability downgrade or "GPS PRIMARY LOST" in approach, or mode reversion.	1/2 second (3 pulses)	
CRICKET + "STALL" message (synthetic voice)	STALL	PERMANENT	NIL
BUZZER	CABINCALL	3 seconds	NIL
	EMER CABIN CALL	3 seconds REPEATED 3 TIMES	NIL
	MECH CALL <sup>3</sup>	As long as outside pb pressed	NIL
CONTINUOUS BUZZER <sup>3</sup>	SELCALCALL	PERMANENT	Depress RESET key on ACP
CCHORD	ALTITUDEALERT	1.5 seconds or PERMANENT	newALTITUDE selection or depress MASTER WARN pb
AUTO CALL OUT (synthetic voice)	HEIGHT ANNOUNCEMENT BEL0W2,500'	PERMANENT	NIL

<sup>1</sup> Cancel any aural warning by pressing:

— the EMER CANC pb on the ECP,

 the MASTER WARN pb except for OVERSPEED or L/G NOT DOWN warnings.

<sup>2</sup> Pushing the MASTER WARN pb for a autopilot disconnection warning, only inhibits the Cavalry Charge

<sup>3</sup> Cancel the continuous buzzer by pressing the MASTER CAUT pb.

10 JUL 13

### **Flight Instruments**

#### 10 JUL 13

## **System Description**

#### Aural Indicators (cont'd.)

WARNING SIGNAL	CONDITION	DURATION	SILENCING <sup>1</sup>
"WINDSHEAR" (synthetic voice)	WINDSHEAR	REPEATED3 TIMES	NIL
"GOAROUND WINDSHEAR AHEAD" (synthetic voice)	Windshear ahead detected during the landing phase	PERMANENT	NIL
"WINDSHEAR AHEAD" (twice)(synthetic voice)	Windshear ahead detected during the takeoffphase	PERMANENT	NIL
"MONITOR RADAR DISPLAY" (synthetic voice)	Windshear ahead detected caution message	PERMANENT	NIL
GROUND PROXIMITY WARNING (synthetic voice)	(See EGPWS)	PERMANENT	NIL
"PRIORITY LEFT" "PRIORITY RIGHT" (synthetic voice)	A/P TAKE OVER pb	1 second	NIL
RETARD (synthetic voice)	THRUST LEVER NOT IN IDLE POSITION FOR LANDING	PERMANENT	THRUST LEVER
TCAS (synthetic voice)	(See TCAS)	PERMANENT	NIL
"SPEED, SPEED, SPEED" (synthetic voice)	Current thrust is not sufficient to recover a positive flight through pitch control	Every 5 seconds until thrust is increased	THRUST LEVER(s)
"DUAL INPUT" (synthetic voice)	Both side sticks are moved simultaneously	Every 5 seconds	One side stick deactivated
"PITCH, PITCH" (synthetic voice) (advanced aircraft)	Aircraft pitch attitude becomes excessive during flare and landing.	onetime	NIL

<sup>1</sup> Cancel any aural warning by pressing:

— the EMER CANC pb on the ECP,

- the MASTER WARN pb except for OVERSPEED or L/G NOT DOWN warnings.