


ENGINE MAKE CONTINENTAL
 OEM CARBURETOR NO. 627637

CARBURETOR NO. 10-4240-1
 MODEL NO MA-3SPA
 FLOAT SETTING 7/32"

REF. NO.	PART NO.	QTY	DESCRIPTION	REF. NO.	PART NO.	QTY	DESCRIPTION
1	10-4725	1	Carburetor Bowl Assy	38	46-F12	1	Venturi
2	12-872	1	Lever - Throttle, Serrated	39	47-852	1	Nozzle Assy
3	13-1620	1	Throttle Shaft & Stop Assy Serrated Stop	40	55-A139	1	Retainer - "O" Ring Mixture Metering Valve Head
4	14-189	1	Valve - Throttle	41	60-260	2	Bushing - Throttle Shaft
5	15-42	1	Screw - Throttle Adjusting	42	66-18	1	Lockwire - Mixture Control Valve Head
6	16-68	2	Screw - Throttle Valve	44	78-121	2	Washer - Pump Inlet Strainer Housing Screw
7	15-223	1	Screw - Idle Drill Plug	45	78-184	2	Washer-Mixture Control Valve Spring(1) Mixture Control Valve Thrust (1)
8	15-A1	1	Screw - Pump Lever Pin	46	78-356	1	Washer-Horseshoe (Mixture Control Valve Head)
9	15-A14	2	Screw - Pump Inlet Strainer Housing	47	78-388	1	Washer - Pump Stem Packing Retainer
10	15-A21	2	Screw - Float Bracket	48	78-A109	1	Washer-Mixture Control Lever Screw
11	15-B107	4	Screw - Throttle Body to Bowl	49	78-A110	4	Washer-Throttle Body to Bowl Screw
12	15-B108	1	Screw - Mixture Control Lever	50	81-311	1	Nut - Lock, Throttle Lever
13	16-222	1	Gasket - Nozzle	51	82-11	3	Pin - Cotter (Float Lever Shaft (1) (Pump link (2)
14	16-224	1	Gasket - Float Valve Seat	52	82-14	1	Pin - Cotter, Throttle Lever Lock Nut
15	16-696	1	Gasket - Kit	53	95-54	1	Screen - Pump Inlet Strainer
16	16-A16	1	Gasket - Strainer Housing	54	95-509	1	Strainer & Fuel Inlet Assy
17	12-A28	1	Gasket - Pump Discharge Check Valve	55A	99-8	1	Plug - Bowl Drain
18	16-A36	1	Gasket - Fuel Inlet & Strainer Assy	55	99-34	1	Plug - Pump Discharge Check Valve
19	16-A107	1	Gasket - Power Jet	56	110-173	1	Retainer Flange - Pump Inlet Strainer Housing
20	16-B45	1	Gasket - Pump Discharge Check Valve Assy	57	136-58	1	Bracket - Float
21	16-B75	1	Gasket - Throttle Body to Bowl	58	155-307	1	Lever - Pump
22	17-383	1	Rod - Pump Connection	59	155-627	1	Mixture Control Lever Assy
23	24-262	1	Spring - Throttle Adjusting Screw	60	194-693	1	Pump Plunger Assy
24	24-480	1	Spring - Mixture Control Valve Head	61	221-76	1	Housing - Pump Inlet Strainer
25	24-A1	1	Spring - Idle Adjusting Needle	62	227-1814	1	Throttle Body Assy
26	24-A10	1	Spring - Throttle Opening	63	229-164	1	Pump Discharge Tube
28	29-194	1	Clip - Float Valve (Used with 30-766)	64	229-687	1	Idle Tube Assy
29	30-766	1	Float & Lever Assy	65	233-615	1	Float Valve, Seat & Gasket Assy
30	32-32	1	Shaft - Float Lever	66	242-514	1	Mixture Control Metering Valve Assy
31	36-626	1	Pump Inlet Check Valve Assy	67	286-2036	1	Repair Kit
32	36-640	1	Pump Discharge Check Valve Assy	68	500-1	1	Warning Label
33	37-7	1	Ball - Lead Plug (Idle Drill)				
34	43-664	1	Needle - Idle Adjusting				
35	44-49	1	Packing - Pump Stem				
36	44-223	1	Packing - "O" Ring, Mixture Metering Valve Head				

Part numbers shown in bold type are included in Repair Kit
 Exploded view shown on reverse side

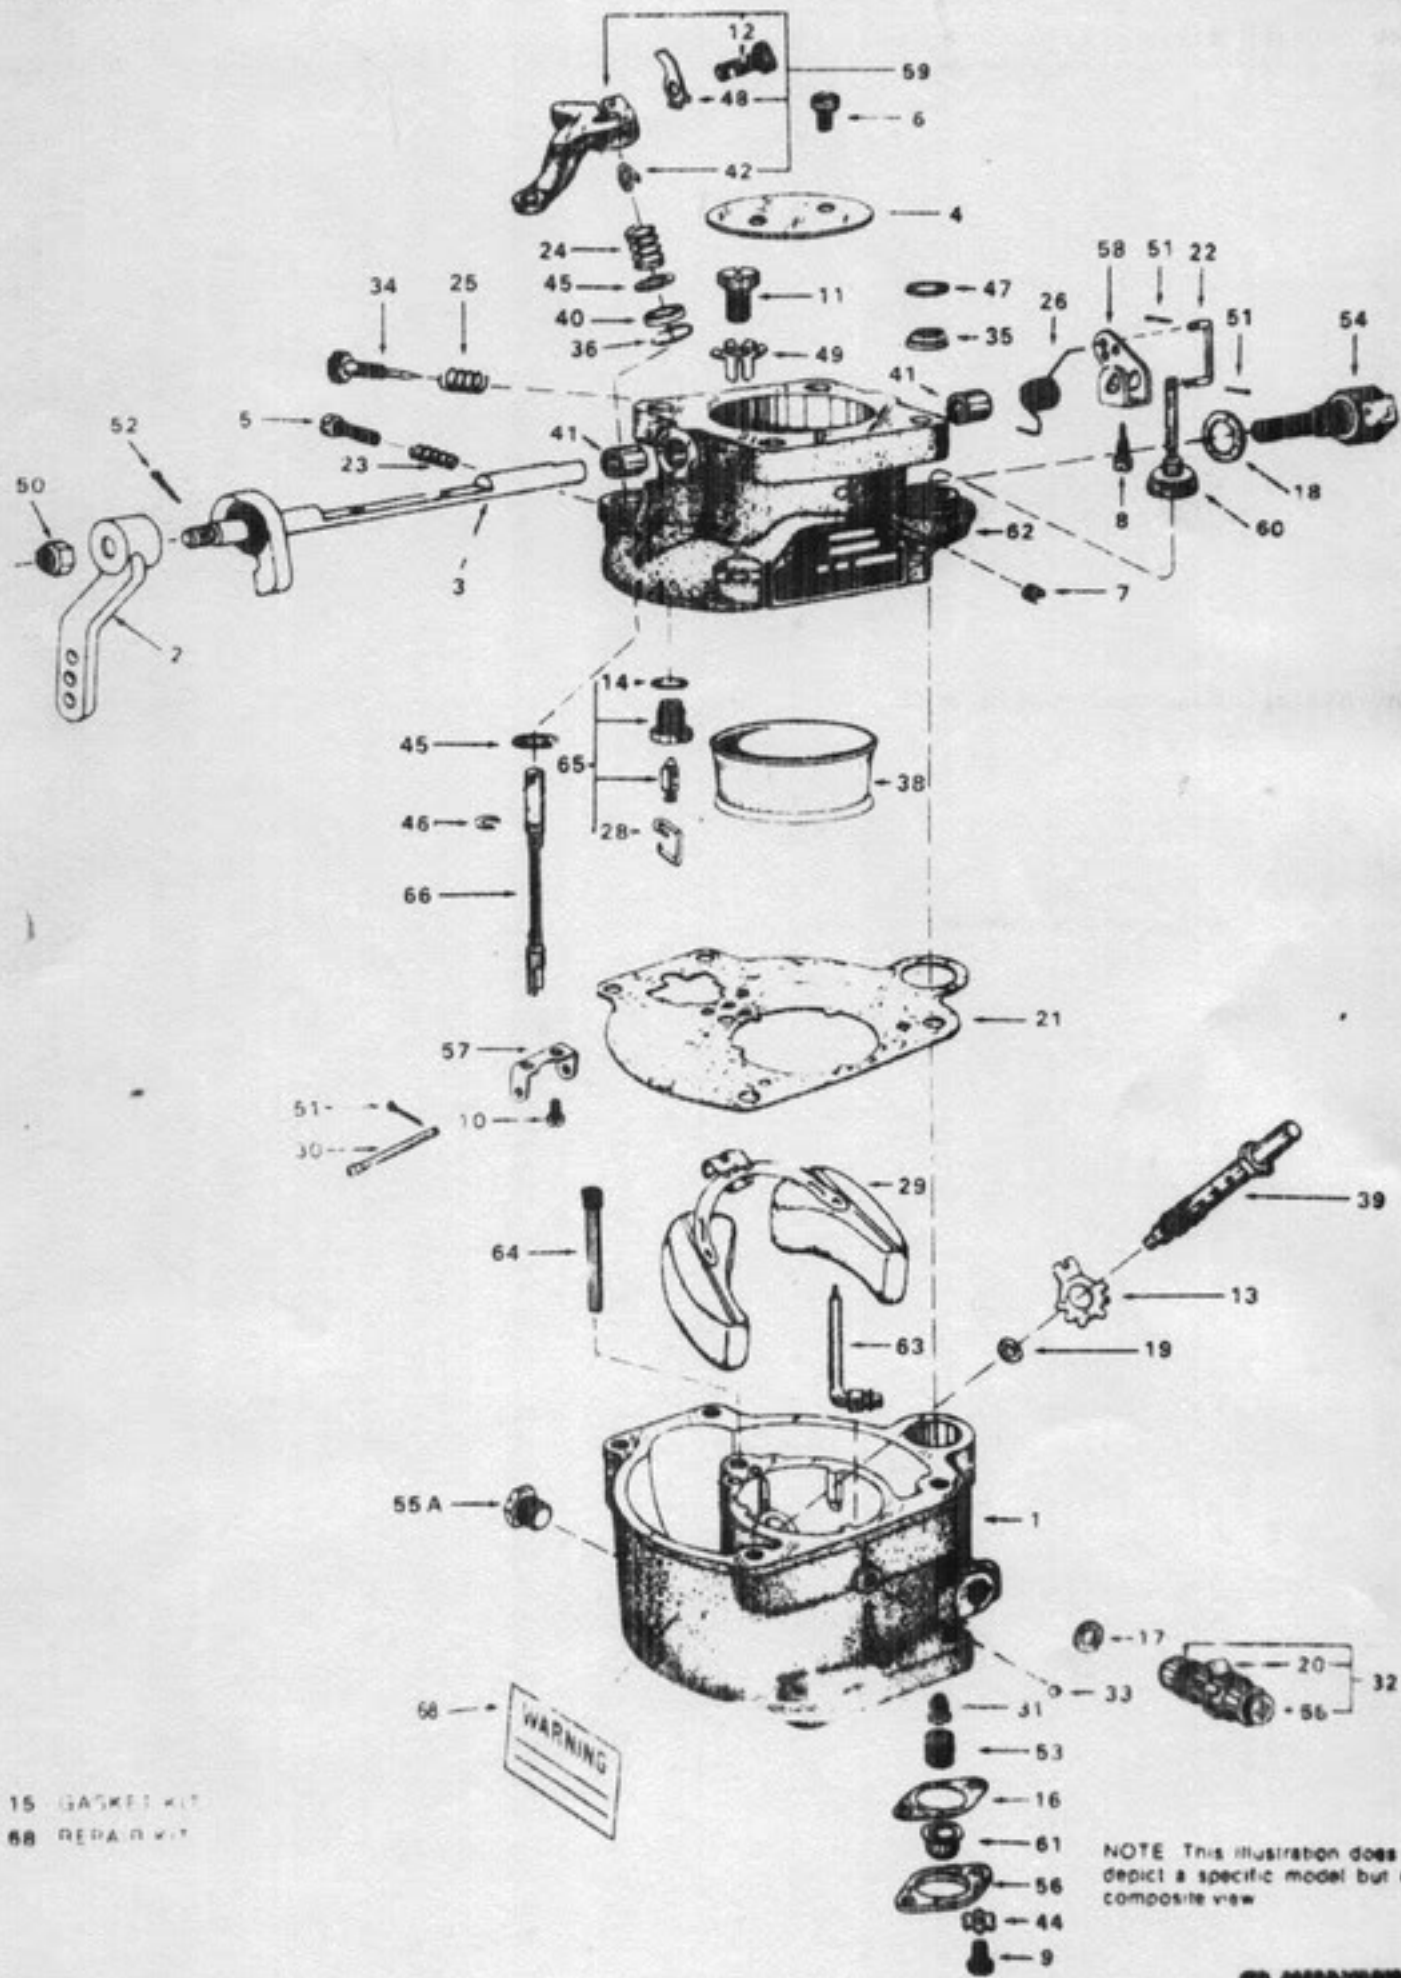

15 GASKET KIT
68 REPAIR KIT

NOTE This illustration does not depict a specific model but is a composite view