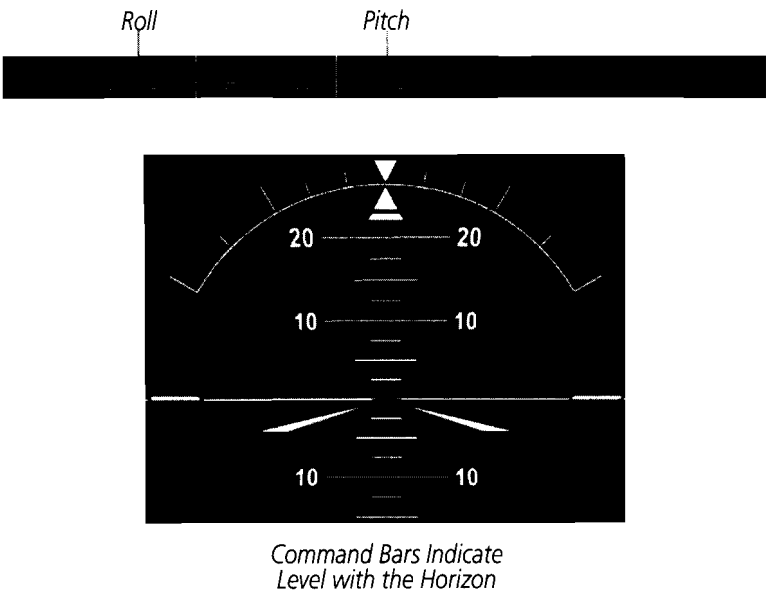


# 7.5 LEVEL MODE

Level Mode is coupled pitch and roll modes and is annunciated as both the vertical and lateral modes when active. Pressing the **LVL** Key engages the autopilot (if not engaged), rolls the wings level, and maintains an aircraft attitude that provides level flight. Level mode does not track altitude or heading. Pressing the **LVL** Key always engages the autopilot. When the **LVL** Key is pressed all armed and active modes are cancelled and the autopilot and flight director revert to LVL mode for pitch and roll (Figure 7-26). While in level mode, all other mode are available by pressing the corresponding button.



**Figure 7-26 Level Mode Annunciation**