

Bonanza 36 Series Illustrated Parts Catalog
MAIN LANDING GEAR RETRACT MECHANISM

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
		MAIN LANDING GEAR RETRACT MECHANISM	FE	
- 5	35-815101-3	RETRACT INSTL-MAIN LANDING GEAR	C	RF
- 5	35-815101-13	RETRACT INSTL-MAIN LANDING GEAR	D	RF
- 5	35-815101-15	RETRACT INSTL-MAIN LANDING GEAR	E	RF
7	AN380-2-2	• PIN-COTTER ALTERNATE SPARE: MS24665-132	FE	1
7	MS24665-132	• PIN-COTTER ALTERNATE SPARE: AN380-2-2	FE	1
9	130909N8	• NUT	FE	1
11	NAS1149F0663P	• WASHER	FE	1
13	NAS1149F0863P	• WASHER	FE	2
15	35-810132	• SUPPORT ASSY	FE	1
17	35-810133	• • BUSHING	FE	1
- 18	130909N30	• NUT	X	4
- 19	NAS1149F0463P	• WASHER	X	4
20	35-810075-7	• ACTUATOR ASSY-LANDING GEAR RETRACT FOR SPARES ORDER: 35-810075-13 FOR DETAILS SEE: 32-30-00-04	K	1
20	35-810075-13	• ACTUATOR ASSY-LANDING GEAR RETRACT SPARES REPLACEMENT FOR: 35-810075-7 FOR DETAILS SEE: 32-30-00-04	X	1
30	35-364127	• SWITCH-LANDING GEAR ACTUATOR	C	1
30	102-810016-1	• SWITCH-LANDING GEAR ACTUATOR	D	1
30	102-810016-5	• SWITCH-LANDING GEAR ACTUATOR	E	1
45	35-364130	• SWITCH-LANDING GEAR ACTUATOR	FE	1
- 50	35-815125-2	• ROD ASSY-MAIN GEAR RETRACT, LH FOR SPARES ORDER: 35-815125-41	L	1
- 50	35-815125-41	• ROD ASSY-MAIN GEAR RETRACT, LH SPARES REPLACEMENT FOR: 35-815125-2	FE	1
- 55	35-815125-4	• ROD ASSY-MAIN GEAR RETRACT, RH FOR SPARES ORDER: 35-815125-43	L	1
- 55	35-815125-43	• ROD ASSY-MAIN GEAR RETRACT, RH SPARES REPLACEMENT FOR: 35-815125-4	FE	1
60	130909B88	ATTACHING PARTS • BOLT	FE	2
65	AN6-11A	• BOLT	FE	2
- 70	NAS1149F0663P	• WASHER	FE	4
- 75	130909N18	• NUT	FE	2
- 80	130909N25	• NUT- SPARES REPLACEMENT FOR: AN365-624	FE	2

32-30-00-01

Missing Item Not Applicable

Bonanza 36 Series Illustrated Parts Catalog
MAIN LANDING GEAR RETRACT MECHANISM

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
- 85	AN380-3-2	• PIN-COTTER ALTERNATE SPARE: MS24665-281	FE	2
- 85	MS24665-281	• PIN-COTTER ALTERNATE SPARE: AN380-3-2	FE	2
		-----★-----		
90	LS-6	• • BEARING- ALTERNATE SPARE: COM-6-25	FE	1
90	COM-6-25	• • BEARING- ALTERNATE SPARE: LS-6	FE	1
95	35-815125-12	• • BRAZE ASSY-ROD LH FOR SPARES ORDER: 35-815125-602	FE	1
95	35-815125-602	• • BRAZE ASSY-ROD LH SPARES REPLACEMENT FOR: 35-815125-12	FE	1
- 100	35-815125-14	• • BRAZE ASSY-ROD RH FOR SPARES ORDER: 35-815125-604	FE	1
- 100	35-815125-604	• • BRAZE ASSY-ROD RH SPARES REPLACEMENT FOR: 35-815125-14	FE	1
105	35-815131	• • PLUNGER ASSY-LANDING GEAR RETRACTING ROD	FE	2
		ATTACHING PARTS		
110	AN394-33	• • PIN- FOR SPARES ORDER: MS20392-3C33	FE	2
110	MS20392-3C33	• • PIN- SPARES REPLACEMENT FOR: AN394-33	FE	2
- 115	NAS1149D0416H	• • WASHER	FE	2
- 120	AN380-2-2	• • PIN-COTTER ALTERNATE SPARE: MS24665-132	FE	2
- 120	MS24665-132	• • PIN-COTTER ALTERNATE SPARE: AN380-2-2	FE	2
		-----★-----		
- 125	35-815125-10	• • TUBE-RETRACT ROD	FE	2
130	100951S063XP	• • WASHER-LH	FE	4
- 135	100951S063XP	• • WASHER-RH	FE	3
140	45-815091-3	• • SPRING	FE	2
145	100951S063YU	• • WASHER	FE	2
150	HM-6FG	• • ROD END- FOR SPARES ORDER: 131553-FG-6M	FE	2
150	131553-FG-6M	• • ROD END- SPARES REPLACEMENT FOR: HM-6FG	FE	2
155	AN316-6R	• • NUT	FE	2
160	35-815155-2	• BRACE ASSY-MAIN LANDING GEAR RETRACT LH	FE	1
- 165	35-815155-3	• BRACE ASSY-MAIN LANDING GEAR RETRACT RH	FE	1
		ATTACHING PARTS		
175	35-815120	• PIN ASSY-LANDING GEAR RETRACT BRACE AFT	FE	2

32-30-00-01

Printed from Beechcraft Corporation Interactive Maintenance Library (IML).
P/N: 36-590001-1 Reissue U - January 1, 2014

Missing Item Not Applicable

Bonanza 36 Series Illustrated Parts Catalog
MAIN LANDING GEAR RETRACT MECHANISM

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
- 180	100951-S-016-YP	• WASHER- ALTERNATE SPARE: 100951-S-032-YP	FE	AR
- 180	100951-S-032-YP	• WASHER- ALTERNATE SPARE: 100951-S-016-YP	FE	AR
190	35-815123-10	• PIN ASSY-LANDING GEAR RETRACT BRACE FWD	FE	2
- 195	100951-S-016-XF	• WASHER- ALTERNATE SPARE: 100951-S-032-XF	FE	AR
- 195	100951-S-032-XF	• WASHER- ALTERNATE SPARE: 100951-S-016-XF	FE	AR
205	AN515-8-8	• SCREW- FOR SPARES ORDER: MS35206-245	FE	4
205	MS35206-245	• SCREW- SPARES REPLACEMENT FOR: AN515-8-8	FE	4
- 210	NAS1149FN832P	• WASHER	FE	4
- 215	130909N28	• NUT- SPARES REPLACEMENT FOR: AN365-832	FE	4
220	130909B265	• BOLT	FE	2
- 225	NAS1149F0563P	• WASHER	FE	2
230	35-815124	• BUSHING-RETRACT BRACE LOWER GRIP	FE	2
- 235	130909N17	• NUT	FE	2
- 240	AN380-2-2	• • PIN-COTTER ALTERNATE SPARE: MS24665-132	FE	2
- 240	MS24665-132	• PIN-COTTER ALTERNATE SPARE: AN380-2-2	FE	2
- 245	35-815102-20	-----★----- • • BRACE ASSY-LH FOR SPARES ORDER: 35-815155-610	FE	1
- 245	35-815155-610	• • BRACE ASSY-LH SPARES REPLACEMENT FOR: 35-815102-20	FE	1
- 250	35-815102-21	• • BRACE ASSY-RH FOR SPARES ORDER: 35-815155-611	FE	1
- 250	35-815155-611	• • BRACE ASSY-RH SPARES REPLACEMENT FOR: 35-815102-21	FE	1
255	35-815129	• • LEG ASSY-MAIN GEAR RETRACT FOR SPARES ORDER: 35-815155-610 LH 35-815155-611 RH	FE	1
255	35-815155-610	• • BRACE ASSY-LH SPARES REPLACEMENT FOR: 35-815129	FE	1
- 256	35-815155-611	• • BRACE ASSY-RH SPARES REPLACEMENT FOR: 35-815129	FE	1
260	35-815274-1	ATTACHING PARTS • • BOLT ASSY-UPLOCK ROLLER SEE S.I. 0448-211	FE	1

Bonanza 36 Series Illustrated Parts Catalog
MAIN LANDING GEAR RETRACT MECHANISM

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
265	NAS505-5J	• • BEARING- ALTERNATE SPARE: 5NBC713YJ	FE	1
265	5NBC713YJ	• • BEARING- ALTERNATE SPARE: NAS505-5J	FE	1
270	35-810122-1	• • BUSHING-RETRACT BRACE GRIP	FE	1
- 275	NAS1149F0763P	• • WASHER	FE	2
- 280	NAS1149F0532P	• • WASHER	FE	1
- 285	130909N17	• • NUT	FE	1
- 290	AN380-2-2	• • PIN- ALTERNATE SPARE: MS24665-132	FE	1
- 290	MS24665-132	• • PIN-COTTER ALTERNATE SPARE: AN380-2-2	FE	1
		-----★-----		
295	3016	• • FITTING-LUBRICATION	FE	1
300	MS15001-2	• • FITTING-LUBRICATION FOR SPARES ORDER: AN286-1	FE	1
300	AN286-1	• • FITTING-LUBRICATION SPARES REPLACEMENT FOR: MS15001-2	FE	1
305	45-815003-3	• ROD ASSY-LANDING GEAR DOOR ACTUATOR LH	A	1
- 310	45-815003-1	• ROD ASSY-LANDING GEAR DOOR ACTUATOR RH	A	1
		ATTACHING PARTS		
315	130909B84	• BOLT	A	2
- 320	NAS1149F0463P	• WASHER	A	4
325	35-815101-2	• BUSHING- FOR SPARES ORDER: 58-810015-1	A	2
325	58-810015-1	• BUSHING- SPARES REPLACEMENT FOR: 35-815101-2	A	2
- 330	130909N7	• NUT	A	2
- 335	AN380-2-2	• PIN-COTTER ALTERNATE SPARE: MS24665-132	A	2
- 335	MS24665-132	• PIN-COTTER ALTERNATE SPARE: AN380-2-2	A	2
		-----★-----		
340	35-815007-4	• LINK ASSY-MAIN GEAR DOOR ATTACHING PARTS	FE	2
345	130909B41	• BOLT	FE	2
350	130909B83	• BOLT	FE	2
- 355	NAS1149F0463P	• WASHER-INBOARD	FE	2
- 360	NAS1149F0432P	• WASHER-OUTBOARD	FE	2
- 365	130909N32	• NUT- SPARES REPLACEMENT FOR: AN365-428	FE	2
- 370	130909N16	• NUT	FE	2
- 375	AN380-2-2	• PIN-COTTER ALTERNATE SPARE: MS24665-132	FE	2
- 375	MS24665-132	• PIN-COTTER ALTERNATE SPARE: AN380-2-2	FE	2

32-30-00-01

Printed from Beechcraft Corporation Interactive Maintenance Library (IML).
P/N: 36-590001-1 Reissue U - January 1, 2014

Missing Item Not Applicable

Bonanza 36 Series Illustrated Parts Catalog
MAIN LANDING GEAR RETRACT MECHANISM

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
380	102933S5ZL0125	• SPACER- FOR SPARES ORDER: NAS43HT4-8	FE	4
380	NAS43HT4-8	• SPACER- SPARES REPLACEMENT FOR: 102933S5ZL0125	FE	4
382	HM-4MT	-----★----- • • ROD END- FOR SPARES ORDER: 131553-4M	FE	2
382	131553-4M	• • ROD END- SPARES REPLACEMENT FOR: HM-4MT	FE	2
384	AN316-4R	• • NUT	FE	2
- 385	35-815118	• ARM-MAIN GEAR DOOR IDLER ATTACHING PARTS	F	2
390	AN4-55AM	• BOLT	F	2
395	100801-S5-4781	• BUSHING	F	2
- 400	NAS1149F0463P	• WASHER	F	2
405	100951P062YH	• WASHER	F	4
410	108492-S416-016	• WASHER	F	2
- 415	130909N32	• NUT- SPARES REPLACEMENT FOR: AN365-428	F	2
- 420	002-430024-1	-----★----- • ARM-MAIN GEAR DOOR IDLER ATTACHING PARTS	G	2
- 425	AN4-55AM	• BOLT	G	2
- 430	100801-S5-4781	• BUSHING	G	2
- 435	100951P062YH	• WASHER	G	4
- 440	NAS1149F0463P	• WASHER	G	2
- 445	NAS1149F0432P	• WASHER	G	2
- 450	130909N32	• NUT	G	2
455	35-815078	-----★----- • LINK-MAIN LANDING GEAR UP LOCK CABLE ATTACHING PARTS	A	2
460	35-815183	• SCREW-LANDING GEAR DOOR IDLER ATTACH	A	2
465	105739D0190-0375-0250	• BUSHING	A	2
470	105739S0190-0341-0137	• BUSHING	A	2
- 475	NAS1149F0363P	• WASHER	A	2
- 480	130909N6	• NUT	A	2
- 485	AN380-2-2	• PIN-COTTER ALTERNATE SPARE: MS24665-132	A	2
- 485	MS24665-132	• PIN-COTTER ALTERNATE SPARE: AN380-2-2	A	2
- 490	35-815109	-----★----- • CABLE ASSY-MAIN GEAR, UP LOCK ATTACHING PARTS	FE	2
495	AN23-10 (M)	• BOLT	FE	4
- 500	AN960-10	• WASHER-INBOARD FOR SPARES ORDER: NAS1149F0363P	FE	2
- 500	NAS1149F0363P	• WASHER-INBOARD SPARES REPLACEMENT FOR: AN960-10	FE	2
- 505	AN960-10L	• WASHER-OUTBOARD FOR SPARES ORDER: NAS1149F0332P	FE	2

32-30-00-01

Printed from Beechcraft Corporation Interactive Maintenance Library (IML).
P/N: 36-590001-1 Reissue U - January 1, 2014

Missing Item Not Applicable

Bonanza 36 Series Illustrated Parts Catalog
MAIN LANDING GEAR RETRACT MECHANISM

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
- 505	NAS1149F0332P	• WASHER-OUTBOARD SPARES REPLACEMENT FOR: AN960-10L	FE	2
- 510	130909N6	• NUT	FE	4
- 515	AN380-2-2	• PIN-COTTER ALTERNATE SPARE: MS24665-132	FE	4
- 515	MS24665-132	• PIN-COTTER ALTERNATE SPARE: AN380-2-2	FE	4
		-----★-----		
520	S-167-46	• • HOUSING-46 INCHES LONG	FE	1
525	AN667-2	• • TERMINAL-CABLE FOR SPARES ORDER: MS20667-2	FE	1
525	MS20667-2	• • TERMINAL-CABLE SPARES REPLACEMENT FOR: AN667-2	FE	1
530	AN666-2R	• • TERMINAL-CABLE FOR SPARES ORDER: MS21259-2R	FE	1
530	MS21259-2R	• • TERMINAL-CABLE SPARES REPLACEMENT FOR: AN666-2R	FE	1
535	35-815109	• • CABLE ASSY-MAIN GEAR, UP LOCK	FE	1
540	S-123	• BUSHING	FE	4
- 545	NAS1149F0663P	• WASHER	FE	4
550	130909N25	• NUT- SPARES REPLACEMENT FOR: AN365-624	FE	4
555	AN665-10R	• TERMINAL	FE	2
- 560	35-815077-12	• LOCK ASSY-MAIN LANDING GEAR UP, LH	J	1
- 560	35-815077-602	• LOCK ASSY-MAIN LANDING GEAR UP, LH	H	1
- 570	35-815077-13	• LOCK ASSY-MAIN LANDING GEAR UP, RH	J	1
- 570	35-815077-603	• LOCK ASSY-MAIN LANDING GEAR UP, RH	H	1
		ATTACHING PARTS		
580	AN24-32	• BOLT	FE	2
- 585	NAS1149F0432P	• WASHER	FE	2
- 590	130909N7	• NUT	FE	2
- 595	AN380-2-2	• PIN-COTTER ALTERNATE SPARE: MS24665-132	FE	2
- 595	MS24665-132	• PIN-COTTER ALTERNATE SPARE: AN380-2-2	FE	2
		-----★-----		
600	35-815077-2	• • BRACKET-LANDING GEAR UP LOCK, LH FOR SPARES ORDER: 35-815077-14	FE	1
600	35-815077-14	• • BRACKET-LANDING GEAR UP LOCK, LH SPARES REPLACEMENT FOR: 35-815077-2	FE	1
- 605	35-815077-3	• • BRACKET-LANDING GEAR UP LOCK, RH FOR SPARES ORDER: 35-815077-15	FE	1

32-30-00-01

Printed from Beechcraft Corporation Interactive Maintenance Library (IML).
P/N: 36-590001-1 Reissue U - January 1, 2014

Missing Item Not Applicable

Bonanza 36 Series Illustrated Parts Catalog
MAIN LANDING GEAR RETRACT MECHANISM

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
- 605	35-815077-15	• • BRACKET-LANDING GEAR UP LOCK, RH SPARES REPLACEMENT FOR: 35-815077-3	FE	1
610	35-815077-4	• • BLOCK-LANDING GEAR LH	FE	1
- 615	35-815077-5	• • BLOCK-LANDING GEAR RH ATTACHING PARTS	FE	1
620	130909B15	• • BOLT	FE	4
- 625	NAS1149F0363P	• • WASHER	FE	4
- 630	130909N29	• • NUT- SPARES REPLACEMENT FOR: AN365-1032	FE	4
		-----★-----		
635	35-815115	• SPRING-MAIN LANDING GEAR UP LOCK	FE	2
640	100942C0020-31	• SPRING-TENSION	FE	2
645	35-815156-4	• BOOT ASSY-LANDING GEAR UP LOCK LH	FE	1
- 650	35-815156-5	• BOOT ASSY-LANDING GEAR UP LOCK RH	FE	1
- 655	002-430009-7	FUSELAGE ASSY-CABIN, LOWER, STANDARD SEATING FOR NHA/OTHER SYSTEM DET SEE: 53-10-00-10	M	RF
- 655	002-430009-151	FUSELAGE ASSY-CABIN, LOWER, STANDARD SEATING FOR NHA/OTHER SYSTEM DET SEE: 53-10-00-10	N	RF
- 655	002-430009-177	FUSELAGE ASSY-CABIN, LOWER, STANDARD SEATING FOR NHA/OTHER SYSTEM DET SEE: 53-10-00-10	W	RF
- 655	002-430009-141	FUSELAGE ASSY-CABIN, LOWER, CLUB SEATING FOR NHA/OTHER SYSTEM DET SEE: 53-10-00-10	M	RF
- 655	002-430009-163	FUSELAGE ASSY-CABIN, LOWER, CLUB SEATING FOR NHA/OTHER SYSTEM DET SEE: 53-10-00-10	AA	RF
- 655	002-430009-179	FUSELAGE ASSY-CABIN, LOWER, CLUB SEATING FOR NHA/OTHER SYSTEM DET SEE: 53-10-00-10	W	RF
- 655	002-430009-207	FUSELAGE ASSY-CABIN, LOWER, CLUB SEATING FOR SPARES ORDER: 002-430009-211 FOR NHA/OTHER SYSTEM DET SEE: 53-10-00-10	AB	RF
- 655	002-430009-211	FUSELAGE ASSY-CABIN, LOWER, CLUB SEATING SPARES REPLACEMENT FOR: 002-430009-207 FOR NHA/OTHER SYSTEM DET SEE: 53-10-00-10	AC	RF
660	96-810024-7	• SEAL ASSY- FOR SPARES ORDER: 002-430009-121	FE	2
660	002-430009-121	• SEAL ASSY- SPARES REPLACEMENT FOR: 96-810024-7	FE	2
665	002-430009-73	• RETAINER	FE	2

32-30-00-01

Printed from Beechcraft Corporation Interactive Maintenance Library (IML).
P/N: 36-590001-1 Reissue U - January 1, 2014

Missing Item Not Applicable

Bonanza 36 Series Illustrated Parts Catalog
MAIN LANDING GEAR RETRACT MECHANISM

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
670	96-810023-7	• SEAL ASSY- FOR SPARES ORDER: 002-430009-115	FE	2
670	002-430009-115	• SEAL ASSY- SPARES REPLACEMENT FOR: 96-810023-7	FE	2
675	002-430009-43	• RETAINER-LH	FE	1
- 680	002-430009-45	• RETAINER-RH	FE	1
685	95-810017-13	• ACTUATOR ASSY-LANDING GEAR RETRACT FOR SPARES ORDER: 95-810017-29 FOR DETAILS SEE: 32-30-00-04	P	1
685	95-810017-15	• ACTUATOR ASSY-LANDING GEAR RETRACT FOR SPARES ORDER: 95-810017-29 FOR DETAILS SEE: 32-30-00-04	Q	1
685	95-810017-17	• ACTUATOR ASSY-LANDING GEAR RETRACT FOR SPARES ORDER: 95-810017-29 FOR DETAILS SEE: 32-30-00-04	R	1
685	95-810017-19	• ACTUATOR ASSY-LANDING GEAR RETRACT FOR SPARES ORDER: 95-810017-29 FOR DETAILS SEE: 32-30-00-04	S	1
685	95-810017-21	• ACTUATOR ASSY-LANDING GEAR RETRACT FOR SPARES ORDER: 95-810017-29 FOR DETAILS SEE: 32-30-00-04	T	1
685	95-810017-23	• ACTUATOR ASSY-LANDING GEAR RETRACT FOR SPARES ORDER: 95-810017-29 FOR DETAILS SEE: 32-30-00-04	U	1
685	95-810017-27	• ACTUATOR ASSY-LANDING GEAR RETRACT FOR SPARES ORDER: 95-810017-29 FOR DETAILS SEE: 32-30-00-04	AF	1
685	95-810017-29	• ACTUATOR ASSY-LANDING GEAR RETRACT SPARES REPLACEMENT FOR: 95-810017-13 95-810017-15 95-810017-17 95-810017-19 95-810017-21 95-810017-23 95-810017-27 FOR SPARES ORDER: 95-810017-27 FOR DETAILS SEE: 32-30-00-04	V	1

32-30-00-01

Missing Item Not Applicable

Bonanza 36 Series Illustrated Parts Catalog
MAIN LANDING GEAR RETRACT MECHANISM

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
685	95-810017-27	• ACTUATOR ASSY-LANDING GEAR RETRACT SPARES REPLACEMENT FOR: 95-810017-29 FOR SPARES ORDER: 95-810017-37 FOR DETAILS SEE: 32-30-00-04	AD	1
685	95-810017-37	• ACTUATOR ASSY-LANDING GEAR RETRACT SPARES REPLACEMENT FOR: 95-810017-27 FOR SPARES ORDER: 95-810017-39 FOR DETAILS SEE: 32-30-00-04	Z	1
685	95-810017-39	• ACTUATOR ASSY-LANDING GEAR RETRACT SPARES REPLACEMENT FOR: 95-810017-37 FOR SPARES ORDER: 95-810017-41 FOR DETAILS SEE: 32-30-00-04	Y	1
685	95-810017-41	• ACTUATOR ASSY-LANDING GEAR RETRACT SPARES REPLACEMENT FOR: 95-810017-39 FOR DETAILS SEE: 32-30-00-04	AE	1
- 690	NAS1149F0463P	ATTACHING PARTS • WASHER	B	4
- 695	130909N32	• NUT	B	4
- 700	MS35489-17	-----★----- • GROMMET	B	1
- 705	MS24665-132	• PIN	B	2
710	130909B84	• BOLT- SPARES REPLACEMENT FOR: AN24-16	B	2
- 715	NAS1149F0463P	• WASHER	B	4
- 720	130909N7	• NUT	B	2
725	58-810015-1	• BUSHING	B	2
730	45-815003-3	• ROD ASSY-LANDING GEAR DOOR ACTUATOR, LH	B	1
- 735	45-815003-1	• ROD ASSY-LANDING GEAR DOOR ACTUATOR, RH	B	1
- 740	MS24665-132	• PIN	B	2
745	35-815183	• SCREW	B	2
- 750	NAS1149F0363P	• WASHER	B	2
- 755	130909N6	• NUT	B	2
760	105739-D0190-0375-0250	• BUSHING	B	2
765	105739-S0190-0341-0137	• BUSHING	B	2
770	35-815078	• LINK-MAIN LANDING GEAR UP LOCK CABLE	B	2
775	MS24665-132	• PIN	B	1
780	AN26-28	• BOLT	B	1
785	NAS1149F0632P	• WASHER	B	2
790	NAS1149F0663P	• WASHER	B	1
795	MS17826-6	• NUT	B	1

32-30-00-01

Missing Item Not Applicable

Bonanza 36 Series Illustrated Parts Catalog
MAIN LANDING GEAR RETRACT MECHANISM

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
800	HMXL-6AFGT	• ROD END- ALTERNATE SPARE: HMXL-6FG HMXL-6G FOR SPARES ORDER: ADNEL6-317	B	1
800	HMXL-6FG	• ROD END- ALTERNATE SPARE: HMXL-6AFGT HMXL-6G FOR SPARES ORDER: ADNEL6-317	B	1
800	HMXL-6G	• ROD END- ALTERNATE SPARE: HMXL-6AFGT HMXL-6FG FOR SPARES ORDER: ADNEL6-317	B	1
800	ADNEL6-317	• END-ROD SPARES REPLACEMENT FOR: HMXL-6AFGT HMXL-6FG HMXL-6G	B	1
A	E0001-E1110,E1112-E1240			
B	A0001-A9999,E1111-E1111, E1241-E9999			
C	A0001-A0238,E0001-E1620, E1626-E1875			
D	E1621-E1625			
E	A0239-A9999,E1876-E9999			
F	E0001-E0355,E0357-E0379			
G	A0001-A9999,E0356-E0356, E0380-E9999			
H	A0098-A9999,E1708-E9999			
J	A0001-A0097,E0001-E1707			
K	E0001-E0700			
L	A0001-A0308,E0001-E1984			
M	A0001-A0020,A0022-A0027, A0029-A0032,A0243-A0272, E1110-E1110,E1230-E1421, E1423-E1550,E1552-E1568, E1570-E1580,E1582-E1593			
N	A0021-A0021,A0028-A0028, A0033-A0241,E1422-E1422, E1551-E1551,E1569-E1569, E1581-E1581,E1594-E9999			
P	A0001-A0238,E1111-E1111, E1230-E1356,E1363-E1620, E1626-E1875			
Q	E1357-E1362			
R	E1621-E1625			
S	A0239-A0305,A0321-A0341, E1876-E2039,E2047-E2063			
T	A0306-A0320,A0342-A0428, E2040-E2046,E2064-E2173			
U	A0429-A0695,E2174-E3542			
V	A0001-A9999,E1111-E1111, E1230-E3694			
W	A0242-A0242,A0273-A9999			
X	E0001-E1110,E1112-E1229			
Y	A0001-A9999,E1111-E1111, E1230-E4007,E4009-E4011			

Bonanza 36 Series Illustrated Parts Catalog
MAIN LANDING GEAR RETRACT MECHANISM

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
Z	A0001-A9999,E1111-E1111, E1230-E3938			
AA	A0021-A0021,A0028-A0028, A0033-A0241,E1422-E1422, E1551-E1551,E1569-E1569, E1581-E1581,E1594-E3980			
AB	E3981-E3983			
AC	E3981-E9999			
AD	A0001-A9999,E1111-E1111, E1230-E3774			
AE	A0001-A9999,E1111-E1111, E1230-E9999			
AF	A0696-A9999,E3543-E3629, E3631-E3635			
FE	A0001-A9999,E0001-E9999			