


Beechcraft Corporation

KING AIR SERIES COMPONENT MAINTENANCE MANUAL

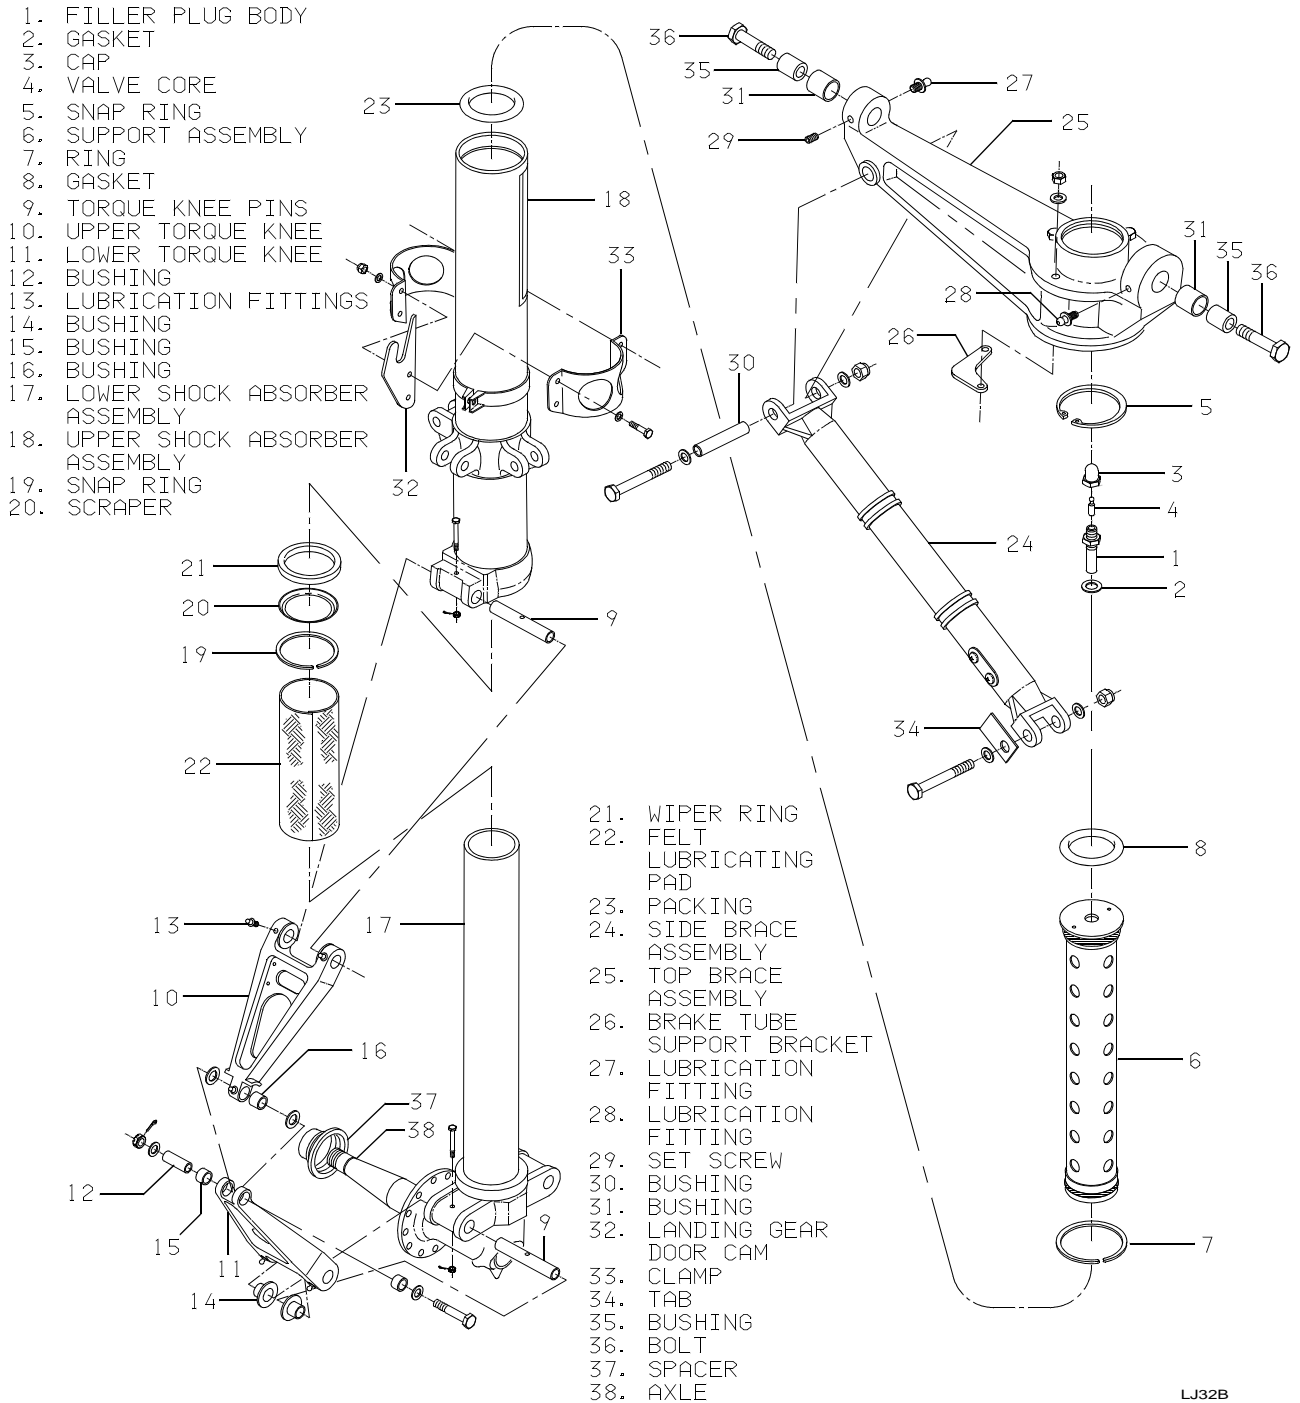

LJ32B
030924AA.AI

**Main Landing Gear Assembly
Figure 1**