Model Communiqué

King Air Series

Communiqué # 2014-01 July, 2014

ATA 00 - Gravel Runway Protection Kit Update

FA-1; FL-1 and after; FM-1 and after Standard/Heavy Weight/Extended Range Models

King Air Communiqué 2006-02 announced the availability of a Gravel Runway Protection Kit. This kit installs gravel guards on the inboard flaps, the belly anti-collision beacon and belly antennas. The kit has been revised to add the King Air B300 Heavy Weight (16,500 lb. MTOW) and the 350ER. The part number of the original kit is 130-4008-1 and the part number of the revised kit is 130-4008-3. These kits are available from Hawker Beechcraft Parts and Distribution (HBP&D) or a Beechcraft Authorized Service Center (ASC).

ATA 00 - Repair Design Office

The Repair Design Office (RDO) has developed a Damage Report Procedure Document to aid owner/operators and maintenance facilities in drawing up damage reports. Following RDO's guidelines will allow customers to present everything RDO requires for understanding of the issue at hand.

The second link provides access to RDO's home page. At this site, information about Normal Business Hours, AOG Service, Repair Estimates, Damage Surveys, and more is available.

http://www.beechcraft.com/customer_support/technical_and_field_support/repair_design_office /assets/files/damage_reporting_procedures.pdf

http://www.beechcraft.com/customer_support/technical_and_field_support/repair_design_office

ATA-11 - Interior/Exterior Placards in Spanish LJ-1835 and after

Beechcraft has developed a kit to install Spanish language placards on airplane serial numbers LJ-1835 and after. The kit number is 90-0094-0001. This kit is available from HBP&D or a Beechcraft Authorized Service Center. For kits applicable to other serial numbers and models, see Model Communiqué 2003-01.

→ ATA 32 - Mandatory Service Bulletin 32-3345; MLG Actuator Support Bracket Replacement LJ-1085, LJ-1088, through LJ-1416, LJ-1418 through LJ-1442

Beechcraft has been requested by the NTSB to remind owner/operators of the importance of complying with Mandatory Service Bulletin (MSB) 32-3345. This document announces the availability of a kit to replace the MLG actuator support brackets. The original brackets were made from aluminum and were upgraded with brackets made from steel. This kit incorporation change provides parts that improved product reliability.

ATA 32 - Wheel Eddy Current Inspection Probes All

The wheels used on the King Air Series airplanes are subject to nondestructive inspections as defined in respective Component Maintenance Manuals. One of the inspections is to inspect the wheel bead using an eddy current method. This requires special eddy current probes which are available from Centurion NDT. Centurion NDT contact details are:

http://www.centurionndt.com/ Phone 630-736-500 Sales@centurionndt.com

ATA 52 - Lighted Folding Steps

The King Air airplane originally did not have lights installed on the cabin door folding steps. Lighted steps were added later as a product improvement effort across the King Air fleet. This option is not shown in some Illustrated Parts Catalogs. The part numbers of the lighted steps are MCOC28926-651 for the bottom step and MCOC28926-653 for the middle step.

ATA 78 - Exhaust Stack Fairing Product Improvement B200/B300 Series

Beechcraft has received reports indicating that the exhaust stack fairings are deteriorating. Investigation has revealed that this is due to the high temperatures to which exhaust stacks are exposed during engine operation. Beechcraft has added high temperature paint on the fairing in the area next to the exhaust stack. This high temperature paint has proven to be effective in protecting the surface. Please see the following illustration for details and paint part numbers.

<u>KING AIR COMMUNIQUÉ INDEX</u> This is a running index. Discard the old index and insert the new index. <u>Up thru 2014-01</u>

ATA CHAPTER	DESCRIPTION	KAC No.
00	AIRPLANE GENERAL	
	Envire Chart Dropodurop	97-001
	Engine Start Procedures	98-001
	RDO (Repair Design Office)	98-001
	STARS	98-002
	Log Book Bags Year 2000 Readiness Disclosure Update	99-004
	Raytheon Aircraft Publication System (REPS)	2001-03
	Importing and Exporting Aircraft	2001-04
	Factory Technical Support	2003-01
	Pro Line 21 Aircraft	2004-02
	Kit Catalogue Now on Line	2005-02
	Maintenance Practices for STC's on B300	2005-02
	Phase Inspection Tolerance Clarification	2006-01
		2006-02
·····	Gravel Runway Protection Kit Part Number Understanding	2006-02
	Part Number Orderstanding Passenger Briefing Cards	2007-02
	Communiqué CD's	2008-02
	Window Stencils	2008-03
	Ghost "B" Paint	2008-03
	My Pubs Account	2009-01
	Emissions Trading System Scheme and Monitoring	2009-02
······	Class Program Announcement	2009-03
	Volcanic Ash	2010-02
	Flight in Airspace w/ Low Contamination of Volcanic Ash	2010-03
	Emissions Trading Scheme (ETS) and Monitoring Reporting	2010-0
	and Verification	
	King Air 90 Weight Increase STC	2010-0
	HBC Aircraft Modified by STCs	2011-0
	Aircraft Data Plates	2012-0
	Introducing the New King Air 250	2012-0
	Quality Assurance Instructions (QAI)	2012-0
	Class Program Update	2013-0
	Gravel Runway Protection Kit	2014-0
	Repair Design Office Damage Report Procedures	2014-0
04	AIRWORTHINESS LIMITATIONS	
	Life Limited Aircraft Parts	2002-0

	Window Defrost Filter Kit and Replacement Interval	2002-03
	Engine Inlet Discoloration	2002-03
	Goodrich FASTboots Installation	2005-02
_	Engine Heated Inlet Modified per Kit 101-9048	2006-01
	Stall Strip Bonding Material	2006-01
	Stall Strip Installation, Combi-Bond (See also 97-001)	2006-02
	Brake De-Ice System Removal Kit (See 2014-01)	2010-05
	Wing De-ice Boot 3M Adhesive 1300L Sold in Europe	2011-03
	SMR De-Ice Boot Supplier Advisory (SA12-33-01)	2012-04
	Brake De-ice System Removal Kit	2014-01
	Brake De-ice System Troubleshooting	2014-01
	King Air 250 De-ice Boots	2014-01
	King Air 250 De-ice Boots	2014-01
		2011.01
31	IND/RECORDING SYSTEMS	
		98-002
	Flight Data Recorder	99-00
	Radio Frequency Interference	2001-0
	Airspeed Bugs	2001-0
	Pitot Heat Indicator Kit	2003-0
	Instrument Leak Causes Pressurization Leak and Squeal	2003-0
	Annunciator Dimming Transistor Installation	2003-0
	Oil Indicator packaging	
	Pro-Line 21 Maintenance Diagnostic Computer; Maintenance Diagnostic Tables and Electronic Check Lists	2014-0
32	LANDING GEAR	
		07.00
	Wide Area Wheel Retention Washer Seal	97-00
	Wide Area Wheel Retention Washer Seal Brake Master Cylinder Repair Kit	
	Brake Master Cylinder Repair Kit	97-00
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels	97-00 98-00
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich)	97-00 98-00 98-00
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich) Inflation Valve Torque Procedures (ABS)	97-00 98-00 98-00 98-00 98-00
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich) Inflation Valve Torque Procedures (ABS) Torquing of Wheel Tie Bolts	97-00 98-00 98-00 98-00 98-00 98-00
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich) Inflation Valve Torque Procedures (ABS) Torquing of Wheel Tie Bolts Landing Gear Piston and Axle Assembly Leaks	97-00 98-00 98-00 98-00 98-00 98-00 99-00
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich) Inflation Valve Torque Procedures (ABS) Torquing of Wheel Tie Bolts Landing Gear Piston and Axle Assembly Leaks Landing Gear 60 Amp Circuit Breaker Relocation	97-00 98-00 98-00 98-00 98-00 98-00 99-00 99-00
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich) Inflation Valve Torque Procedures (ABS) Torquing of Wheel Tie Bolts Landing Gear Piston and Axle Assembly Leaks Landing Gear 60 Amp Circuit Breaker Relocation Brake De-ice Valve Installation	97-00 98-00 98-00 98-00 98-00 99-00 99-00 99-00
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich) Inflation Valve Torque Procedures (ABS) Torquing of Wheel Tie Bolts Landing Gear Piston and Axle Assembly Leaks Landing Gear 60 Amp Circuit Breaker Relocation Brake De-ice Valve Installation Hydraulic Power-pack Parts Breakdown.	97-00 98-00 98-00 98-00 98-00 99-00 99-00 99-00
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich) Inflation Valve Torque Procedures (ABS) Torquing of Wheel Tie Bolts Landing Gear Piston and Axle Assembly Leaks Landing Gear 60 Amp Circuit Breaker Relocation Brake De-ice Valve Installation Hydraulic Power-pack Parts Breakdown. See Rev. 1 on Comm. 2001-04	97-00 98-00 98-00 98-00 98-00 99-00 99-00 99-00 99-00
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich) Inflation Valve Torque Procedures (ABS) Torquing of Wheel Tie Bolts Landing Gear Piston and Axle Assembly Leaks Landing Gear 60 Amp Circuit Breaker Relocation Brake De-ice Valve Installation Hydraulic Power-pack Parts Breakdown. See Rev. 1 on Comm. 2001-04 BF Goodrich Brake Repairs	97-00 98-00 98-00 98-00 98-00 99-00 99-00 99-00 99-00 99-00
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich) Inflation Valve Torque Procedures (ABS) Torquing of Wheel Tie Bolts Landing Gear Piston and Axle Assembly Leaks Landing Gear 60 Amp Circuit Breaker Relocation Brake De-ice Valve Installation Hydraulic Power-pack Parts Breakdown. See Rev. 1 on Comm. 2001-04 BF Goodrich Brake Repairs Hydraulic Landing Gear Actuator Installation	97-00 98-00 98-00 98-00 98-00 99-00 99-00 99-00 99-00 99-00 99-00
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich) Inflation Valve Torque Procedures (ABS) Torquing of Wheel Tie Bolts Landing Gear Piston and Axle Assembly Leaks Landing Gear 60 Amp Circuit Breaker Relocation Brake De-ice Valve Installation Hydraulic Power-pack Parts Breakdown. See Rev. 1 on Comm. 2001-04 BF Goodrich Brake Repairs Hydraulic Landing Gear Actuator Installation Tire Usability (See 2003-01 for Rev 1)	97-00 98-00 98-00 98-00 98-00 99-00 99-00 99-00 99-00 99-00 99-00 99-00
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich) Inflation Valve Torque Procedures (ABS) Torquing of Wheel Tie Bolts Landing Gear Piston and Axle Assembly Leaks Landing Gear 60 Amp Circuit Breaker Relocation Brake De-ice Valve Installation Hydraulic Power-pack Parts Breakdown. See Rev. 1 on Comm. 2001-04 BF Goodrich Brake Repairs Hydraulic Landing Gear Actuator Installation Tire Usability (See 2003-01 for Rev 1) BF Goodrich Nose Wheel Torque Value Mislabel	97-00 98-00 98-00 98-00 98-00 99-00 99-00 99-00 99-00 99-00 99-00 99-00 99-00
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich) Inflation Valve Torque Procedures (ABS) Torquing of Wheel Tie Bolts Landing Gear Piston and Axle Assembly Leaks Landing Gear 60 Amp Circuit Breaker Relocation Brake De-ice Valve Installation Hydraulic Power-pack Parts Breakdown. See Rev. 1 on Comm. 2001-04 BF Goodrich Brake Repairs Hydraulic Landing Gear Actuator Installation Tire Usability (See 2003-01 for Rev 1) BF Goodrich Nose Wheel Torque Value Mislabel Landing Gear Torque Knees	97-00 98-00 98-00 98-00 98-00 99-00 99-00 99-00 99-00 99-00 99-00 99-00 99-00 99-00
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich) Inflation Valve Torque Procedures (ABS) Torquing of Wheel Tie Bolts Landing Gear Piston and Axle Assembly Leaks Landing Gear 60 Amp Circuit Breaker Relocation Brake De-ice Valve Installation Hydraulic Power-pack Parts Breakdown. See Rev. 1 on Comm. 2001-04 BF Goodrich Brake Repairs Hydraulic Landing Gear Actuator Installation Tire Usability (See 2003-01 for Rev 1) BF Goodrich Nose Wheel Torque Value Mislabel Landing Gear Torque Knees Bumper Block Installation. See ATA 54	97-00 98-00 98-00 98-00 98-00 99-00 99-00 99-00 99-00 99-00 99-00 99-00 2000-0 2000-0
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich) Inflation Valve Torque Procedures (ABS) Torquing of Wheel Tie Bolts Landing Gear Piston and Axle Assembly Leaks Landing Gear 60 Amp Circuit Breaker Relocation Brake De-ice Valve Installation Hydraulic Power-pack Parts Breakdown. See Rev. 1 on Comm. 2001-04 BF Goodrich Brake Repairs Hydraulic Landing Gear Actuator Installation Tire Usability (See 2003-01 for Rev 1) BF Goodrich Nose Wheel Torque Value Mislabel Landing Gear Torque Knees Bumper Block Installation. See ATA 54 Nose Landing Gear Actuators Swivel Parts. (See 2005-02)	97-00 98-00 98-00 98-00 98-00 99-00 99-00 99-00 99-00 99-00 99-00 2000-0 2000-0 2000-0
	Brake Master Cylinder Repair Kit Valve Stem Torque, ABS Wheels Inflation Valve Torque Procedures (BF Goodrich) Inflation Valve Torque Procedures (ABS) Torquing of Wheel Tie Bolts Landing Gear Piston and Axle Assembly Leaks Landing Gear 60 Amp Circuit Breaker Relocation Brake De-ice Valve Installation Hydraulic Power-pack Parts Breakdown. See Rev. 1 on Comm. 2001-04 BF Goodrich Brake Repairs Hydraulic Landing Gear Actuator Installation Tire Usability (See 2003-01 for Rev 1) BF Goodrich Nose Wheel Torque Value Mislabel Landing Gear Torque Knees Bumper Block Installation. See ATA 54	97-00 97-00 98-00 98-00 98-00 99-00 99-00 99-00 99-00 99-00 99-00 2000-0 2000-0 2000-0 2000-0 2000-0 2000-0

	Landing Gear Actuator Clevis Limits and Part Numbers. See 2002-03 for Rev. 1.	2001-03
	Hydraulic Power-pack Parts Breakdown. Rev. 1	2001-04
	Foot and Mouth Disease, Wheel and Brake Components	2001-04
	Nose Landing Gear Fork Assembly Replacement	2001-04
	Landing Gear Power Pack Motor Wiring	2002-01
	Landing Gear Actuators End Play Check	2002-03
	Landing Gear Actuator Clevis Wear Limits and Part Numbers. Rev. 1 (See 2001-03)	2002-03
	Accelerated Wear of Brake Assemblies	2002-03
	SB 32-2102 and 53-2472 up coming revisions	2002-04
	King Air C90A Tires	2002-05
	Brake Reservoir	2003-01
·	Nose Landing Gear Scraper and Wiper Ring Installation Hints	2003-01
	Hi-Flotation Landing Gear Wheel Service Bulletin from ABS	2003-01
	Tire Usability. Rev 1 (99-005)	2003-01
	Hydraulic Landing Gear Actuator Restrictors	2003-02
	Nose Wheel Spares	2003-02
	Nose Landing Gear Actuator Swivel Parts Breakdown. See	2005-02
	Wheel and Brake Cross-over Part Numbers	2005-02
	Nose Landing Gear Actuator Swivel Parts Rev. 1 (See 2000-04)	2005-02
	Landing Gear Inspection vs. Overhaul	2005-02
	Landing Gear Grease Gun Modification	2006-01
	Nose Landing Gear Stop Block Installation	2006-01
	Cycling of Hydraulic Power Packs	2006-02
	King Air Overhaul vs. Inspection in Landing Gear CMM	2006-02
	Landing Gear Attach Hole Inspection	2006-02
	Hydraulic Plumbing Replacement Procedures	2006-02
	Tire and Brake STC Comparability Issue	2007-02
	King Air 100 Tire Usage	2008-01
	CMM Index	2008-02
	Landing Gear Attach Hole Inspection	2008-03
	Brake Overhaul Kit	2009-01
	Main Landing Gear Tires, King Air 90 Series	2009-05
	Landing Gear Seals Parts List	2011-03
	Landing Gear RCCB Installation Kit	2012-04
→	MSB 32-3345 Compliance Reminder	2014-01
	Wheel Eddy Current Inspection Probes	2014-01
33	LIGHTS	
	Cabin Indirect Lighting	98-001
	Cabin Indirect Lighting	99-005
	Cold Cathode Connector Assembly & Potting Instr.	2000-03
	Rotating Beacon Replacement (See 2006-01)	2001-04
	Wing Tip Navlight Lense Installation	2001-04
	Fluorescent Light Power Supplies	2002-01
	Recommended SB 33-3410, Flashing Beacon Hardware Kit	2002-05
	Wing High Intensity Nav Light Bulb Replacement	2003-02