

**Docket No. SA-538**

**Exhibit No. 21-D**

**NATIONAL TRANSPORTATION SAFETY BOARD**

**Washington, D.C.**

Lido Help Page

(2 Pages)

## Initialize the Planning Parameter Check

To view the current operational data and the weather and NOTAMs for the runways and airports for a flight plan, you initialize a check of the planning parameters.

### To initialize the planning parameter check

On the Planning Parameter frame, click **Initialize**.

#### Results

Lido displays:

- Suitability of airports in the **List of Airports** table.
- Suitable alternate airports in the **Alternates** fields.

#### Notes

- The default option is the preferential runway. If the preferred runway is not available, Lido searches for an available suitable runway. If you click **Recheck**, Lido does not recheck the preferred runway, it searches for the available suitable runway.
- The **Init. Time** field is updated each time you click **Initialize**.

The screenshot shows the 'Planning Parameter' window with the following data and controls:

AL	Flt-No.	OS	Date	DEP	STD	STA	DEST
5X	2918		26AUG08	KDFW	262100	262353	KOBT

TAXI FUEL: 2000  
RWY: 17R → 262100 262353 26L

Priority/Load: [Dropdown]

Fin No: 520  
Operator: 5X, Registration: N520DP  
PERFCORR: 1.030, CONT: CONT99

TCAP: 360900

FOB: 41000  
PIC: A

DOW: 352400, Lead: 116000, ESTZFW: 468400, MALYOW: 833000, CG ZFW: [Field] %  
Unit: LB, Quality: [Field]  
First and Final: [Field]

Buttons: Initialize, Recheck, ETOPS, Init. Time: [Field]

Right sidebar buttons: SELECT, INSERT, FLT LIST, RTE DEF, ANALYSIS, OFF TRANS, WNNOTAM, TO REQ, TO REQ, A/C DEV, REMARK, WNNOTAM, CLEAR, HELP, PRINT, CLOSE

Bottom status: Re-Checking ... Done!