

Attachment 7

Time Limit Components

Omega Air

Component Data

Boeing 707 N707AR

		TAT	TAC	Date		
		47,856	15,185	18-May-11		
ATA	Component	P/N	S/N	Limit	Installed	Next Due
25	Evacuation Slides and Bottles	6176100-114	150-4	5YRS	04 August 2009	03 August 2014
25	Evacuation Slides and Bottles	15D22093-12	3811462	5YRS	04 August 2009	03 August 2014
25	Evacuation Slides and Bottles	10-61499-29	228311091	5YRS	04 August 2009	03 August 2014
25	First Aid Kit	N/A	N/A	3YRS	04 August 2009	03 August 2012
25	First Aid Kit	N/A	N/A	3YRS	04 August 2009	03 August 2012
25	Halon Extinguisher	1600	A595088C	3YRS	04 August 2009	03 August 2012
25	Halon Extinguisher	215-1211	D-829773	3YRS	04 August 2009	03 August 2012
25	Halon Extinguisher	352	626KC	3YRS	04 August 2009	03 August 2012
25	Halon Extinguisher	A-352	V-063862	3YRS	04 August 2009	03 August 2012
25	Life Rafts and Bottles	R020-A211	TK158	5YRS	04 August 2009	03 August 2014
25	Life Rafts and Bottles	R020A211	TM452	5YRS	04 August 2007	03 August 2012
25	Life Vests - Cabin (28) (Including 4 Spares)	Various	Various	3YRS	04 August 2009	03 August 2012
25	Life Vests - Cockpit (5)	S-21450-6311	Various	3YRS	04 August 2009	03 August 2012
25	Megaphone	S168MA	29042	3YRS	04 August 2009	03 August 2012
25	Megaphone	ST168MA	29048	3YRS	04 August 2009	03 August 2012
25	Water Extinguisher	892480	P-200864	5YRS	04 August 2009	03 August 2014
25	Water Extinguisher	892480	P-200865	5YRS	04 August 2009	03 August 2014
26	Engine Fire Extinguisher Bottle	10-890532-02	07828D2	5YRS	25 June 2006	24 June 2011
26	Engine Fire Extinguisher Bottle	10-890532-02	29002CE	5YRS	08 August 2007	07 August 2012
26	Engine Fire Extinguisher Bottle	10-890532-02	93665CZ	5YRS	08 August 2007	07 August 2012
26	Engine Fire Extinguisher Bottle	10-890532-02	18272CC	5YRS	08 August 2007	07 August 2012
26	Bottle Discharge Cartridge (Squib)	841155-1	AEN 1-40	5YRS	08 August 2007	07 August 2012
26	Bottle Discharge Cartridge (Squib)	841155-1	UNK	5YRS	08 August 2007	07 August 2012
26	Bottle Discharge Cartridge (Squib)	841155-1	UNK	5YRS	08 August 2007	07 August 2012
26	Bottle Discharge Cartridge (Squib)	AE841155-1	UKN	5YRS	25 June 2006	24 June 2011
32	Main Gear Shock Strut Assembly	65-22113-25	R534	18000hrs	33,724	51,724
32	Main Gear Shock Strut Assembly	65-22113-34	594	18000hrs	33,724	51,724
32	Nose Landing Gear Assembly	65-33733-41	H6848	16000hrs	35,421	51,421
32	Pneumatic Brake Air Bottle	36200012	00047CI	5YRS	08 August 2007	07 August 2012
34	Underwater Locator Beacon	DK120	40485	2YRS	04 August 2009	03 August 2011
35	Oxygen Cylinder Assemblies	801307-00	30537	5YRS	08 August 2007	07 August 2012
35	Oxygen Cylinder Assemblies	801307-00	19729	5YRS	08 August 2007	07 August 2012
35	Oxygen Cylinder Assemblies	801307-00	431834	5YRS	04 August 2009	03 August 2014
35	Oxygen Cylinder Assemblies	801307-00	2785	5YRS	08 August 2007	07 August 2012

ATA	Component	P/N	S/N	Limit	Installed	Next Due
35	Oxygen Cylinder Assemblies	801307-00	347919	5YRS	04 August 2009	03 August 2014
35	Oxygen Cylinder Assemblies	801307-00	666824	5YRS	04 August 2009	03 August 2014
35	Oxygen Cylinder Assemblies	801307-00	ST20104	5YRS	04 August 2009	03 August 2014
35	Oxygen Cylinder Assemblies	801307-00	36246	5YRS	08 August 2007	07 August 2012
35	Portable Oxygen Cylinder	5600-1-IA-F23A	1062X	5YRS	04 August 2007	03 August 2012
35	Portable Oxygen Cylinder	5500C1ABF20B	38825CV	5YRS	04 August 2007	03 August 2012
35	Portable Oxygen Cylinder	5500-C1A-BF20B	K82223A	5YRS	04 August 2009	03 August 2014
35	Portable Oxygen Cylinder	5500C1AFB20B	K38980	5YRS	04 August 2007	03 August 2012
35	Portable Oxygen Cylinder	5500C1AFB20B	12708DF	5YRS	04 August 2009	03 August 2014
35	Portable Oxygen Cylinder	5500C1AFB20B	74495DF	5YRS	04 August 2007	03 August 2012
35	Portable Oxygen Cylinder	5500C1AFB23A	16023W	5YRS	04 August 2009	03 August 2014
54	Pylon Tie Rod	TA-QN-37574-503	20029-1	20000cys	11,495	31,495
54	Pylon Tie Rod	TA-QN-37574-503	20029-2	20000cys	11,495	31,495
54	Pylon Tie Rod	TA-QN-37574-503	20029-3	20000cys	11,495	31,495
54	Pylon Tie Rod	TA-QN-37574-503	20029-4	20000cys	11,495	31,495

Insp No	Component	P/N	S/N	Task Card
	TAT		TAC	Date
	47,856		15,185	18-May-11
Insp No	Component	P/N	S/N	Task Card
10-21-01	Differential Pressure Indicator	AW2056AB01	23	2C-56
10-21-02	Ambient Air Temperature Sensing Element	H63-1	NSN	C-001
10-21-02	Ambient Air Temperature Sensing Element	H65-1	NSN	C-001
10-21-03	Cabin Rate of Climb Indicator	B4018710026	1406A	2C-56
10-21-04	Cabin Air Temperature Indicator	163BL506	159	2C-56
10-21-04	Cabin Air Temperature Indicator	N/A	N/A	2C-56
10-21-05	Cabin Temperature Selector	10-3063-7	1998	2C-56
10-21-05	Cabin Temperature Selector	10-3063-7	123	2C-56
10-21-06	Cabin Temperature Control Regulator	A186-1E	RG-014	C-009
10-21-06	Cabin Temperature Control Regulator	A5101C	293	C-009
10-21-07	Control Cabin Air Flow Controller	809960-10	36-436	C-104
10-21-08	Cabin Pressure and Safety Outflow Valve	103432-1-1	47-137	4C-06
10-21-08	Cabin Pressure and Safety Outflow Valves - Aft	103430-3	33-573	4C-06
10-21-08	Cabin Pressure and Safety Outflow Valves - Forward	103430-3	107-242	4C-06
10-21-09	Air Conditioning Pack Shutoff Valve - 6"	104924	P-5502	C-001
10-21-09	Air Conditioning Pack Shutoff Valve - 6"	107254	P-2777	C-001
10-21-10	Cabin Altitude Warning Horn and Switch	102638-4	NSN	C-003
10-21-11	Ram Air Shutoff Valve	N/A	N/A	C-001
10-21-11	Ram Air Shutoff Valve	N/A	N/A	C-001
10-21-12	Cabin Air Thrust Recovery Valve	105798	9-1661	4C-01 4C-02 4C-03
10-21-12	Cabin Air Thrust Recovery Valve	105798	979-120	4C-01 4C-02 4C-03
10-21-12	Cabin Air Thrust Recovery Valve	105798	P-1674	4C-01 4C-02 4C-03
10-21-13	Actuator - Ram Air Exhaust Damper	541116-2	116-197	C-001
10-21-13	Actuator - Ram Air Exhaust Damper	541116-2	65-146	C-001
10-21-14	Air Cycle Machine	N/A	N/A	C-001
10-21-14	Air Cycle Machine	N/A	N/A	C-001
10-21-15	Water Separator Anti-icing Thermostat	N/A	N/A	C-001
10-21-15	Water Separator Anti-icing Thermostat	N/A	N/A	C-001
10-21-16	Water Separator Anti-icing Valve	N/A	N/A	C-001
10-21-16	Water Separator Anti-icing Valve	N/A	N/A	C-001
10-21-17	Main Cabin Temperature Control Valve Assembly	85900A1	719	4C-06
10-21-18	Primary Heat Exchanger	179110-1-1	57-1942	C-001
10-21-18	Primary Heat Exchanger	179110-1-1	66-1802	C-001
10-21-19	Secondary Heat Exchanger	N/A	N/A	C-001
10-21-19	Secondary Heat Exchanger	N/A	N/A	C-001
10-21-20	Turbofan (Ground Cooling)	207727-1	16-191	C-001
10-21-20	Turbofan (Ground Cooling)	207727-1	18-338	C-001

Insp No	Component	P/N	S/N	Task Card
10-21-21	Turbofan Shutoff Valve	N/A	N/A	C-001
10-21-21	Turbofan Shutoff Valve	N/A	N/A	C-001
10-21-22	Water Separator	N/A	N/A	C-001
10-21-22	Water Separator	N/A	N/A	C-001
10-21-23	Gasper Fan	500702-4240	A4-481111	2C-79
10-22-01	Amplifier Computer	18763-1C	7710503	C-009
10-22-01	Computer Amp NBR 1	614967-10	6105364	C-009
10-22-01	Computer Amp NBR 2	614937-101	2119378A	C-009
10-22-02	Autopilot Adapter	10-3065-2	81015	C-009
10-22-03	Autopilot Control Panel	16906-10	4052030	2C-56
10-22-04	Position Transmitter - Spoiler	10-3056-12	NSN	C-010
10-22-04	Position Transmitter - Spoiler	10-3056-12	6101180	C-010
10-22-05	Power - Junction Box	DR41C2	308	C-009
10-22-06	Stabilizer Trim Servo	16729-2C	7071010W	C-012
10-22-07	Aileron Servo	167028	906112	C-009
10-22-08	Elevator Servo	15653-2-A	1123	C-012
10-22-09	Three - Axis Rate Transmitter	15831-2B	8081000RA	C-009
10-22-10	Autopilot Trim Indicator	520188	82	2C-56
10-22-11	Mach Trim Synchrotel Transmitter	N/A	N/A	C-009
10-22-12	Mach Trim Servo Torque Unit	A322410008	1251A	C-009
10-22-13	Mach Trim Coupler	16070-1C	611040	C-009
10-22-14	Position Transmitter - Stabilizer	N/A	N/A	C-012
10-22-15	Yaw Damper Coupler	18749-1A	5091040	C-009 C-013
10-23-01	Service Interphone Amplifier	G-708-1	1779	C-015 2C-09
10-23-02	Audio Selector Panel Interphone	G586-11A	880	2.1-06-03 2C-09
10-23-02	Audio Selector Panel Interphone	G586-11A	233	2.1-06-03 2C-09
10-23-02	Audio Selector Panel Interphone	G586-11D	404	2.1-06-03 2C-09
10-23-02	Audio Selector Panel Interphone	G586-11D	842	2.1-06-03 2C-09
10-23-02	Audio Selector Panel Interphone	G586-11D	717	2.1-06-03 2C-09
10-23-03	Microphone Control Selector Panel	G2165A	130	2.1-06-03 2C-09
10-23-03	Microphone Control Selector Panel	G2165A	82	2.1-06-03 2C-09
10-23-04	Interphone Speakers	G515D	88	2.1-06-03 2C-09
10-23-04	Interphone Speakers	G515D	8	2.1-06-03 2C-09
10-23-06	Passenger Address Amplifier	G502-A	106	C-015 2C-09
10-23-07	Tape Reproducer - PA System	104098	1154	C-015 2C-09
10-23-08	Tape Reproducer Power Supply	N/A	N/A	2C-09
10-23-09	Passenger Address Panel	104208	1110	2C-09
10-23-09	Passenger Address Panel	N/A	N/A	2C-09
10-23-10	Passenger Address Microphone	602-3374	0213753	2C-09
10-23-10	Passenger Address Microphone	N/A	N/A	2C-09

Omega Air

Component Data

Boeing 707 N707AR

Insp No	Component	P/N	S/N	Task Card
10-23-10	Passenger Address Microphone	N/A	N/A	2C-09
10-23-11	VHF Transceiver	622-9878-002	13195	C-015
10-23-11	VHF Transceiver	622-9878-002	SUZ00505	C-015
10-23-12	VHF Control Panel	622-871-003	5JA0143	2C-56
10-23-12	VHF Control Panel	822-0708-001	296	2C-56
10-23-13	VHF Antenna	928K	X2	C-014
10-23-13	VHF Antenna	928K	X1	C-014
10-23-14	HF Transceiver #1	622-2588-002	4040	C-015
10-23-14	HF Transceiver #2	622-3371-001	2003	C-015
10-23-15	HF Antenna Tuner Control Unit	522-3159-001	395	C-015
10-23-15	HF Antenna Tuner Control Unit	522-4159-001	559	C-015
10-23-16	HF Antenna Coupler (Tuner)	522-3159-000	503	2C-08
10-23-16	HF Antenna Coupler (Tuner)	522-3159-000	1081	2C-08
10-23-17	HF Lightning Arrester	10-3307-3	739	2C-08
10-23-18	HF Control Panel	G5596	19	C-015
10-23-18	HF Control Panel	N/A	N/A	C-015
10-23-19	Selcal Decoder	N/A	N/A	2C-56
10-23-19	Selcal Decoder	NA126-D2	CJ913L	2C-56
10-23-20	Voice Recorder Unit	980-6001-004M1	2942	C-017
10-24-01	AC Voltmeter	LKCB-8038	701	B-08 2C-17
10-24-02	Battery	CA31H	8708	B-07
10-24-03	Constant Speed Drive Oil Temperature Indicator	10-3232-3	A713	2C-56
10-24-03	Constant Speed Drive Oil Temperature Indicator	10-3232-3	A456	2C-56
10-24-03	Constant Speed Drive Oil Temperature Indicator	10-3232-3	A186	2C-56
10-24-03	Constant Speed Drive Oil Temperature Indicator	147BDL21	A3	2C-56
10-24-04	DC Ammeter	10-60757-41	222	B-08
10-24-05	DC Loadmeter	LKCB-8056	279	2C-56
10-24-06	Essential Power Failure Relay	10-60450-2	NSN	2C-17
10-24-07	Frequency Meter	10-50157-125	665	2C-56
10-24-08	AC Generator - Engine	976J119-12	WG1315	C-022 C-023 C-024 C-025
10-24-08	AC Generator - Engine	976J119-12	MH2122	C-022 C-023 C-024 C-025
10-24-08	AC Generator - Engine	976J498-1	TY3516	C-022 C-023 C-024 C-025
10-24-08	AC Generator - Engine	976J958-1	RO1960	C-022 C-023 C-024 C-025
10-24-10	Generator Constant Speed Drive	700642A	10254	C-022 C-023 C-024 C-025 2C-15
10-24-10	Generator Constant Speed Drive	700642A	23598	C-022 C-023 C-024 C-025 2C-15
10-24-10	Generator Constant Speed Drive	700842A	9800	C-022 C-023 C-024 C-025 2C-15
10-24-10	Generator Constant Speed Drive	700842A	67555	C-022 C-023 C-024 C-025 2C-15
10-24-11	Generator Control Panel	907D611-4	3292	C-091
10-24-11	Generator Control Panel	907-D611-4	4172	C-091
10-24-11	Generator Control Panel	907-D611-4	YL3936	C-091

Insp No	Component	P/N	S/N	Task Card
10-24-11	Generator Control Panel	907-D611-4	MG-2128	C-091
10-24-12	Generator Drive Load Controller	10-60295-4	2946	C-091 2C-18
10-24-12	Generator Drive Load Controller	10-60295-6	1180	C-091 2C-18
10-24-12	Generator Drive Load Controller	10-60295-6	2418	C-091 2C-18
10-24-12	Generator Drive Load Controller	10-60295-6	1098	C-091 2C-18
10-24-13	Ground Battery Bus Relay	10-3301	NSN	C-091 2C-18
10-24-14	Ground Power Interlock Relay	10-3092	62272	2C-17
10-24-15	Ground Power Relay	B102F	CG-31494	C-091 2C-18
10-24-16	DC Voltmeter	10-8032123	379	B-08
10-24-17	Ground Power Selector Relay	524-6567	NSN	2C-17
10-24-18	Master Warning Light Control M45	65-45378-1	NSN	2C-56
10-24-19	Negative Sequence Relay	B707-B	NSN	2C-17
10-24-20	Negative Sequence Auxiliary No. 1 Relay	10-3092	63869	2C-17
10-24-21	Negative Sequence Auxiliary No. 2 Relay	10-3092	63376	2C-17
10-24-22	Reverse Current Contactor	A4/9-358039-3	8846	2C-17
10-24-22	Reverse Current Contactor	A4/9-358039-3	8817	2C-17
10-24-22	Reverse Current Contactor	A4/9-358039-3	8857	2C-17
10-24-22	Reverse Current Contactor	A4/9-358039-3	8871	2C-17
10-24-23	Transformer - Rectifier	2-414	876	C-091 2C-18
10-24-23	Transformer - Rectifier	2-414	1251	C-091 2C-18
10-24-23	Transformer - Rectifier	2-414	1250	C-091 2C-18
10-24-23	Transformer - Rectifier	5-1319	28620	C-091 2C-18
10-24-24	Voltage Regulator	905-D977-3	XJ1926	C-091 2C-18
10-24-24	Voltage Regulator	905-D977-4	WM-3183A	C-091 2C-18
10-24-24	Voltage Regulator	905-D977-4	SM-2984A	C-091 2C-18
10-24-24	Voltage Regulator	905-D977-4	XM3256A	C-091 2C-18
10-24-25	Watt-Var Meter	10-60757-126	73	2C-17
10-24-25	Watt-Var Meter	10-60757-126	57066	2C-17
10-24-25	Watt-Var Meter	10-60757-126	1501	2C-17
10-24-25	Watt-Var Meter	10-60757-126	1496	2C-17
10-24-26	Constant Speed Drive Oil Cooler	155981-2	44-1896	C-022 C-023 C-024 C-025
10-24-26	Constant Speed Drive Oil Cooler	155981-2	102657	C-022 C-023 C-024 C-025
10-24-26	Constant Speed Drive Oil Cooler	155981-2	5324	C-022 C-023 C-024 C-025
10-24-26	Constant Speed Drive Oil Cooler	155981-2	NSN	C-022 C-023 C-024 C-025
10-25-01	Evacuation Slides and Bottles	6176100-114	150-4	HT
10-25-01	Evacuation Slides and Bottles	15D22093-12	3811462	HT
10-25-01	Evacuation Slides and Bottles	10-61499-29	228311091	HT
10-25-01	Fire Axe	42D8331	N/A	OC
10-25-01	Fire Proof Gloves	CE 950479	N/A	OC
10-25-01	First Aid Kit	N/A	N/A	HT

Omega Air

Component Data

Boeing 707 N707AR

Insp No	Component	P/N	S/N	Task Card
10-25-01	First Aid Kit	N/A	N/A	HT
10-25-01	Halon Extinguisher	1600	A595088C	HT
10-25-01	Halon Extinguisher	215-1211	D-829773	HT
10-25-01	Halon Extinguisher	352	626KC	HT
10-25-01	Halon Extinguisher	A-352	V-063862	HT
10-25-01	Life Rafts and Bottles	R020-A211	TK158	HT
10-25-01	Life Rafts and Bottles	R020A211	TM452	HT
10-25-01	Life Vests - Cabin (28) (Including 4 Spares)	Various	Various	HT
10-25-01	Life Vests - Cockpit (5)	S-21450-6311	Various	HT
10-25-01	Megaphone	S168MA	29042	C-031 C-036
10-25-01	Megaphone	ST168MA	29048	C-031 C-036
10-25-01	Smoke Goggles	322-70	N/A	OC
10-25-01	Torches	N/A	N/A	OC
10-25-01	Water Extinguisher	892480	P-200864	HT
10-25-01	Water Extinguisher	892480	P-200865	HT
10-26-01	Double Check Tee Valve	966301-9	2532	2C-21 2C-22
10-26-01	Double Check Tee Valve	966301-9	2527	2C-21 2C-22
10-26-02	Engine Selector Control Valve	871798	877	2C-53 2C-54
10-26-02	Engine Selector Control Valve	871798	1204	2C-53 2C-54
10-26-02	Engine Selector Control Valve	871798	646	2C-53 2C-54
10-26-02	Engine Selector Control Valve	871798	324	2C-53 2C-54
10-26-03	Engine Fire Extinguisher Bottle	10-890532-02	07828D2	HT
10-26-03	Engine Fire Extinguisher Bottle	10-890532-02	29002CE	HT
10-26-03	Engine Fire Extinguisher Bottle	10-890532-02	93665CZ	HT
10-26-03	Engine Fire Extinguisher Bottle	10-890532-02	18272CC	HT
10-26-04	Bottle Discharge Cartridge (Squib)	841155-1	AEN 1-40	HT
10-26-04	Bottle Discharge Cartridge (Squib)	841155-1	UNK	HT
10-26-04	Bottle Discharge Cartridge (Squib)	841155-1	UNK	HT
10-26-04	Bottle Discharge Cartridge (Squib)	AE841155-1	UKN	HT
10-26-06	Smoke Detector Blower	N/A	N/A	2C-19
10-26-07	Smoke Detector	N/A	N/A	2C-19
10-26-08	Fire Detector Control Unit Engine	N/A	N/A	OC
10-26-08	Fire Detector Control Unit Engine	N/A	N/A	OC
10-26-08	Fire Detector Control Unit Engine	N/A	N/A	OC
10-26-08	Fire Detector Control Unit Engine	N/A	N/A	OC
10-26-09	Engine Sensing Element	1786-4	NSN	OC
10-26-09	Engine Sensing Element	1786-4	NSN	OC
10-26-09	Engine Sensing Element	1786-4	NSN	OC
10-26-09	Engine Sensing Element	1786-4	NSN	OC
10-26-09	Engine Sensing Element	1786-4	NSN	OC

Insp No	Component	P/N	S/N	Task Card
10-26-09	Engine Sensing Element	1786-4	NSN	OC
10-26-09	Engine Sensing Element	1786-4	NSN	OC
10-26-09	Engine Sensing Element	1786-4	NSN	OC
10-26-10	Fire Detector Control Unit - Wheel Well	890700-1800	1002	OC
10-26-11	Continuous Loop Sensing Element Wheel Well (8 Sensing Elements)	701120	NSN	OC
10-26-12	Fire Control Module APU (if installed)	N/A	N/A	C-115
10-26-13	APU Sensing Element (if installed)	N/A	N/A	C-115
10-26-13	APU Sensing Element (if installed)	N/A	N/A	C-115
10-27-01	Control Column	5-87879-3029	NSN	C-038
10-27-01	Control Column	5-87879-3030	NSN	C-038
10-27-02	Spoiler Actuator	65-23349-4	DA188	OC
10-27-02	Spoiler Actuator	65-23349-4	DLH3130	OC
10-27-02	Spoiler Actuator	65-23349-4	BB369R	OC
10-27-02	Spoiler Actuator	65-23349-4	DAZ88	OC
10-27-02	Spoiler Actuator	65-58558-1	DA1999	OC
10-27-02	Spoiler Actuator	65-23349-4	DA967	OC
10-27-02	Spoiler Actuator	65-23349-4	DLH31320	OC
10-27-02	Spoiler Actuator	65-23349-4	DA76	OC
10-27-03	Spoiler Control Valve	50-6875-1	RC2405	OC
10-27-03	Spoiler Control Valve	50-6875-1	RC2542	OC
10-27-03	Spoiler Control Valve	50-6875-1	RC2447	OC
10-27-03	Spoiler Control Valve	50-6875-1	RC2039	OC
10-27-04	Spoiler Swivel Joint	10-3203-3	NSN	B-06 C-040 C-041
10-27-04	Spoiler Swivel Joint	10-3203-3	NSN	B-06 C-040 C-041
10-27-04	Spoiler Swivel Joint	10-3203-3	NSN	B-06 C-040 C-041
10-27-04	Spoiler Swivel Joint	10-3203-3	NSN	B-06 C-040 C-041
10-27-04	Spoiler Swivel Joint	10-3203-3	NSN	B-06 C-040 C-041
10-27-04	Spoiler Swivel Joint	10-3203-3	T6048	B-06 C-040 C-041
10-27-04	Spoiler Swivel Joint	10-3203-3	NSN	B-06 C-040 C-041
10-27-04	Spoiler Swivel Joint	10-3203-3	NSN	B-06 C-040 C-041
10-27-04	Spoiler Swivel Joint	10-3203-3	NSN	B-06 C-040 C-041
10-27-04	Spoiler Swivel Joint	10-3203-3	AGQ69	B-06 C-040 C-041
10-27-04	Spoiler Swivel Joint	10-3203-3	NSN	B-06 C-040 C-041
10-27-04	Spoiler Swivel Joint	10-3203-3	NSN	B-06 C-040 C-041
10-27-04	Spoiler Swivel Joint	10-3203-3	NSN	B-06 C-040 C-041
10-27-04	Spoiler Swivel Joint	10-3203-3	NSN	B-06 C-040 C-041
10-27-04	Spoiler Swivel Joint	956154	111	B-06 C-040 C-041
10-27-04	Spoiler Swivel Joint	AE95615G	Q73	B-06 C-040 C-041
10-27-05	Stabilizer Trim Actuator Assembly	65-6156-17	T0036R	C-039
10-27-06	Stabilizer Trim Control Relay	MS24143 D	NSN	C-039

Insp No	Component	P/N	S/N	Task Card
10-27-07	Stabilizer Trim Drive Motor Unit	BAC10-60165-4	741002	C-039
10-27-08	Stabilizer Trim Safety Relay	MS24143-D2	NSN	C-039
10-27-09	Stabilizer Trim Brake Assembly	10-60822	176	C-039
10-27-10	Inboard Aileron Trim Control Mechanism	50-8705-326	29A125	C-043 2C-35 2C-36
10-27-10	Inboard Aileron Trim Control Mechanism	50-8705-426	19A109	C-043 2C-35 2C-36
10-27-11	Aileron Snubber Assembly	5-88763-10	DA3243	2C-29 2C-29A
10-27-11	Aileron Snubber Assembly	5-88763-10	PRJ4F45266	2C-29 2C-29A
10-27-12	Outboard Aileron Lockout Gearbox	5-87199-3002	71	C-040 C-041
10-27-12	Outboard Aileron Lockout Gearbox	5-87199-3002	404A	C-040 C-041
10-27-13	Outboard Flap Angle Gearbox (Outboard Location)	65-6373-13	NSN	C-040 C-041
10-27-13	Outboard Flap Angle Gearbox (Outboard Location)	65-6373-16	NSN	C-040 C-041
10-27-14	Inboard Flap Ell Gearbox	65 20848-5	NSN	C-040 C-041
10-27-14	Inboard Flap Ell Gearbox	65 20848-6	NSN	C-040 C-041
10-27-15	Inboard Flap Tee Gearbox	65-7125-4	NSN	C-040 C-041
10-27-15	Inboard Flap Tee Gearbox	65-7125-4	NSN	C-040 C-041
10-27-16	Outboard Flap Angle Gearbox (Inboard Location)	57G1700	NSN	C-040 C-041
10-27-16	Outboard Flap Angle Gearbox (Inboard Location)	57G1700	1483	C-040 C-041
10-27-17	Inboard Flap Angle Gearbox	50-9472-2	NSN	C-040 C-041
10-27-17	Inboard Flap Angle Gearbox	50-9492-2	NSN	C-040 C-041
10-27-18	Fillet Flap Angle Gearbox	85-19455	85-4	C-040 C-041
10-27-18	Fillet Flap Angle Gearbox	85-19455-8	NSN	C-040 C-041
10-27-19	Fillet Flap Tee Gearbox	65-20845-5	20084	C-040 C-041
10-27-20	Main Flap Transmission Assembly	5-84049-3034	NSN	L2B-03 C-040 C-041
10-27-20	Main Flap Transmission Assembly	5-84049-3034	NSN	L2B-03 C-040 C-041
10-27-20	Main Flap Transmission Assembly	5-84049-3036	NSN	L2B-03 C-040 C-041
10-27-20	Main Flap Transmission Assembly	5-84049-3036	NSN	L2B-03 C-040 C-041
10-27-20	Main Flap Transmission Assembly	65-20679-5	NSN	L2B-03 C-040 C-041
10-27-20	Main Flap Transmission Assembly	65-20679-6	NSN	L2B-03 C-040 C-041
10-27-20	Main Flap Transmission Assembly	65-20679-6	NSN	L2B-03 C-040 C-041
10-27-20	Main Flap Transmission Assembly	65-50679-5	NSN	L2B-03 C-040 C-041
10-27-20.1	Fillet Flap Transmission Assembly	65-14803-15	NSN	L2B-02
10-27-20.1	Fillet Flap Transmission Assembly	65-14803-20	6377	L2B-02
10-27-21	Outboard Flap Drive Power Unit	M89-3911-30ZE+G597	MX1777780-D	C-040 C-041
10-27-22	Inboard and Fillet Flap Drive Power Unit	MF1108003A	MX186193	C-040 C-041
10-27-23	Hydraulic Flap Drive Motor	M59-2911-30ZE	MX177780D	C-040 C-041 C-043
10-27-23	Hydraulic Flap Drive Motor	MF 110 8006A	MX186193R	C-040 C-041 C-043
10-27-24	Flap Emergency Drive Unit	BAC10-3293-2	81132	C-042
10-27-24	Flap Emergency Drive Unit	BAC10-60505-1	46-373	C-042
10-27-25	Emergency Flap Drive Relay	G57757	NSN	C-048
10-27-25	Emergency Flap Drive Relay	G57757	NSN	C-048

Insp No	Component	P/N	S/N	Task Card
10-27-26	Flap Bypass Valve	146505-15	3698E	OC
10-27-26	Flap Bypass Valve	146505-15	5538E	OC
10-27-26	Flap Bypass Valve	BAC10-60710-4	D48882	OC
10-27-26	Flap Bypass Valve L/E	146505-15	1385	OC
10-27-27	Flap Control Valve	65-21890-1	RC1855	OC
10-27-27	Flap Control Valve	65-21890-1	124AB	OC
10-27-28	Leading Edge Flap Control Valve	10-3214-5	444	C-042
10-27-29	Leading Edge Flap and Slat Actuator	10-60314-3	1836	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514	1689	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514	2571	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-1	2566	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-1	2105	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-1	2632	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-11	1658	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-11	1574	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-11	1636	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-12	L198	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-12	450	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-12	1574	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-12	1670	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-13	2429	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-13	2641	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-13	2198	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-13	24T3	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-13	2524	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-13	2510	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-13	84	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-13	684	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-13	2496	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-13	770	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-2	2657	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-2	2663	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-2	2641	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-3	271	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-3	1905	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-3	1017	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-3	3557	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-4	1957	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-4	1985	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-4	2657	C-040

Insp No	Component	P/N	S/N	Task Card
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-7	1762	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-7	1714	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-60514-7	1755	C-040
10-27-29	Leading Edge Flap and Slat Actuator	10-65014-11	1699	C-040
10-27-29	Leading Edge Flap and Slat Actuator	1779DA	468	C-040
10-27-29	Leading Edge Flap and Slat Actuator	1827DA1	2732	C-040
10-27-29	Leading Edge Flap and Slat Actuator	1828DA2	54	C-040
10-27-29	Leading Edge Flap and Slat Actuator	65-23349-4	DB265R	C-040
10-27-29	Leading Edge Flap and Slat Actuator	65-31924-1	BN88	C-040
10-27-30	Leading Edge Flap Hydraulic Lock Valve	103219-5	NSN	C-040 C-041
10-27-30	Leading Edge Flap Hydraulic Lock Valve	10-3219-5	NSN	C-040 C-041
10-27-30	Leading Edge Flap Hydraulic Lock Valve	10-3219-5	6791F6	C-040 C-041
10-27-30	Leading Edge Flap Hydraulic Lock Valve	10-3219-5	NSN	C-040 C-041
10-27-30	Leading Edge Flap Hydraulic Lock Valve	10-3219-5	A4068	C-040 C-041
10-27-30	Leading Edge Flap Hydraulic Lock Valve	10-3219-5	NSN	C-040 C-041
10-27-31	Flap Position Indicator (Dual)	10-3089-8	5	C-065 2C-56
10-27-31	Flap Position Indicator (Dual)	10-3089-8	61	C-065 2C-56
10-27-32	Flap Position Transmitter	5-97211-201	NSN	C-040
10-27-32	Flap Position Transmitter	5-97211-201	00A-601	C-040
10-27-32	Flap Position Transmitter	5-97211-201	3011	C-040
10-27-32	Flap Position Transmitter	5-97211-201	NSN	C-040
10-27-33	Rudder Power Control Unit Assembly	10-60015-6	3046	OC
10-27-34	Rudder Hydraulic Compensator	65-6696-2	1731	2C-43
10-27-35	Rudder Control Tab Damper	65-8353-7	DA1819BC	2C-43
10-27-36	Rudder Trim Actuator Assembly	10-60173-2	283	2C-40
10-27-37	Rudder Forward Quadrant Jackshaft	5-97613-3008	NSN	C-039
10-27-37	Rudder Forward Quadrant Jackshaft	5-97613-3008	NSN	C-039
10-27-38	Rudder Hydraulic Power Control Valve	UKN	UKN	2C-48
10-27-39	Rudder Flutter Damper Assembly	65-5947-2	DM797	L2C-19
10-27-40	Rudder Hydraulic Pressure Control Valve	AV13J5146	009513	2C-44
10-27-41	Rudder Hydraulic Pressure Reducer	3057000-5	6530128	2C-44
10-28-01	Defueling Valve (Manual)	F1-11-1567	4067	2C-46 2C-47
10-28-01	Defueling Valve (Manual)	F1-11-1567	04A5	2C-46 2C-47
10-28-02	Dual Check Valve	UKN		2C-46 2C-47
10-28-02	Dual Check Valve	UKN		2C-46 2C-47
10-28-02	Dual Check Valve	UKN		2C-46 2C-47
10-28-02	Dual Check Valve	UKN		2C-46 2C-47
10-28-03	Fuel Boost Override Pump	1B102200-3B	1002750F	2C-46 2C-47
10-28-03	Fuel Boost Override Pump	1B102200-3B	1002214F	2C-46 2C-47
10-28-04	Override Boost Pump Check Valve	UKN		2C-46 2C-47

Omega Air

Component Data

Boeing 707 N707AR

Insp No	Component	P/N	S/N	Task Card
10-28-04	Override Boost Pump Check Valve	UKN		2C-46 2C-47
10-28-05	Fuel Boost Pump	TB127300-1	1005984	2C-46 2C-47
10-28-05	Fuel Boost Pump	TB127300-1	1001937	2C-46 2C-47
10-28-05	Fuel Boost Pump	TB127300-1	1005866	2C-46 2C-47
10-28-05	Fuel Boost Pump	TB127300-1	1005897	2C-46 2C-47
10-28-05	Fuel Boost Pump	TB127300-1	1005817	2C-46 2C-47
10-28-05	Fuel Boost Pump	TB127300-1	1004365	2C-46 2C-47
10-28-05	Fuel Boost Pump	TB127300-1	1005867	2C-46 2C-47
10-28-05	Fuel Boost Pump	TB127300-1	1003434	2C-46 2C-47
10-28-06	Fuel Dump Valve	AV1681847D	G00032	2C-45
10-28-06	Fuel Dump Valve	AV1681847D	D52134	2C-45
10-28-07	Fuel Low Pressure Switch	10-4204-1	2318	2C-46 2C-47
10-28-07	Fuel Low Pressure Switch	10-4204-1	15906	2C-46 2C-47
10-28-07	Fuel Low Pressure Switch	10-4204-1	16343	2C-46 2C-47
10-28-07	Fuel Low Pressure Switch	10-4204-1	16610	2C-46 2C-47
10-28-07	Fuel Low Pressure Switch	10-4204-1	2098	2C-46 2C-47
10-28-07	Fuel Low Pressure Switch	10-4204-1	1064	2C-46 2C-47
10-28-07	Fuel Low Pressure Switch	10-4204-1	35037	2C-46 2C-47
10-28-07	Fuel Low Pressure Switch	10-4204-1	878	2C-46 2C-47
10-28-07	Fuel Low Pressure Switch	10-4204-1	15301	2C-46 2C-47
10-28-07	Fuel Low Pressure Switch	10-4204-1	35917	2C-46 2C-47
10-28-08	Fuel Quantity Indicator - #1	JG403B2	53	2.1-03-02 A-06 2C-46
10-28-08	Fuel Quantity Indicator - #1 RESERVE	10-3065-257	C-26	2.1-03-02 A-06 2C-46
10-28-08	Fuel Quantity Indicator - #2	JG403B3	A-6	2.1-03-02 A-06 2C-46
10-28-08	Fuel Quantity Indicator - #3	JG403B3	W-32	2.1-03-02 A-06 2C-46
10-28-08	Fuel Quantity Indicator - #4	JG403B3	C-41	2.1-03-02 A-06 2C-46
10-28-08	Fuel Quantity Indicator - #4 RESERVE	JG131A40	C-27	2.1-03-02 A-06 2C-46
10-28-08	Fuel Quantity Indicator - CENTER	10-3065-257	C-3	2.1-03-02 A-06 2C-46
10-28-09	Fuel Quantity (Total) Indicator	10-3065-260	N0007	2.1-03-02 A-06 2C-46
10-28-10	Engine Fuel Shutoff Valve	AV16B1519D	DLH43778	2C-46 2C-47
10-28-10	Engine Fuel Shutoff Valve	AV16B15290	J9194-0116	2C-46 2C-47
10-28-10	Engine Fuel Shutoff Valve	AV16B15292	4194-0067	2C-46 2C-47
10-28-10	Engine Fuel Shutoff Valve	AV16B1590	DLH43778	2C-46 2C-47
10-28-11	Fuel Temperature Bulb	56B17D	56348	8C-01 8C-02
10-28-11	Fuel Temperature Bulb	56B17D	V0092	8C-01 8C-02
10-28-11	Fuel Temperature Bulb	56B17D	95887	8C-01 8C-02
10-28-11	Fuel Temperature Bulb	56B17D	428	8C-01 8C-02
10-28-12	Fuel Temperature Indicator	10-6052H	G1022	C-065 2C-56
10-28-13	Fuelling Level Control Shutoff Valve	UKN		8C-01 8C-02
10-28-13	Fuelling Level Control Shutoff Valve	UKN		8C-01 8C-02

Insp No	Component	P/N	S/N	Task Card
10-28-13	Fuelling Level Control Shutoff Valve	UKN		8C-01 8C-02
10-28-13	Fuelling Level Control Shutoff Valve	UKN		8C-01 8C-02
10-28-13	Fuelling Level Control Shutoff Valve	UKN		8C-01 8C-02
10-28-13	Fuelling Level Control Shutoff Valve	UKN		8C-01 8C-02
10-28-13	Fuelling Level Control Shutoff Valve	UKN		8C-01 8C-02
10-28-13	Fuelling Level Control Shutoff Valve	UKN		8C-01 8C-02
10-28-14	Fuelling Level Control Pilot Valve	UKN		8C-01 8C-02
10-28-14	Fuelling Level Control Pilot Valve	UKN		8C-01 8C-02
10-28-14	Fuelling Level Control Pilot Valve	UKN		8C-01 8C-02
10-28-14	Fuelling Level Control Pilot Valve	UKN		8C-01 8C-02
10-28-14	Fuelling Level Control Pilot Valve	UKN		8C-01 8C-02
10-28-14	Fuelling Level Control Pilot Valve	UKN		8C-01 8C-02
10-28-14	Fuelling Level Control Pilot Valve	UKN		8C-01 8C-02
10-28-14	Fuelling Level Control Pilot Valve	UKN		8C-01 8C-02
10-28-15	Fuelling Manual Shutoff Valve	116457-1	3067	2C-46 2C-47
10-28-15	Fuelling Manual Shutoff Valve	116457-1	435	2C-46 2C-47
10-28-15	Fuelling Manual Shutoff Valve	116457-1	354	2C-46 2C-47
10-28-15	Fuelling Manual Shutoff Valve	116457-1	399	2C-46 2C-47
10-28-15	Fuelling Manual Shutoff Valve	116457-1	3110	2C-46 2C-47
10-28-15	Fuelling Manual Shutoff Valve	116457-1	3891	2C-46 2C-47
10-28-15	Fuelling Manual Shutoff Valve	116457-1	3187	2C-46 2C-47
10-28-15	Fuelling Manual Shutoff Valve	116457-1	3087	2C-46 2C-47
10-28-16	Boost Pump Removal Valve	UKN		8C-01 8C-02
10-28-16	Boost Pump Removal Valve	UKN		8C-01 8C-02
10-28-16	Boost Pump Removal Valve	UKN		8C-01 8C-02
10-28-16	Boost Pump Removal Valve	UKN		8C-01 8C-02
10-28-16	Boost Pump Removal Valve	UKN		8C-01 8C-02
10-28-16	Boost Pump Removal Valve	UKN		8C-01 8C-02
10-28-16	Boost Pump Removal Valve	UKN		8C-01 8C-02
10-28-16	Boost Pump Removal Valve	UKN		8C-01 8C-02
10-28-17	Signal Summation Unit	RG1464	E-30	C-065 2C-56
10-28-18	Fuel Manifold Valve	AV16B1519D	RG83501	2C-46
10-28-18	Fuel Manifold Valve	AV16B1519D	DLH45953	2C-46
10-28-18	Fuel Manifold Valve	AV16B1519D	11949	2C-46
10-28-18	Fuel Manifold Valve	AV16B1519D	36088	2C-46
10-28-19	Tank Unit	FG120P33	C-3	8C-01 8C-02
10-28-19	Tank Unit	FG120P34	C-180	8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02

Omega Air

Component Data

Boeing 707 N707AR

Insp No	Component	P/N	S/N	Task Card
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-19	Tank Unit	UKN		8C-01 8C-02
10-28-20	Tank Unit Compensator	10-3065-249	D77	8C-01 8C-02
10-28-20	Tank Unit Compensator	UKN		8C-01 8C-02
10-28-20	Tank Unit Compensator	UKN		8C-01 8C-02
10-28-20	Tank Unit Compensator	UKN		8C-01 8C-02
10-28-20	Tank Unit Compensator	UKN		8C-01 8C-02
10-28-20	Tank Unit Compensator	UKN		8C-01 8C-02
10-28-20	Tank Unit Compensator	UKN		8C-01 8C-02
10-28-20	Tank Unit Compensator	UKN		8C-01 8C-02
10-28-20	Tank Unit Compensator	UKN		8C-01 8C-02
10-28-21	Fuel Dump Chute Actuator	R1550M12-2	81004	2C-45
10-28-21	Fuel Dump Chute Actuator	R1550M12-2	11199	2C-45
10-28-22	Fuel Dump Chute Up-Latch Actuator	R1584M10-3	20902	2C-45
10-28-22	Fuel Dump Chute Up-Latch Actuator	R1584M10-3	61	2C-45
10-28-23	Fuel Heater Valve	1121115	532	A-08
10-28-23	Fuel Heater Valve	129485	12	A-08
10-28-23	Fuel Heater Valve	129485	671	A-08
10-28-23	Fuel Heater Valve	223585	193	A-08

Insp No	Component	P/N	S/N	Task Card
10-28-24	Fuel De-icing Heater	500405	NSN	C-168 C-169 C-170 C-171
10-28-24	Fuel De-icing Heater	500405	600465	C-168 C-169 C-170 C-171
10-28-24	Fuel De-icing Heater	500405	6002899	C-168 C-169 C-170 C-171
10-28-24	Fuel De-icing Heater	500405	6001800A	C-168 C-169 C-170 C-171
10-29-01	Accumulator - Auxiliary System	A-200-50	764	C-052
10-29-01	Accumulator - Auxiliary System	A-200-50	580	C-052
10-29-02	Accumulator - Pressure Gauge - Aux	10-60576-1	L-1705C	A-05
10-29-02	Accumulator - Pressure Gauge - Utility	10-60576-1	L 1708C	A-05
10-29-03	Accumulator - Utility System	A-200-252	179	C-052
10-29-04	Reservoir Air Pressure Regulator	314160-2	574B	4C-17
10-29-05	Auxiliary Hydraulic Pump Assembly	10470-2	1001	C-051 C-052
10-29-05	Auxiliary Hydraulic Pump Assembly	65W01025	A0221	C-051 C-052
10-29-06	Manual Depressurization Bypass Valve	10-3340-1	NSN	C-052
10-29-07	Engine Driven Hydraulic Pump	PV3-160-4	MX489519	C-053 C-054
10-29-07	Engine Driven Hydraulic Pump	PV3-160-4	MX252485	C-053 C-054
10-29-08	Hydraulic Pressure Indicator	10-60255-12	412B	C-065 2C-56
10-29-08	Hydraulic Pressure Indicator	10-61255-16	403B	C-065 2C-56
10-29-09	Hydraulic Low Pressure Warning Switch - Aux	30018	524Y	C-052
10-29-09	Hydraulic Low Pressure Warning Switch - Aux	30018	445B	C-052
10-29-09	Hydraulic Low Pressure Warning Switch - Main	10-3201-1	5259	C-052
10-29-09	Hydraulic Low Pressure Warning Switch - Main	90018	5270	C-052
10-29-10	Hydraulic Pressure Transmitter	10-61255-7	1164B	C-052
10-29-11	Hydraulic Fluid Quantity Indicator	B711-4	B0961	C-065 2C-56
10-29-12	Hydraulic Fluid Quantity Transmitter	EA1065A-1615	AB2644-3	C-052
10-29-13	Hydraulic Supply (Fire) Shutoff Valve	10-3260-1	D32962	C-052
10-29-13	Hydraulic Supply (Fire) Shutoff Valve	10-3260-1	D32965	C-052
10-30-01	Wing Anti-ice Duct Temperature Indicator	163BL507H	83	C-064
10-30-01	Wing Anti-ice Duct Temperature Indicator	163BL507H	84	C-064
10-30-02	NESA Window Low Heat Control Relay	961-5023-001	2326	C-061
10-30-02	NESA Window Low Heat Control Relay	N/A	N/A	C-061
10-30-03	NESA Window High Heat Control Relay	DR18E5	C-31996	C-061
10-30-03	NESA Window High Heat Control Relay	DR18E5	CC-80031	C-061
10-30-04	NESA Window Heat Control Unit	961-5083-001	485	C-061
10-30-05	Windshield Wiper Converter	XW203435-316	NSN	C-060
10-30-05	Windshield Wiper Converter	XW203435-318-36	2-19538	C-060
10-30-06	Windshield Wiper Flex Drive	XW20087-1030	NSN	C-060
10-30-06	Windshield Wiper Flex Drive	XW20087-1030	NSN	C-060
10-30-07	Windshield Wiper Motor	XW20548-MIA	8297	C-060
10-30-07	Windshield Wiper Motor	XW20548MIA2	18506	C-060
10-30-08	Wing Thermal Anit-ice Valve	10-3291	P6530	C-064

Insp No	Component	P/N	S/N	Task Card
10-30-08	Wing Thermal Anit-ice Valve	10-3291	6021/81	C-064
10-30-08	Wing Thermal Anit-ice Valve	10-3291	709-218	C-064
10-30-08	Wing Thermal Anit-ice Valve	10-3291	5800J88	C-064
10-30-09	Rain Repellent Solenoid Valve	C-201-1500-1	7869	C-060
10-30-09	Rain Repellent Solenoid Valve	C-201-1500-1	731	C-060
10-32-01	Anti-skid System Skid Detector	40-575	1857	OC
10-32-01	Anti-skid System Skid Detector	40-575	1779	OC
10-32-01	Anti-skid System Skid Detector	40-575	2942	OC
10-32-01	Anti-skid System Skid Detector	40-575	839	OC
10-32-01	Anti-skid System Skid Detector	40-575	2970	OC
10-32-01	Anti-skid System Skid Detector	40-575	186	OC
10-32-01	Anti-skid System Skid Detector	40-575	NSN	OC
10-32-01	Anti-skid System Skid Detector	40-575	278	OC
10-32-02	Anti-skid Control Valve	1U56350	12364	OC
10-32-02	Anti-skid Control Valve	1U56350	10239	OC
10-32-02	Anti-skid Control Valve	39-045	681B	OC
10-32-02	Anti-skid Control Valve	39-045	1489B	OC
10-32-03	Anti-skid Control Shield	42-073-1	399	OC
10-32-03	Anti-skid Control Shield	42-073-1	297	OC
10-32-04	Brake Lockout Deboost Valve	45200-5009	DLH46355	C-069
10-32-04	Brake Lockout Deboost Valve	45200-5009	4865	C-069
10-32-04	Brake Lockout Deboost Valve	45200-5009	4764	C-069
10-32-04	Brake Lockout Deboost Valve	45200-5009	6798	C-069
10-32-04	Brake Lockout Deboost Valve	45200-5009	5323	C-069
10-32-04	Brake Lockout Deboost Valve	45200-5009	522	C-069
10-32-04	Brake Lockout Deboost Valve	45200-5009	6135	C-069
10-32-04	Brake Lockout Deboost Valve	45200-5009	NWA250	C-069
10-32-05	Brake Metering Valve	50-8732-1	260	C-070
10-32-05	Brake Metering Valve	B-2700-14	805	C-070
10-32-06	Brake Shuttle Valve	10-3225-3	812	C-070
10-32-06	Brake Shuttle Valve	10-3225-3	NSN	C-070
10-32-06	Brake Shuttle Valve	10-3225-3	7625	C-070
10-32-06	Brake Shuttle Valve	10-3225-3	6906	C-070
10-32-06	Brake Shuttle Valve	10-3225-3	NSN	C-070
10-32-06	Brake Shuttle Valve	10-3225-3	NSN	C-070
10-32-06	Brake Shuttle Valve	10-3225-3	785	C-070
10-32-06	Brake Shuttle Valve	53814	32277A	C-070
10-32-07	Landing Gear Lever Latch Solenoid	10-3087-2	NSN	2C-58
10-32-08	Landing Gear Control Selector Valve	10-3208-1	5302-S	OC
10-32-09	Main Gear Truck Levelling Switch	101012-1	NSN	C-069

Insp No	Component	P/N	S/N	Task Card
10-32-09	Main Gear Truck Levelling Switch	101012-1	NSN	C-069
10-32-10	Main Gear Actuator	50-6388-4	138	OC
10-32-10	Main Gear Actuator	50-6833-6	455W	OC
10-32-11	Main Gear Side Strut Actuator	50-6835	DM1806	OC
10-32-11	Main Gear Side Strut Actuator	50-6835	DM1708	OC
10-32-12	Main Gear Sequence Valve	10-3216-1	1770	C-069 C-070
10-32-12	Main Gear Sequence Valve	52737	175J	C-069 C-070
10-32-13	Main Gear Brakes	9560568	79-992	2-02-08
10-32-13	Main Gear Brakes	9560568	65-517	2-02-08
10-32-13	Main Gear Brakes	9560568	Apr68-486	2-02-08
10-32-13	Main Gear Brakes	9560569	JUL66-416	2-02-08
10-32-13	Main Gear Brakes	9560569	Aug67-514	2-02-08
10-32-13	Main Gear Brakes	9560569	FEB75-1114	2-02-08
10-32-13	Main Gear Brakes	9560569	Mar70-821	2-02-08
10-32-13	Main Gear Brakes	9560569	Nov67-871	2-02-08
10-32-14	Main Gear Wheel Well Door Actuator	50-6832-7	DM707	OC
10-32-14	Main Gear Wheel Well Door Actuator	50-6832-7	DM777	OC
10-32-15	Main Gear Door Control Valve	5-3450-61	3556	C-069 C-070
10-32-15	Main Gear Door Control Valve	5-3450-61	3713	C-069 C-070
10-32-16	Main Gear Door Safety Valve	1372-57988	634	C-069 C-070
10-32-16	Main Gear Door Safety Valve	1372-57988	3502	C-069 C-070
10-32-17	Main Gear Door Shutoff Valve	10-3216-1	1759	C-069 C-070
10-32-17	Main Gear Door Shutoff Valve	10-3216-1	1770	C-069 C-070
10-32-18	Main Gear Levelling Cylinder and Snubber Unit	65-65046-9	CPN6520X	C-069 C-070
10-32-18	Main Gear Levelling Cylinder and Snubber Unit	65-65046-9	S26X	C-069 C-070
10-32-19	Main Gear Shock Strut Assembly	65-22113-25	R534	HT
10-32-19	Main Gear Shock Strut Assembly	65-22113-34	594	HT
10-32-20	Main Gear Wheel and Tire	9560571B	10414	2-02-02
10-32-20	Main Gear Wheel and Tire	9560573	NOV82-903	2-02-02
10-32-20	Main Gear Wheel and Tire	9560573	11157	2-02-02
10-32-20	Main Gear Wheel and Tire	9560573	10455	2-02-02
10-32-20	Main Gear Wheel and Tire	9560573	26500368	2-02-02
10-32-20	Main Gear Wheel and Tire	9560573	8155/9347	2-02-02
10-32-20	Main Gear Wheel and Tire	9560573	9560571B	2-02-02
10-32-20	Main Gear Wheel and Tire	956057B	52/284	2-02-02
10-32-21	Main Landing Gear Lock Actuator	50-6834	DM257	OC
10-32-21	Main Landing Gear Lock Actuator	50-6834	DM337	OC
10-32-22	Main Landing Gear Position Warning Relay	10-60450-3	NSN	C-069 2C-18
10-32-22	Main Landing Gear Position Warning Relay	10-60450-3	NSN	C-069 2C-18
10-32-23	Nose Landing Gear Sequence Valve	52737	115J8H	C-069

Insp No	Component	P/N	S/N	Task Card
10-32-24	Nose Landing Gear Door Control Valve	10-3214-4	3546	C-069
10-32-25	Nose Landing Gear Door Safety Valve	1372-569466	1257	C-069
10-32-26	Nose Landing Gear Lock Retention Actuator	90-5265	DM1061	C-068
10-32-27	Nose Landing Gear Assembly	65-33733-41	H6848	HT
10-32-28	Nose Landing Gear Steering Cylinders	50-6813-8	237	OC
10-32-28	Nose Landing Gear Steering Cylinders	50-6813-8	220	OC
10-32-29	Nose Landing Gear Wheel and Tire	3-1251	1506	OC
10-32-29	Nose Landing Gear Wheel and Tire	3-1251	1058	OC
10-32-30	Nose Landing Gear Actuator	50-6834	DM410	OC
10-32-31	Nose Landing Gear Door Actuator	50-6818	DM300	OC
10-32-32	Nose Landing Gear Lock Actuator	50-6834	DM733	OC
10-32-33	Nose Landing Gear Drag Brace and Lock Mechanism	65-3693	NSN	C-068
10-32-34	Nose Landing Gear Position Warning Relay	10-60450-3	NSN	C-068 2C-18
10-32-35	Pneumatic Brake Air Bottle	36200012	00047CI	HT
10-32-36	Pneumatic Air Brake Pressure Gauge	10-60576-1	L 957-C	A-05 2C-64 2C-65
10-32-36	Pneumatic Air Brake Pressure Gauge	10-60576-1	L 4861-C	A-05 2C-64 2C-65
10-32-37	Pneumatic Brake Control Valve	10-3220-1	709A	2C-64 2C-65
10-32-38	Nose Landing Gear Steering Shutoff Valve	1359-579255	722	C-068
10-33-01	Rotating Beacon	32826	3378	C-074
10-33-01	Rotating Beacon	G925A1	NSN	C-074
10-33-02	Retractable Landing Lights	10-3299-3	611	C-076
10-33-02	Retractable Landing Lights	G9140-2	300	C-076
10-33-03	Emergency Exit Lights	10-60091-101	23881	C-074 C-075
10-33-03	Emergency Exit Lights	10-60091-101	27524	C-074 C-075
10-33-03	Emergency Exit Lights	10-60091-101	21890	C-074 C-075
10-33-03	Emergency Exit Lights	10-60091-101	11183	C-074 C-075
10-33-03	Emergency Exit Lights	10-60091-101	2809	C-074 C-075
10-34-01	Magnetic Standby Compass	C5C	13643	2C-56
10-34-02	Ram Air Temperature Indicator	N/A	N/A	2C-56
10-34-02	Ram Air Temperature Indicator	N/A	N/A	2C-56
10-34-03	Total Ram Air Temperature Indicator	610BL4B	A605	2C-56
10-34-04	Total Ram Air Temperature Probe	102AH2AF	258	2C-56
10-34-04	Total Ram Air Temperature Probe	N/A	N/A	2C-56
10-34-05	Turn and Bank Indicator	1783662-301	7020749	2C-56
10-34-05	Turn and Bank Indicator	1783662-301	21061	2C-56
10-34-06	Clock - Eight Day	4111	749	2C-56
10-34-06	Clock - Eight Day	4111	8436	2C-56
10-34-07	Pitot Heads, Pitot Static Systems	H7034-1A	NSN	2C-68 2C-70
10-34-07	Pitot Heads, Pitot Static Systems	H7034-1A	NSN	2C-68 2C-70
10-34-07	Pitot Heads, Pitot Static Systems	H7034-1A	NSN	2C-68 2C-70

Insp No	Component	P/N	S/N	Task Card
10-34-08	Air Speed Indicator (IAS)	10-60768-123	AA9024	2C-56
10-34-08	Air Speed Indicator (IAS)	WL111AMAJA1	AA8428	2C-56
10-34-09	Altimeter (Electric)	44456	1553	2C-56
10-34-09	Altimeter (Electric)	44456	408	2C-56
10-34-10	Altimeter - Pneumatic	A41869-10-015	467	2C-56
10-34-10	Altimeter - Pneumatic	A41869-10-016	1614A	2C-56
10-34-11	Vertical Speed Indicator	5LZ9123A	GL0051	2C-56
10-34-11	Vertical Speed Indicator	5LZ9123A	GL0036	2C-56
10-34-12	Computer - Central Air Data System	HG180U266	Q3038	B-07 2C-71
10-34-12	Computer - Central Air Data System	HG180U268	1160609	B-07 2C-71
10-34-13	Indicator, Mach Airspeed - Center Air Data System	N/A	N/A	2C-71
10-34-13	Indicator, Mach Airspeed - Center Air Data System	WL/111AMA/JA/1	AH203	2C-71
10-34-14	Indicator- Static Air Temperature	102AH2AG	14776	2C-56
10-34-14	Indicator- Static Air Temperature	JG872A4	B31	2C-56
10-34-15	Indicator, True Airspeed	JG873A1	C-28	2C-56
10-34-15	Indicator, True Airspeed	N/A	N/A	2C-56
10-34-16	Steering Computer - Flight Director System	1780607-55	7111248	2C-91 2C-98
10-34-16	Steering Computer - Flight Director System	1780607-55	6050651	2C-91 2C-98
10-34-17	Amplifier - Flight Instrument	2588785-901	7066023	C-091 2C-18
10-34-17	Amplifier - Flight Instrument	2588785-902	1283	C-091 2C-18
10-34-18	Indicator - Horizontal Situation	1783662-301	6090652	2C-56
10-34-18	Indicator - Horizontal Situation	1783662-301	7020749	2C-56
10-34-19	Indicator, Attitude Director	2587909-904	7112827A	2C-56
10-34-19	Indicator, Attitude Director	2587909-904	7102797A	2C-56
10-34-20	Vertical Gyro (Vertical Gyro System)	2587335-11	77129572	C-091
10-34-20	Vertical Gyro (Vertical Gyro System)	2587335-11	8409480	C-091
10-34-21	Directional Gyro (High Latitude Compass System)	2585302-1	7041710	2C-66
10-34-21	Directional Gyro (High Latitude Compass System)	705-7V4	7011335	C-091 2C-18
10-34-22	Remote Compass Transmitter - (Flux Valve)	620359	NSN	2C-66
10-34-22	Remote Compass Transmitter - (Flux Valve)	620359	NSN	2C-66
10-34-23	Radio (Magnetic Indicator)	1784389-353	6060553	2C-56
10-34-23	Radio (Magnetic Indicator)	1786389-353	610063	2C-56
10-34-24	Flight Recorder	4001550-505	286	C-091 2C-18
10-34-25	Accelerometer - Flight Recorder System	3001-01-101-2	NSN	C-091 2C-18
10-34-26	Lift Transducer - Attitude Stall Warning System	C-07107	1847	2C-72
10-34-26	Lift Transducer - Attitude Stall Warning System	C-07107	1752	2C-72
10-34-27	Signal Summing Unit	65-14207-23	1171	2C-72
10-34-27	Signal Summing Unit	65-14207-23	1176	2C-72
10-34-28	Flap Potentiometer	C-07209	1741	2C-72
10-34-28	Flap Potentiometer	C-07209	NSN	2C-72

Omega Air

Component Data

Boeing 707 N707AR

Insp No	Component	P/N	S/N	Task Card
10-34-29	Control Column Shaker	C-07209-2	NSN	C-038
10-34-30	Receiver - Automatic Direction Finding System	522-0769-014	983	C-091 2C-18
10-34-30	Receiver - Automatic Direction Finding System	522-0769-214	4859	2C-18 C-091
10-34-31	Loop Antenna - ADF	137A-2	NSN	2C-68
10-34-31	Loop Antenna - ADF	137A-2	NSN	2C-68
10-34-32	Control Panel - ADF	522-0928-045	998	2C-56
10-34-32	Control Panel - ADF	522-0928-045	2065	2C-56
10-34-33	Receiver - VHF Navigation (VOR/GS)	522-2450-114	4157	C-091 2C-18
10-34-33	Receiver - VHF Navigation (VOR/GS)	522-2450-115	2544	C-091 2C-18
10-34-34	Receiver - Marker Beacon System	2087821-2803	1889	C-091 2C-18
10-34-35	Interrogator - Distance Measuring Equipment	522-2702-053	3599	C-091 2C-18
10-34-35	Interrogator - Distance Measuring Equipment	522-2702-054	13780	C-091 2C-18
10-34-36	Indicator - Distance Measuring Equipment System	522-2702-052	658	2C-56
10-34-36	Indicator - Distance Measuring Equipment System	522-2702-062	2632	2C-56
10-34-37	Transmitter - Receiver - Low Range Radio Altimeter System	2067631-0505	1064	C-091 2C-18
10-34-38	Height Indicator - LRRRA	44456	571	2C-56
10-34-38	Height Indicator - LRRRA	44456	468	2C-56
10-34-39	Receiver-Transmitter, Weather Radar System	2067157-153	8207	C-091 2C-18
10-34-40	Control Panel - Weather Radar System	208-7962-0109	1426	2C-56
10-34-41	Antenna - Weather Radar System	208-7179-0501	3845	C-089
10-34-42	Indicator - Weather Radar System	2041215-3112	2391	2C-56
10-34-43	Transponder- ATC Radar Beacon System	522-2703-011	90	C-091 2C-18
10-34-43	Transponder- ATC Radar Beacon System	622-2224-001	3321	C-091 2C-18
10-34-44	Navigation Unit - (UNS)	473-156-013	332	C-091
10-34-44	Navigation Unit - (UNS)	473-156-013	211	C-091
10-34-45	Control/ Display Unit - UNS	1017-41-211	1657	2C-56
10-34-45	Control/ Display Unit - UNS	1017-41-211	2539	2C-56
10-34-46	Battery Unit - UNS	N/A	N/A	OC
10-34-46	Battery Unit - UNS	N/A	N/A	OC
10-34-47	Computer- Ground Proximity Warning System	965-0376-081	279	C-091 2C-18
10-34-47	Computer- Ground Proximity Warning System	N/A	N/A	C-091 2C-18
10-34-48	Altitude Alert Controller - Altitude Alerting System	9821-15-04	1034	2C-72
10-34-49	Underwater Locator Beacon	DK120	40485	HT
10-35-01	Automatic Pressure Latch	UKN		2C-73
10-35-02	Automatic Valve (Trigger)	10350-3	1672	2C-73
10-35-03	Mask Shutoff Valve	UKN		2C-95
10-35-03	Mask Shutoff Valve	UKN		2C-95
10-35-03	Mask Shutoff Valve	UKN		2C-95
10-35-03	Mask Shutoff Valve	UKN		2C-95
10-35-03	Mask Shutoff Valve	UKN		2C-95

Omega Air

Component Data

Boeing 707 N707AR

Insp No	Component	P/N	S/N	Task Card
10-35-03	Mask Shutoff Valve	UKN		2C-95
10-35-03	Mask Shutoff Valve	UKN		2C-95
10-35-03	Mask Shutoff Valve	UKN		2C-95
10-35-04	Bypass Valve	11600	1025	C-094
10-35-05	Oxygen Continuous Flow Regulator	17970-4	1683	2C-73
10-35-05	Oxygen Continuous Flow Regulator	17970-4	1251	2C-73
10-35-06	Diluter Demand Regulator	15830E	934	C-092
10-35-06	Diluter Demand Regulator	15830L	00115	C-092
10-35-06	Diluter Demand Regulator	15830L	1763	C-092
10-35-06	Diluter Demand Regulator	15830L	731	C-092
10-35-06	Diluter Demand Regulator	15830L	427	C-092
10-35-07	Low Pressure Gauge	26302-1	65088	C-093 2C-73
10-35-08	Crew Oxygen Pressure Reducing Regulator	AN6012-1A	5604-B	C-093
10-35-09	Oxygen Cylinder Assemblies	801307-00	30537	C-093
10-35-09	Oxygen Cylinder Assemblies	801307-00	19729	C-093
10-35-09	Oxygen Cylinder Assemblies	801307-00	431834	C-093
10-35-09	Oxygen Cylinder Assemblies	801307-00	2785	C-093
10-35-09	Oxygen Cylinder Assemblies	801307-00	347919	C-093
10-35-09	Oxygen Cylinder Assemblies	801307-00	666824	C-093
10-35-09	Oxygen Cylinder Assemblies	801307-00	ST20104	C-093
10-35-09	Oxygen Cylinder Assemblies	801307-00	36246	C-093
10-35-10	Passenger Oxygen Mask	9999999999	NSN	2C-73
10-35-11	Portable Oxygen Cylinder	5600-1-IA-F23A	1062X	C-095
10-35-12	Portable Oxygen Cylinder	5500C1ABF20B	38825CV	C-096
10-35-12	Portable Oxygen Cylinder	5500-C1A-BF20B	K82223A	C-096
10-35-12	Portable Oxygen Cylinder	5500C1AFB20B	K38980	C-096
10-35-12	Portable Oxygen Cylinder	5500C1AFB20B	12708DF	C-096
10-35-12	Portable Oxygen Cylinder	5500C1AFB20B	74495DF	C-096
10-35-12	Portable Oxygen Cylinder	5500C1AFB23A	16023W	C-096
10-35-13	Pressure Switch	10-60121-1	1207	C-094
10-35-14	Oxygen Pressure Transmitter	10-60172	NSN	C-092
10-35-14	Oxygen Pressure Transmitter	10-60172	5754	C-092
10-35-15	Oxygen Pressure Indicator	10-60172-2	5011	2C-73
10-35-15	Oxygen Pressure Indicator	10-60172-2	5061	2C-73
10-35-16	Passenger Oxygen Pressure Reducing Regulator	1605/10-60230	1802	C-094
10-35-16	Passenger Oxygen Pressure Reducing Regulator	1605/10-60230	1793	C-094
10-35-17	Flight Compartment Oxygen Mask	114027-21	NSN	B-02 C-092
10-35-17	Flight Compartment Oxygen Mask	292838-1	662-2	B-08 C-092
10-35-17	Flight Compartment Oxygen Mask	292838-1	NSN	B-08 C-092
10-35-17	Flight Compartment Oxygen Mask	292838-1	NSN	B-08 C-092

Omega Air

Component Data

Boeing 707 N707AR

Insp No	Component	P/N	S/N	Task Card
10-35-17	Flight Compartment Oxygen Mask	292838-1	NSN	B-08 C-092
10-36-01	Turbocompressor	206190-3	34-409	C-101 C-102 C-103
10-36-01	Turbocompressor	206190-3	120-2068	C-101 C-102 C-103
10-36-02	Pressure Regulator Valve - Turbocompressor	108940-760	P-2736	C-101 C-102 C-103
10-36-02	Pressure Regulator Valve - Turbocompressor	108940-760	AA12	C-101 C-102 C-103
10-36-03	Turbocompressor Flow Control Valve Relay	G57757	NSN	C-101 C-102 C-103
10-36-03	Turbocompressor Flow Control Valve Relay	N/A	N/A	C-101 C-102 C-103
10-36-04	Turbocompressor Tachometer Indicator	10-60122-3	130	C-101 C-102 C-103
10-36-04	Turbocompressor Tachometer Indicator	10-60122-3	5019	C-101 C-102 C-103
10-36-05	Turbocompressor Oil Cooler	10-60402-10	55-420	2C-80 2C-81 2C-82
10-36-05	Turbocompressor Oil Cooler	10-60402-10	3428	2C-80 2C-81 2C-82
10-36-06	Wing Isolation Valve	104908	P-1861	C-104
10-36-06	Wing Isolation Valve	104908	P-2927	C-104
10-36-07	Turbocompressor Shutoff Valve	319203-4	10-150	C-101 C-102 C-103
10-36-07	Turbocompressor Shutoff Valve	388304-1-1	P2810	C-101 C-102 C-103
10-36-08	Turbocompressor Check Valve	65-22777	NSN	C-101 C-102 C-103
10-36-08	Turbocompressor Check Valve	65-22777-4	A5-759	C-101 C-102 C-103
10-38-01	Pump and Motor Assembly - Toilet Flushing	2526	E5	C-109
10-38-01	Pump and Motor Assembly - Toilet Flushing	2535	NSN	C-109
10-38-01	Pump and Motor Assembly - Toilet Flushing	2535	5132	C-109
10-38-01	Pump and Motor Assembly - Toilet Flushing	2535	5553	C-109
10-38-01	Pump and Motor Assembly - Toilet Flushing	2535	PP004	C-109
10-38-02	Hot Water Heater	1865P762	NSN	C-109
10-38-02	Hot Water Heater	1865P762	NSN	C-109
10-38-02	Hot Water Heater	1865P762	NSN	C-109
10-38-02	Hot Water Heater	1865P762	NSN	C-109
10-38-02	Hot Water Heater	1865P762	NSN	C-109
10-38-03	Fill and Overflow Valve	11-1460-8	NSN	C-110
10-38-03	Fill and Overflow Valve	11-1460-8	DLH35-7	C-110
10-38-04	Drain Valve	2473-3	2010293	C-111
10-38-04	Drain Valve	N/A	N/A	C-111
10-38-04	Drain Valve	N/A	N/A	C-111
10-38-04	Drain Valve	N/A	N/A	C-111
10-38-04	Drain Valve	N/A	N/A	C-111
10-38-05	Water Quantity Transmitter	N/A	N/A	C-111
10-38-05	Water Quantity Transmitter	N/A	N/A	C-111
10-38-06	Water Quantity Indicator	N/A	N/A	C-111
10-38-06	Water Quantity Indicator	N/A	N/A	C-111
10-38-07	Pressure Relief Valve	N/A	N/A	C-111
10-38-07	Pressure Relief Valve	N/A	N/A	C-111

Insp No	Component	P/N	S/N	Task Card
10-38-08	Water Tank Air Compressor	N/A	N/A	C-112
10-38-09	Pressure Regulator	N/A	N/A	C-112
10-38-10	Solenoid Shutoff Valve	N/A	N/A	C-112
10-38-10	Solenoid Shutoff Valve	N/A	N/A	C-112
10-49-01	Airborne Auxiliary Power Unit /APU (if installed)	N/A	N/A	N/A
10-49-02	Starter Assembly - APU	N/A	N/A	N/A
10-52-01	Pressure Door Actuator	N/A	N/A	N/A
10-52-02	Latch Actuator	N/A	N/A	N/A
10-52-03	Door Cam Actuator	N/A	N/A	N/A
10-52-04	Cargo Door Actuator	N/A	N/A	N/A
10-52-05	Manual Shutoff Valve	N/A	N/A	N/A
10-52-06	Door Sequence Valve	N/A	N/A	N/A
10-54-01	Pylon Tie Rod	TA-QN-37574-503	20029-1	HT
10-54-01	Pylon Tie Rod	TA-QN-37574-503	20029-2	HT
10-54-01	Pylon Tie Rod	TA-QN-37574-503	20029-3	HT
10-54-01	Pylon Tie Rod	TA-QN-37574-503	20029-4	HT
10-71-01	Forward Cone Bolt Fittings	69-10425-2	NS/N	SI-055
10-71-01	Forward Cone Bolt Fittings	69-10425-2	NSN	SI-055
10-71-01	Forward Cone Bolt Fittings	69-10425-2	NSN	SI-055
10-71-01	Forward Cone Bolt Fittings	69-10426-2	NSN	SI-055
10-71-01	Forward Cone Bolt Fittings	69-10426-3	NSN	SI-055
10-71-01	Forward Cone Bolt Fittings	69-10426-3	NSN	SI-055
10-71-01	Forward Cone Bolt Fittings	69-10426-3	NS/N	SI-055
10-71-01	Forward Cone Bolt Fittings	69-10426-3	NSN	SI-055
10-71-02	Forward Left and Right Mount Links	65-10682-02	NSN	SI-056
10-71-02	Forward Left and Right Mount Links	65-10682-3	NSN	SI-056
10-71-02	Forward Left and Right Mount Links	65-10682-3	NSN	SI-056
10-71-02	Forward Left and Right Mount Links	65-10682-3	NSN	SI-056
10-71-02	Forward Left and Right Mount Links	65-10682-3	NSN	SI-056
10-71-02	Forward Left and Right Mount Links	65-10682-3	NSN	SI-056
10-71-02	Forward Left and Right Mount Links	65-10682-3	NSN	SI-056
10-71-02	Forward Left and Right Mount Links	65-10682-3	NSN	SI-056
10-71-02	Forward Left and Right Mount Links	65-10682-3	NSN	SI-056
10-71-02	Forward Left and Right Mount Links	65-10682-3	NSN	SI-056
10-71-02	Forward Left and Right Mount Links	65-10683-2	NSN	SI-056
10-71-02	Forward Left and Right Mount Links	65-10683-2	NSN	SI-056
10-71-02	Forward Left and Right Mount Links	65-10683-2	NSN	SI-056
10-71-02	Forward Left and Right Mount Links	65-10683-2	NSN	SI-056
10-71-02	Forward Left and Right Mount Links	65-10683-2	NSN	SI-056
10-71-03	Rear Cone Bolt Fittings	65-10689-4	NSN	SI-059
10-71-03	Rear Cone Bolt Fittings	65-10689-4	NSN	SI-059
10-71-03	Rear Cone Bolt Fittings	65-10689-4	NSN	SI-059
10-71-03	Rear Cone Bolt Fittings	65-10689-4	NSN	SI-059

Omega Air

Component Data

Boeing 707 N707AR

Insp No	Component	P/N	S/N	Task Card
10-71-04	Rear Support Links	65-10601-4	NSN	SI-060
10-71-04	Rear Support Links	65-10601-4	NSN	SI-060
10-71-04	Rear Support Links	65-10601-4	NSN	SI-060
10-71-04	Rear Support Links	65-10601-4	NSN	SI-060
10-71-04	Rear Support Links	65-11601-4	NSN	SI-060
10-71-04	Rear Support Links	65-11601-4	NSN	SI-060
10-71-04	Rear Support Links	65-11601-4	NSN	SI-060
10-71-04	Rear Support Links	65-11601-4	NSN	SI-060
10-71-05	Fifth Engine Pod N/A to 20029	N/A	N/A	N/A
10-71-06	Fifth Engine Pod N/A to 20029	N/A	N/A	N/A
10-71-07	Fifth Engine Pod N/A to 20029	N/A	N/A	N/A
10-71-08	Fifth Engine Pod N/A to 20029	N/A	N/A	N/A
10-73-01	Fuel Control Unit	711286-39	77526	C-164 C-165 C-166 C-167
10-73-01	Fuel Control Unit	711286-53	40648	C-164 C-165 C-166 C-167
10-73-01	Fuel Control Unit	711286-53	48973	C-164 C-165 C-166 C-167
10-73-01	Fuel Control Unit	711286-55	47297	C-164 C-165 C-166 C-167
10-73-02	Engine Driven Fuel Pump	9478	666AAU777	C-164 C-165 C-166 C-167
10-73-02	Engine Driven Fuel Pump	9478	676AAU1142	C-164 C-165 C-166 C-167
10-73-02	Engine Driven Fuel Pump	9478	666AAU530	C-164 C-165 C-166 C-167
10-73-02	Engine Driven Fuel Pump	9478-A14	706AAU1930	C-164 C-165 C-166 C-167
10-73-03	Pressurizing and Dump Valve	771243	6158059	C-164 C-165 C-166 C-167
10-73-03	Pressurizing and Dump Valve	771245	6157526	C-164 C-165 C-166 C-167
10-73-03	Pressurizing and Dump Valve	773054	6156737	C-164 C-165 C-166 C-167
10-73-03	Pressurizing and Dump Valve	773054	6155664	C-164 C-165 C-166 C-167
10-74-01	Ignition Exciter Unit No.1	42721	3306	C-176 C-177 C-178 C-179 B-01 B-02 B-03 B-04
10-74-01	Ignition Exciter Unit No.1	44387	1848M	C-176 C-177 C-178 C-179 B-01 B-02 B-03 B-04
10-74-01	Ignition Exciter Unit No.1	44387	3105M	C-176 C-177 C-178 C-179 B-01 B-02 B-03 B-04
10-74-01	Ignition Exciter Unit No.1	44387	307M	C-176 C-177 C-178 C-179 B-01 B-02 B-03 B-04
10-74-01	Ignition Exciter Unit No.2	42781	394	C-176 C-177 C-178 C-179 B-01 B-02 B-03 B-04
10-74-01	Ignition Exciter Unit No.2	44387	3344M	C-176 C-177 C-178 C-179 B-01 B-02 B-03 B-04
10-74-01	Ignition Exciter Unit No.2	44387	3093	C-176 C-177 C-178 C-179 B-01 B-02 B-03 B-04
10-74-01	Ignition Exciter Unit No.2	48016	3422M	C-176 C-177 C-178 C-179 B-01 B-02 B-03 B-04
10-74-02	Spark Igniter	UKN	UKN	OC
10-75-01	Engine Anti-icing Valve	1433-613523	34253	C-180 C-181 C-182 C-183
10-75-01	Engine Anti-icing Valve	1433-663089	3926	C-180 C-181 C-182 C-183
10-75-01	Engine Anti-icing Valve	1433-663089-8	61811	C-180 C-181 C-182 C-183
10-75-01	Engine Anti-icing Valve	431599	618999	C-180 C-181 C-182 C-183
10-75-01	Engine Anti-icing Valve	475689	6181245	C-180 C-181 C-182 C-183
10-75-01	Engine Anti-icing Valve	475689	28975	C-180 C-181 C-182 C-183
10-75-01	Engine Anti-icing Valve	475689C	6182575	C-180 C-181 C-182 C-183

Omega Air

Component Data

Boeing 707 N707AR

Insp No	Component	P/N	S/N	Task Card
10-75-01	Engine Anti-icing Valve	586804	5805	C-180 C-181 C-182 C-183
10-75-02	Engine Anti-ice Air Regulator	481738	NSN	C-184 C-185 C-186 C-187
10-75-02	Engine Anti-ice Air Regulator	481738	NSN	C-184 C-185 C-186 C-187
10-75-02	Engine Anti-ice Air Regulator	481738	NSN	C-184 C-185 C-186 C-187
10-75-02	Engine Anti-ice Air Regulator	481738	NSN	C-184 C-185 C-186 C-187
10-75-02	Engine Anti-ice Air Regulator	481738	NSN	C-184 C-185 C-186 C-187
10-75-02	Engine Anti-ice Air Regulator	481738	NSN	C-184 C-185 C-186 C-187
10-75-02	Engine Anti-ice Air Regulator	481738	NSN	C-184 C-185 C-186 C-187
10-75-02	Engine Anti-ice Air Regulator	481738	NSN	C-184 C-185 C-186 C-187
10-75-02	Engine Anti-ice Air Regulator	481738	NSN	C-184 C-185 C-186 C-187
10-75-03	Nose Cowl Anti-icing Valve	F6100226	2992B	C-180 C-181 C-182 C-183
10-75-03	Nose Cowl Anti-icing Valve	F6100226	618-288	C-180 C-181 C-182 C-183
10-75-03	Nose Cowl Anti-icing Valve	F61C0226M2	2620B	C-180 C-181 C-182 C-183
10-75-03	Nose Cowl Anti-icing Valve	F61C0226M2	1691BR	C-180 C-181 C-182 C-183
10-75-04	Nose Cowl Anti-icing Thermostatic Valve	73655	607V82	C-180 C-181 C-182 C-183
10-75-04	Nose Cowl Anti-icing Thermostatic Valve	76660	687AA2787	C-180 C-181 C-182 C-183
10-75-04	Nose Cowl Anti-icing Thermostatic Valve	76660	637AA200M	C-180 C-181 C-182 C-183
10-75-04	Nose Cowl Anti-icing Thermostatic Valve	76660A1	667AA1449M	C-180 C-181 C-182 C-183
10-75-05	Compressor Bleed Valve	39750-4	109-12299	C-180 C-181 C-182 C-183
10-75-05	Compressor Bleed Valve	39750-4	109-12298	C-180 C-181 C-182 C-183
10-75-05	Compressor Bleed Valve	563881	616K540	C-180 C-181 C-182 C-183
10-75-05	Compressor Bleed Valve	565381	6616K698	C-180 C-181 C-182 C-183
10-75-06	Compressor Bleed Valve Control Unit	536931	6154811	C-180 C-181 C-182 C-183
10-75-06	Compressor Bleed Valve Control Unit	563881	616K540	C-180 C-181 C-182 C-183
10-75-06	Compressor Bleed Valve Control Unit	563881	PA004	C-180 C-181 C-182 C-183
10-75-06	Compressor Bleed Valve Control Unit	563881	6154491	C-180 C-181 C-182 C-183
10-77-01	Engine Pressure Ratio Transmitter	LG14C12	10384	2C-52 2C-53 2C-54 2C-55
10-77-01	Engine Pressure Ratio Transmitter	LG14C12	B207	2C-52 2C-53 2C-54 2C-55
10-77-01	Engine Pressure Ratio Transmitter	LG14C12	B-207	2C-52 2C-53 2C-54 2C-55
10-77-01	Engine Pressure Ratio Transmitter	LG14C12	AV-720	2C-52 2C-53 2C-54 2C-55
10-77-02	Engine Pressure Ratio Indicator	510784-1	73-373	C-065 2C-56
10-77-02	Engine Pressure Ratio Indicator	510784-1	32-283	C-065 2C-56
10-77-02	Engine Pressure Ratio Indicator	510784-1	77-967	C-065 2C-56
10-77-02	Engine Pressure Ratio Indicator	510784-1	78-447	C-065 2C-56
10-77-03	Exhaust Gas Temperature Indicator	152BL708	B576	C-065 2C-56
10-77-03	Exhaust Gas Temperature Indicator	152BL708	B812	C-065 2C-56
10-77-03	Exhaust Gas Temperature Indicator	152BL708	B751	C-065 2C-56
10-77-03	Exhaust Gas Temperature Indicator	152BL708	B830	C-065 2C-56
10-77-04	N1 Engine Tachometer Generator	2CM9ABY7	9-0143	C-156 C-157 C-158 C-159
10-77-04	N1 Engine Tachometer Generator	2CM9ABY7	X16668	C-156 C-157 C-158 C-159
10-77-04	N1 Engine Tachometer Generator	2CM9-ABY7	C5295	C-156 C-157 C-159 C-159

Insp No	Component	P/N	S/N	Task Card
10-77-04	N1 Engine Tachometer Generator	8DJ81LCB2	B6829	C-156 C-157 C-158 C-159
10-77-05	N2 Engine Tachometer Generator	2CM9AB47	0-0901	C-189 C-190 C-191 C-192
10-77-05	N2 Engine Tachometer Generator	2CM9ABH7	K4555	C-189 C-190 C-191 C-192
10-77-05	N2 Engine Tachometer Generator	2CM9ABY7	C3485	C-189 C-190 C-191 C-192
10-77-05	N2 Engine Tachometer Generator	2CM9ABY7	26013	C-189 C-190 C-191 C-192
10-77-06	Engine Tachometer Indicator - N1	8DJ1LX4-3	V0968	C-065 2C-56
10-77-06	Engine Tachometer Indicator - N1	8DJ81LBT2	X16668	C-065 2C-56
10-77-06	Engine Tachometer Indicator - N1	8DJ81LYW	D0014	C-065 2C-56
10-77-06	Engine Tachometer Indicator - N1	8DJ81-LYW-2	545588	C-065 2C-56
10-77-06	Engine Tachometer Indicator - N2	8DJ81LWZ	C3466	C-065 2C-56
10-77-06	Engine Tachometer Indicator - N2	8DJ81LWZ	C3480	C-065 2C-56
10-77-06	Engine Tachometer Indicator - N2	8DJ81-LWZ	D1349	C-065 2C-56
10-77-06	Engine Tachometer Indicator - N2	8DJ81LWZ2	61437	C-065 2C-56
10-77-07	Engine Vibration Pickup	N/A	N/A	N/A
10-77-08	Engine Vibration Filter and Amplifier (Cockpit)	N/A	N/A	N/A
10-78-01	Forward Reverser Assembly	65-17036-10	RC1270	C-193 C-194 C-195 C-196
10-78-01	Forward Reverser Assembly	65-17036-11	RC1272	C-193 C-194 C-195 C-196
10-78-01	Forward Reverser Assembly	65-17036-12	AA14	C-193 C-194 C-195 C-196
10-78-01	Forward Reverser Assembly	65-17036-9	1189	C-193 C-194 C-195 C-196
10-78-02	Forward Thrust Reverser Actuators X 14	UKN	UKN	C-193 C-194 C-195 C-196
10-78-02	Forward Thrust Reverser Actuators X 14	UKN	UKN	C-193 C-194 C-195 C-196
10-78-02	Forward Thrust Reverser Actuators X 14	UKN	UKN	C-193 C-194 C-195 C-196
10-78-02	Forward Thrust Reverser Actuators X 14	UKN	UKN	C-193 C-194 C-195 C-196
10-78-03	Aft Thrust Reverser Assembly	65-10500-3	RR569	C-193 C-194 C-195 C-196
10-78-03	Aft Thrust Reverser Assembly	65-10500-4	AA14	C-193 C-194 C-195 C-196
10-78-03	Aft Thrust Reverser Assembly	65-10500-9	SQS003	C-193 C-194 C-195 C-196
10-78-03	Aft Thrust Reverser Assembly	65-10500-9	SQS1	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	NV	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	L6648	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	L5351	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	JD160	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	NSN	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	NV	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	NV	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	NV	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	NV	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	NV	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	NV	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	NV	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	NV	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	NSN	C-193 C-194 C-195 C-196

Insp No	Component	P/N	S/N	Task Card
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	NSN	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	NSN	C-193 C-194 C-195 C-196
10-78-04	Aft Thrust Reverser Actuators	65-2089-213	NSN	C-193 C-194 C-195 C-196
10-78-05	Sleeve Lock Actuator	65-11805-8	NSN	C-193 C-194 C-195 C-196
10-78-05	Sleeve Lock Actuator	65-11805-8	NV	C-193 C-194 C-195 C-196
10-78-05	Sleeve Lock Actuator	65-11805-8	NSN	C-193 C-194 C-195 C-196
10-78-05	Sleeve Lock Actuator	69-10320-3	NV	C-193 C-194 C-195 C-196
10-78-06	Thrust Reverser Directional Control Valve	65-10320-3	NV	C-193 C-194 C-195 C-196
10-78-06	Thrust Reverser Directional Control Valve	65-11805-8	NV	C-193 C-194 C-195 C-196
10-78-06	Thrust Reverser Directional Control Valve	65-16773-2	NSN	C-193 C-194 C-195 C-196
10-78-06	Thrust Reverser Directional Control Valve	65-167733-2	NSN	C-193 C-194 C-195 C-196
10-79-01	Engine Oil Temperature Indicator	162BL704A	A456	C-065 2C-56
10-79-01	Engine Oil Temperature Indicator	162BL704A	A718	C-065 2C-65
10-79-01	Engine Oil Temperature Indicator	162BL704A	A602	C-065 2C-56
10-79-01	Engine Oil Temperature Indicator	162BL704A	A186	C-065 2C-56
10-79-02	Engine Oil Quantity Indicator	JG13005	G-124	C-065 2C-56
10-79-02	Engine Oil Quantity Indicator	JG13005	G-23	C-065 2C-56
10-79-02	Engine Oil Quantity Indicator	JG433A3	A-40	C-065 2C-56
10-79-02	Engine Oil Quantity Indicator	JG433A3	G-31	C-065 2C-56
10-79-03	Engine Oil Quantity Tank Unit	BAC10-3230-4	D149	C-164 C-165 C-166 C-167
10-79-03	Engine Oil Quantity Tank Unit	FG2433A3	B73	C-164 C-165 C-166 C-167
10-79-03	Engine Oil Quantity Tank Unit	FG243A4	6H7	C-164 C-165 C-166 C-167
10-79-03	Engine Oil Quantity Tank Unit	FG243A4	X18	C-164 C-165 C-166 C-167
10-79-04	Oil Pressure Switch	40D33-1	2707	OC
10-79-04	Oil Pressure Switch	40D33-1	2618	OC
10-79-04	Oil Pressure Switch	40D33-1	180	OC
10-79-04	Oil Pressure Switch	40D33-1	6	OC
10-79-05	Oil Pressure Transmitter	ST4N	1044	2C-100 2C-101 2C-102 2C-103
10-79-05	Oil Pressure Transmitter	ST-4N	3880MI	2C-100 2C-101 2C-102 2C-103
10-79-05	Oil Pressure Transmitter	ST4NM1	3396	2C-100 2C-101 2C-102 2C-103
10-79-05	Oil Pressure Transmitter	ST4N-M1	214	2C-100 2C-101 2C-102 2C-103
10-79-06	Fuel Oil Cooler	115558	6004718	C-164 C-165 C-166 C-167
10-79-06	Fuel Oil Cooler	503343	6001442	C-164 C-165 C-166 C-167
10-79-06	Fuel Oil Cooler	503343	6025052	C-164 C-165 C-166 C-167
10-79-06	Fuel Oil Cooler	715446	6005766	C-164 C-165 C-166 C-167
10-79-07	Oil Pressure Indicator	SRL-041	28	C-069 2C-56
10-79-07	Oil Pressure Indicator	SRL-041	6210	C-069 2C-56
10-79-07	Oil Pressure Indicator	SRL-041-M1	668	C-069 2C-56
10-79-07	Oil Pressure Indicator	SRL-04L	7782	C-069 2C-56
10-80-01	High/ Low Pressure Air Starter	356364-6-1	91P-703	C-197 C-198 C-199 C-200

Omega Air

Component Data

Boeing 707 N707AR

Insp No	Component	P/N	S/N	Task Card
10-80-01	High/ Low Pressure Air Starter	356364-83	P-4945	C-197 C-198 C-199 C-200
10-80-01	High/ Low Pressure Air Starter	8DJ81LXD-3	91P703	C-197 C-198 C-199 C-200
10-80-01	High/ Low Pressure Air Starter	AAP1901A	P-2524	C-197 C-198 C-199 C-200
10-80-02	Starter Low Pressure Air Shut-off Valve	122594-1	P411	C-197 C-198 C-199 C-200
10-80-02	Starter Low Pressure Air Shut-off Valve	122594-1	P380	C-197 C-198 C-199 C-200
10-80-02	Starter Low Pressure Air Shut-off Valve	122594-1	P1404	C-197 C-198 C-199 C-200
10-80-02	Starter Low Pressure Air Shut-off Valve	122594-1	P1404	C-197 C-198 C-199 C-200
10-80-03	Starter Air Bottle	N/A	N/A	
10-80-04	High Pressure Air SOV	N/A	N/A	
10-80-05	Starter Air Bottle Pressure Relief Valve	N/A	N/A	
10-80-06	Air Pressure Transmission	N/A	N/A	
10-80-07	Air Pressure Indicator	N/A	N/A	
10-80-08	High Pressure Air Relief Valve	N/A	N/A	
10-80-09	Starter Air Compressor	N/A	N/A	
10-80-09	Starter Air Compressor Control Valve	N/A	N/A	