

MAXIMUM GLIDE CONFIGURATION

1. Landing Gear - UP

NOTE

On S/N CE-1301, CE-1307 and after, and CJ-180 and after, the landing gear will not retract unless the throttle is in a position corresponding to approximately 17 in. Hg manifold pressure or above.

2. Flaps - UP
3. Cowl Flaps - CLOSED
4. Propeller - PULL for LOW RPM
5. Airspeed - 105 KTS

Glide distance is approximately 1.7 nautical miles (2 statute miles) per 1000 feet of altitude above the terrain.

LANDING EMERGENCIES

LANDING WITHOUT POWER

When assured of reaching the landing site selected, and on final approach:

1. Airspeed - ESTABLISH 78 TO 83 KTS
2. Fuel Selector Valve - OFF
3. Mixture - IDLE CUT-OFF
4. Magneto/Start Switch - OFF
5. Flaps - AS REQUIRED
6. Landing Gear - DOWN or UP (depending on terrain)

NOTE

On S/N CE-1301, CE-1307 and after, and CJ-180 and after, the landing gear will not retract unless the throttle is in a position corresponding to approximately 17 in. Hg manifold pressure or above.

7. Battery and Alternator Switches - OFF

All airspeeds quoted in this section are indicated airspeeds (IAS).

EMERGENCY AIRSPEEDS (3400 LBS)

Emergency Descent	154 KTS
Maximum Glide Range	105 KTS
Emergency Landing Approach	83 KTS

The following information is presented to enable the pilot to form, in advance, a definite plan of action for coping with the most probable emergency situations which could occur in the operation of the airplane. Where practicable, the emergencies requiring immediate corrective action are treated in check list form for easy reference and familiarization. Other situations, in which more time is usually permitted to decide on and execute a plan of action, are discussed at some length.

ENGINE FAILURE

DURING TAKE-OFF GROUND ROLL

1. Throttle - CLOSED
2. Braking - MAXIMUM
3. Fuel Selector Valve - OFF
4. Battery and Alternator Switches - OFF

AFTER LIFTOFF AND IN FLIGHT

Landing straight ahead is usually advisable. If sufficient altitude is available for maneuvering, accomplish the following:

1. Fuel Selector Valve - SELECT OTHER TANK (feel for detent)
2. Auxiliary Fuel Pump - ON
3. Mixture - FULL RICH, then LEAN AS REQUIRED
4. Magnetos - CHECK LEFT RIGHT, then BOTH ON

NOTE

The most probable cause of engine failure would be loss of fuel flow or improper functioning of the ignition system.

If No Restart:

1. Select most favorable landing site.
2. The use of landing gear is dependent on the terrain where landing must be made.

ENGINE DISCREPANCY CHECKS

CONDITION: ROUGH RUNNING ENGINE

1. Mixture - FULL RICH, then LEAN as required
2. Magneto/Start Switch - "BOTH" position (check to verify)

CONDITION: LOSS OF ENGINE POWER

1. Fuel Flow Gage - CHECK

If fuel flow is abnormally low:

- a. Mixture - FULL RICH
 - b. Auxiliary Fuel Pump - ON (then OFF if performance does not improve in a few moments)
2. Fuel Quantity Indicator - CHECK for fuel supply in tank being used

If tank being used is empty:

Fuel Tank Selector Valve - SELECT OTHER FUEL TANK
(feel for detent)

AIR START PROCEDURE

1. Fuel Selector Valve - SELECT TANK MORE NEARLY FULL (feel for detent)
2. Throttle - RETARD
3. Mixture Control - FULL RICH
4. Auxiliary Fuel Pump - ON until power is regained, then OFF (Leave On if Engine Driven Fuel Pump is inoperative.)
5. Throttle - ADVANCE to desired power
6. Mixture - LEAN as required

ENGINE FIRE

IN FLIGHT

The red FIREWALL AIR control on the outboard side of the left lower subpanel should be pulled to close off all heating system outlets so that smoke and fumes will not enter the cabin. In the event of engine fire, shut down the engine as follows and make a landing:

1. Firewall Air Control - PULL TO CLOSE
2. Mixture - IDLE CUT-OFF
3. Fuel Selector Valve - OFF
4. Battery, Alternator, and Magneto/Start Switches - OFF
(Extending the landing gear can be accomplished manually if desired.)
5. Do not attempt to restart engine. (See GLIDE and LANDING WITHOUT POWER Procedures)

ON THE GROUND

1. Fuel Selector Valve - OFF
2. Mixture - IDLE CUT-OFF
3. Battery, Alternator and Magneto/Start Switches - OFF
4. Fire Extinguisher - USE TO EXTINGUISH FIRE

EMERGENCY DESCENT

1. Power - IDLE
2. Propeller - HIGH RPM
3. Landing Gear - DOWN
4. Airspeed - ESTABLISH 154 KTS