

AFTER TOUCHDOWN (CONT)

- 4A. Ignition Switches OFF

CAUTION

DO NOT USE IGNITION SWITCH IN 'AUTO' POSITION WHEN THE
CONDITION LEVER IS AT TAXI. (IF AUTO-IGNITION INSTALLED)

- 5. Condition Levers TAXI (after completion of landing ground roll)

AFTER LANDING CHECKLIST

- 1. Anti-ice and Deice Systems OFF
- 2. Flaps UP
- 3. Landing Lights/Taxi Lights AS REQUIRED
- 4. Strobe Lights OFF
- 5. (Deleted)
- 6. VHF Transceiver (If ELT installed) SET 121.5 MHz. CONFIRM NO AUDIO SWEEPS
BY INADVERTENT ELT ACTIVATION

NOTE

If inadvertent ELT activation is confirmed, set ELT remote control switch to
ON/TEST position, then back to AUTO to reset the ELT.

STOPPING ENGINES

- 1. Parking Brake SET
- 2. Cabin Air Selector Switch OFF
- 3. Radio Master Switches OFF
- 4. Cabin Sign OFF
- 5. Power Levers START
- 6. Run-Crank-Stop Switches STOP AND HOLD UNTIL 50% RPM

NOTE

Engine rpm and ITT will increase momentarily after placing Run-Crank-Stop
Switch to STOP.

- 7. Power Levers MOVE POWER LEVERS TO REVERSE
POSITION AS ENGINE RPM DECELERATES TO
50% TO POSITION PROPELLERS ON LOCKS
- 8. DC Generator Switches OFF
- 9. Inverter Switch OFF
- 10. ENG PWR LIMIT Switches MAN
- 11. Start Selector Switch AIR START AND SAFE
- 12. (Deleted)
- 13. All Other Switches (except main Fuel
Valves) OFF

R