


MODEL 207 AND T207 SERIES SERVICE MANUAL

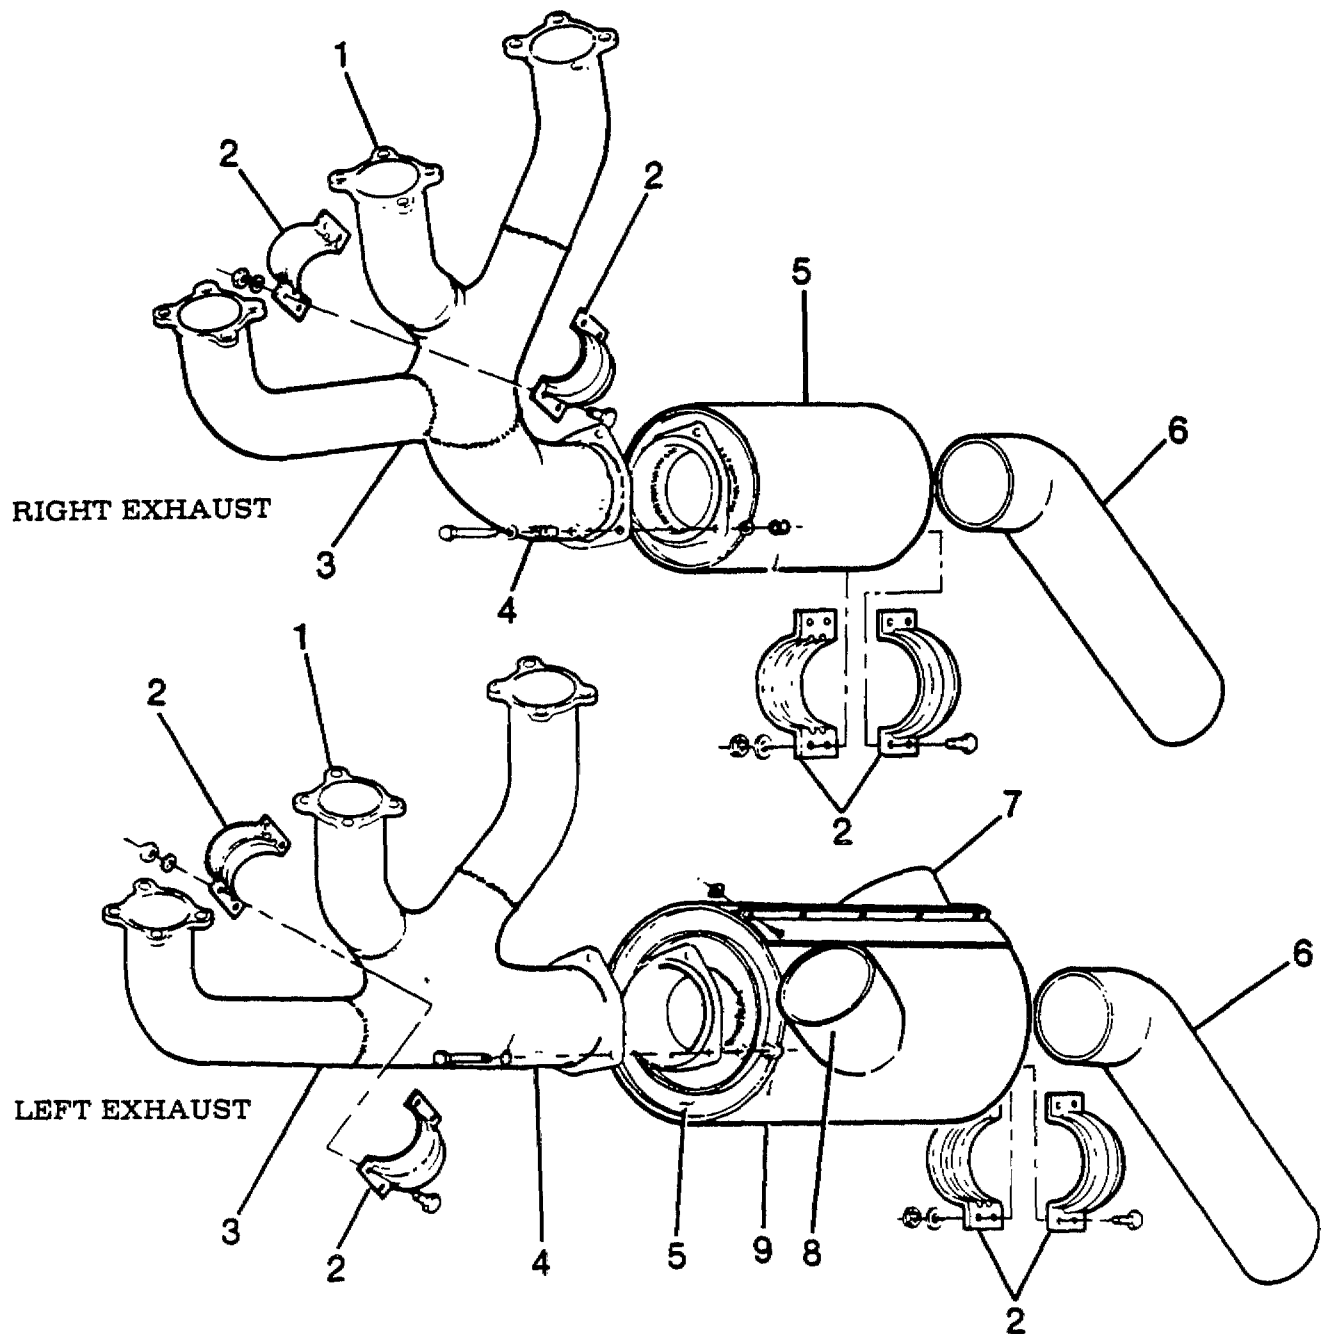

- 1. Riser
- 2. Clamp Half
- 3. Exhaust Stack assembly
- 4. Spring
- 5. Muffler
- 6. Tailpipe
- 7. Cabin Heat Outlet
- 8. Cabin Heat Inlet
- 9. Shroud

Figure 12-11. Exhaust System (Sheet 1 of 2)