

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE		
					1	2
8 -		STABILIZER & ELEVATOR INSTALLATION -----	NP			
	0432001-2	STABILIZER ASSEMBLY -----	1	E		
	0432001-50	STABILIZER ASSEMBLY -----	1	G		
	0432001-59	STABILIZER ASSEMBLY -----	1	H		
		ATTACHING PARTS -----				
- 1	AN4-4A	BOLT -----	2			
- 2	AN960D416	WASHER -----	2	G		
- 3	AN4-5A	BOLT -----	2	G		
- 3A	AN4-7A	BOLT -----	2	H		
	AN960-416L	WASHER -----	2			
	NAS679A4	NUT -----	2	H		
- 4	0432001-14	SPAR-STABILIZER -----	2	E		
	0432001-56	SPAR-STABILIZER -----	2	F		
- 5	0432001-15	REINFORCEMENT -----	1			
- 6	0432164-1	BRACKET ASSEMBLY -----	1	G		
	0432004-1	BRACKET ASSEMBLY -----	1	H		
	NAS686A4	NUTPLATE -----	2	G		
	NAS1068A4	NUTPLATE -----	8	H		
- 7	NAS428-3-7	BOLT-ELEVATOR STOP -----	2	H		
	AN315-3R	NUT-ELEVATOR STOP -----	2	H		
- 8	0432001-8	RIB-RH -----	1			
- 9	0432001-9	RIB-LH -----	1			
-10	0432001-19	BRACKET-UPPER HALF -----	1			
	0432001-20	BRACKET-LOWER HALF -----	1			
-11	0432001-6	RIB ASSEMBLY-LEADING EDGE RH -----	1			
	0432001-46	RIB ASSEMBLY-LEADING EDGE LH -----	1			
-12	NAS680A4	NUTPLATE -----	1			
-13	0432001-37	ANGLE -----	2			
-14	0432001-11	RIB-LH -----	1			
-15	0432001-10	RIB ASSEMBLY-RH -----	1			
-16	NAS680A06K	NUTPLATE RH ONLY -----	2			
-17	0310293-2	ACTUATOR ASSEMBLY-ELEVATOR TAB WHEN EXHAUSTED -----	1	G		
		USE 1260074-1 -----				
	0310293-12	ACTUATOR ASSEMBLY-ELEVATOR TAB ALT FOR 0310293-2 -----	1	G		
	0310293-14	ACTUATOR ASSEMBLY-ELEVATOR TAB WHEN EXHAUSTED -----	1	K		
		USE 1260074-1 -----				
	1260074-1	ACTUATOR ASSEMBLY-ELEVATOR TAB -----	1	L		
		ATTACHING PARTS -----				
-18	AN742D13	CLAMP TIN -----	2			
-19	AN520-10R12	SCREW -----	2			
-19A	NAS43HT3-7	SPACER -----	2			
-20	0432005-1	FITTING-LH -----	1	H		
	0432005-2	FITTING-RH -----	1	H		
		ATTACHING PARTS -----				
-21	AN509-416R12	SCREW -----	2	H		
-22		DELETED, NOT AVAILABLE -----				
-23		DELETED, NOT AVAILABLE -----				
-24		DELETED, NOT AVAILABLE -----				
-25		DELETED, NOT AVAILABLE -----				
-26	0432001-12	RIB -----	2			
-27	0432001-13	RIB -----	2	E		
	0432001-53	RIB -----	2	F		
-28	S1863-2A	NUTPLATE -----	12	E		
	S1863-3A	NUTPLATE -----	4	F		
-29	S1862-1A	NUTPLATE -----	4	E		
	S1862-2A	NUTPLATE -----	8	F		
-30	0432001-17	SKIN-STABILIZER LH -----	1	E		
	0432001-55	SKIN-STABILIZER LH -----	1	F		
-31	0432001-18	SKIN-STABILIZER RH -----	1	E		
	0432001-54	SKIN-STABILIZER RH -----	1	F		
-32	S237-2	DOUBLER RH ONLY CESSNA STANDARD -----	2			
-33	0432001-16	SKIN-LEADING EDGE -----	2			
-34	0432165-1	HINGE ASSEMBLY -----	2			
-35	0432003-1	BUSHING -----	1			

CONTINUED ON NEXT PAGE

Empennage

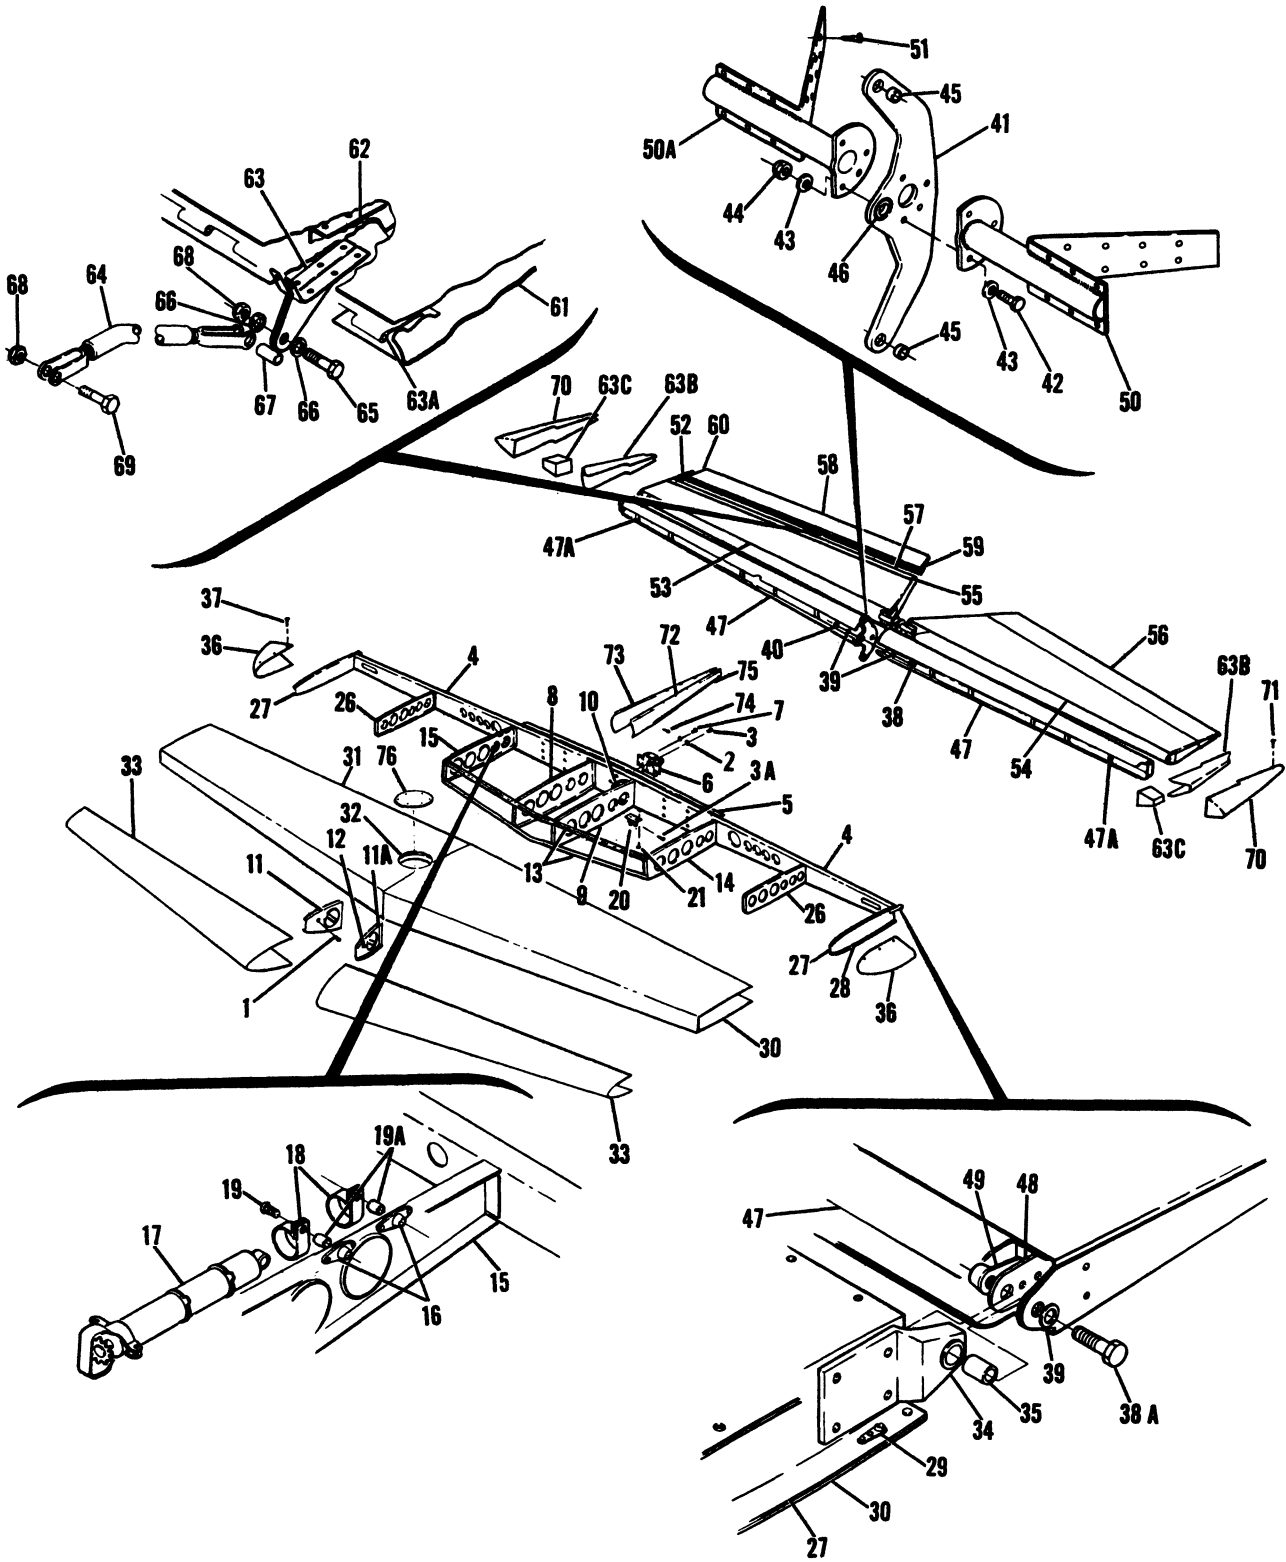


Figure 8. Stabilizer and Elevator Installation

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
8 -36	0430004-6-791	TIP-STABILIZER -----	2	E
	0430004-11-791	TIP-STABILIZER -----	2	F
-37	S1021Z6-4	ATTACHING PARTS -----		
	S1021Z8-6	SCREW -----	8	E
		SCREW -----	6	F
		-----*		
		ELEVATOR ASSEMBLY-COMplete -----	NP	
		ATTACHING PARTS -----		
-38	AN3-6A	BOLT -----	1	
-38A	AN3-7A	BOLT -----	2	
-39	AN960-10	WASHER -----	4	
-40	NAS679A3	NUT -----	1	
		-----*		
-41	0432162-1	BELLCRANK ASSEMBLY-ELEVATOR -----	1	G
	0432166-1	BELLCRANK ASSEMBLY-ELEVATOR WHEN EXHAUSTED -----	1	N
		USE 0432166-3 -----		
	0432166-3	BELLCRANK ASSEMBLY-ELEVATOR -----	1	P
		ATTACHING PARTS -----		
-42	AN3-5A	BOLT -----	3	
-43	AN960-10	WASHER -----	6	
-44	NAS679A3	NUT -----	3	
		-----*		
-45	0432162-3	BUSHING -----	2	G
-46	S1866-3	BEARING -----	1	
	0432001-3	ELEVATOR ASSEMBLY-LH -----	1	E
	0432001-51	ELEVATOR ASSEMBLY-LH -----	1	F
	0432001-4	ELEVATOR ASSEMBLY-RH -----	1	E
	0432001-52	ELEVATOR ASSEMBLY-RH -----	1	F
-47	0432001-21	SPAR-ELEVATOR -----	1	
-47A	0534126-1	CLIP -----	5	
-48	0432001-24	HINGE ASSEMBLY-HALF -----	1	
-49	NAS682A3	NUTPLATE -----	1	
-50	0434116-1	TUBE ASSEMBLY-TORQUE WHEN EXHAUSTED USE 0434155-1 -----	1	M
	0434155-1	TUBE ASSEMBLY-TORQUE LH -----	1	P
-50A	0434116-1	TUBE ASSEMBLY-TORQUE WHEN EXHAUSTED USE 0434155-2 -----	1	M
	0434155-2	TUBE ASSEMBLY-TORQUE RH -----	1	P
		ATTACHING PARTS -----		
-51	AN520-10R7	SCREW -----	5	
		-----*		
-52	0432001-31	RIB ASSEMBLY-RH -----	1	E
	0432001-57	RIB ASSEMBLY-RH -----	1	F
	S1863-2A	NUT -----	2	E
	S1863-3A	NUT -----	2	F
-53	0432001-22	SKIN-ELEVATOR RH -----	1	
-54	0432001-23	SKIN-ELEVATOR LH -----	1	
	NAS680A3K	NUTPLATE -----	5	
	0432001-42	DOUBLER RH ONLY -----	1	
-55	0432001-33	STRIP-TAB HINGE REINFORCEMENT -----	1	
-56	0432001-34	SKIN-LH ELEVATOR TRAILING EDGE -----	1	
-57	0432001-28	HINGE HALF-TAB RH ONLY -----	1	
		ATTACHING PARTS -----		
	MS20253-2-44.13	PIN -----	1	
		-----*		
-58	0432001-5	TAB ASSEMBLY-ELEVATOR -----	1	
-59	0432001-35	RIB-TAB -----	1	
-60	0432001-36	RIB-TAB -----	1	
-61	0432001-26	SKIN-TAB -----	1	
-62	0432001-30	RIB-HORN REINFORCEMENT -----	1	
-63	0432001-38	HORN ASSEMBLY-TAB WHEN EXHAUSTED USE 0432168-5 -----	1	Q
	0432168-5	HORN ASSEMBLY-TAB -----	1	R
-63A	0432001-27	HINGE HALF -----	1	
-63B	0431001-30	CHANNEL -----	1	F
-63C	0433134-3	WEIGHT-ELEVATOR BALANCE LH -----	1	F
	0433134-6	WEIGHT-ELEVATOR BALANCE RH -----	1	F
		ATTACHING PARTS -----		
	AN525-8R8	SCREW -----	2	F
		-----*		

CONTINUED ON NEXT PAGE

FIGURE AND INDEX NO.	PART NUMBER	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
8 -64	0432163-1	TUBE ASSEMBLY-TAB ACTUATOR -----	1	A
	0432163-3	TUBE ASSEMBLY-TAB ACTUATOR -----	1	B
		ATTACHING PARTS		
-65	AN3-5A	BOLT -----	1	
-66	AN960-10L	WASHER -----	2	Q
-67	0432002-1	SPACER -----	1	Q
	NAS74A3-004	BUSHING -----	1	R
-68	NAS679A3	NUT -----	2	
-69	AN3-6A	BOLT -----	1	
		-----*		
-70	0430004-5-791	TIP-ELEVATOR -----	2	E
	0430004-10-791	TIP-ELEVATOR -----	2	F
		ATTACHING PARTS		
-71	S1021Z6-4	SCREW -----	6	E
	S1021Z8-6	SCREW -----	8	F
		-----*		
-72	0430005-201	FAIRING ASSEMBLY-LH -----	1	E
	0412029-201	FAIRING ASSEMBLY-LH -----	1	J
	0431015-5	FAIRING ASSEMBLY-LH -----	1	H
-73	0430005-202	FAIRING ASSEMBLY-RH -----	1	E
	0412029-202	FAIRING ASSEMBLY-RH -----	1	J
	0431015-6	FAIRING ASSEMBLY-RH -----	1	H
		ATTACHING PARTS		
-74	S1021Z6-6	SCREW -----	6	J
	S1021Z6-6	SCREW -----	11	H
		-----*		
-75	0411875-41	MOULDING -----	2	C
	S202VM	CHANNEL-21.25 IN LG BULK ITEM REF S202V21.25W -----	2	D
-76	S225-1	PLATE-INSPECTION CESSNA STANDARD -----	2	
		ATTACHING PARTS		
	S1021Z8-8	SCREW CESSNA STANDARD -----	6	
		-----*		

NOTE. \*WHEN ORDERING THIS PART FOR AIRCRAFT PRIOR TO SERIALS 15070125 & F15000530 ALSO ORDER ONE NAS74A3-004 BUSHING.

- A---150 SERIAL 17001 THRU 17315
- B---150 SERIAL 17316 & ON  
F150 SERIAL F150-0001 & ON
- C---150 SERIAL 17001 THRU 15059700
- D---150 SERIAL 15059701 THRU 15064532  
F150 SERIAL F150-0001 THRU F150-0067
- E---150 SERIAL 17001 THRU 15060087
- F---150 SERIAL 15060088 & ON  
F150 SERIAL F150-0001 & ON
- G---150 SERIAL 17001 THRU 15061532
- H---150 SERIAL 15061533 & ON  
F150 SERIAL F150-0001 & ON
- J---150 SERIAL 15060088 THRU 15061532
- K---150 SERIAL 15061533 THRU 15062941  
F150 SERIAL F150-0001 THRU F150-0023
- L---150 SERIAL 15062942 & ON  
F150 SERIAL F150-0024 & ON
- M---150 SERIAL 15060088 THRU 15069336  
F150 SERIAL F150-0001 THRU F150-0489
- N---150 SERIAL 15061533 THRU 15069336  
F150 SERIAL F150-0001 THRU F150-0489
- P---150 SERIAL 15069337 & ON  
F150 SERIAL F150-0490 & ON
- Q---150 SERIAL 17001 THRU 15070124  
F150 SERIAL F150-0001 & ON
- R---150 SERIAL 15070125 & ON