

Beechcraft®

Bonanza®

V35, V35A *and* **V35B**

(D-7977 thru D-9068)

(D-9069 thru D-9947)

Pilot's Operating Handbook *and* **FAA Approved Airplane Flight Manual**

FAA Approved in Utility Category based on CAR 3. This document must be carried in the airplane at all times and be kept within reach of the pilot during all flight operations.

This handbook includes the material required to be furnished to the pilot by CAR 3.

NOTICE: This handbook does not apply to models V35TC, V35A-TC, and V35B-TC with turbocharged systems installed per BEECH drawing 35-910028 and/or STC SA 1035WE.

Airplane Serial Number: _____

Airplane Registration Number: *K* _____

FAA Approved: _____

A. C. Jackson
Beech Aircraft Corporation
DOA CE-2

Except as noted above, this handbook supersedes all BEECH published owner's manuals, flight manuals, and check lists issued for this airplane with the exception of FAA Approved Airplane Flight Manual Supplements.

COPYRIGHT © BEECH 1994

P/N 35-590118-31B
Reissued: January, 1982

P/N 35-590118-31B4
Revised: July, 1994

Published By
RAYTHEON AIRCRAFT COMPANY
P.O. Box 85
Wichita, Kansas 67201
U.S.A.

NOTE

Where Beech Aircraft Corporation or Beechcraft is referred to in this publication, it will be taken to read Raytheon Aircraft Company.

Exported under the authority of license exception: TSU.
"These commodities, technology or software were exported from the United States in accordance with Export Administration Regulations. Diversion contrary to U.S. law prohibited."

Raytheon Aircraft

Beech
Hawker



Member of GAMA
General Aviation
GAMA Manufacturers Association

SECTION IV

NORMAL PROCEDURES

TABLE OF CONTENTS

<i>SUBJECT</i>	<i>PAGE</i>
Airspeeds for Safe Operation	4-3
Preflight Inspection	4-3
Before Starting	4-6
External Power	4-7
Starting Engine Using Auxiliary Power Unit	4-8
Starting	4-8
After Starting and Taxi	4-10
Before Takeoff	4-10
Takeoff	4-12
Climb	4-12
Cruise	4-12
Leaning Using the Exhaust Gas Temperature Indicator (EGT)	4-13
Descent	4-14
Before Landing	4-14
Balked Landing	4-15
After Landing	4-15
Shutdown	4-15
Environmental Systems	4-16
Oxygen System	4-16
Preflight	4-16
Oxygen Duration	4-17
Oxygen Duration Chart	4-17
In Flight	4-18
After Using	4-18

TABLE OF CONTENTS (Continued)

<i>SUBJECT</i>	<i>PAGE</i>
Heating and Ventilation	4-18
Cold Weather Operation	4-19
Icing Conditions	4-20
Engine Break-in Information	4-20

All airspeeds quoted in this section are indicated airspeeds (IAS)

AIRSPEEDS FOR SAFE OPERATION

Take-off

Lift-off 71 kts/82 mph
50 Ft. 77 kts/89 mph

Maximum Climb

Best Rate (V_y) 96 kts/110 mph
Best Angle (V_x) 77 kts/89 mph

Cruise Climb 107 kts/123 mph

Maximum Turbulent Air

Penetration 134 kts/154 mph
Balked Landing 70 kts/81 mph
Landing Approach 70 kts/81 mph
Maximum Demonstrated
Crosswind 17 kts/20mph

PREFLIGHT INSPECTION


Emergency Locator Transmitter - ARMED
Location may vary with individual airplanes

1. CABIN:

- a. Parking Brake - SET
- b. Control Lock - REMOVE
- c. All Switches - OFF

2. RIGHT FUSELAGE:

- a. Baggage Compartment Door - SECURE
- b. Static Pressure Button - UNOBSTRUCTED

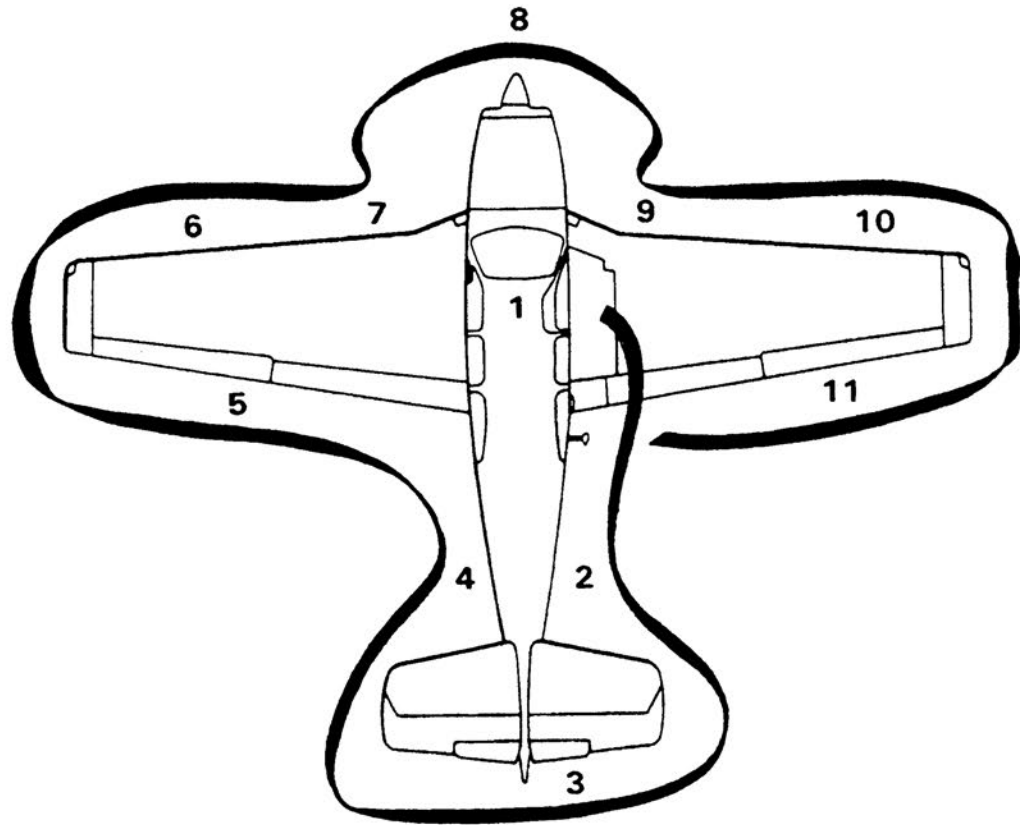

3. EMPENNAGE:

- a. Control Surfaces - CHECK
- b. Tie Down - REMOVE
- c. Position Light - CHECK
- d. Cabin Air Intake - CHECK

4. LEFT FUSELAGE:

- a. Static Pressure Button - UNOBSTRUCTED
- b. All Antennas - CHECK

5. LEFT WING TRAILING EDGE:

- a. Flap - CHECK
- b. Aileron - CHECK
- c. Wing Tip - CHECK
- d. Position Light - CHECK

6. LEFT WING LEADING EDGE:

- a. Stall Warning - CHECK
- b. Pitot Tube - CHECK (Remove Cover)
- c. Fuel Tank - CHECK QUANTITY; Filler Cap - SECURE.
- d. Cabin Air Intake - CHECK
- e. Tie Down and Chocks - REMOVE

7. LEFT LANDING GEAR:

- a. Wheel Well Door, Tire and Strut - CHECK
- b. Fuel Vent - CHECK
- c. Fuel Sump - DRAIN
- d. Fuel Selector Valve Sump - DRAIN; Cover - SECURE

8. NOSE SECTION:

- a. Left Cowl Flap - CHECK
- b. Engine Oil - CHECK (see Servicing, Section 8), Cap and Dipstick - SECURE
- c. Left Cowl - SECURE
- d. Propeller - CHECK, General Condition, Nicks, etc.
- e. Wheel Well Doors, Tire and Strut - CHECK
- f. Induction Air Intake - CLEAR
- g. Landing Lights - CHECK
- h. Engine - CHECK GENERAL CONDITION
- i. Right Cowl - SECURE
- j. Right Cowl Flap - CHECK
- k. Chocks - REMOVE

**Section IV
Normal Procedures**

**BEECHCRAFT Bonanza
V35, V35A & V35B thru D-9947**

9. RIGHT LANDING GEAR:
 - a. Fuel Vent - CHECK
 - b. Fuel Sump - DRAIN
 - c. Wheel Well Door, Tire and Strut - CHECK

10. RIGHT WING LEADING EDGE:
 - a. Cabin Air Intake - CHECK
 - b. Tie Down and Chocks - REMOVE
 - c. Fuel Tank - CHECK QUANTITY; Filler Cap - SECURE

11. RIGHT WING TRAILING EDGE:
 - a. Position Light - CHECK
 - b. Wing Tip - CHECK
 - c. Aileron - CHECK
 - d. Flap - CHECK

CAUTION

NEVER TAXI IF ANY STRUT IS FLAT.

BEFORE STARTING

1. Seats - POSITION AND LOCK; Seat Backs - UPRIGHT
2. Seat Belts and Shoulder Harnesses - FASTEN
3. Parking Brake - SET
4. All Avionics - OFF
5. Circuit Breakers - IN
6. Landing Gear Handle - DOWN; Safety System - CHECK (If installed)
7. Flaps - UP
8. Cowl Flaps - OPEN
9. Light Switches - As required
10. Electric Elevator Trim Switch - OFF (If installed)

11. Fuel Selector Valve - CHECK OPERATION; SELECT TANK MORE NEARLY FULL
12. Battery and Alternator Switches - ON (If external power is used, turn Alternator Switch - OFF. See Section 7 and the precautions below)
13. Fuel Quantity Indicators - CHECK QUANTITY

WARNING

Do not take off if gages indicate in yellow arc or with less than 13 gallons in each tank.

EXTERNAL POWER

When using external power, it is very important that the following precautions be observed.

1. The airplane has a negative ground system. Exercise care to avoid reversed polarity. Be sure to connect the positive lead of the external power unit to the positive terminal of the airplane's external power receptacle and the negative lead to the negative terminal of the external power receptacle. A positive voltage must also be applied to the small guide pin.
2. To prevent arcing, make certain no power is being supplied when the connection is made.
3. Make certain that the battery switch is ON, all avionics and electrical switches OFF, and a battery is in the system before connecting an external power unit. This protects the voltage regulators and associated electrical equipment from voltage transients (power fluctuations).

STARTING ENGINE USING AUXILIARY POWER UNIT

1. Battery Switch - ON
2. Alternator, Electrical, and Avionics Equipment - OFF
3. Auxiliary Power Unit - CONNECT
4. Auxiliary Power Unit - SET OUTPUT (13.5 to 14.25 volts)
5. Auxiliary Power Unit - ON
6. Engine - START using normal procedures
7. Auxiliary Power Unit - OFF (after engine has been started)
8. Auxiliary Power Unit - DISCONNECT
9. Alternator Switch - ON

STARTING

CAUTION

Vernier-type engine controls should not be rotated clockwise after being advanced to the full forward position.

1. Mixture - FULL RICH
2. Propeller - HIGH RPM
3. Throttle - FULL OPEN

NOTE

If the engine is hot, and the ambient temperature is 90°F or above, place mixture control in IDLE CUT-OFF, switch auxiliary fuel pump to ON for 30 to 60 seconds, then OFF. Return mixture control to FULL RICH.

4. Auxiliary Fuel Pump - On until fuel flow peaks then OFF

5. Throttle - Approximately 1/4 inch open.
6. Magneto/Start Switch - START position; release to BOTH position when engine fires

CAUTION

Do not engage starter for more than 30 seconds in any 4-minute time period.

7. In Event of Overprime Condition:
 - a. Mixture - IDLE CUT-OFF
 - b. Throttle - OPEN
 - c. Magneto/Start Switch - START position
 - d. As engine fires, reduce throttle to IDLE and advance the mixture control to FULL RICH

NOTE

During hot starts, the Auxiliary Fuel Pump is turned on momentarily after starting to purge system, then turned off.

8. Throttle - 1000 to 1200 RPM
9. Oil Pressure - CHECK
10. External Power (if used) - DISCONNECT
11. Alternator Switch - ON; CHECK FOR CHARGING
12. All Engine Indicators - CHECK

CAUTION

The ammeter indication should be less than 25% of full charge at 1000 to 1200 rpm within two minutes, with no additional electrical equipment on. If not, turn off the battery and alternator switches and do not take off.

AFTER STARTING, AND TAXI

1. Brakes - RELEASE AND CHECK
2. Avionics Equipment - ON, AS REQUIRED
3. Lights - AS REQUIRED

CAUTION

Do not operate engine above 1200 RPM until oil temperature reaches 75°F (24°C).

BEFORE TAKEOFF

1. Parking Brake - SET
2. Seat Belts and Shoulder Harnesses - CHECK

NOTE

All reclining seats must be in the upright position during takeoff.

3. Avionics - CHECK
4. Engine Instruments - CHECK
5. Flight Instruments - CHECK AND SET

NOTE

To ensure adequate gyro pressure when operating two air-driven gyros during ground operation and/or holding prior to takeoff, maintain an engine speed of 700-800 rpm in order to hold a value in the green arc on the instrument pressure gage. With a requirement of three or more air-driven gyros, maintain an engine speed of 1200 rpm.

6. Ammeter - CHECK - for stabilized indication between 0 and 25% of full charge at 1000 to 1200 rpm.
7. Auxiliary Fuel Pump - CHECK OFF
8. Throttle - 1700 RPM
9. Propeller - EXERCISE to obtain approximately 300 to 400 rpm drop; return to high rpm
10. Magnetos - CHECK at 1700 rpm (variance between individual magnetos should not exceed 50 rpm, maximum drop not to exceed 150 rpm.)
11. Trim - SET
 - a. Aileron - NEUTRAL (if installed)
 - b. Elevator - 0° (3° nose up if only front seats are occupied)
12. Flaps - Check operation, then UP
13. Door and Windows - SECURE
14. Flight Controls - CHECK PROPER DIRECTION, FULL TRAVEL AND FREEDOM OF MOVEMENT
15. Mixture - FULL RICH (or as required by field elevation)
16. Brakes - RELEASED
17. Instruments - CHECK (Make final check of manifold pressure, fuel flow, and rpm at the start of the take-off run.)

TAKE-OFF

Take-Off Power Full Throttle, 2700 rpm

1. Power - SET TAKE-OFF POWER (Mixture - SET as required by field elevation)
2. Brakes - RELEASE THEN ACCELERATE to recommended speeds
3. Landing Gear - RETRACT (when positive rate of climb is established and insufficient runway remains for landing)
4. Airspeed - ESTABLISH DESIRED CLIMB SPEED (when clear of obstacles)

CLIMB

Maximum Continuous Full Throttle, 2700 rpm
Cruise Climb 25 in. Hg (or full throttle) 2500 rpm

1. Engine Temperatures - MONITOR
2. Power - SET AS DESIRED.
3. Mixture - SET FUEL FLOW

CRUISE

See Cruise Charts in PERFORMANCE Section.

1. Cowl Flaps - CLOSED
2. Power - SET
3. Mixture - SET FUEL FLOW

**LEANING USING THE EXHAUST GAS
TEMPERATURE INDICATOR (EGT)**

A thermocouple-type exhaust gas temperature (EGT) probe is mounted in the exhaust system. This probe is connected to an indicator on the instrument panel. The indicator is calibrated in degrees Fahrenheit. Use EGT system to lean the fuel/air mixture when cruising at 75% power or less in the following manner:

1. Lean the mixture and note the point on the indicator that the temperature peaks and starts to fall.
 - a. **CRUISE (LEAN) MIXTURE** - Increases the mixture until the EGT shows a drop of 25°F below peak on the rich side of peak.
 - b. **BEST POWER MIXTURE** - Increase the mixture until the EGT shows a drop of 100°F below peak on the rich side of peak.

CAUTION

Do not continue to lean mixture beyond that necessary to establish peak temperature.

2. Continuous operation is recommended at 25°F or more below peak EGT only on the rich side of peak.
3. Changes in altitude and power settings require the peak EGT to be rechecked and the mixture reset.

DESCENT

1. Altimeter - SET
2. Cowl Flaps - CLOSED
3. Power - AS REQUIRED (avoid prolonged idle settings and low cylinder head temperatures)
4. Mixture - ENRICH AS REQUIRED

BEFORE LANDING

1. Seat Belts and Shoulder Harnesses - SECURE

NOTE

All reclining seats must be in the upright position during landing.

2. Fuel Selector Valve - SELECT TANK MORE NEARLY FULL
3. Cowl Flaps - AS REQUIRED
4. Mixture - FULL RICH (or as required by field elevation)
5. Landing Gear - DOWN and CHECK. (Observe maximum extension speed)
6. Landing and Taxi Lights - AS REQUIRED
7. Flaps - DOWN (Observe maximum extension speed)
8. Airspeed - ESTABLISH LANDING APPROACH SPEED.
9. Propeller - HIGH RPM
10. Electric Elevator Trim Switch - OFF (If installed)

BALKED LANDING

1. Power - FULL THROTTLE, 2700 RPM
2. Airspeed - 70 kts/81 mph until clear of obstacles,
then trim to normal climb speed
3. Flaps - UP
4. Landing Gear - UP
5. Cowl Flaps - OPEN

AFTER LANDING

1. Landing and Taxi Lights - AS REQUIRED
2. Flaps - UP
3. Trim Tab - SET TO 0°
4. Cowl Flaps - OPEN

SHUTDOWN

1. Brakes - SET
2. Electrical and Radio Equipment - OFF
3. Propeller - HIGH RPM
4. Throttle - CLOSE
5. Mixture - IDLE CUT-OFF
6. Magneto/Start Switch - OFF, after engine stops
7. Battery and Alternator Switches - OFF
8. Control Lock - INSTALL, if conditions warrant.
9. Install wheel chocks and release brakes if the
airplane is to be left unattended.

ENVIRONMENTAL SYSTEMS

OXYGEN SYSTEM


PREFLIGHT

1. Check Oxygen Pressure Gage for pressure reading.
2. Determine percent of full system.
3. Multiply oxygen duration in minutes by percent of full bottle.

EXAMPLE:

People	5
Gage Pressure	1500 psig
Oxygen Available (from chart)	80%
Cylinder Capacity (full)	49 cu ft
Altitude (planned flight)	15,000 ft
Full Bottle Duration (from chart)	149 min
Duration (80% full)	119 min

**OXYGEN AVAILABLE WITH
PARTIALLY FULL BOTTLE**

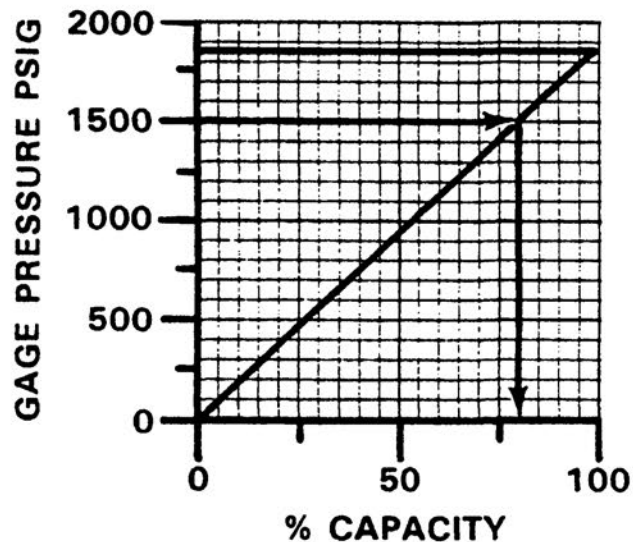

OXYGEN DURATION

The recommended masks are provided with the system. They are designed to be adjustable to fit the average person, with minimum leakage of oxygen.

CAUTION

Since 90% of the system efficiency is determined by the fit of the oxygen mask, make certain the masks fit properly and are in good condition.

OXYGEN DURATION CHART (Full Bottle)

Duration in minutes at the following altitudes:

Bottle Capacity	Persons Using	12,500 FT	15,000 FT	20,000 FT
49 cu ft	1	1014	746	507
	2	507	373	253
	3	338	248	169
	4	253	186	126
	5	202	149	101
	6	169	124	84

WARNING

NO SMOKING when using oxygen.

IN FLIGHT

The use of oxygen is recommended to be in accordance with current FAR operating rules.

1. Oxygen Control Valve - OPEN SLOWLY
2. Mask - INSERT FITTING, DON MASK (adjust mask for proper fit)
3. Oxygen - CHECK INDICATOR FOR FLOW

AFTER USING

1. Discontinue use by unplugging mask from outlet.

NOTE

Closing the control valve while in flight is not necessary due to automatic sealing of the outlet when the mask is unplugged. However, it is desirable to shut off supply when not in use.

2. Oxygen Control Valve - CLOSED (may be accomplished during shut-down)

HEATING AND VENTILATION

Refer to the SYSTEMS DESCRIPTION Section for operation of heating and ventilation controls.

COLD WEATHER OPERATION

PREFLIGHT INSPECTION

All accumulations of ice, snow and frost must be removed from the wings, tail, control surfaces and hinges, propeller, windshield, pitot tube, static ports, antennas, fuel cell filler caps, crankcase vents, and fuel vents. If such accumulations are not removed completely, the airplane shall not be flown. The deposits will not blow off in flight. While an adverse weight factor is clearly involved in the case of heavy deposits, it is less obvious that even slight accumulations will disturb or completely destroy the designed aerodynamic properties of the airfoils.

The normal preflight procedures should then be completed, with particular attention given to check of flight controls for complete freedom of movement.

ENGINE

Use engine oil in accordance with Consumable Materials in the HANDLING, SERVICING AND MAINTENANCE Section.

WARNING

Ascertain that magneto switch and battery master switch are off before moving propeller by hand.

Always pull the propeller through by hand, opposite the direction of rotation, several times to clear the engine and "limber up" the cold, heavy oil before using the starter. This will also lessen the load on the battery if external power is not used.

Under very cold conditions, it may be necessary to preheat the engine prior to a start. Particular attention should be given to the oil cooler, engine sump and propeller hub to ensure proper preheat. A start with congealed oil in the system may produce an indication of normal pressure immediately after the start, but then the oil pressure may decrease when residual oil in the engine is pumped back with the congealed oil in the sump. If an engine heater capable of heating both the engine sump and cooler is not available, the oil should be drained while the engine is hot and stored in a warm area until the next flight.

If there is no oil pressure within the first 30 seconds of running, or if oil pressure drops after a few minutes of ground operation, shut down and check for broken oil lines, oil cooler leaks or the possibility of congealed oil.

NOTE

It is advisable to use external power for starting in cold weather.

During warm-up, monitor engine temperatures closely, since it is quite possible to exceed the cylinder head temperature limit in trying to bring up the oil temperature. Exercise the propeller several times to remove cold oil from the pitch change mechanism. The propeller should also be cycled occasionally in flight.

During letdown and landing, give special attention to engine temperatures, since the engine will have a tendency toward overcooling.

ICING CONDITIONS

Flight in Icing Conditions Is Prohibited.

ENGINE BREAK-IN INFORMATION

See Systems Description section