


# Wind Components Calculator

See wind components for any airport.   ×

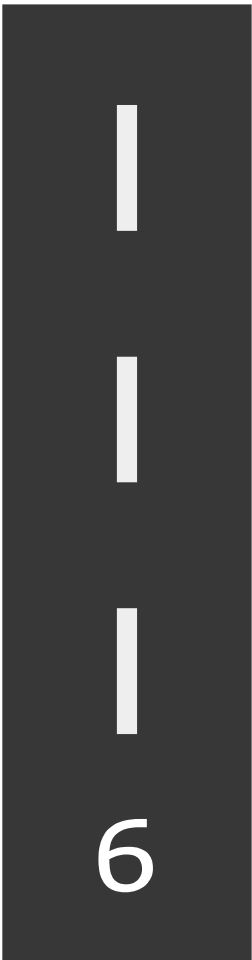

W : 5.00  
Wh : 0.87  
Wc : 4.92

Wind  
Headwind  
Crosswind

Runway Number :

Wind Direction :

Wind Speed :

Gust Speed (if any) :

☐ Apply gusts at 50%

Head Wind :

Cross Wind :