

# Wind Components Calculator



W : 8.00  
Wh : 7.88  
Wc : 1.39

Wind  
Headwind  
Crosswind

Runway Number :

Wind Direction :

Wind Speed :

Gust Speed (if any) :

Apply gusts at 50%

Head Wind :

Cross Wind :

Copyright © 2025 E6BX. All rights reserved.

By visiting our site, you engage in our "service" and agree to be bound by the [terms and conditions](#) and the [privacy statement](#)<sup>new</sup>. Do not use this website as your only source of information. You, as pilot in command, are solely responsible for assuring correct data and proper loading of your aircraft prior to flight.

