

## MODEL 35 PARTS CATALOG

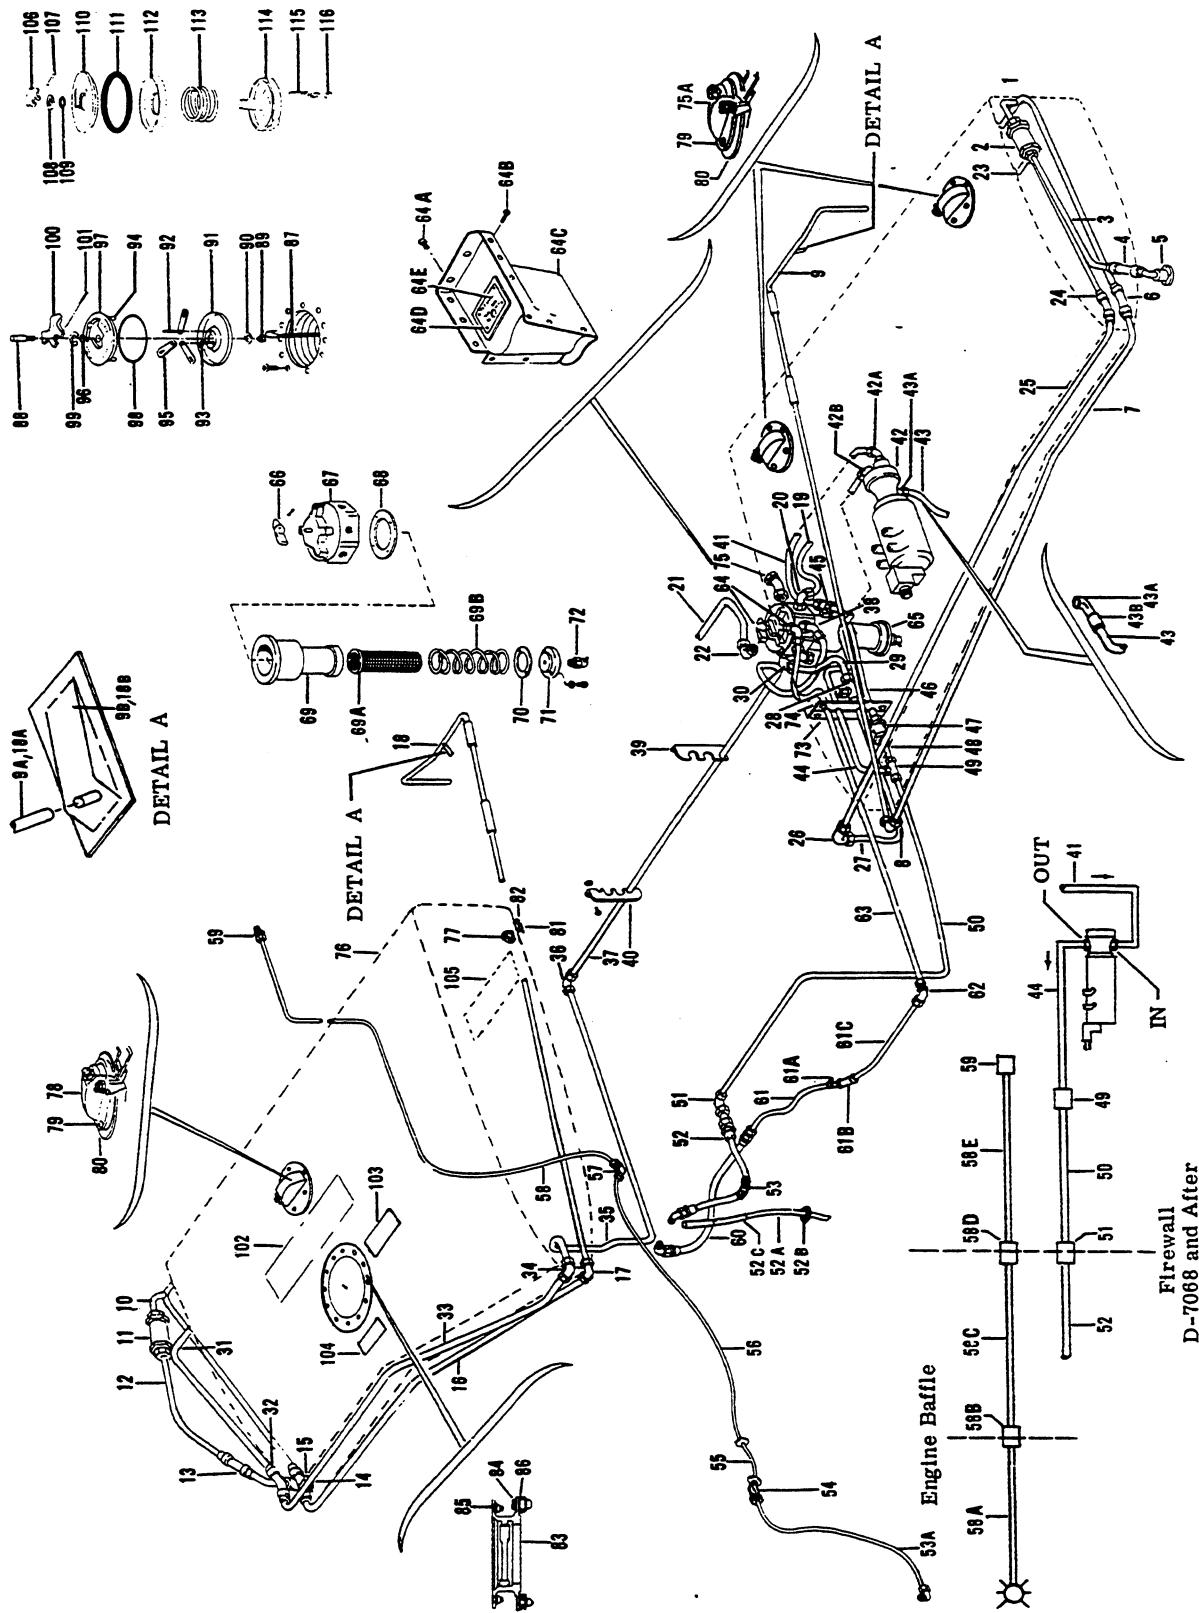


Figure 55. Fuel System (D-5331 and After)

Firewall  
D-7068 and After

## MODEL 35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
55 -	35-921154	SYSTEM INSTL,FUEL . . . . .								NP	1
	35-921154-87	SYSTEM INSTL,FUEL . . . . .								NP	2
	35-921155-45	SYSTEM INSTL,FUEL /50 GAL./ . . . . .								NP	35
	35-921155	SYSTEM INSTL,FUEL /80 GAL./ . . . . .								NP	35
	35-921155-117	SYSTEM INSTL,FUEL /50 GAL./ . . . . .								NP	36
	35-921155-109	SYSTEM INSTL,FUEL /80 GAL./ . . . . .								NP	36
- 1	35-921153-17	• WELD ASSY,VENT LH . . . . .								1	1
	35-921154-97	• WELD ASSY,VENT LH . . . . .								1	2
	35-921155-99	• WELD ASSY,VENT LH . . . . .								1	3
- 2	□366-00	• VALVE,CHECK /SUPERSEDES 1111-595272/. . . . .								1	5
	□MS21919DG17	• CLAMP,CHECK VALVE . . . . .								1	5
		/ATTACHING PARTS/									
	AN515-10R12	• SCREW . . . . .								1	
	□AN960-10	• WASHER. . . . .								1	
		-----									
- 3	35-921153-19	• TUBE ASSY,VENT . . . . .								1	1
	35-921154-93	• TUBE ASSY,VENT . . . . .								1	2
	35-921155-101	• TUBE ASSY,VENT . . . . .								1	3
- 4	106200H4-15	• HOSE. . . . .								1	5
- 5	□50-920077	• FLANGE ASSY,VENT. . . . .								1	5
- 6	106200H4-15	• HOSE. . . . .								1	5
- 7	35-921153-23	• TUBE ASSY,VENT LH . . . . .								1	1
	35-921154-69	• TUBE ASSY,VENT LH . . . . .								1	2
	35-921155-7	• TUBE ASSY,VENT LH . . . . .								1	17
	35-921155-9	• TUBE ASSY,VENT LH . . . . .								1	17
	106200H4-15	• HOSE,VENT TUBE COUPLING . . . . .								1	17
	35-921155-51	• TUBE ASSY,VENT LH . . . . .								1	18
		/USE WITH 80 GAL. SYSTEM/									
	35-921154-69	• TUBE ASSY,VENT LH /USE WITH 50 GAL. SYSTEM/ . . . . .								1	3
- 8	□AN821-40	• ELBOW . . . . .								1	5
	□35-921154-53	• TUBE ASSY,VENT LH . . . . .								1	10
- 9	□35-921155-127	• TUBE ASSY,VENT LH . . . . .								1	11
- 9A	106200H6-27	• HOSE. . . . .								1	11
- 9B	□414-92022-5	• SCOOP,LH. . . . .								1	11
- 10	35-921153-18	• WELD ASSY,VENT RH . . . . .								1	1
	35-921154-98	• WELD ASSY,VENT RH . . . . .								1	2
	35-921155-100	• WELD ASSY,VENT RH . . . . .								1	3
- 11	□366-00	• VALVE,CHECK /SUPERSEDES 1111-595272/. . . . .								1	5
- 12	35-921153-19	• TUBE ASSY,VENT . . . . .								1	1
	35-921154-93	• TUBE ASSY,VENT . . . . .								1	2
	35-921155-101	• TUBE ASSY,VENT . . . . .								1	3
- 13	106200H4-15	• HOSE. . . . .								1	5
- 14	□50-920077	• FLANGE ASSY,VENT. . . . .								1	5
- 15	106200H4-15	• HOSE. . . . .								1	5
- 16	35-921153-25	• TUBE ASSY,VENT RH . . . . .								1	1
	35-921154-75	• TUBE ASSY,VENT RH . . . . .								1	2
	35-921155-8	• TUBE ASSY,VENT RH . . . . .								1	17
	35-921155-13	• TUBE ASSY,VENT RH . . . . .								1	17
	106200H4-15	• HOSE,VENT TUBE COUPLING . . . . .								1	17
	35-921155-55	• TUBE ASSY,VENT RH /USE WITH 80 GAL. SYSTEM/ . . . . .								1	18
	35-921154-75	• TUBE ASSY,VENT RH /USE WITH 50 GAL. SYSTEM/ . . . . .								1	3
- 17	□AN821-40	• ELBOW . . . . .								1	5
	□35-921154-54	• TUBE ASSY,VENT RH . . . . .								1	10
- 18	□35-921155-128	• TUBE ASSY,VENT RH . . . . .								1	11
- 18A	106200H6-27	• HOSE. . . . .								1	11
- 18B	□414-92022-3	• SCOOP,RH. . . . .								1	11
- 19	□35-921154-31	• TUBE ASSY,FUEL LH . . . . .								1	6
	35-921155-19	• TUBE ASSY,FUEL LH . . . . .								1	15
	35-921155-73	• TUBE ASSY,FUEL LH . . . . .								1	14
	35-921155-105	• TUBE ASSY,FUEL LH . . . . .								1	34
- 20	□AN833-6D	• ELBOW . . . . .								1	6,37
	□AN837-6D	• ELBOW . . . . .								1	15
	□MS29512-6	• GASKET. . . . .								1	5
	□AN924-6D	• NUT . . . . .								1	5
- 21	35-921154-35	• TUBE ASSY,FUEL RH . . . . .								1	6
	35-921155-21	• TUBE ASSY,FUEL RH . . . . .								1	15
	35-921155-71	• TUBE ASSY,FUEL RH . . . . .								1	37

## MODEL 35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
55 - 22	□AN833-6D		• ELBOW . . . . .							1	6
	□AN837-6D		• ELBOW . . . . .							1	15
	□AN815-6D		• UNION . . . . .							1	37
	□MS29512-6		• GASKET . . . . .							1	5
	□AN924-6D		• NUT . . . . .							1	5
- 23	35-921153-27		• TUBE, RETURN LH . . . . .							1	1
	35-921154-95		• TUBE, RETURN LH . . . . .							1	4
- 24	106200H4-15		• HOSE . . . . .							1	5
- 25	35-921153-21		• TUBE ASSY, RETURN LH . . . . .							1	1
	35-921154-71		• TUBE ASSY, RETURN LH . . . . .							1	2
	35-921155-5		• TUBE ASSY, RETURN LH . . . . .							1	17
	35-921155-11		• TUBE ASSY, RETURN LH . . . . .							1	17
	106200H4-15		• HOSE, RETURN TUBE COUPLING . . . . .							1	17
	35-921155-49		• TUBE ASSY, RETURN LH /USE WITH 80 GAL. SYSTEM/							1	18
	35-921154-71		• TUBE ASSY, RETURN LH /USE WITH 50 GAL. SYSTEM/							1	3
- 26	□AN821-4D		• ELBOW . . . . .							1	5
- 27	35-921154-23		• TUBE ASSY, RETURN LH . . . . .							1	5
- 28	□AN824-4D		• TEE . . . . .							1	38
	□AN815-4D		• UNION . . . . .							1	37
	AN820-4D		• CAP . . . . .							2	38
- 29	35-921154-63		• TUBE ASSY, RETURN LH . . . . .							1	6
	35-921155-17		• TUBE ASSY, RETURN LH . . . . .							1	15
	35-921155-75		• TUBE ASSY, RETURN LH . . . . .							1	37
- 30	□AN833-4D		• ELBOW . . . . .							2	5
	□MS29512-4		• GASKET . . . . .							2	5
	□AN924-4D		• NUT . . . . .							2	5
- 31	35-921153-27		• TUBE, RETURN RH . . . . .							1	1
	35-921154-95		• TUBE, RETURN RH . . . . .							1	4
- 32	106200H4-15		• HOSE . . . . .							1	5
- 33	35-921154-39		• TUBE ASSY, RETURN RH . . . . .							1	1
	35-921154-73		• TUBE ASSY, RETURN RH . . . . .							1	2
	35-921155-6		• TUBE ASSY, RETURN RH . . . . .							1	17
	35-921155-15		• TUBE ASSY, RETURN RH . . . . .							1	17
	106200H4-15		• HOSE, RETURN TUBE COUPLING . . . . .							1	17
	35-921155-53		• TUBE ASSY, RETURN RH /USE WITH 80 GAL. SYSTEM/							1	18
	35-921154-73		• TUBE ASSY, RETURN RH /USE WITH 50 GAL. SYSTEM/							1	3
- 34	□AN821-4D		• ELBOW . . . . .							1	5
- 35	35-921154-41		• TUBE ASSY, RETURN RH . . . . .							1	5
- 36	□AN821-4D		• ELBOW . . . . .							1	5
- 37	□35-921154-37		• TUBE ASSY, RETURN RH . . . . .							1	6
	35-921155-23		• TUBE ASSY, RETURN RH . . . . .							1	15
	35-921155-69		• TUBE ASSY, RETURN RH . . . . .							1	37
- 38	□AN837-4D		• ELBOW . . . . .							1	38
	□AN833-4D		• ELBOW . . . . .							1	37
	□MS29512-4		• GASKET . . . . .							1	5
	□AN924-4D		• NUT . . . . .							1	5
- 39	35-921154-11		• BRACKET, TUBE SUPPORT . . . . .							1	5
			/ATTACHING PARTS/								
	□AN515-8R10		• SCREW . . . . .							1	
	□AN960-8		• WASHER . . . . .							1	
- 40	35-921154-13		• BRACKET, TUBE SUPPORT . . . . .							1	5
			/ATTACHING PARTS/								
	AN530-10R7		• SCREW . . . . .							2	
	NAS395-21-1		• NUT . . . . .							2	
- 41	35-921154-65		• TUBE ASSY, FUEL . . . . .							1	8
	□35-921154-107		• TUBE ASSY, FUEL . . . . .							1	9
	35-921155-29		• TUBE ASSY, FUEL . . . . .							1	15
	35-921155-65		• TUBE ASSY, FUEL . . . . .							1	14
	35-921155-91		• TUBE ASSY, FUEL . . . . .							1	34
- 42	□4032A		• PUMP, FUEL BOOST . . . . .							1	33
			/SUPERSEDES 4020A1A & 4020A2A/								

NOTE THE FOLLOWING PARTS MUST BE USED WHEN  
 REPLACING 4020A1A OR 4020A2A FUEL BOOST PUMP  
 WITH 4032A BOOST PUMP. AN833-6D ELBOW 1 EA,  
 AN837-6D ELBOW 1 EA, AN924-6D NUT 1 EA,  
 MS29512-6 GASKET 2 EA,  
 35-921154-107 TUBE ASSY 1 EA.

## MODEL 35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
55 -	□4140-00-1		• PUMP, FUEL BOOST . . . . .							1	39
	□4140-00-39		• PUMP, FUEL BOOST . . . . .							1	36
	□AN74A3/M/		• BOLT . . . . .							4	33
	□AN4-4A/M/		• BOLT . . . . .							4	34
	□AN936B416		• WASHER . . . . .							4	
	□AN837-6D		-----*								
- 42A	6C5XD		• ELBOW . . . . .							1	33
	RA2000C6		• ELBOW . . . . .							1	34
- 42B	□AN833-6D		• ELBOW / ALTERNATE FOR 6C5XD/ . . . . .							1	34
	□MS29512-6		• ELBOW . . . . .							1	5
	□AN924-6D		• GASKET . . . . .							2	5
- 43	35-921154-49		• NUT . . . . .							2	5
	35-921155-95		• TUBE ASSY, BOOST PUMP DRAIN . . . . .							1	33
	□AN823-4		• TUBE ASSY, BOOST PUMP DRAIN . . . . .							1	34
- 43A	2140-53		• ELBOW . . . . .							1	33
- 43B	106200H4-12		• ELBOW . . . . .							1	34
- 44	35-921154-19		• TUBE ASSY, CHECK / SUPERSEDES 1111-595273/ . . . . .							1	33
	35-921155-93		• TUBE ASSY, FUEL . . . . .							1	33
- 45	AN834-6D		• TUBE ASSY, FUEL . . . . .							1	34
	□MS29512-6		• TEE . . . . .							1	33
	□AN924-6D		• GASKET . . . . .							1	33
- 46	35-921154-17		• NUT . . . . .							1	33
	35-921155-31		• TUBE ASSY, FUEL . . . . .							1	6
	35-921155-67		• TUBE ASSY, FUEL . . . . .							1	15
- 47	□367-00		• TUBE ASSY, FUEL . . . . .							1	14
- 48	35-921154-27		• VALVE, CHECK / SUPERSEDES 1111-595273/ . . . . .							1	33
- 49	□AN824-6		• TUBE ASSY, FUEL . . . . .							1	33
	□AN815-6D		• TEE . . . . .							1	34
- 50	□35-921154-43		• UNION . . . . .							1	5
- 51	□AN833-6D		• TUBE ASSY, FUEL . . . . .							1	6
	AN833-6		• ELBOW . . . . .							1	3
	□AN960-916		• ELBOW . . . . .							1	5
	□AN924-6D		• WASHER . . . . .							1	6
	□AN924-6		• NUT . . . . .							1	3
- 52	□MS28741-6-0140		• HOSE ASSY, FUEL . . . . .							1	29
	MS28741-6-0162		• HOSE ASSY, FUEL . . . . .							1	36
- 52A	35-921154-103		• TUBE ASSY, FUEL PUMP DRAIN . . . . .							1	40
	35-921155-119		• TUBE ASSY, FUEL PUMP DRAIN . . . . .							1	36
- 52B	□51156		• BUTTON, PLUG . . . . .							1	2
	AN931-2-9		• GROMMET . . . . .							1	35
	□MS35489-7		• GROMMET . . . . .							1	36
- 52C	106200FR4-80		• HOSE . . . . .							1	36
- 53	35-921154-55		• LAGGING . . . . .							1	40
	35-921155-115		• LAGGING . . . . .							1	36
	NAS397-16		• CLAMP, LAGGING . . . . .							2	5
- 53A	□AN6270-2-13 1/2		• HOSE ASSY, PRESSURE . . . . .							1	29
- 54	AN837-2D		• ELBOW . . . . .							1	29
	□AN960-516		• WASHER . . . . .							2	29
	AN924-2D		• NUT . . . . .							1	29
- 55	106043ZA020		• TUBE, RUBBER . . . . .							1	29
	AN931-2-9		• GROMMET . . . . .							1	29
- 56	□35-921154-59		• TUBE ASSY, PRESSURE . . . . .							1	29
- 57	□AN833-2D		• ELBOW . . . . .							1	29
	□AN960-516		• WASHER . . . . .							2	29
	AN924-2D		• NUT . . . . .							1	29
- 58	35-921154-61		• TUBE ASSY, PRESSURE . . . . .							1	19
	35-921154-109		• TUBE ASSY, PRESSURE . . . . .							1	20
	35-921155-83		• TUBE ASSY, PRESSURE . . . . .							1	16
- 58A	MS28741-4-0160		• HOSE ASSY, FUEL PRESSURE . . . . .							1	36
- 58B	□AN837-4D		• ELBOW, BAFFLE . . . . .							1	36
	□AN960-716		• WASHER . . . . .							1	36
	□AN924-4		• NUT . . . . .							1	36
- 58C	□MS28741-4-0126		• HOSE ASSY, FUEL PRESSURE . . . . .							1	36
- 58D	□AN832-4		• ELBOW, FIREWALL . . . . .							1	36
	□AN960-716		• WASHER . . . . .							1	36
	□AN924-4		• NUT . . . . .							1	36
- 58E	35-921155-111		• TUBE ASSY, FUEL PRESSURE . . . . .							1	36

## MODEL 35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
55 - 59	□AN4022-1 22-627		. JET,FUEL PRESSURE . . . . .							1	19
- 60	□MS28741-4-0102 MS28741-4-0166		. RESTRICTOR,FUEL PRESSURE. . . . .							1	25
- 61	□33-920000-11		. HOSE ASSY,RETURN. . . . .							1	29
- 61A	□100696D-ZF020		. HOSE ASSY,RETURN. . . . .							1	36
- 61B	□366-00		. TUBE ASSY,RETURN. . . . .							1	5
- 61C	33-920000-13		. SPACER,RETURN TUBE. . . . .							1	5
- 62	□AN833-4D □AN833-4 □AN960-716 □AN924-4D		. VALVE,CHECK /SUPERSEDES 1111-595272/. . . . .							1	5
- 63	35-921154-21 35-921155-25 35-921155-63		. TUBE ASSY,RETURN. . . . .							1	6
- 64	□AN833-4D □MS29512-4 □AN924-4D □35-924256-1 35-924256-23 35-924256-25		. WASHER. . . . .							1	5
			. NUT . . . . .							1	5
			. TUBE ASSY,RETURN. . . . .							1	37
			. ELBOW . . . . .							1	5
			. ELBOW . . . . .							1	3
			. GASKET. . . . .							1	5
			. NUT . . . . .							1	5
			. COVER ASSY,FUEL SELECTOR VALVE. . . . .							1	1
			. COVER ASSY,FUEL SELECTOR VALVE. . . . .							1	2
			. COVER ASSY,FUEL SELECTOR VALVE. . . . .							1	2
			/USED WITH AUXILIARY FUEL CELL INSTL/								
			. COVER ASSY,FUEL SELECTOR VALVE. . . . .							1	35
			/USED WITH 35-921155-45/								
			. COVER ASSY,FUEL SELECTOR VALVE. . . . .							1	35
			/USED WITH 35-921155/								
			. PARTITION ASSY /USE WITH 40 GAL. TANKS/ . . .							1	36
			. PARTITION ASSY /USE WITH 25 GAL. TANKS/ . . .							1	36
			/ATTACHING PARTS/								
- 64A	□NAS384-6-12P		. SCREW . . . . .							2	
- 64B	□NAS384-6-8P		. SCREW . . . . .							8	
	□NAS391-6		. WASHER. . . . .							10	
- 64C	35-924256-3 35-534421-7 35-924256-7 35-924256-9		. COVER,FUEL SELECTOR VALVE . . . . .							1	29
			. COVER,FUEL SELECTOR VALVE . . . . .							1	36
			. PLACARD ASSY,FUEL SELECTOR VALVE COVER. . .							1	1
			. PLACARD ASSY,FUEL SELECTOR VALVE COVER. . .							1	1
			/USED WITH AUXILIARY FUEL CELLS/								
			. PLACARD ASSY,FUEL SELECTOR VALVE COVER. . .							1	2
			. PLACARD ASSY,FUEL SELECTOR VALVE COVER. . .							1	2
			/USED WITH AUXILIARY FUEL CELLS/								
			. PLACARD ASSY /USE WITH 39 GAL. TANKS/ . . .							1	35
			. PLACARD ASSY /USE WITH 25 GAL. TANKS/ . . .							1	35
			. PLACARD ASSY /USE WITH 25 GAL. TANKS/ . . .							1	36
			/USE WITH 40 GAL. TANKS/								
			. PLACARD ASSY,FUEL SELECTOR VALVE COVER. . .							1	36
			/USE WITH 25 GAL. TANKS/								
			. PLACARD ASSY,FUEL SELECTOR VALVE COVER. . .							1	36
- 64D	35-924256-5		. . . PLATE,FUEL SELECTOR VALVE COVER . . . . .							1	5
- 64E	□35-924262		. . . PLACARD,FUEL SELECTOR VALVE INSTRUCTIONS. /USE WITH 25 GAL. TANKS/ /YELLOW/							1	7
	□35-924262-1		. . . PLACARD,FUEL SELECTOR VALVE INSTRUCTIONS. /USE WITH 25 GAL. TANKS/ /WHITE/							1	21
	35-924258		. . . PLACARD,FUEL SELECTOR VALVE INSTRUCTIONS. /USE WITH 20 GAL. TANKS/							1	1
	□35-924257		. . . PLACARD,FUEL SELECTOR VALVE INSTRUCTIONS. /USED WITH AUXILIARY FUEL CELLS/							1	1
	35-924263		. . . PLACARD,FUEL SELECTOR VALVE INSTRUCTIONS. /USED WITH AUXILIARY TANKS/ /YELLOW/							1	7
	□35-924263-1		. . . PLACARD,FUEL SELECTOR VALVE INSTRUCTIONS. /USED WITH AUXILIARY TANKS/ /WHITE/							1	21
	□35-924267		. . . PLACARD,FUEL SELECTOR VALVE INSTRUCTIONS. /USE WITH 39 GAL. TANKS/							1	35
	33-924001		. . . PLACARD,FUEL SELECTOR . . . . .							1	36
	35-924276		/USE WITH 40 GAL. TANKS/								
			. . . PLACARD,FUEL SELECTOR . . . . .							1	3
			/USE WITH 25 GAL. TANKS/								

## MODEL 35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
55 - 65	□35-921154-602		• VALVE ASSY,FUEL SELECTOR . . . . .	1	6
	35-921155-601		• VALVE ASSY,FUEL SELECTOR . . . . .	1	15
	35-921155-603		• VALVE ASSY,FUEL SELECTOR . . . . . /ATTACHING PARTS/	1	37
	□AN74-3/M/		• BOLT . . . . .	3	
	□AN9368416		• WASHER. . . . .	3	
- 66	□35-924255-1		• • HANDLE ASSY . . . . . /ATTACHING PARTS/	1	5
	□A905		• • PIN,CLEVIS. . . . .	1	
	□AN380-1-1		• • PIN,COTTER. . . . .	1	
- 67	□HE825-1		• • VALVE,FUEL SELECTOR /SUPERSEDES HE825/. . . . .	1	6
	HE733		• • VALVE,FUEL SELECTOR . . . . .	1	15
	HE833		• • VALVE,FUEL SELECTOR . . . . .	1	37
- 68	□50-920030-4		• • GASKET,FUEL STRAINER. . . . .	1	5
- 69	□45-920036-1		• • HOUSING,FUEL STRAINER . . . . . /ATTACHING PARTS/	1	5
	□AN500A10-8		• • SCREW . . . . .	4	
	AN935B10		• • WASHER. . . . .	4	
- 69A	□50-92C040-10		• • STRAINER ASSY . . . . .	1	5
- 69B	□111504ZT0324-3		• • SPRING. . . . .	1	5
- 70	□35-921181		• • GASKET,FUEL STRAINER. . . . .	1	5
- 71	□50-920057		• • PLATE,FUEL STRAINER . . . . . /ATTACHING PARTS/	1	5
	□AN500A10-12		• • SCREW . . . . .	2	
	□AN960-10L		• • WASHER. . . . .	2	
- 72	□CCA4850		• • VALVE,DRAIN . . . . .	1	5
- 73	35-921154-45		• • BLOCK,TUBE SUPPORT. . . . .	1	5
- 74	35-921154-47		• • BLOCK,TUBE SUPPORT. . . . . /ATTACHING PARTS/	1	5
	□AN515-8R8		• • SCREW . . . . .	4	
	□AN960-8		• • WASHER. . . . .	12	
	AN364-832		• • NUT . . . . .	4	
- 75	□AN837-6D		• • ELBOW . . . . .	1	6
	AN820-6D		• • CAP . . . . .	1	6
	□MS29512-6		• • GASKET. . . . .	1	6
	□AN924-6D		• • NUT . . . . .	1	6
	□35-921242-5		• • CELL,FUEL LH /39 OR 40 GAL. CAPACITY/. . . . .	1	3
	□35-921242-6		• • CELL,FUEL RH /39 OR 40 GAL. CAPACITY/. . . . .	1	3
- 75A	□35-380023		• • TRANSMITTER,FUEL QUANTITY INBD LH & RH. . . . . /39 GAL. TANKS/	2	32
	□95-380012-5		• • TRANSMITTER,FUEL QUANTITY INBD LH & RH. . . . . /SUPERSEDES 95-380012-1/ /39 OR 40 GAL. TANKS/	2	31
	□95-369010-3		• • TRANSMITTER,FUEL QUANTITY OUTBD LH. . . . . /39 GAL. TANKS/ /SUPERSEDES 5640276/	1	32
	□95-369010-4		• • TRANSMITTER,FUEL QUANTITY OUTBD RH. . . . . /39 GAL. TANKS/ /SUPERSEDES 5640275/	1	32
	□95-380012-7		• • TRANSMITTER,FUEL QUANTITY OUTBD LH & RH . . . . . /SUPERSEDES 95-380012-3/ /39 OR 40 GAL. TANKS/	2	31
	35-921220		CELL INSTL,WING FUEL LH /40 GAL. SYSTEM/. . . . .	NP	1
	35-921500-1		CELL INSTL,WING FUEL LH /50 GAL. SYSTEM/. . . . .	NP	4
	35-921220-1		CELL INSTL,WING FUEL RH /40 GAL. SYSTEM/. . . . .	NP	1
	35-921500-2		CELL INSTL,WING FUEL RH /50 GAL. SYSTEM/. . . . .	NP	4
	□35-921218-5		• CELL,WING FUEL LH /20 GAL./ . . . . .	1	1
- 76	□95-380027-1		• CELL,WING FUEL LH /25 GAL./ . . . . .	1	4

## MODEL 35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
55 -	□35-921218-6		• CELL,WING FUEL RH /20 GAL./ . . . . .	1	1
	□95-380027-2		• CELL,WING FUEL RH /25 GAL./ . . . . .	1	4
<p>NOTE WHEN THE 95-380027-1 LH OR 95-380027-2 RH CELLS ARE USED TO REPLACE ORIGINAL EQUIPMENT ON D-5752,D-5757 THRU D-5795,D-5797 THRU D-5820,D-5822 THRU D-5984 AND D-5903 THRU D-5906,THE FOLLOWING PARTS ARE REQUIRED.        50-110010-106 COVER 2 EA,50-110010-108 LH DOOR 1 EA,50-110010-109 RH DOOR 1 EA,50-110010-110 LH LINER 1 EA,50-110010-111 RH LINER 1 EA.</p>					
- 77	□45-921541		• STRAINER ASSY,WING FUEL . . . . .	2	5
- 78	□1517127		• TRANSMITTER . . . . .	2	1
	□50-920071		• TRANSMITTER . . . . .	2	30
	□5640556		• TRANSMITTER,LH. . . . .	1	31
	□5641801		• TRANSMITTER,RH. . . . .	1	31
	/ATTACHING PARTS/				
- 79	□AN502-10-6		• SCREW . . . . .	4	
- 79	□AN502-10-8		• SCREW . . . . .	1	
- 80	□35-921503		• GASKET,TRANSMITTER. . . . .	1	5
- 81	□CCA3400		• VALVE,DRAIN . . . . .	1	5
	□35-921532		/ATTACHING PARTS/		
- 82	□35-921533		• WASHER,FUEL CELL DRAIN. . . . .	1	
	□35-921533		• CLAMP,FUEL CELL DRAIN . . . . .	1	
- 83	□45-921544		• ADAPTER ASSY,FUEL FILLER CAP. . . . .	1	28
	□37826		• /USED WITH 20,25 OR 39 GAL. TANKS/		
	35-921249		• ADAPTER ASSY,FUEL FILLER CAP. . . . .	1	22
	35-921249-3		• /USED WITH 25 OR 39 GAL. TANKS/		
			• ADAPTER ASSY,FUEL FILLER CAP. . . . .	1	24
			• /USED WITH 25,39 OR 40 GAL. TANKS/		
			• ADAPTER ASSY,FUEL FILLER CAP. . . . .	1	26
			• /USED WITH 25 OR 40 GAL. TANKS/		
			/ATTACHING PARTS/		
- 84	□AN960-416L		• WASHER. . . . .	12	
- 85	□AN74-3/M/		• BOLT. . . . .	12	
- 85	□AN509-10R9		• SCREW . . . . .	12	
- 86	□35-921502		• GASKET. . . . .	1	5
	□416-85		• CAP ASSY,FUEL FILLER /REPLACES. . . . .	1	1
	□416-85-25		416-25-20 & 416-85-20/		
	FC153-100		• CAP ASSY,FUEL FILLER. . . . .	1	27
- 87	□416-61-6		• CAP ASSY,FUEL FILLER. . . . .	1	26
	□416-50		• CHAIN ASSY,FUEL TANK 6-INCH . . . . .	1	28
- 88	□416-54		• CAP ASSY,FUEL 3-INCH FILLER . . . . .	1	28
- 89	□AN310-4		• AXLE,FUEL TANK CAP. . . . .	1	28
- 90	□AN940-416		• NUT. . . . .	1	28
	AN380-2-2		• WASHER. . . . .	1	28
- 91	□416-56		• PIN,COTTER. . . . .	1	28
- 92	□416-60		• DISC,FUEL TANK CAP ANCHOR . . . . .	1	28
			/ATTACHING PARTS/		
- 93	□A1059-014-3		• PIN . . . . .	3	
- 94	□416-59		• WASHER,SPRING . . . . .	6	28
- 95	□416-55		• PIN,FUEL TANK CAP DRIVE . . . . .	3	28
- 96	□MS29513-10		• PAWL,FUEL TANK CAP. . . . .	3	28
- 97	416-52		• RING,FUEL TANK CAP O. . . . .	1	28
- 98	□MS29513-232		• BASE,FUEL TANK CAP. . . . .	1	28
- 99	□427-8		• RING,FUEL TANK CAP O. . . . .	1	28
-100	416-53		• PLATE,FUEL TANK CAP BEARING . . . . .	1	28
			• HANDLE,FUEL TANK CAP. . . . .	1	28
			/ATTACHING PARTS/		
-101	□AN122697		• PIN . . . . .	1	

## MODEL 35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
55 -	□35-921241-1		PLACARD, 91/96 GRADE FUEL /WHITE/. . . . .	2	6
-102	□35-921241-3		PLACARD, 91/96 GRADE FUEL /BLACK/. . . . .	2	6
	□35-921243-1		PLACARD, 100/130 GRADE FUEL /WHITE/. . . . .	2	12
	□35-921243-3		PLACARD, 100/130 GRADE FUEL /BLACK/. . . . .	2	12
	□35-921252-1		PLACARD, 100/130 GRADE FUEL 39 GAL. /WHITE/. .	2	13
	□35-921252-3		PLACARD, 100/130 GRADE FUEL 39 GAL. /BLACK/. .	2	13
	□35-921252-5		PLACARD, 100/130 GRADE FUEL 40 GAL. /WHITE/. .	2	36
	□35-921252-7		PLACARD, 100/130 GRADE FUEL 40 GAL. /BLACK/. .	2	36
	□35-921238-1		PLACARD, FUEL FILLER CAP 91/96 OCTANE /WHITE/. .	1	6
	□35-921238-3		PLACARD, FUEL FILLER CAP 91/96 OCTANE /BLACK/. .	1	6
-103	□95-921016-1		PLACARD, CAUTION, DO NOT INSERT /WHITE/. . . . .	2	12
	□95-921016-3		PLACARD, CAUTION, DO NOT INSERT /BLACK/. . . . .	2	12
-104	□95-921018-1		PLACARD, FUEL 39 GAL. /WHITE/. . . . .	2	12
	□95-921018-3		PLACARD, FUEL 39 GAL. /BLACK/. . . . .	2	12
-105	□35-924148		PLACARD, FUEL CELL SUMP DRAIN. . . . .	2	5
	□37810-1		CAP ASSY, FUEL FILLER. . . . .	1	23
-106	□C37656-41		HANDLE, FUEL TANK CAP. . . . .	1	23
-107	□37059		PIN, HANDLE. . . . .	1	23
-108	□37117		PLATE, FUEL TANK CAP BEARING. . . . .	1	23
-109	□MS9021-110		O RING, FUEL TANK CAP /SUPERSIDES 37615-110/	1	23
-110	37685-2		BASE, FUEL TANK CAP. . . . .	1	23
-111	□37617-339		O RING, FUEL TANK CAP. . . . .	1	23
-112	□37691		RETAINER, FUEL TANK CAP. . . . .	1	23
-113	□37693		SPRING, FUEL TANK CAP. . . . .	1	23
-114	□38038		LOCK, FUEL TANK CAP. . . . .	1	23
-115	38104		COUPLING, FUEL TANK CAP CHAIN. . . . .	1	23
-116	AN381-3-8		PIN, COTTER. . . . .	1	23

## CODE EFFECTIVITY

1	D-5331 THRU D-5725	2	D-5726 THRU D-6561
3	D-6562 AND AFTER	4	D-5726 AND AFTER
5	D-5331 AND AFTER	6	D-5331 THRU D-6561
7	D-5726 THRU D-6161	8	D-5331 THRU D-6107
9	D-6108 THRU D-6561	10	D-5331 THRU D-7828
11	D-7829 AND AFTER	12	D-6562 THRU D-6974
13	D-6975 THRU D-7309	14	D-6632, D-6874 THRU D-7067
15	D-6562 THRU D-6873, EXCEPT D-6632	16	D-6842 THRU D-7309
17	D-6562 THRU D-6654	18	D-6655 AND AFTER
19	D-5331 THRU D-6285	20	D-6286 THRU D-6841
21	D-6162 THRU D-6561	22	D-6746 THRU D-6974
23	D-6746 AND AFTER EXCEPT D-7310 THRU D-7319	24	D-6975 AND AFTER EXCEPT D-7310 THRU D-7319
25	D-6286 THRU D-7309	26	D-7310 THRU D-7319
27	D-5726 THRU D-6745	28	D-5331 THRU D-6745
29	D-5331 THRU D-7309	30	D-5726 THRU D-7079
31	D-7080 AND AFTER	32	D-6562 THRU D-7079
33	D-5331 THRU D-7067	34	D-7068 AND AFTER
35	D-6562 THRU D-7309	36	D-7310 AND AFTER
37	D-6632, D-6874 AND AFTER	38	D-5331 THRU D-6873 EXCEPT D-6632
39	D-7068 THRU D-7309	40	D-5726 THRU D-7309

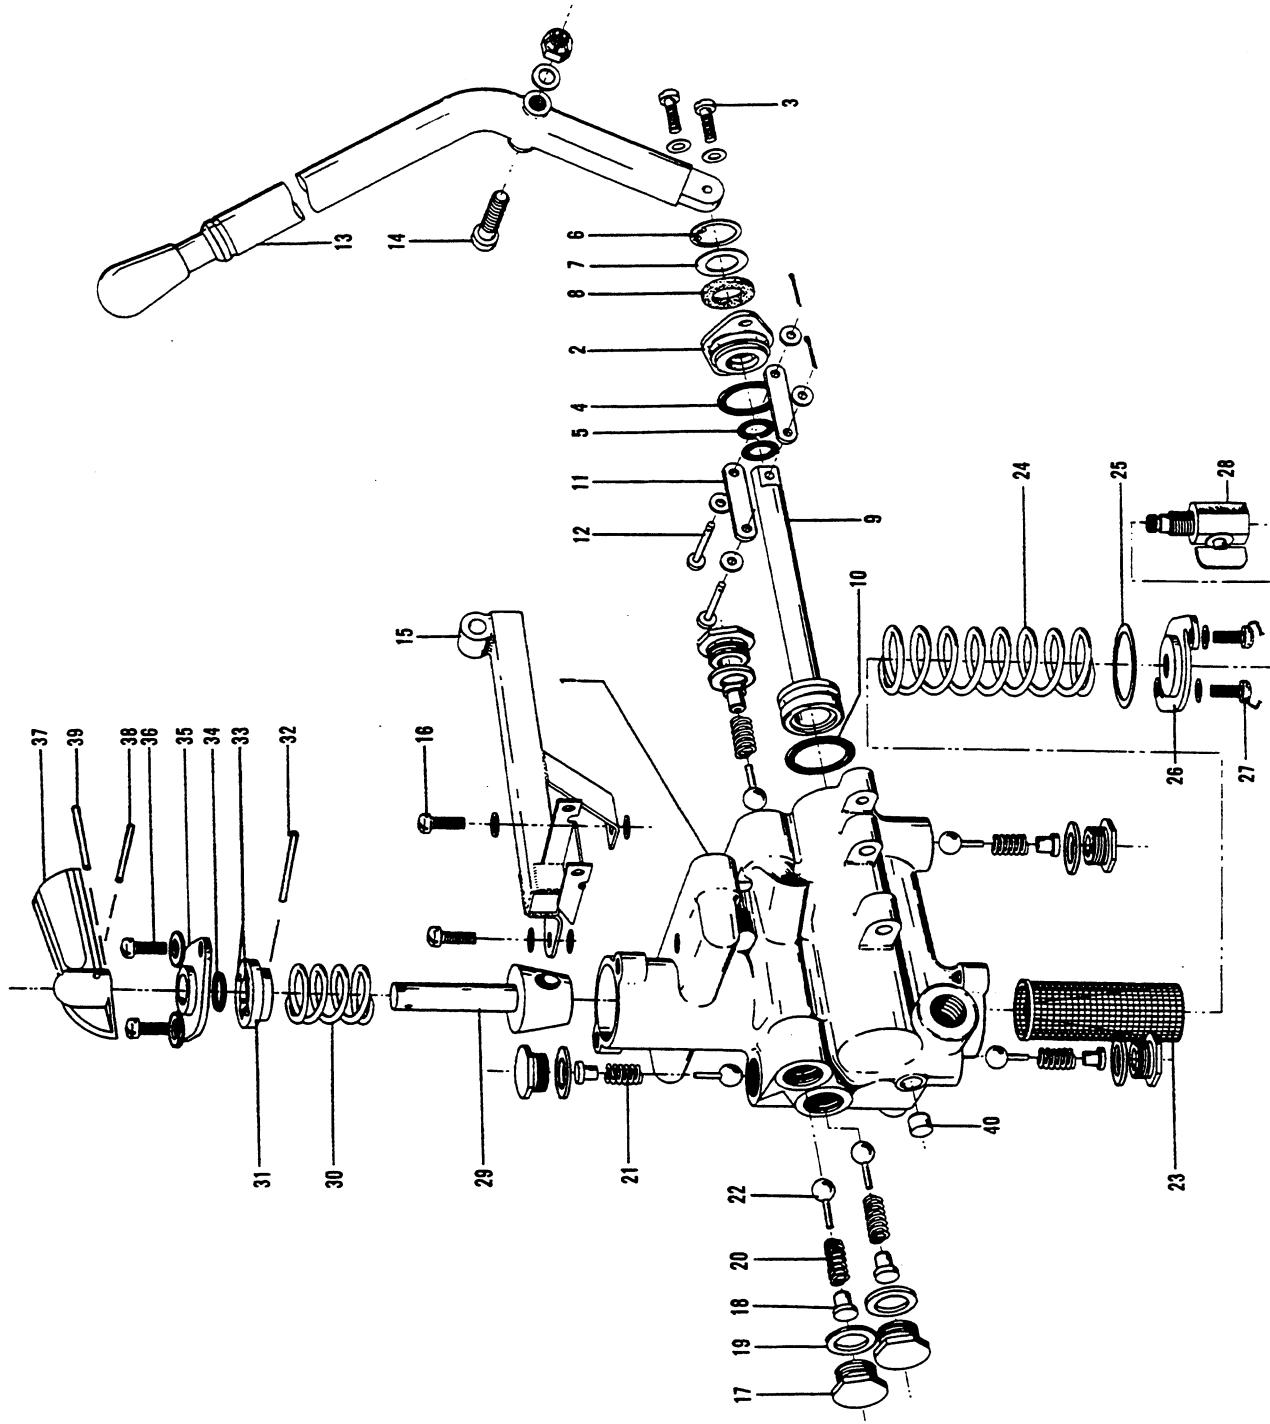


Figure 56. Fuel Unit (D-4866 thru D-5331)

## MODEL 35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.		DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
			1	2	3	4	5	6	7		
56	□35-924230-7		UNIT ASSY,FUEL /SEE FIG. 54 FOR NHA/ . . . . .							REF	1
- 1	35-924249		• HOUSING,FUEL UNIT . . . . .							1	1
- 2	35-924232-1		• HEAD,FUEL PUMP CYLINDER . . . . .							1	1
			/ATTACHING PARTS/								
- 3	AN500-10-10		• SCREW . . . . .							2	
	AN936-A10		• WASHER. . . . .							2	
			-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>								
- 4	□2-2045-2-15		• PACKING . . . . .							1	1
- 5	□2-2045-2-8		• PACKING . . . . .							2	1
- 6	□NAS50-77		• RING,SNAP . . . . .							1	1
- 7	□AN960-716L		• WASHER. . . . .							1	1
- 8	□102808-4B012		• WASHER. . . . .							1	1
- 9	□35-924236		• PISTON,EMERGENCY HAND PUMP . . . . .							1	1
- 10	□2-2045-2-15		• PACKING . . . . .							1	1
- 11	□35-924234		• LINK,PISTON ROD . . . . .							2	1
			/ATTACHING PARTS/								
- 12	AN392-11		• PIN . . . . .							2	
	□AN960-6L		• WASHER. . . . .							4	
	□AN380-2-1		• PIN,COTTER. . . . .							2	
			-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>								
- 13	□35-924245		• HANDLE ASSY,EMERGENCY HAND PUMP . . . . .							1	1
			/ATTACHING PARTS/								
- 14	□AN4-20		• BOLT . . . . .							1	
	□AN960-416		• WASHER. . . . .							1	
	□AN310-4		• NUT . . . . .							1	
	□AN380-2-2		• PIN . . . . .							1	
			-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>								
- 15	35-924239		• SUPPORT ASSY,FUEL UNIT HANDLE . . . . .							1	1
			/ATTACHING PARTS/								
- 16	AN500-10-10		• SCREW . . . . .							2	
	AN936-A10		• WASHER. . . . .							2	
	□AN960-10		• WASHER. . . . .							2	
			-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>								
- 17	□35-924096		• PLUG,CHECK VALVE RETAINER . . . . .							6	1
- 18	□35-924097		• GUIDE,CHECK VALVE . . . . .							6	1
- 19	□AN6290-6		• GASKET. . . . .							6	1
- 20	□111504Z0020-22		• SPRING. . . . .							5	1
- 21	□111504ZF0020-14		• SPRING. . . . .							1	1
- 22	□35-924237		• VALVE ASSY,FUEL UNIT . . . . .							6	1
- 23	□45-924091		• STRAINER ASSY,FUEL. . . . .							1	1
- 24	□111504ZT0324-3		• SPRING. . . . .							1	1
- 25	□35-921181		• GASKET,FUEL STRAINER PLATE. . . . .							1	1
- 26	□50-920057		• PLATE,FUEL STRAINER LOCK & SEAL . . . . .							1	1
			/ATTACHING PARTS/								
- 27	□AN500A10-10		• SCREW . . . . .							2	
	□AN960-10L		• WASHER. . . . .							2	
			-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>								
- 28	180B		• VALVE . . . . .							1	1
	□K9000S-1A		• VALVE /ALTERNATE FOR 18CB/. . . . .							1	1
	□35-924235-3		• VALVE ASSY,FUEL SELECTOR /SPARE ASSY/ . . . . .							1	1
- 29	35-924235		• VALVE ASSY,FUEL SELECTOR. . . . .							1	1
- 30	111504ZV0100-3		• SPRING. . . . .							1	1
- 31	35-924229		• RETAINER,DETENT BALL. . . . .							1	1
			/ATTACHING PARTS/								
- 32	52-022-094-0625		• PIN,ROLL. . . . .							1	
			-----* -----</td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>								
- 33	NO NUMBER		• BEARING,BALL /3/16 OD GRADE I/. . . . .							2	
- 34	□2-2045-2-7		• PACKING . . . . .							1	1

## MODEL 35 PARTS CATALOG

56

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
56 - 35	□35-924231	• CAP,FUEL SELECTOR /ATTACHING PARTS/							1	1
- 36	AN500-10-10	• SCREW	•	•	•	•	•	•	2	
	AN936-A10	• WASHER	•	•	•	•	•	•	2	
- 37	□35-924251-1	• HANDLE,FUEL UNIT /SUPERSEDES 35-924251/ /ATTACHING PARTS/							1	1
	MS20392-1-23	• PIN,/SPARE ASSY/	•	•	•	•	•	•	1	
	AN381-2-1	• PIN,COTTER /SPARE ASSY/	•	•	•	•	•	•	1	
- 38	52-022-094-0625	• PIN,ROLL	•	•	•	•	•	•	1	
- 39	□52-022-094-0437	• PIN,ROLL	•	•	•	•	•	•	1	
- 40	AN932-2	• PLUG	•	•	•	•	•	•	1	1

## CODE EFFECTIVITY

1 D-4866 THRU D-5330

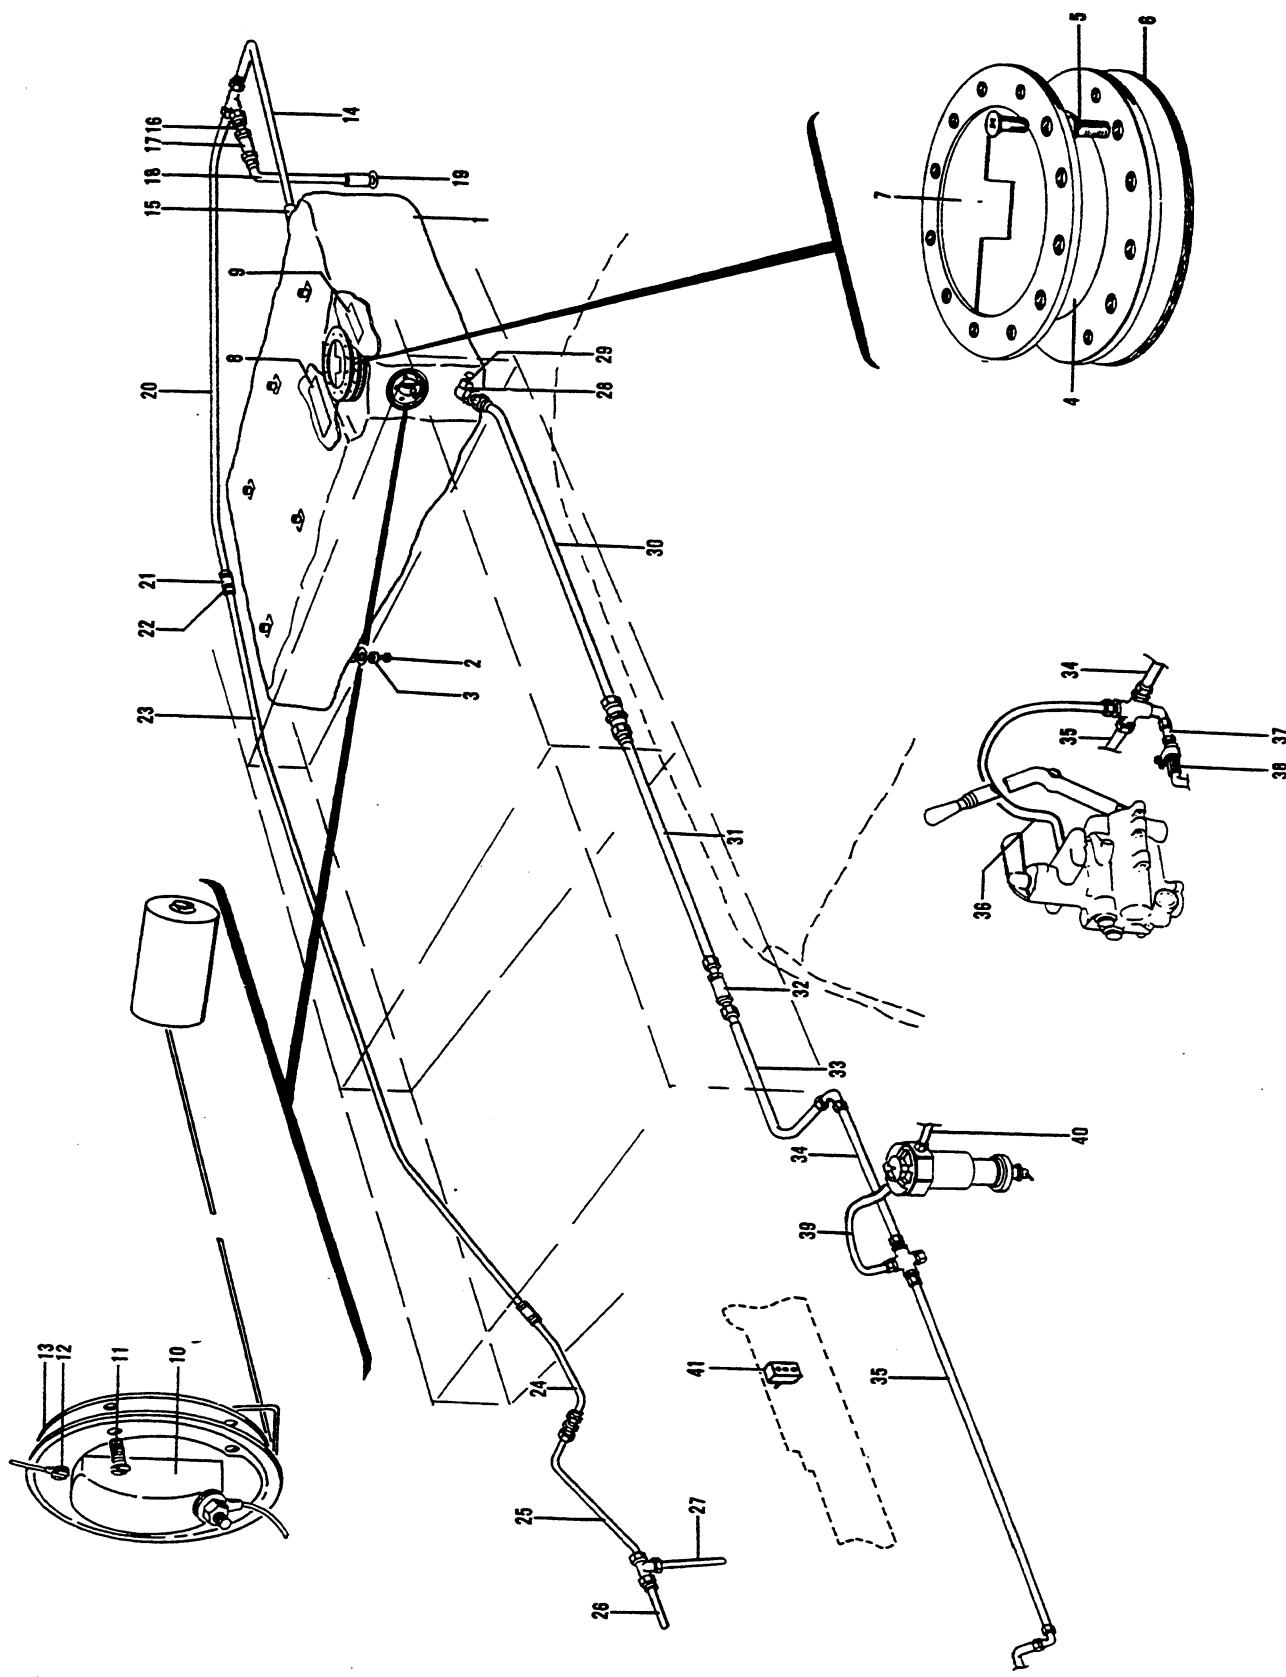


Figure 57. Wing Auxiliary Fuel Cells

## MODEL 35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
57	35-921228	CELL INSTL,AUXILIARY FUEL	• • • • • • •	NP	1
	35-921228-51	CELL INSTL,AUXILIARY FUEL	• • • • • • •	NP	2
- 1	35-921222-5	• CELL ASSY,LH /SUPERSEDES FCD-36589/	• • • • • • •	1	3
	35-921222-7	• CELL ASSY,LH	• • • • • • •	1	4
	35-921222-2	• CELL ASSY,RH	• • • • • • •	1	6
	FCD-33214	• • CELL,FUEL	• • • • • • •	1	6
	35-921222-6	• CELL ASSY,RH /SUPERSEDES FCD-36590/	• • • • • • •	1	7
	35-921222-8	• CELL ASSY,RH	• • • • • • •	1	8
- 2	□CCA-340Ü	• VALVE,DRAIN /ATTACHING PARTS/	• • • • • • •	2	5
- 3	□35-921533	• CLAMP	• • • • • • •	1	
	□35-921532	• WASHER	• • • • • • •	1	
<hr/>					
- 4	35-921221-3	• ADAPTER ASSY,FUEL FILLER CAP /ATTACHING PARTS/	• • • • • • •	2	5
- 5	□AN74-3	• BOLT	• • • • • • •	12	
	□AN960-416L	• WASHER	• • • • • • •	12	
	AN509-10R9	• SCREW	• • • • • • •	12	
<hr/>					
- 6	□35-921502	• GASKET,ADAPTER ASSY	• • • • • • •	2	5
	□416-85	• CAP ASSY /SUPERSEDES 416-25-10/	• • • • • • •	2	10
- 7	416-85	• CAP ASSY /SUPERSEDES 416-85-10/	• • • • • • •	2	11
- 8	□35-921241-1	• PLACARD,FUEL IDENTIFICATION /BLACK/	• • • • • • •	2	5
	□35-921241-3	• PLACARD,FUEL IDENTIFICATION /RED/	• • • • • • •	2	5
<hr/>					
- 9	□35-921229-1	• PLACARD,FUEL SERVICE /BLACK/	• • • • • • •	2	5
	□35-921229-3	• PLACARD,FUEL SERVICE /RED/	• • • • • • •	2	5
<hr/>					
- 10	□1518770	• TRANSMITTER,LH	• • • • • • •	1	5
	□1518771	• TRANSMITTER,RH /ATTACHING PARTS/	• • • • • • •	1	5
- 11	□AN502-10-6	• SCREW	• • • • • • •	4	
- 12	□AN502-10-8	• SCREW	• • • • • • •	1	
<hr/>					
- 13	□35-921503	• GASKET	• • • • • • •	1	5
- 14	35-921228-47	• TUBE ASSY,VENT LH	• • • • • • •	1	5
	35-921228-48	• TUBE ASSY,VENT RH /ATTACHING PARTS/	• • • • • • •	1	5
- 15	□AN737-22	• CLAMP	• • • • • • •	2	
<hr/>					
	106242-4-00300	• TUBING	• • • • • • •	2	5
	□AN824-4D	• TEE	• • • • • • •	2	5
- 16	35-921228-45	• TUBE ASSY,VENT	• • • • • • •	2	5
- 17	□1111-517700	• VALVE,CHECK	• • • • • • •	2	12
	□1111-595272	• VALVE,CHECK /SUPERSEDES 366-00/	• • • • • • •	2	13
- 18	35-921221-41	• TUBE ASSY,VENT	• • • • • • •	2	5
- 19	□50-920077	• FLANGE ASSY,FUEL VENT	• • • • • • •	2	5
<hr/>					
- 20	35-921228-43	• TUBE ASSY,VENT LH	• • • • • • •	1	5
	35-921228-44	• TUBE ASSY,VENT RH	• • • • • • •	1	5
- 21	106200H4-13	• HOSE /ORDER 1/4ID MIL6000X3-1/4/ /ATTACHING PARTS/	• • • • • • •	NP	5
- 22	□AN737-22	• CLAMP	• • • • • • •	12	
<hr/>					
- 23	35-921228-39	• TUBE,VENT LH	• • • • • • •	1	5
	35-921228-40	• TUBE,VENT RH	• • • • • • •	1	5
- 24	35-921228-37	• TUBE ASSY,VENT LH	• • • • • • •	1	5
	35-921228-38	• TUBE ASSY,VENT RH	• • • • • • •	1	5
	□AN815-4D	• UNION	• • • • • • •	2	5
- 25	35-921228-35	• TUBE ASSY,VENT	• • • • • • •	1	5
- 26	35-921228-33	• TUBE ASSY,VENT	• • • • • • •	1	5
	□AN824-4D	• TEE	• • • • • • •	1	5

## MODEL 35 PARTS CATALOG

FIG. & INDEX NO.	PART NO.	DESCRIPTION							UNITS PER ASSY	USABLE ON CODE
		1	2	3	4	5	6	7		
57 - 27	35-921228-49	• TUBE ASSY, VENT	•	•	•	•	•	•	1	5
- 28	35-921228-31	• STRAINER ASSY, FUEL LH	•	•	•	•	•	•	1	5
	35-921228-32	• STRAINER ASSY, FUEL RH /ATTACHING PARTS/	•	•	•	•	•	•	1	5
- 29	□35-921533	• CLAMP, FUEL STRAINER	•	•	•	•	•	•	1	
		-----*								
- 30	35-921228-13	• TUBE, FUEL LH	•	•	•	•	•	•	1	5
	35-921228-14	• TUBE, FUEL RH	•	•	•	•	•	•	1	5
- 31	35-951228-11	• TUBE, FUEL LH	•	•	•	•	•	•	1	5
	35-921228-12	• TUBE, FUEL RH	•	•	•	•	•	•	1	5
- 32	□1111-517702	• VALVE, CHECK	•	•	•	•	•	•	2	14
	□367-00	• VALVE, CHECK	•	•	•	•	•	•	2	15
- 33	□35-921228-9	• TUBE, FUEL LH	•	•	•	•	•	•	1	5
	□35-921228-10	• TUBE, FUEL RH	•	•	•	•	•	•	1	5
	□AN821-6D	• ELBOW	•	•	•	•	•	•	2	5
- 34	35-921228-1	• TUBE, FUEL LH	•	•	•	•	•	•	1	5
- 35	35-921228-5	• TUBE, FUEL RH	•	•	•	•	•	•	1	5
- 36	35-921228-3	• TUBE, FUEL	•	•	•	•	•	•	1	1
	□AN815-6	• UNION	•	•	•	•	•	•	1	1
	□AN6290-6	• GASKET	•	•	•	•	•	•	1	
	□AN822-6D	• ELBOW	•	•	•	•	•	•	1	5
	□AN816-6D	• NIPPLE	•	•	•	•	•	•	3	5
	AN918-2	• CROSS	•	•	•	•	•	•	1	5
- 37	35-921228-7	• TUBE, FUEL	•	•	•	•	•	•	1	5
	□AN816-6D	• NIPPLE	•	•	•	•	•	•	1	5
	AN910-2	• COUPLING	•	•	•	•	•	•	1	5
	AN912-1D	• REDUCER	•	•	•	•	•	•	1	5
	AN823-4D	• ELBOW	•	•	•	•	•	•	1	5
- 38	□K9000S-1A	• VALVE /SUPERSEDES 180B-1/	•	•	•	•	•	•	1	5
- 39	35-921228-53	• TUBE ASSY, FUEL	•	•	•	•	•	•	1	16
	35-921228-57	• TUBE ASSY, FUEL	•	•	•	•	•	•	1	17
- 40	35-921228-55	• TUBE ASSY, FUEL	•	•	•	•	•	•	1	2
	AN912-1D	• REDUCER	•	•	•	•	•	•	1	2
	35-522930	• PLACARD, FUEL STRAINER	•	•	•	•	•	•	1	5
	□35-361156-1	• PLACARD, FUSELAGE TO LH WING WIRE SPLICE	•	•	•	•	•	•	1	5
	□35-361157-1	• PLACARD, FUSELAGE TO RH WING WIRE SPLICE	•	•	•	•	•	•	1	5
	□35-324358	• PLACARD, LEFT PANEL	•	•	•	•	•	•	1	1
	35-324358-1	• PLACARD, LEFT PANEL	•	•	•	•	•	•	1	2
- 41	35-364202-9	• SWITCH, AUXILIARY FUEL INDICATOR	•	•	•	•	•	•	1	2
		/SEE FIG. 58 FOR NHA/								
	MS20365-632	• NUT	•	•	•	•	•	•	1	2

## CODE EFFECTIVITY

1 D-4866 THRU D-5330  
 3 D-4866 THRU D-6423  
 5 D-4866 THRU D-6561  
 7 D-4890 THRU D-6416  
 9 D-4890 THRU D-6561  
 11 D-5726 THRU D-6561  
 13 D-6035 THRU D-6561  
 15 D-6053 THRU D-6561  
 17 D-5463 THRU D-6561

## CODE EFFECTIVITY

2 D-5331 THRU D-6561  
 4 D-6424 THRU D-6561  
 6 D-4866 THRU D-4889  
 8 D-6417 THRU D-6561  
 10 D-5331 THRU D-6161  
 12 D-4866 THRU D-6034  
 14 D-4866 THRU D-6052  
 16 D-5331 THRU D-5462