



**RH EXHAUST STACK**

**LH EXHAUST STACK**

**F172 SERIAL F172-0001 THRU F17200804  
172 SERIAL 17249545 THRU 17256512  
P172 SERIAL P17257120 THRU P17257188**

Figure 131. Exhaust Stack Assembly