

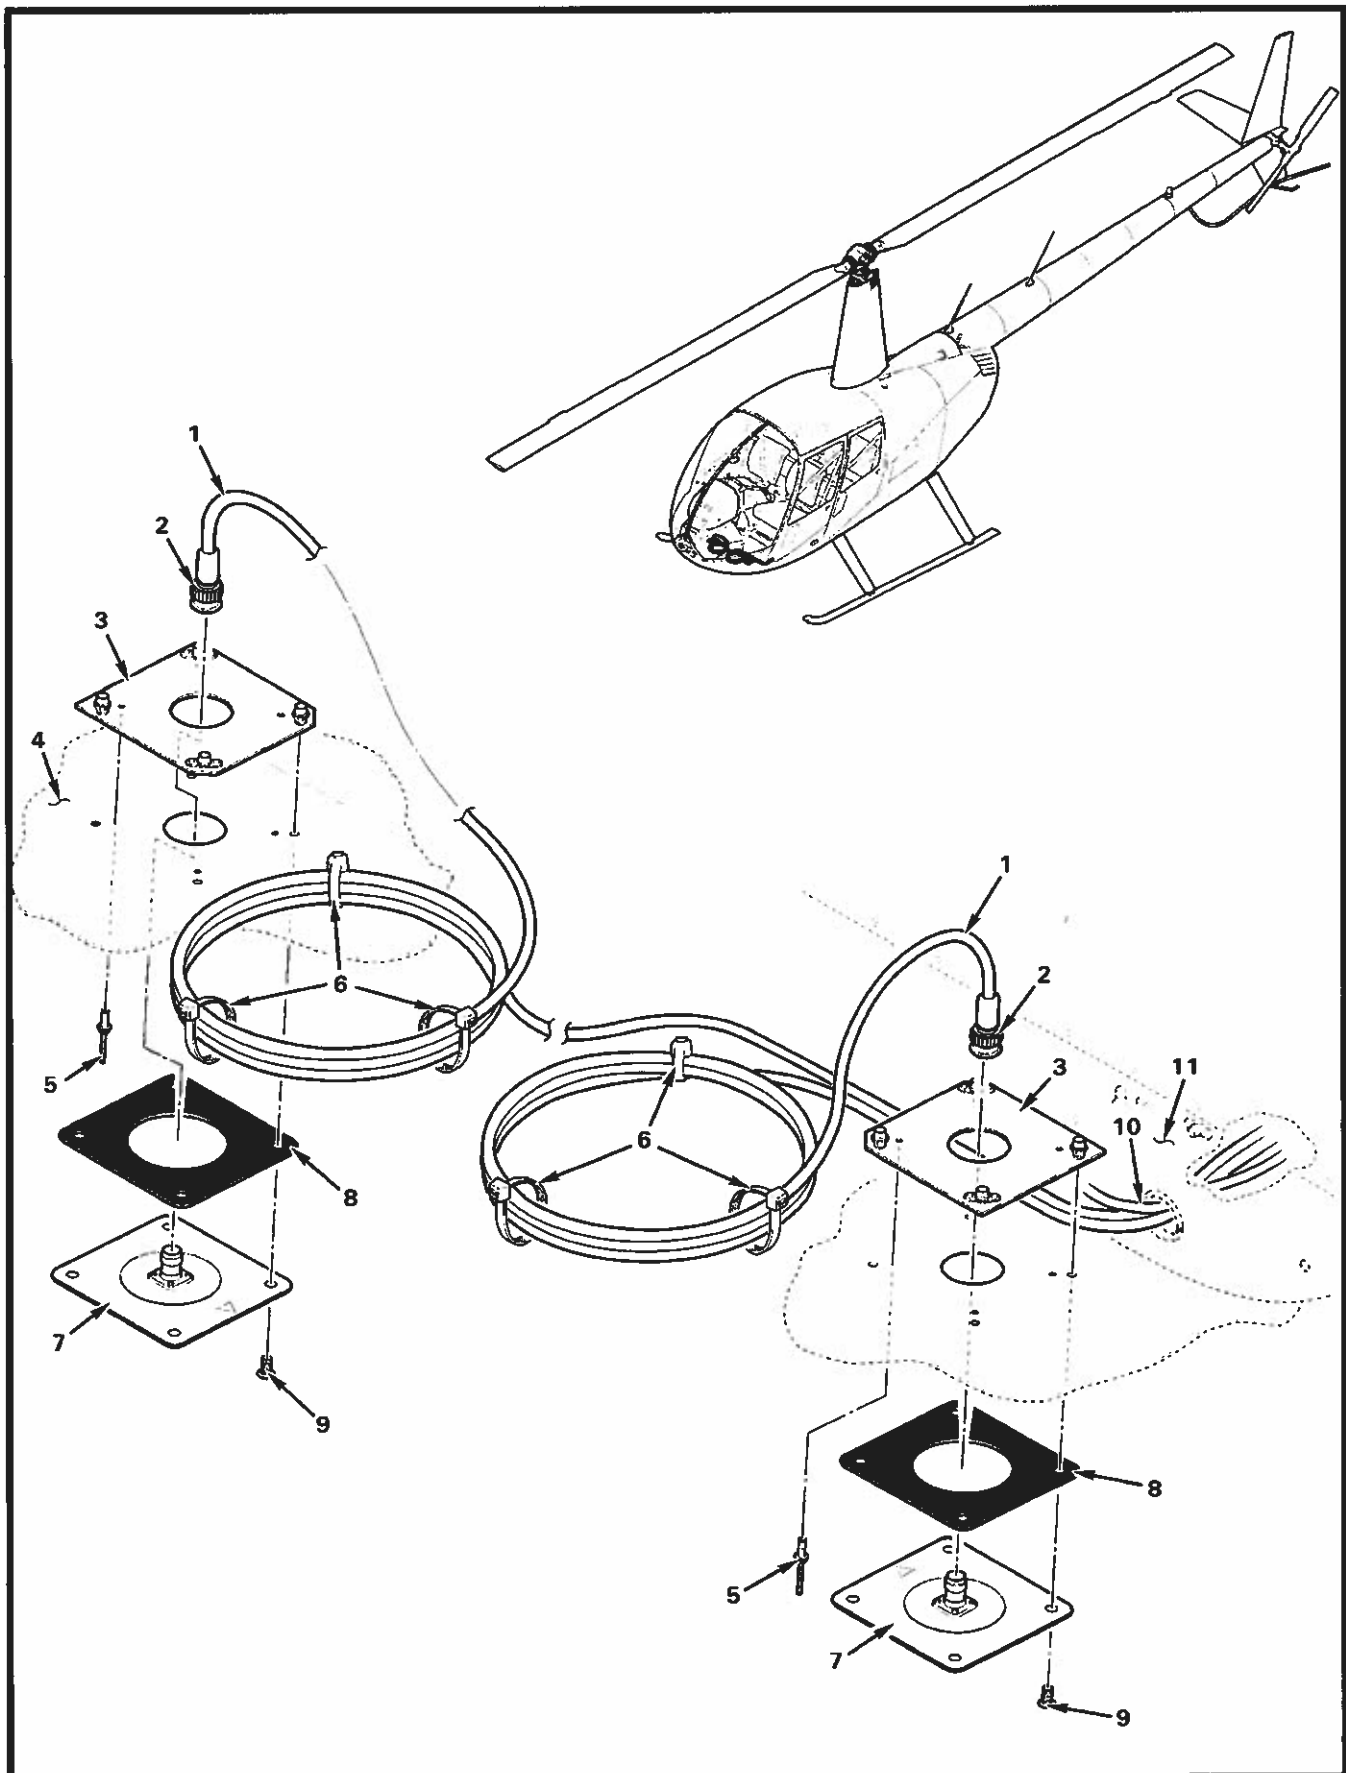


FIGURE AND INDEX NUMBER	PART NUMBER	DESCRIPTION	PARTS AVAIL	QTY PER ASSY
		RADAR ALTIMETER ANTENNAS		
6-17-1	—	Cable (to Radar Altimeter; do not alter length)	O	1
2	0129-0017-00	Connector (TNC)	O	2
3	B420-1	Plate Assembly	X	2
4	C272	Chin (Ref)		
5	NAS9302B-4-02	Rivet (or NAS1921B04S02)	X	8
6	MS3367-5-9	Ty-Rap	X	A/R
7	9-1203-115-00*	Antenna (Incl items 8 and 9)	O	2
8	—	Gasket	O	2
9	—	Screw (alternate part no. MS24694-S51)	O	8
10	—	Cable (wire no. 1329, to indicator; Ref)		
11	D230	Bulkhead (Ref)		
NOTES * Free Flight Systems part no.; contact manufacturer to replace component.				

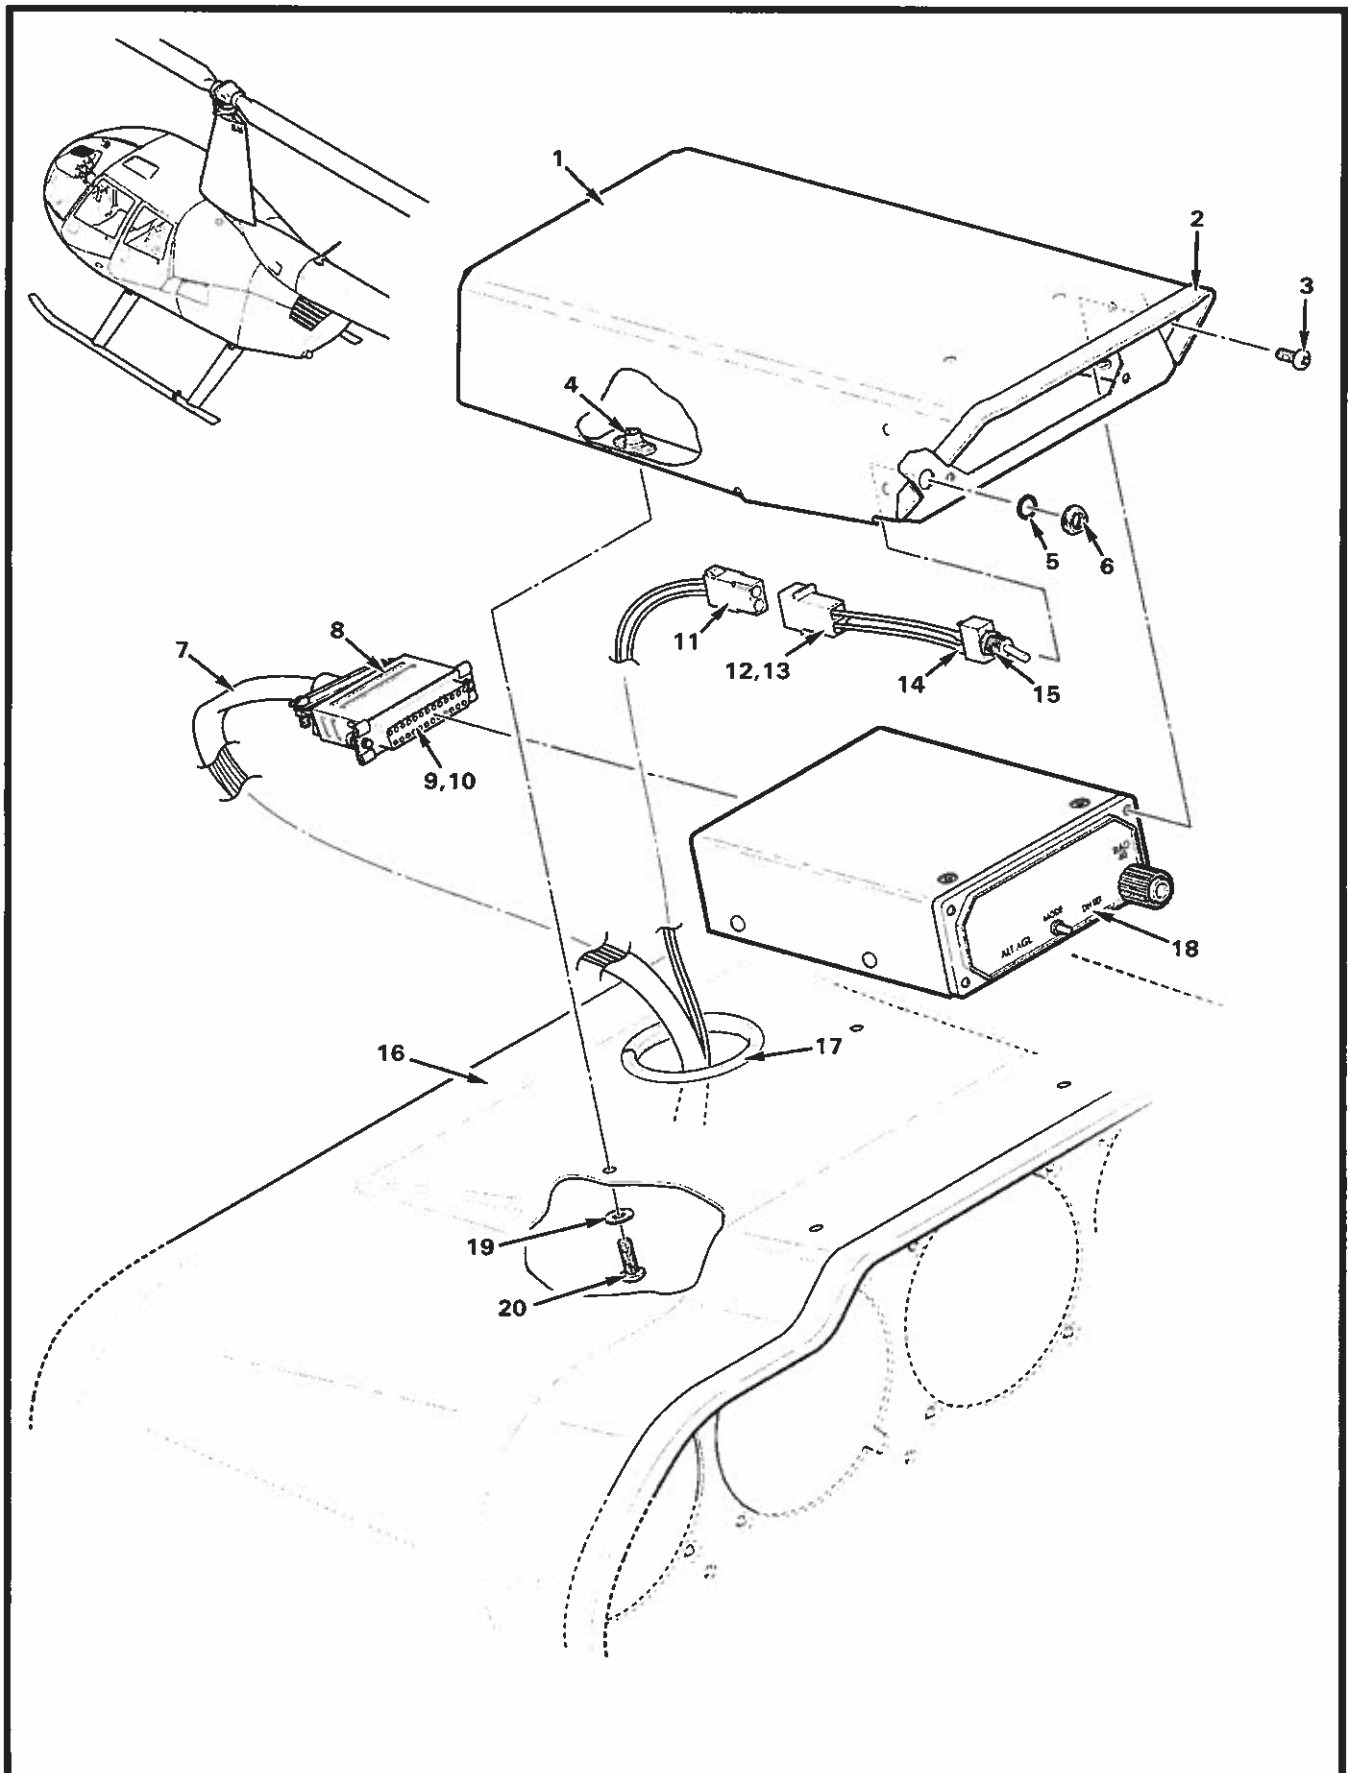


FIGURE AND INDEX NUMBER	PART NUMBER	DESCRIPTION	PARTS AVAIL	QTY PER ASSY
		RADAR ALTIMETER INDICATOR INSTALLATION		
95-33-1	B560-1	Enclosure Assembly (Incl items 2 and 3)	X	1
2	A226-11	Trim	X	A/R
3	9-2804-068-10*	Screw	O	4
4	MS21069L08	Nutplate (Ref)	X	4
5	B227-3	Lockwasher	X	1
6	B227-4	Dress Nut	X	1
7	B266-8	Sleeving	X	A/R
8	9-2190-188-20**	Hood	O	1
9	9-2190-188-10**	Connector	O	1
10	B158-2	Heat Shrink (around wires; not shown)	X	A/R
11	B263-13	Housing	X	1
	B263-2	Socket	X	2
12	B049-9	Wire Harness Assembly (Incl items 13 thru 15)	X	1
13	B263-12	Housing	X	1
	B263-1	Pin	X	2
14	B158-1	Heat Shrink	X	A/R
15	B300-1	Switch Assembly (Incl items 5 and 6)	X	1
16	B051-1	Console Assembly (Ref)		
17	NAS557-24A	Grommet	X	1
18	B422-1	Indicator Assembly (Incl item 3)	X	1
19	NAS1149FN832P	Washer	X	4
20	MS27039C0807	Screw	X	4
NOTES * Above console location. ** Free-Flight Systems part no.				

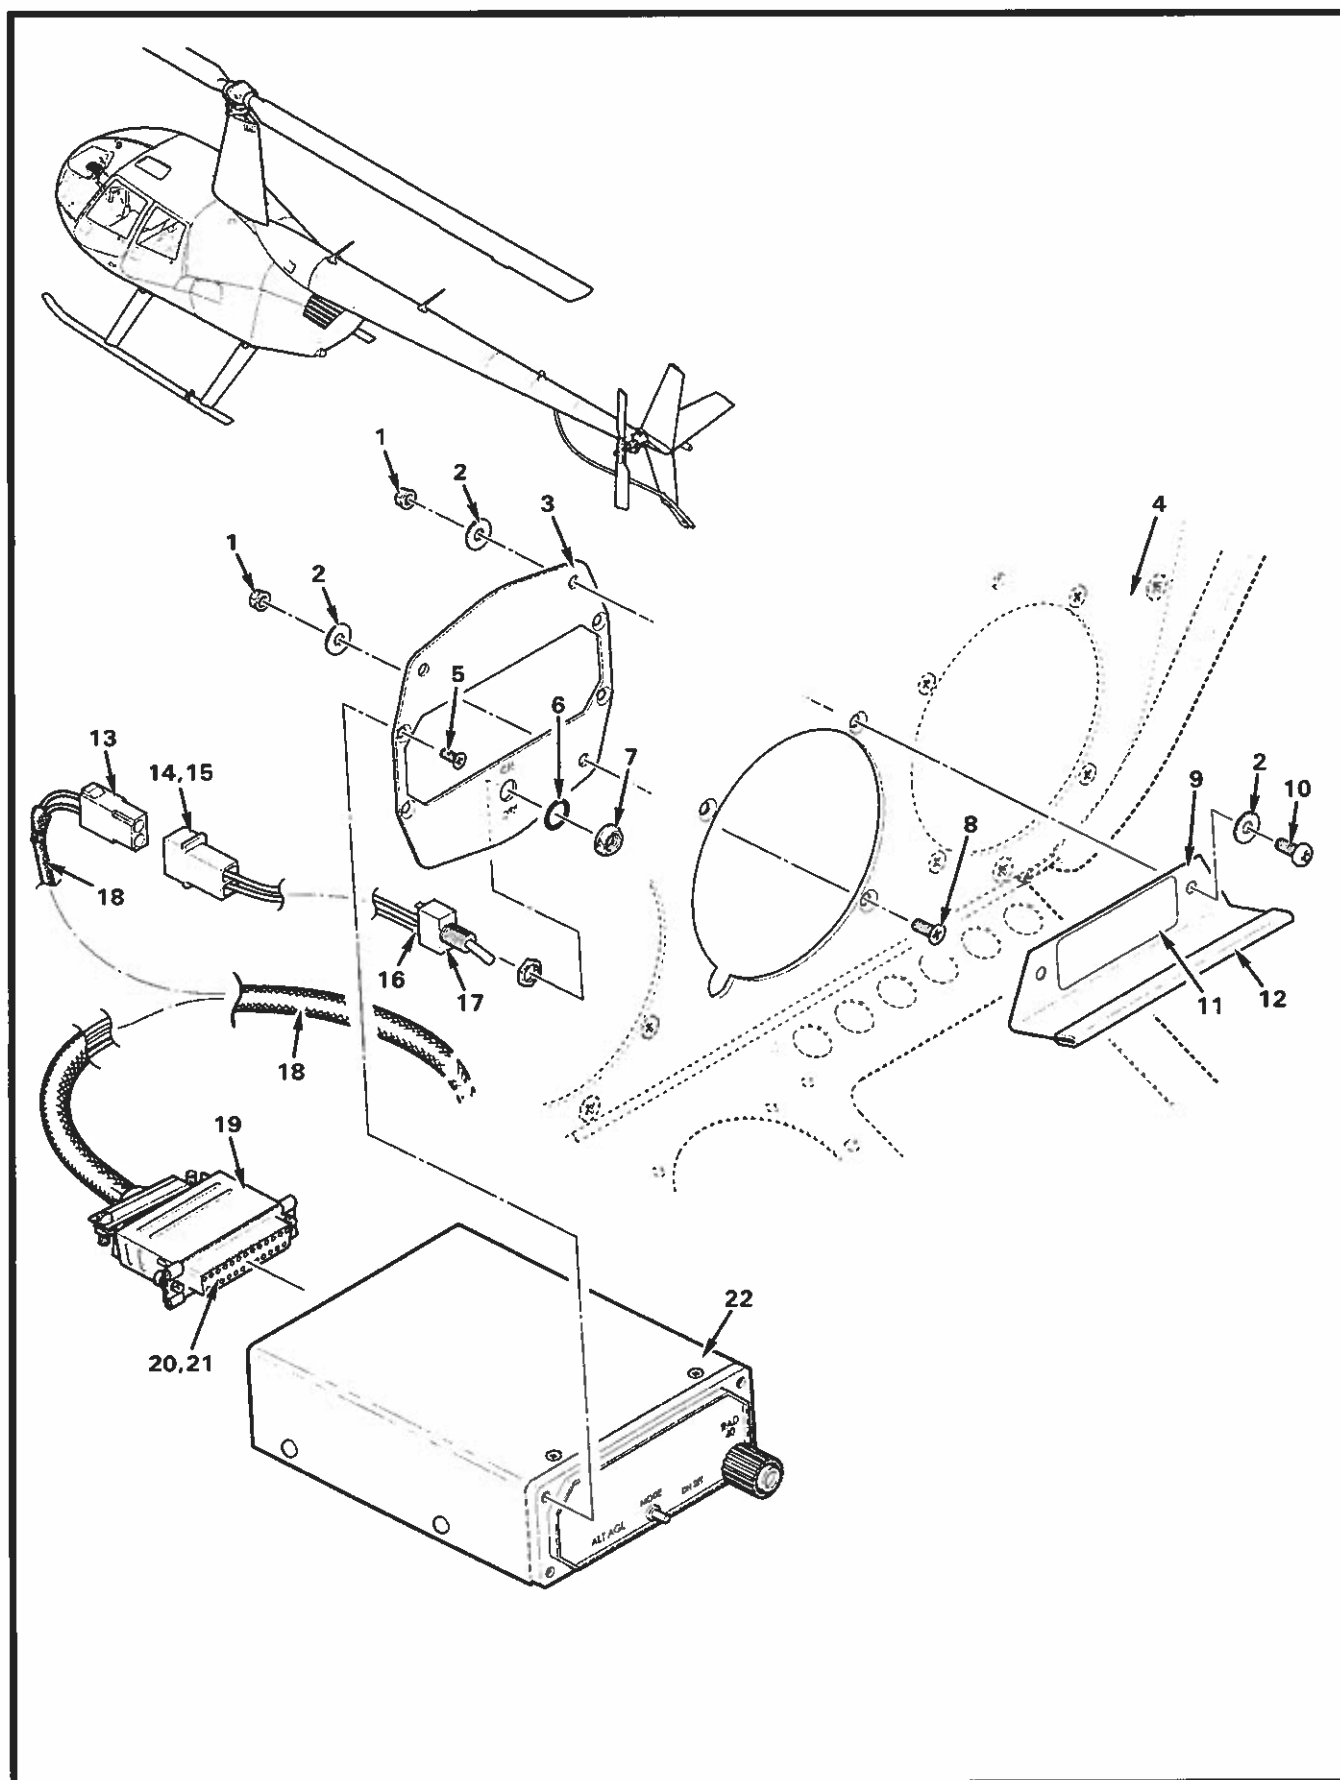


FIGURE AND INDEX NUMBER	PART NUMBER	DESCRIPTION	PARTS AVAIL	QTY PER ASSY
		RADAR ALTIMETER INDICATOR INSTALLATION		
95-35-1	MS21042L06	Nut	X	3
2	NAS1149FN632P	Washer	X	5
3	A590-4	Plate	X	1
4	B051	Console Assembly (Ref)		
5	9-2804-068-10*	Screw	O	4
6	B227-3	Lockwasher	X	1
7	B227-4	Dress Nut	X	1
8	MS24693-S26	Screw	X	1
9	B421-1	Visor Assembly (Incl items 11 and 12)	X	1
10	MS35206-229	Screw	X	2
11	C654-46	Decal - Caution (altimeter instructions)	X	1
12	A226-11	Trim	X	A/R
13	B263-13	Housing	X	1
	B263-2	Socket	X	2
14	B049-9	Wire Harness Assembly (Incl items 14 thru 16)	X	1
15	B263-12	Housing	X	1
	B263-1	Pin	X	2
16	B158-1	Heat Shrink	X	A/R
17	B300-1	Switch Assembly (Incl items 6 and 7)	X	1
18	B266-8	Sleeving	X	A/R
19	9-2190-188-20**	Hood	O	1
20	9-2190-188-10**	Connector	O	1
21	B158-2	Heat Shrink (not shown)	X	A/R
22	B422-1	Indicator Assembly (Incl item 5)	X	1
NOTES * Console location. ** FreeFlight Systems part no.				

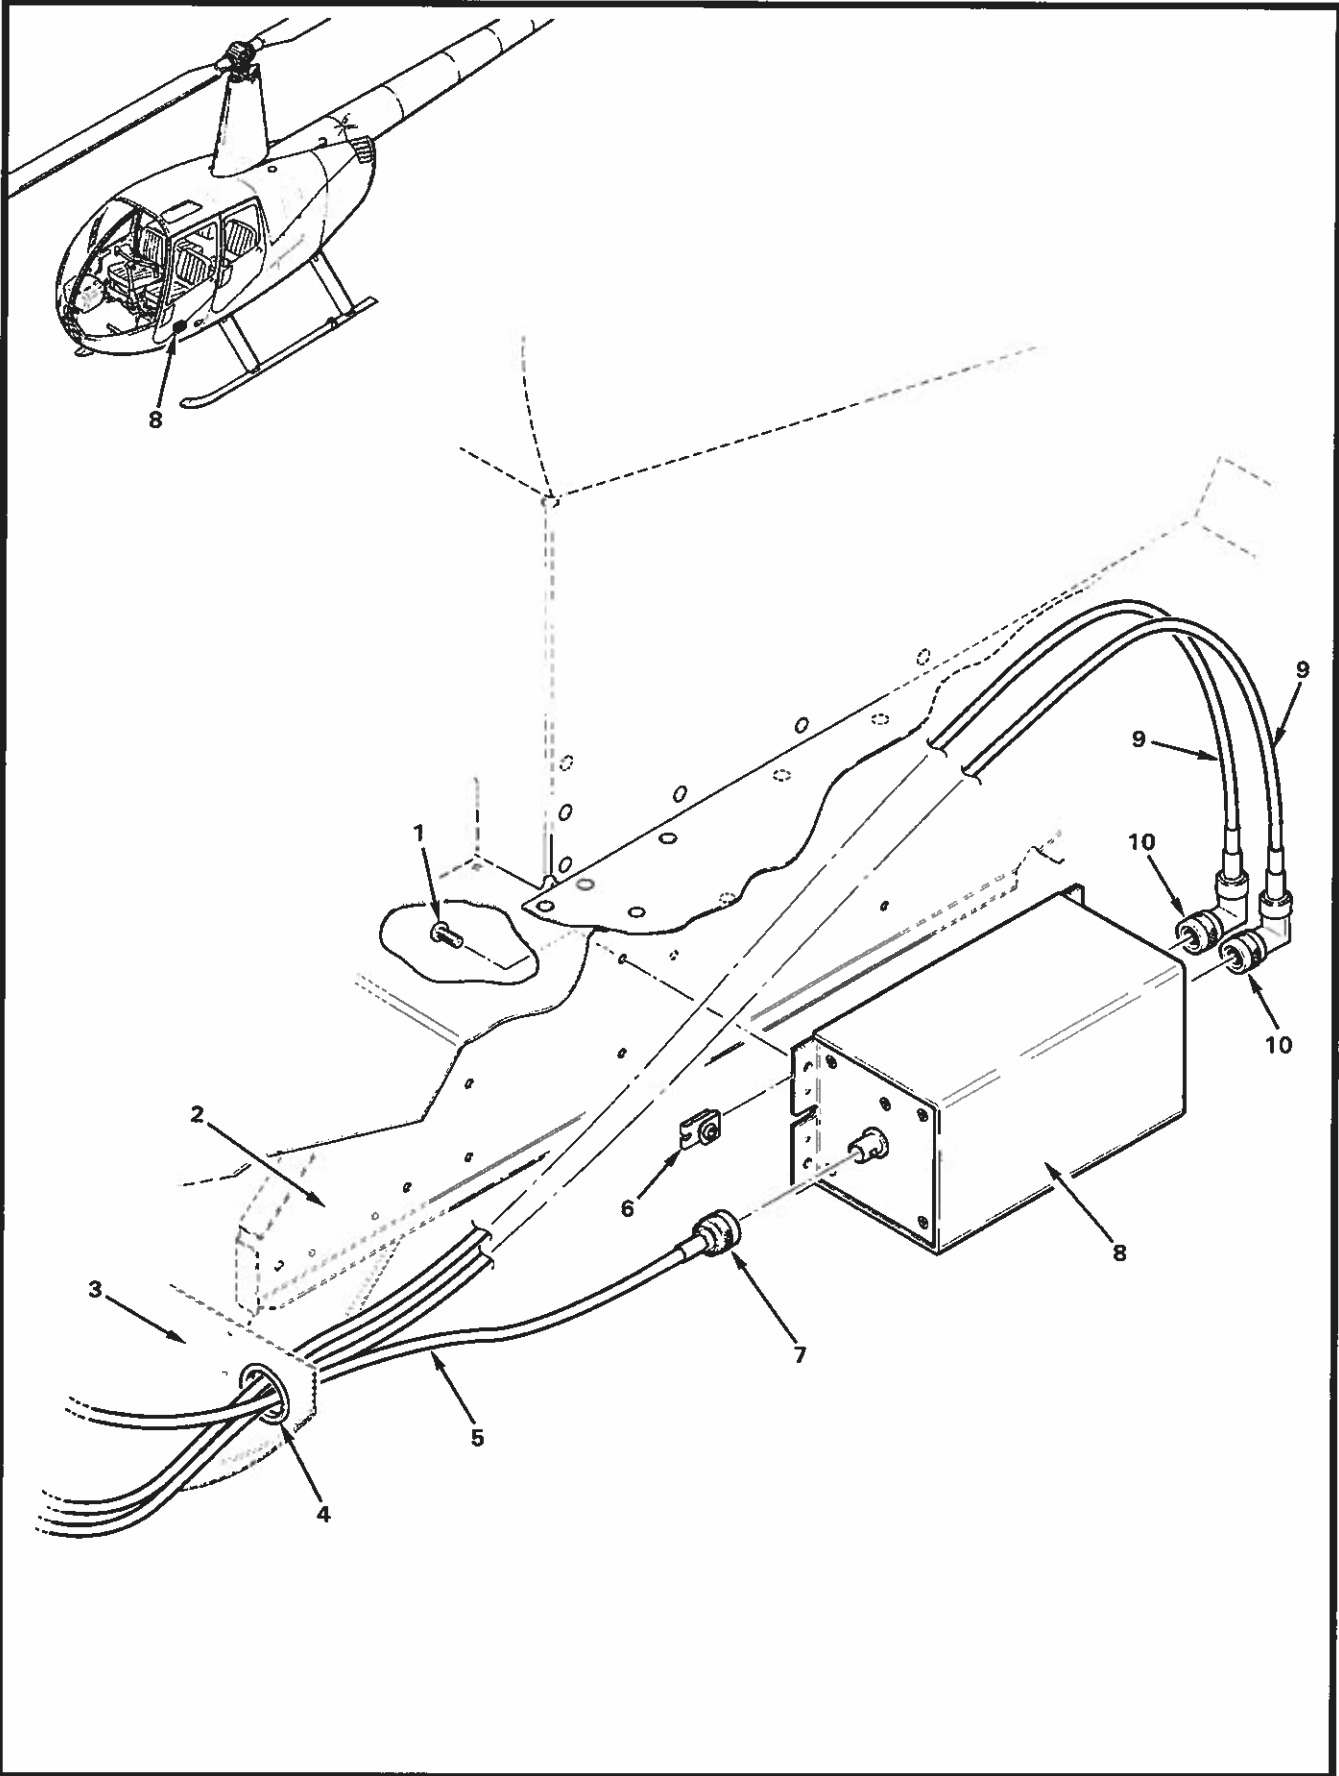


FIGURE AND INDEX NUMBER	PART NUMBER	DESCRIPTION	PARTS AVAIL	QTY PER ASSY
		RADAR ALTIMETER INSTALLATION		
95-37-1	MS20739C0807	Screw	X	4
2	C531	Support (Ref)		
3	D230	Bulkhead (Ref)		
4	NAS557-14A	Grommet	X	1
5	—	Cable (wire no. 1329; to indicator)	O	1
6	B162-3	Clipnut	X	4
7	9-2122-102-00*	Connector (BNC)	O	1
8	1901-3500-00*	Radar Altimeter (Model no. TRA-3500)	O	1
9	—	Cable (to antennas; supplied with item 8)	O	2
10	—	Connector (BNC)	O	2
NOTES * FreeFlight Systems part no.				