


Wind Components Calculator

See wind components for any airport:

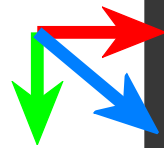

W : 13.00
Wh : 8.36
Wc : 9.96

■ Wind
■ Headwind
■ Crosswind

Runway Number :

Wind Direction :

Wind Speed :

Gust Speed (if any) :


☐ Apply gusts at 50%

Head Wind :

Cross Wind :

Wind Components Calculator

See wind components for any airport:

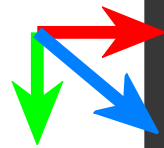

W : 13.00
Wh : 12.86
Wc : 15.32

Wind
Headwind
Crosswind

Runway Number :

Wind Direction :

Wind Speed :

Gust Speed (if any) :

☐ Apply gusts at 50%

Head Wind :

Cross Wind :