



## **TEXAS EASTERN TRANSMISSION, LP**

**2012 CLOSE INTERVAL SURVEY**

**FOR**

**LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE  
COMPRESSOR STATION  
(21568+71 to 22563+30)**

**PERFORMED BY: ALLIED CORROSION INDUSTRIES, INC.**

**ON/OFF SURVEY COMPLETED: OCTOBER 25, 2012**

**SUB-METER GPS: TRIMBLE AG114S WITH OMNISTAR DIFFERENTIAL CORRECTION**

**ON/OFF CYCLE: 1.5 SECONDS ON – 0.5 SECOND OFF**

---

### **CORPORATE HEADQUARTERS**

P.O. Box 9098  
Marietta, GA 30065  
Tel: 770-425-1355  
Fax: 770-425-1354

### **MOBILE OFFICE**


1709 Sugar Cane Court  
Mobile, AL 36695-2727  
Tel: 800-241-0809  
Fax: 770-425-1354

### **HOUSTON OFFICE**

9000 Clay Road, Suite 108  
Houston, TX 77080  
Tel: 713-467-6003  
Fax: 713-467-1174

[www.alliedcorrosion.com](http://www.alliedcorrosion.com)


Pipe: 1

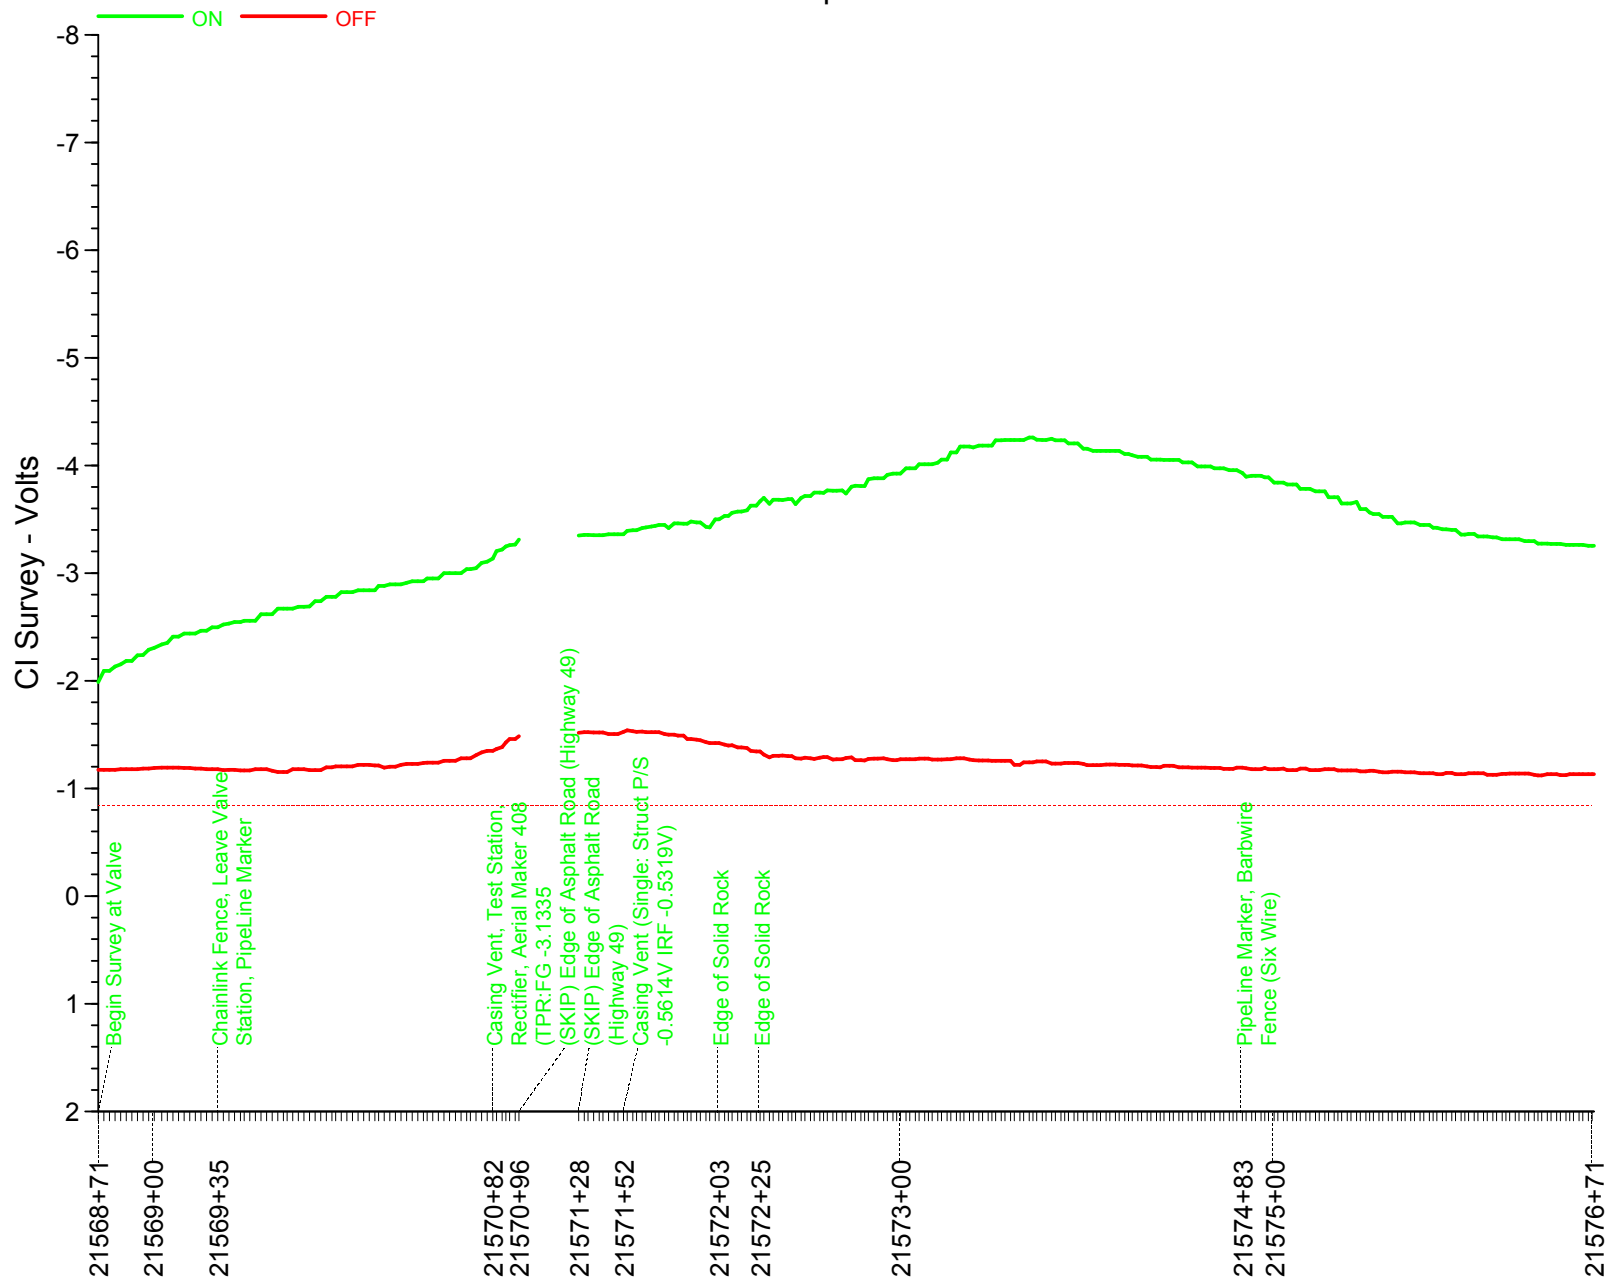

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

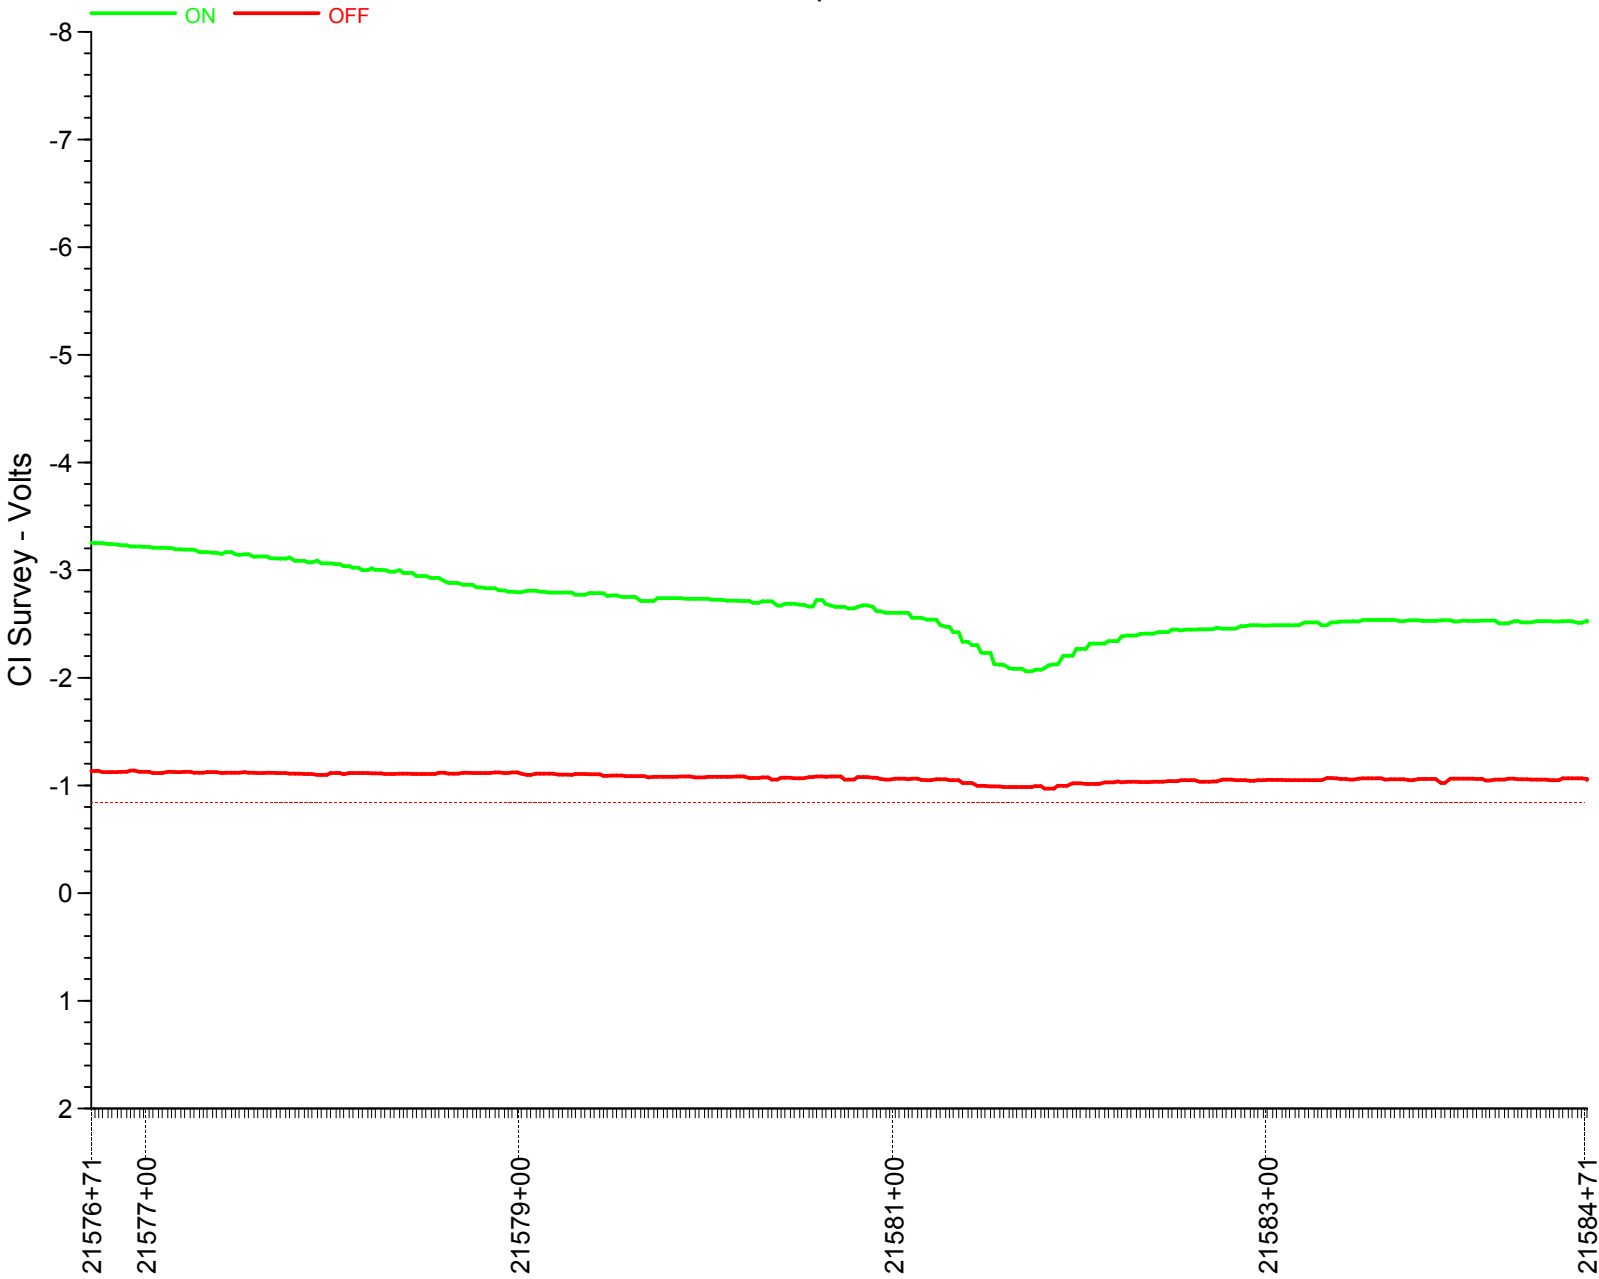

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

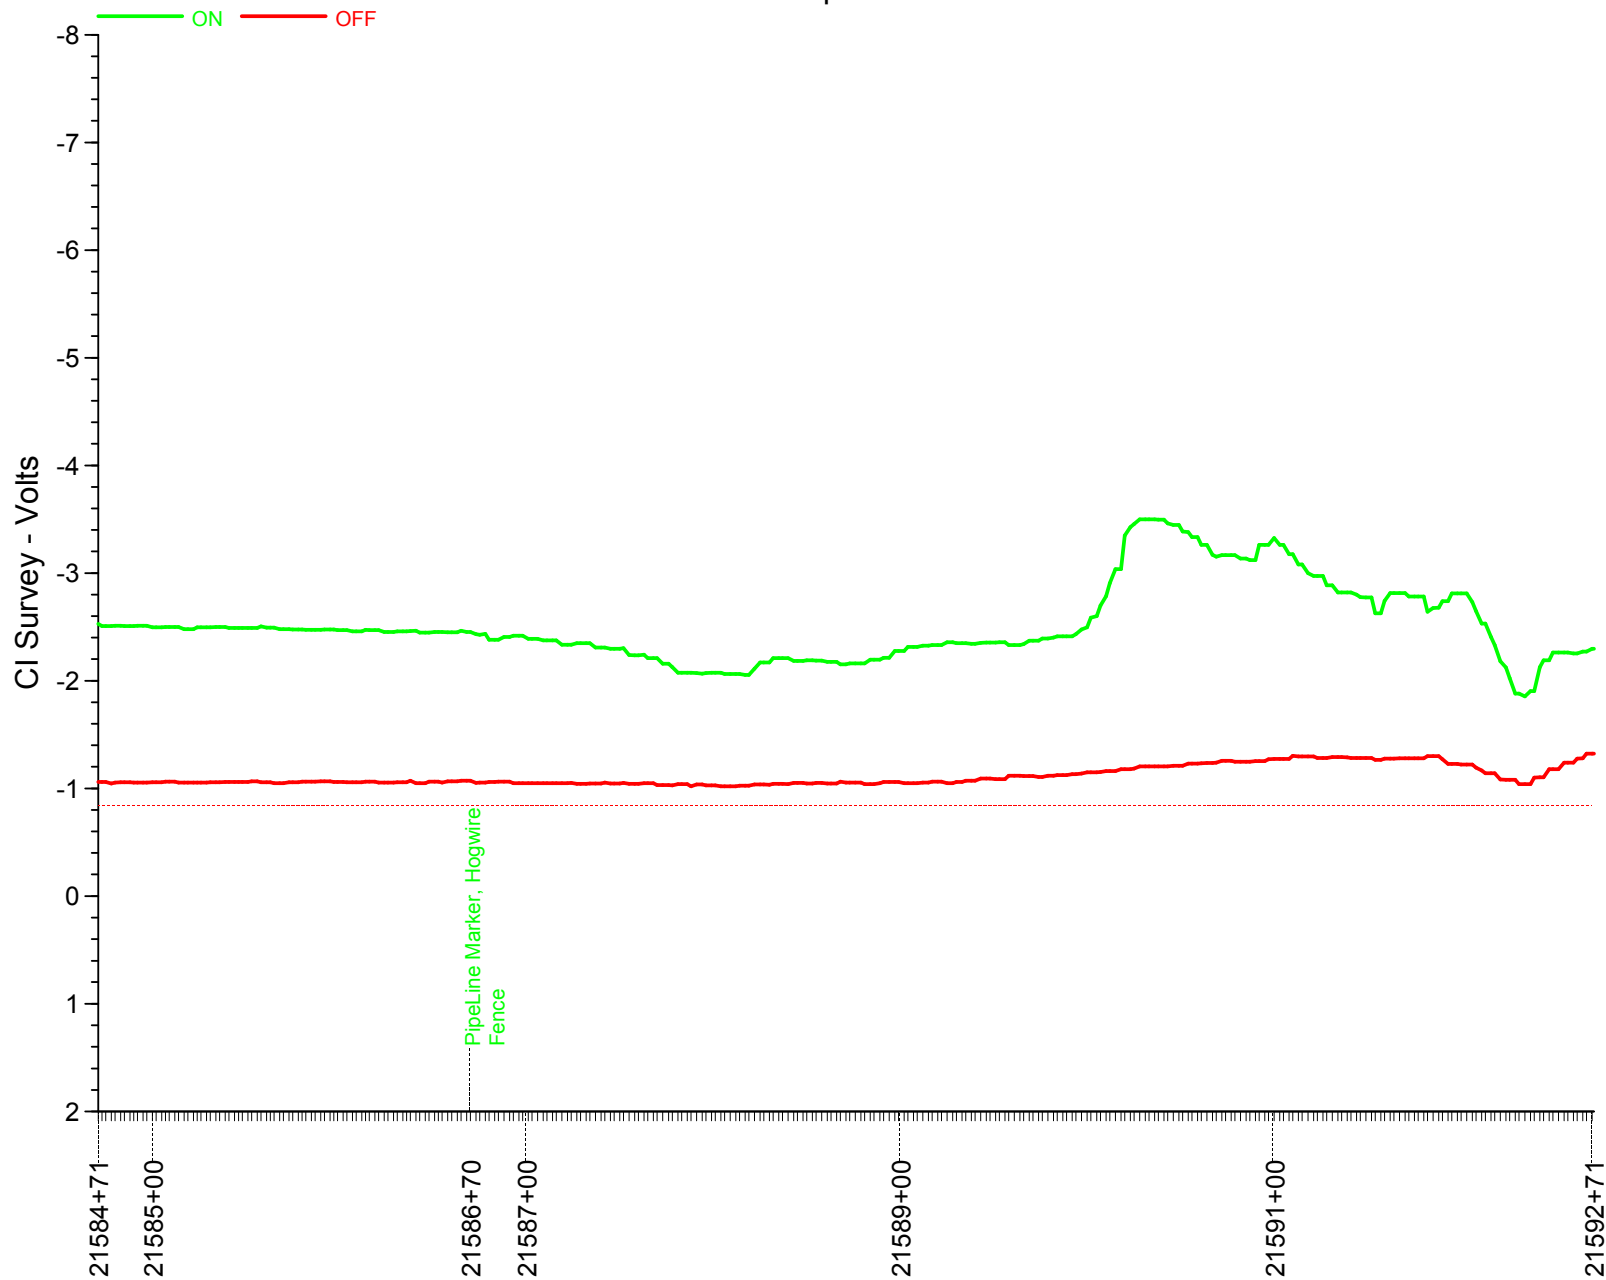


100 Feet/Inch

CP Data Manager 11/28/12 Page 3

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

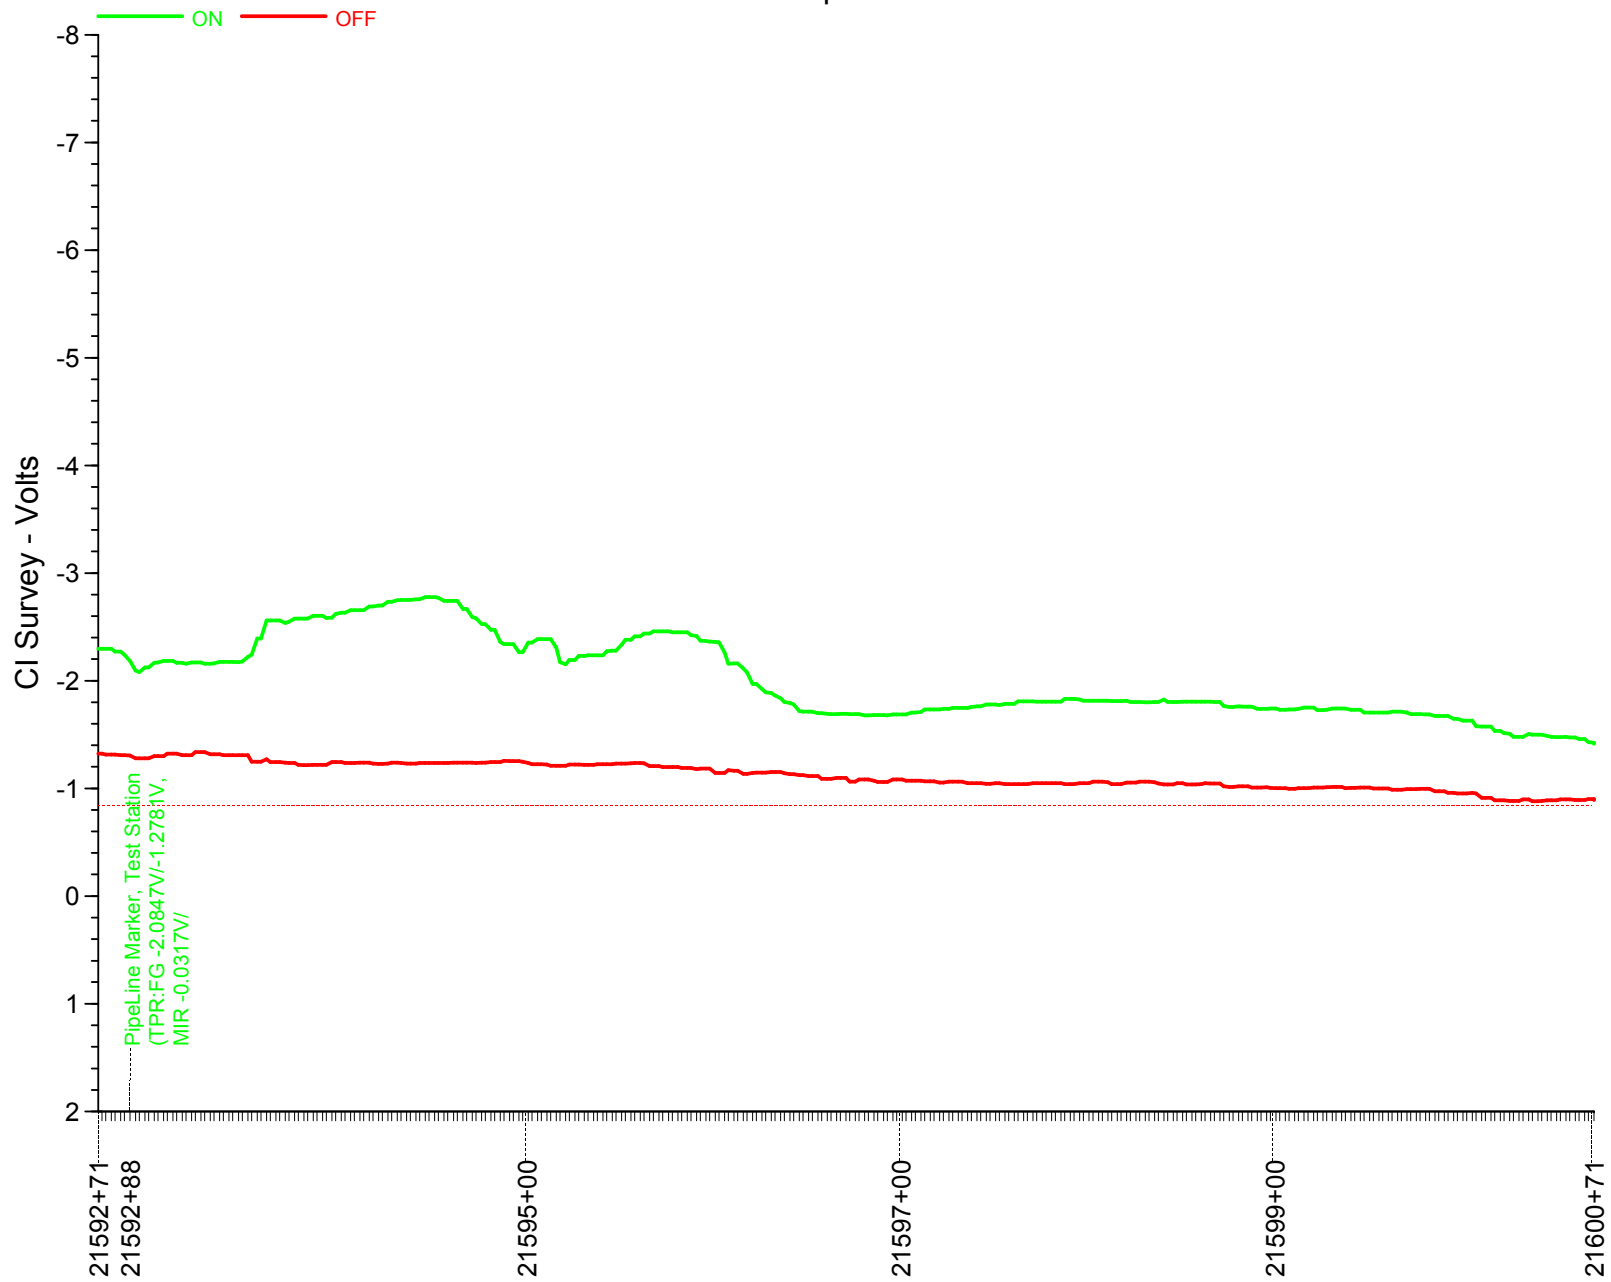

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

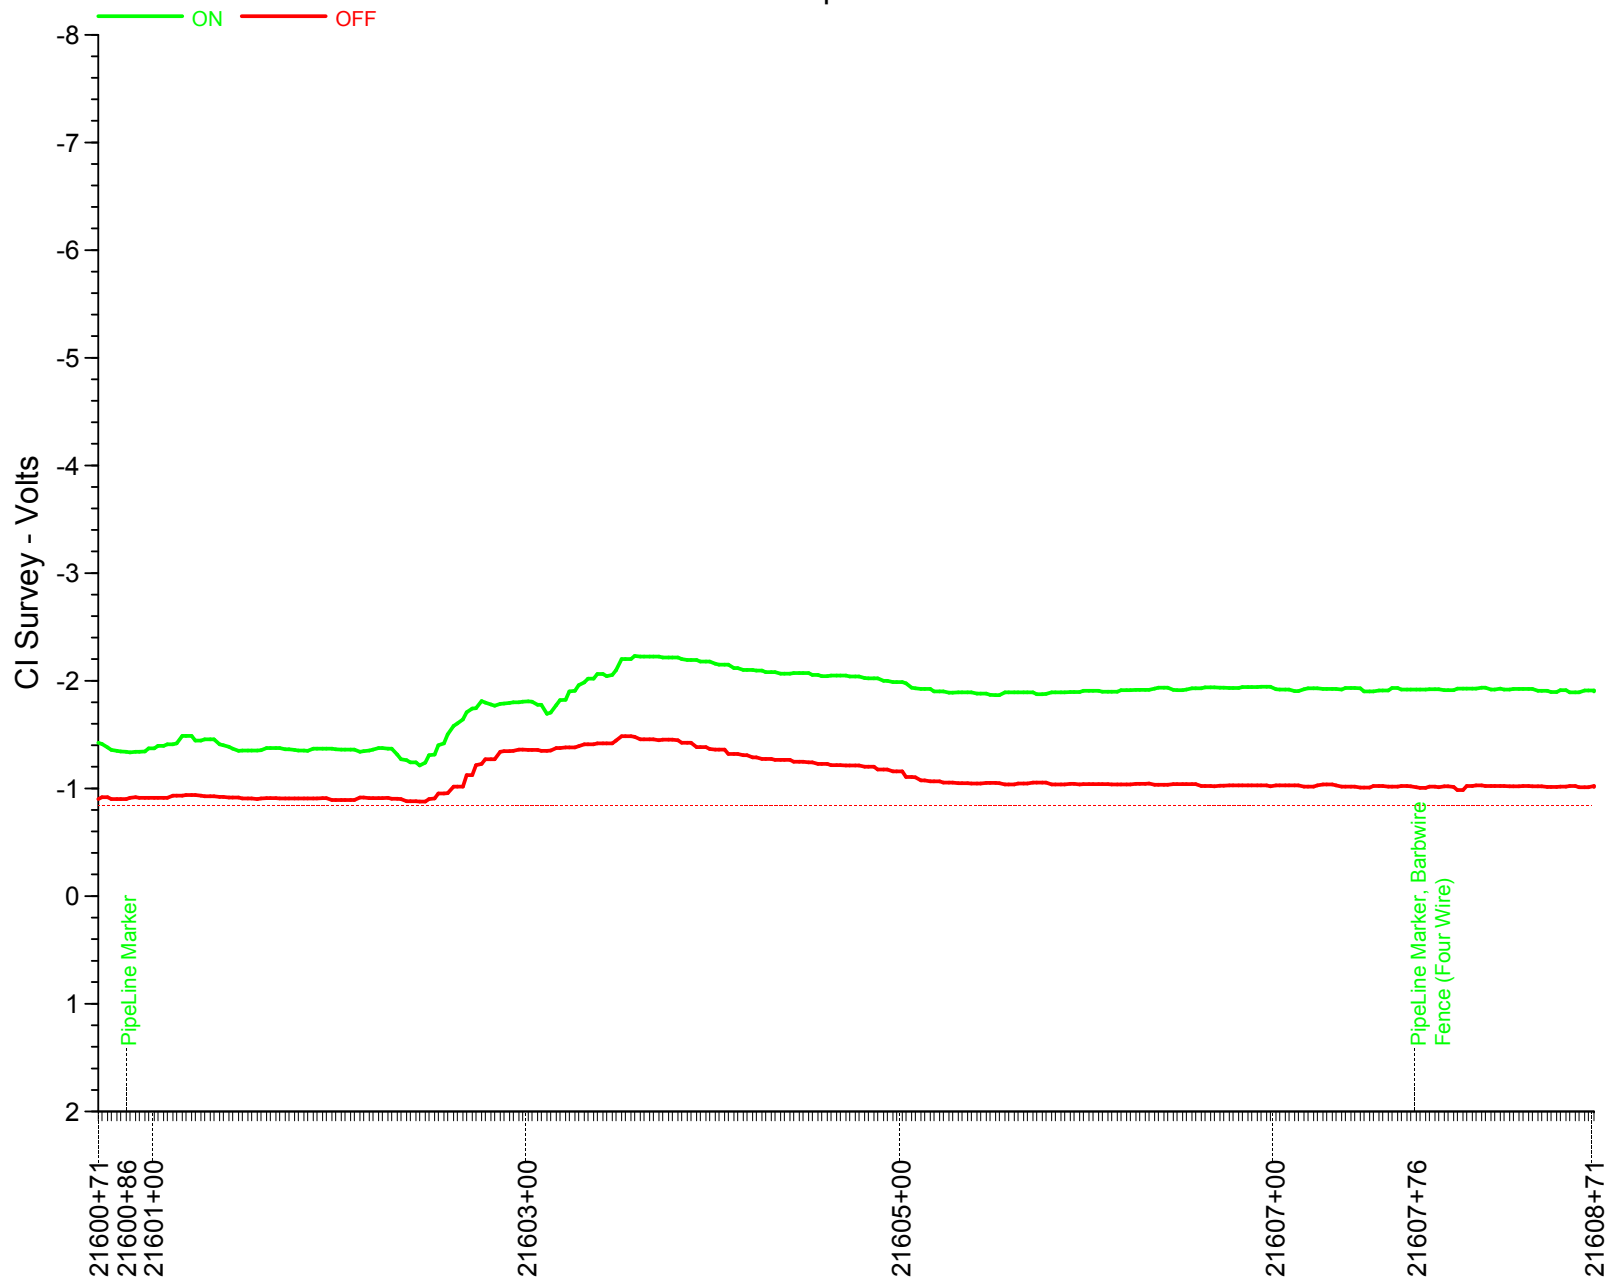

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

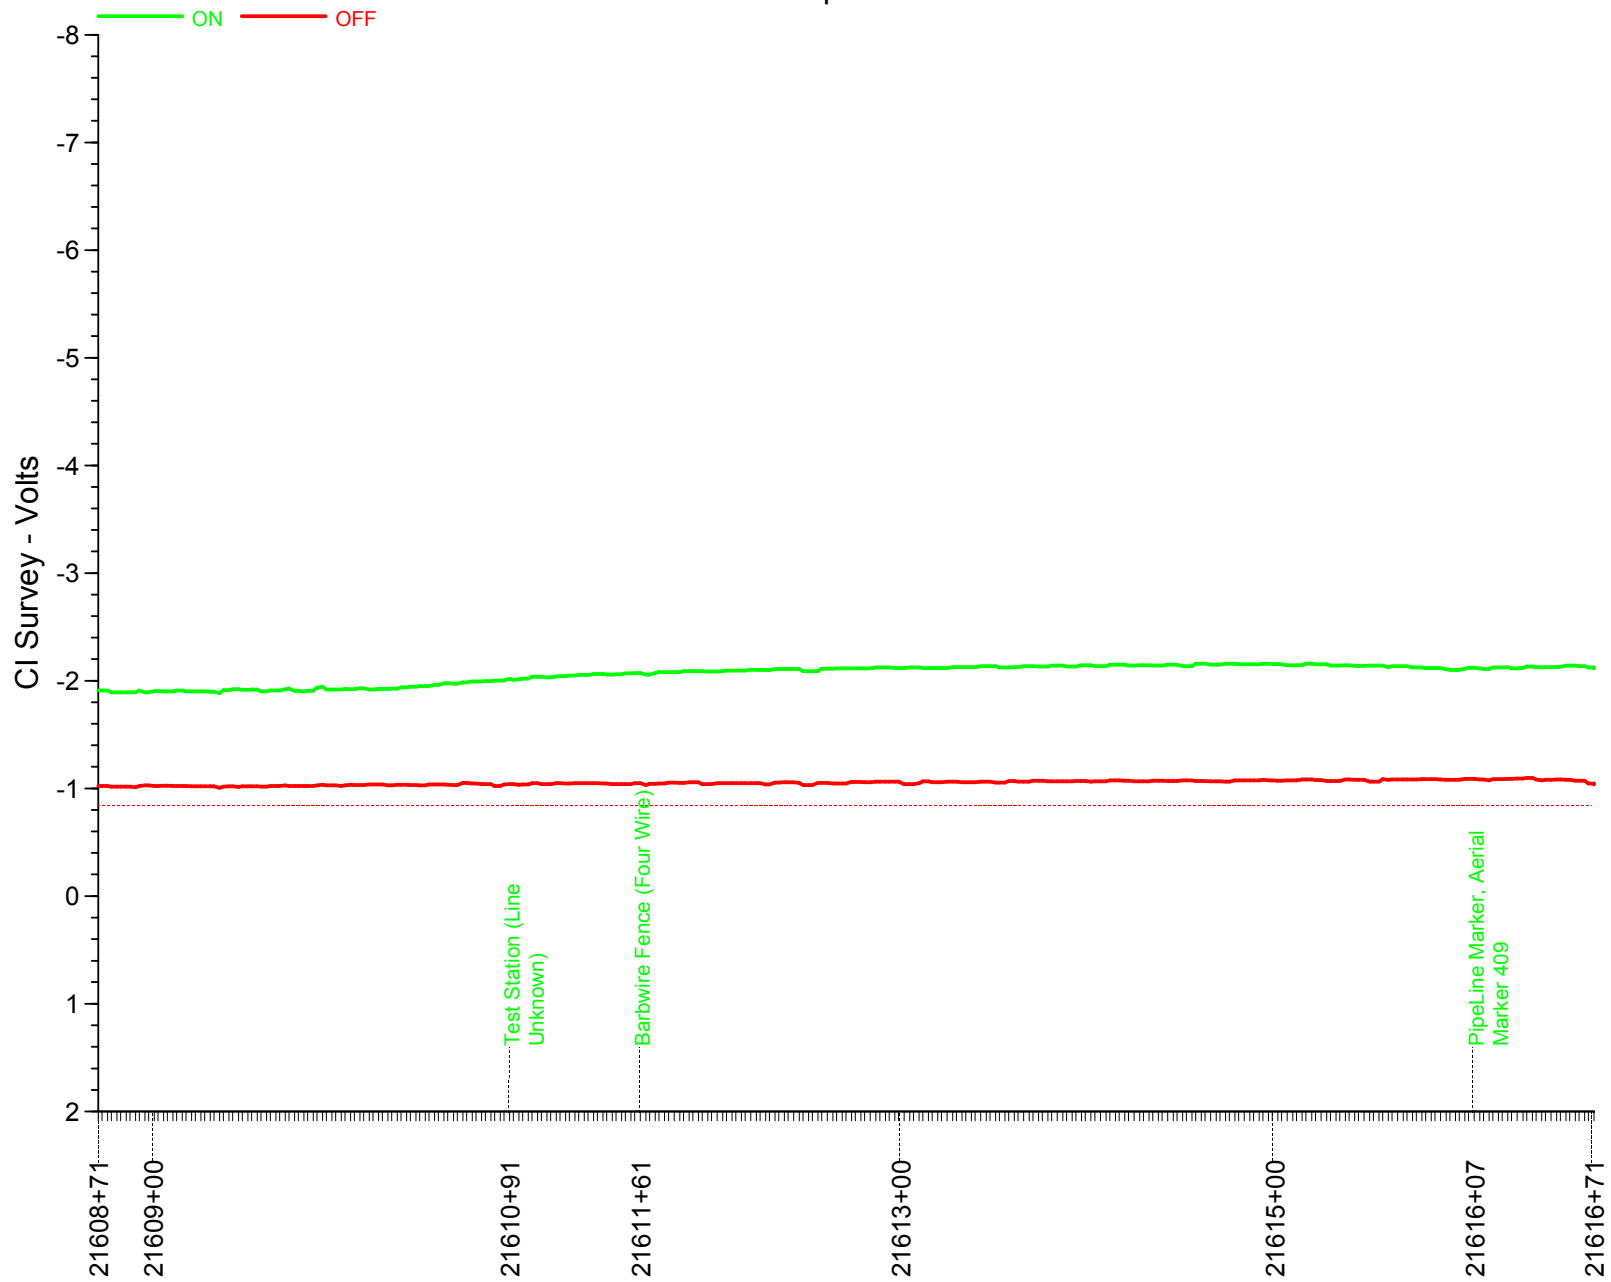

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

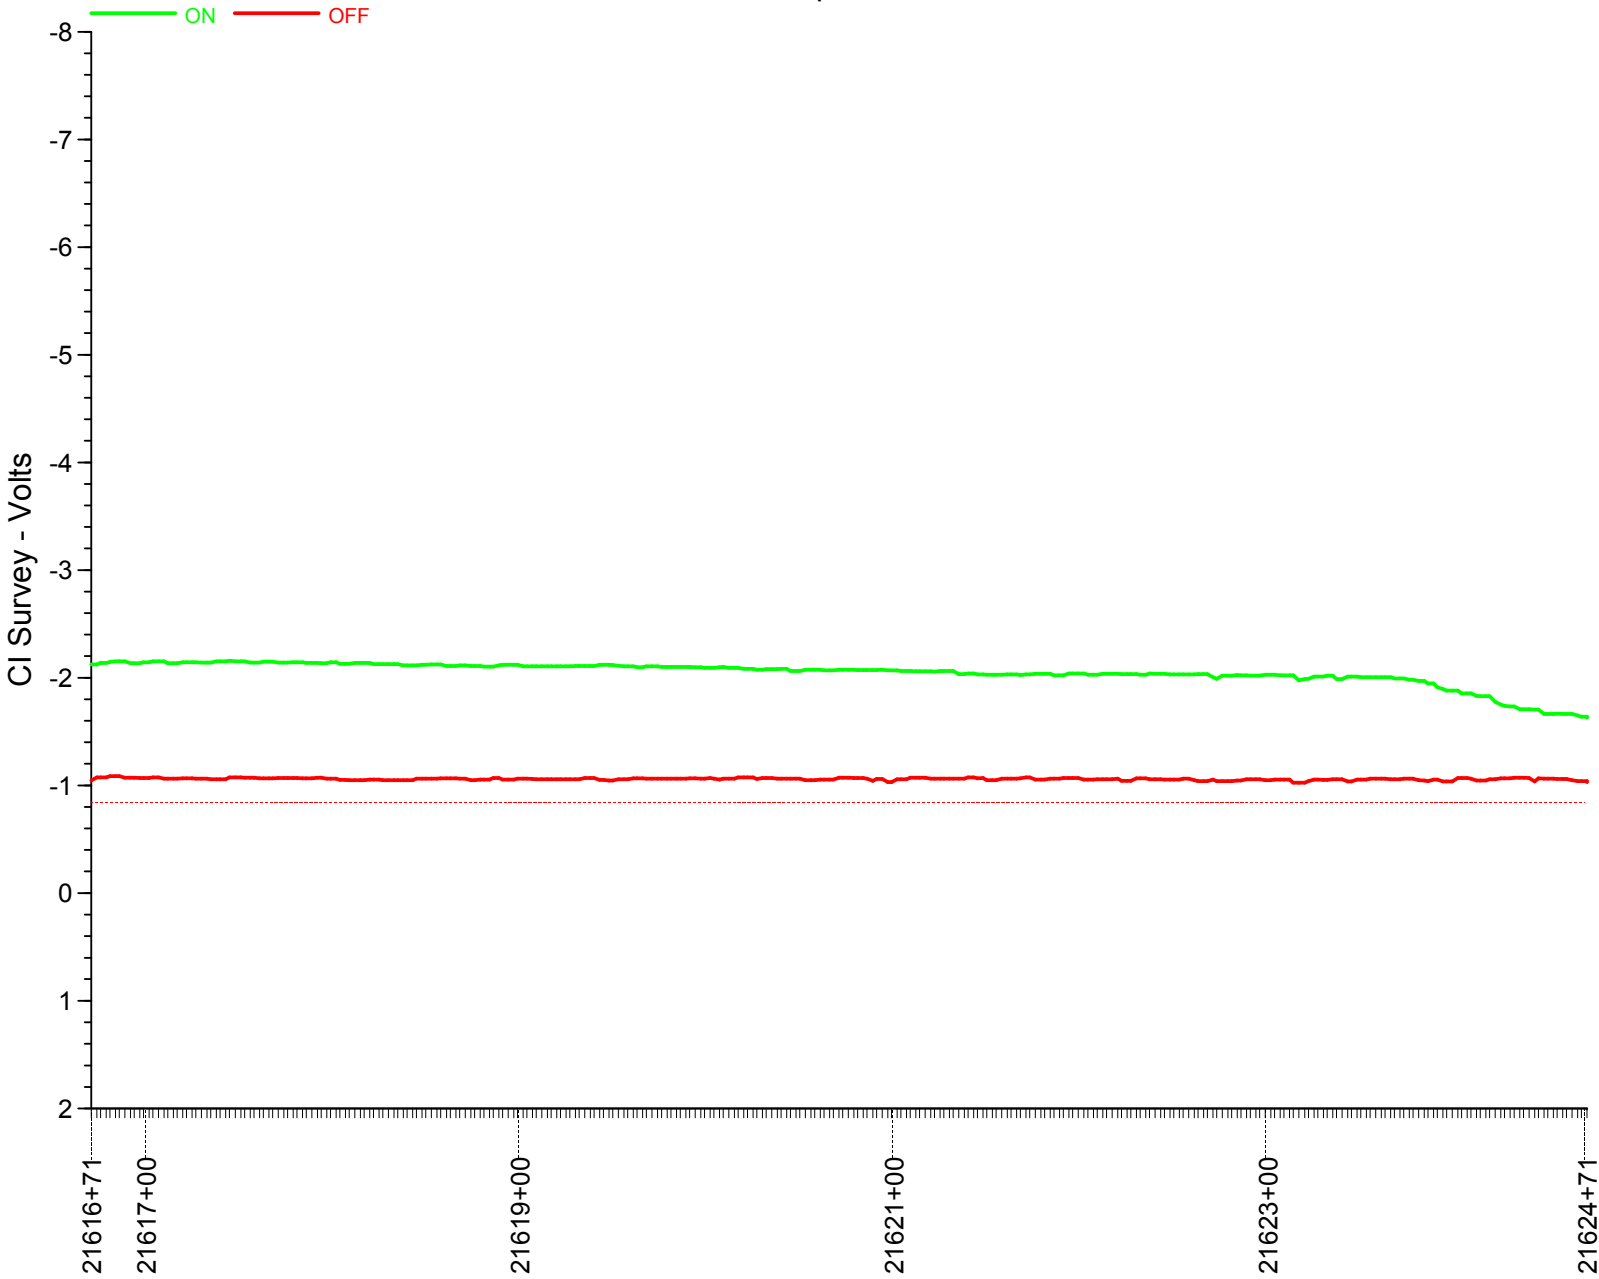


100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION



Pipe: 1

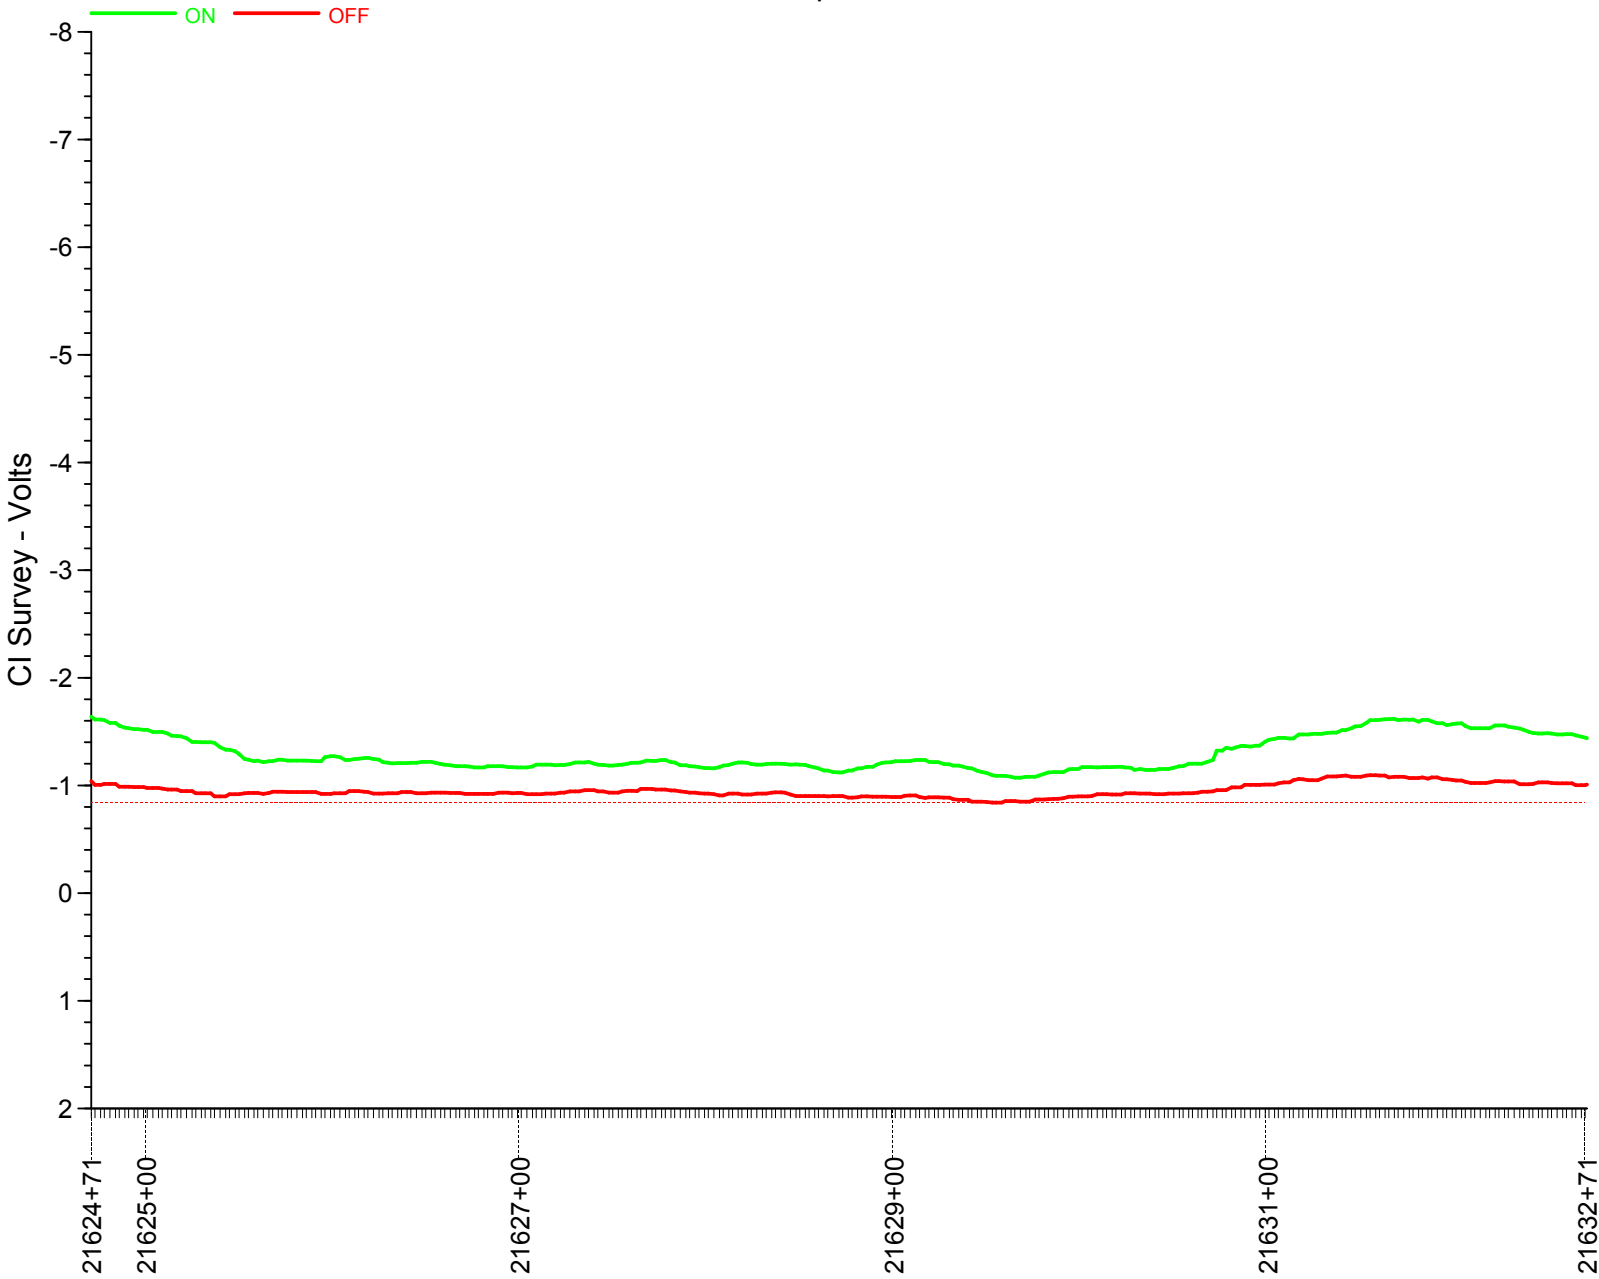


100 Feet/Inch

CP Data Manager 11/28/12 Page 8

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

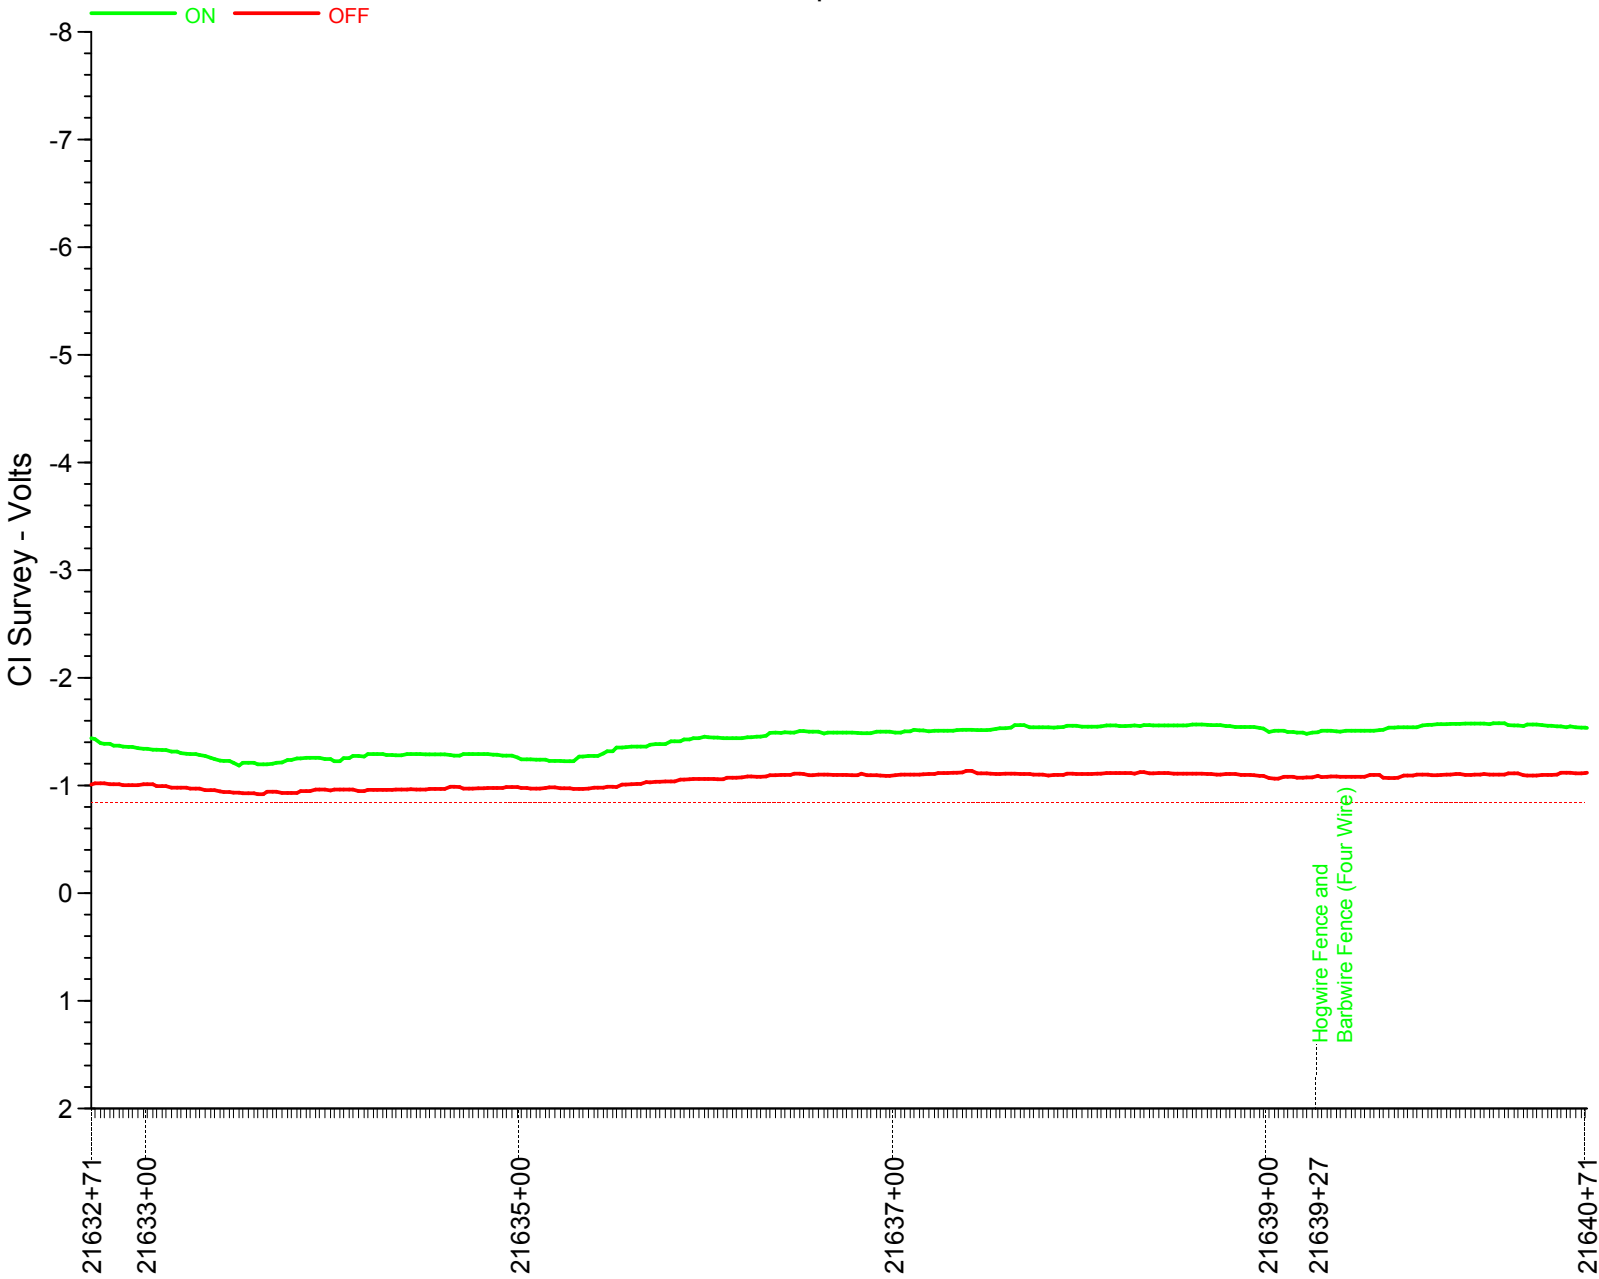

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

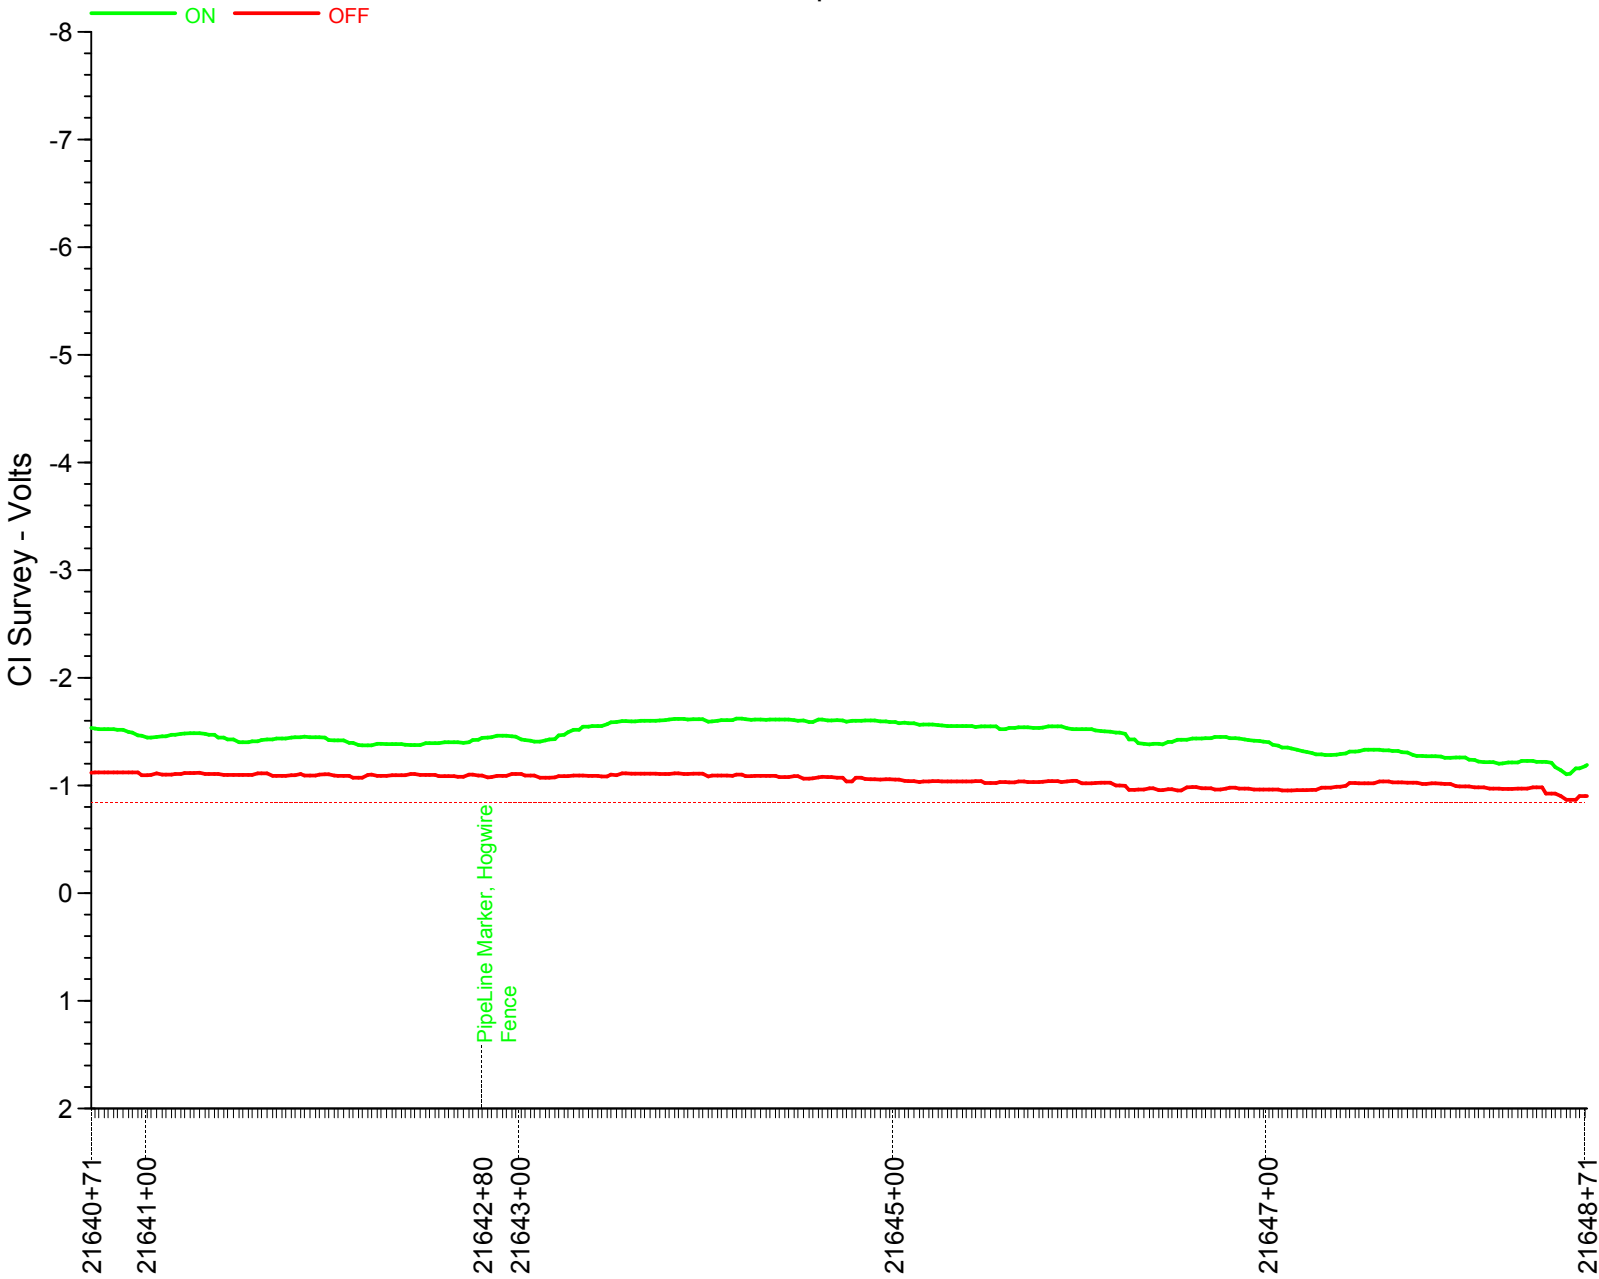

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

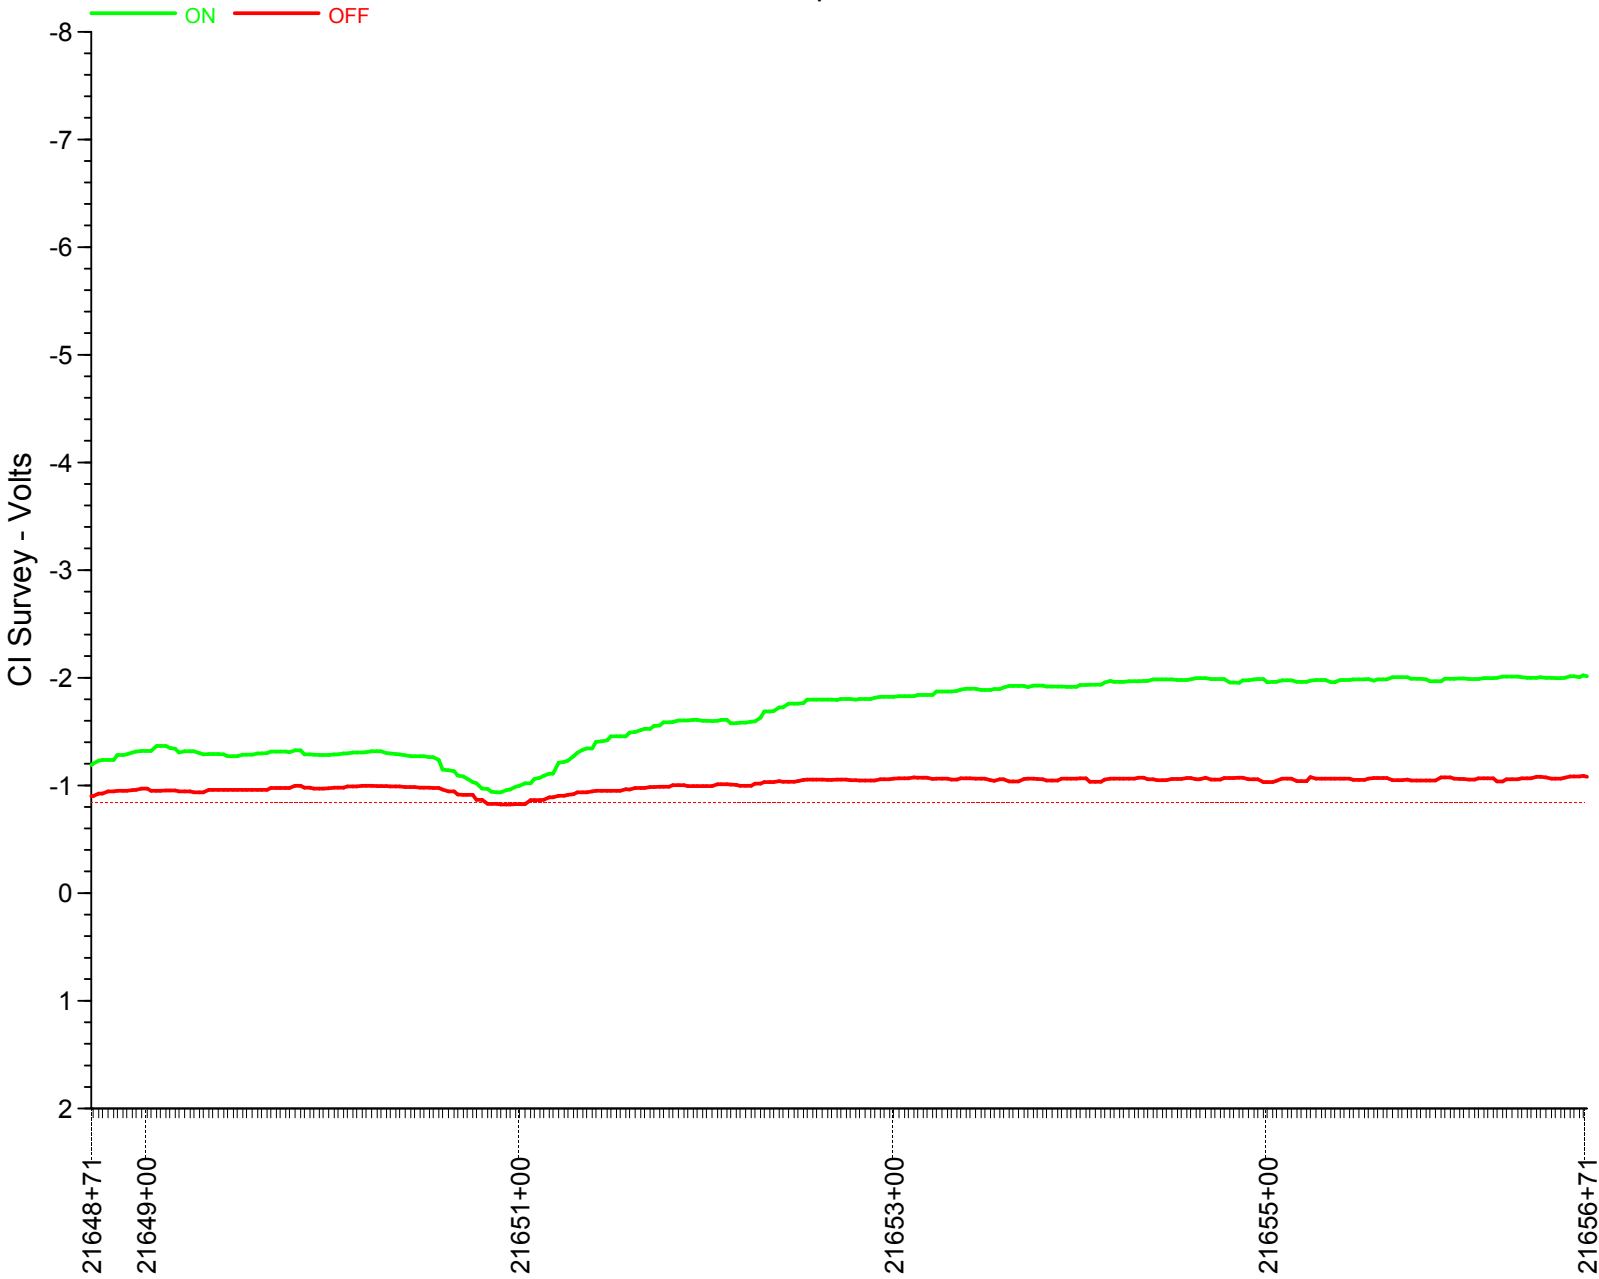

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

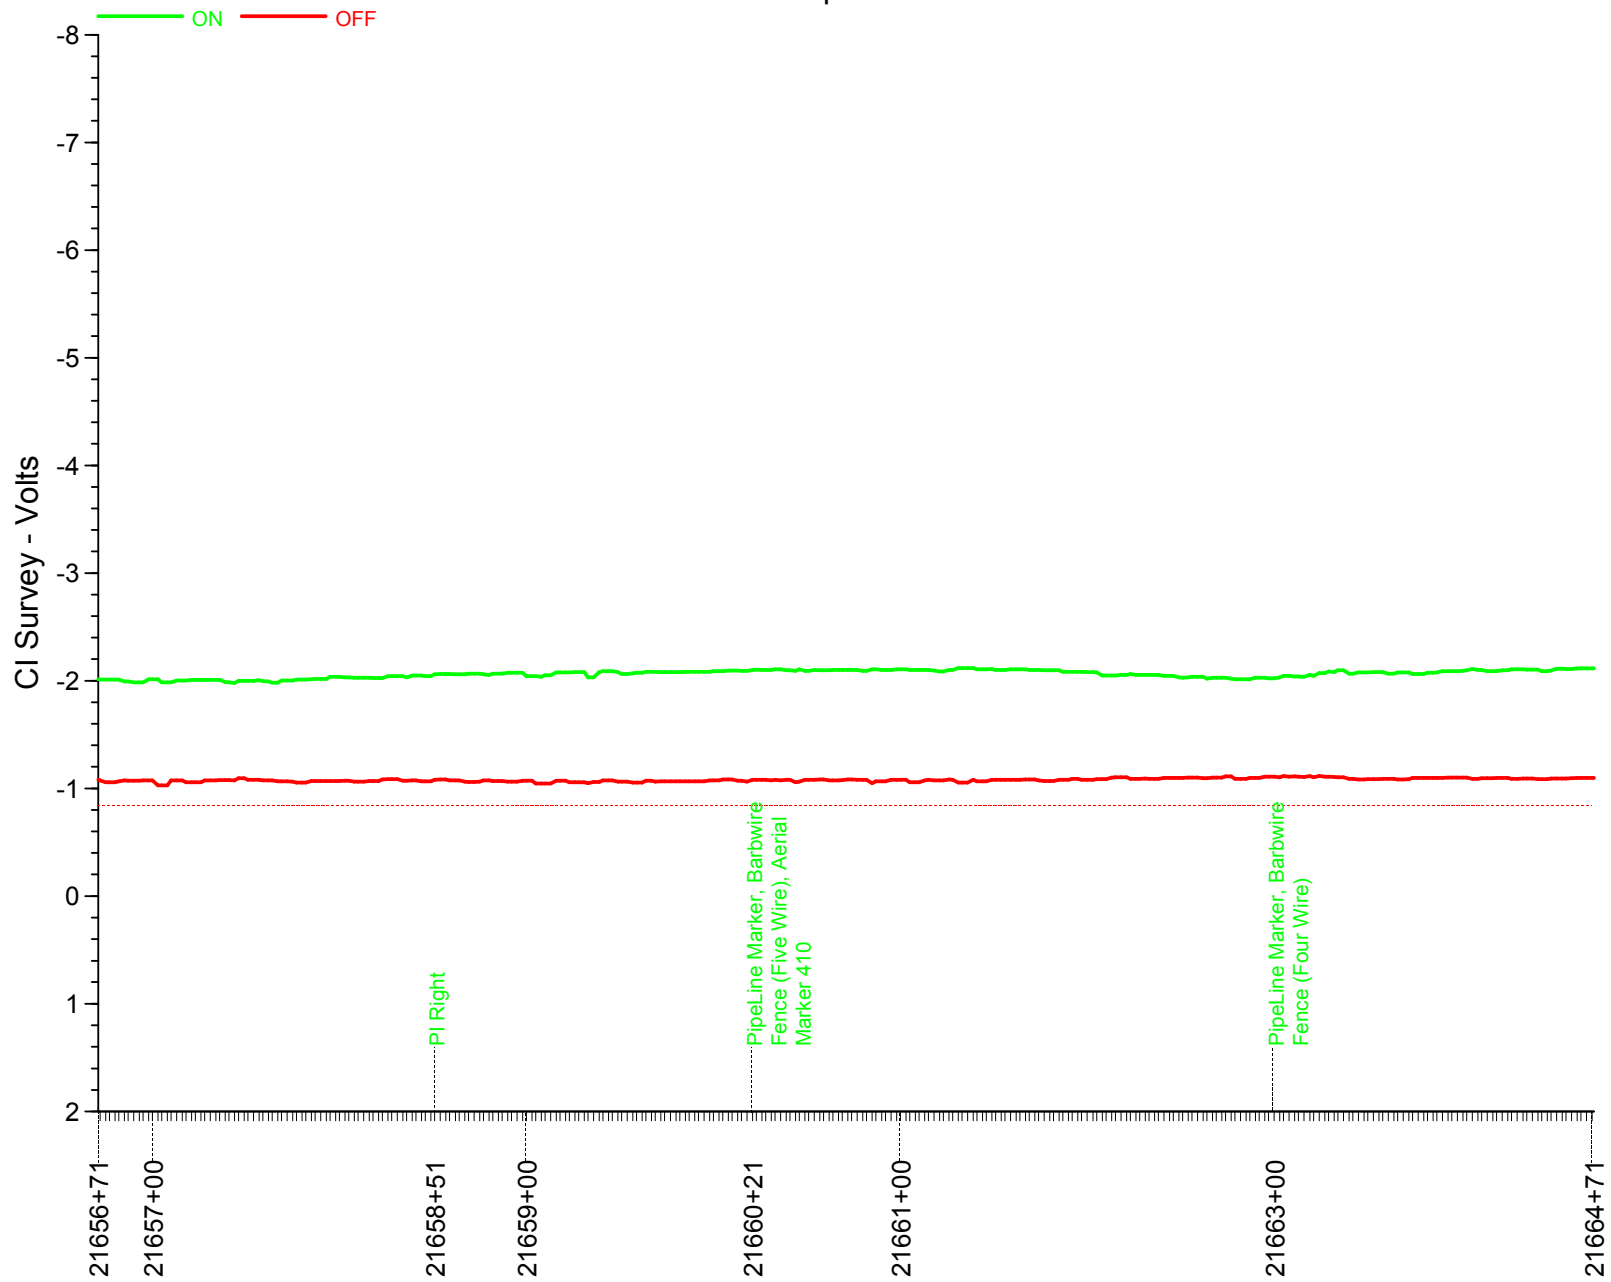

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

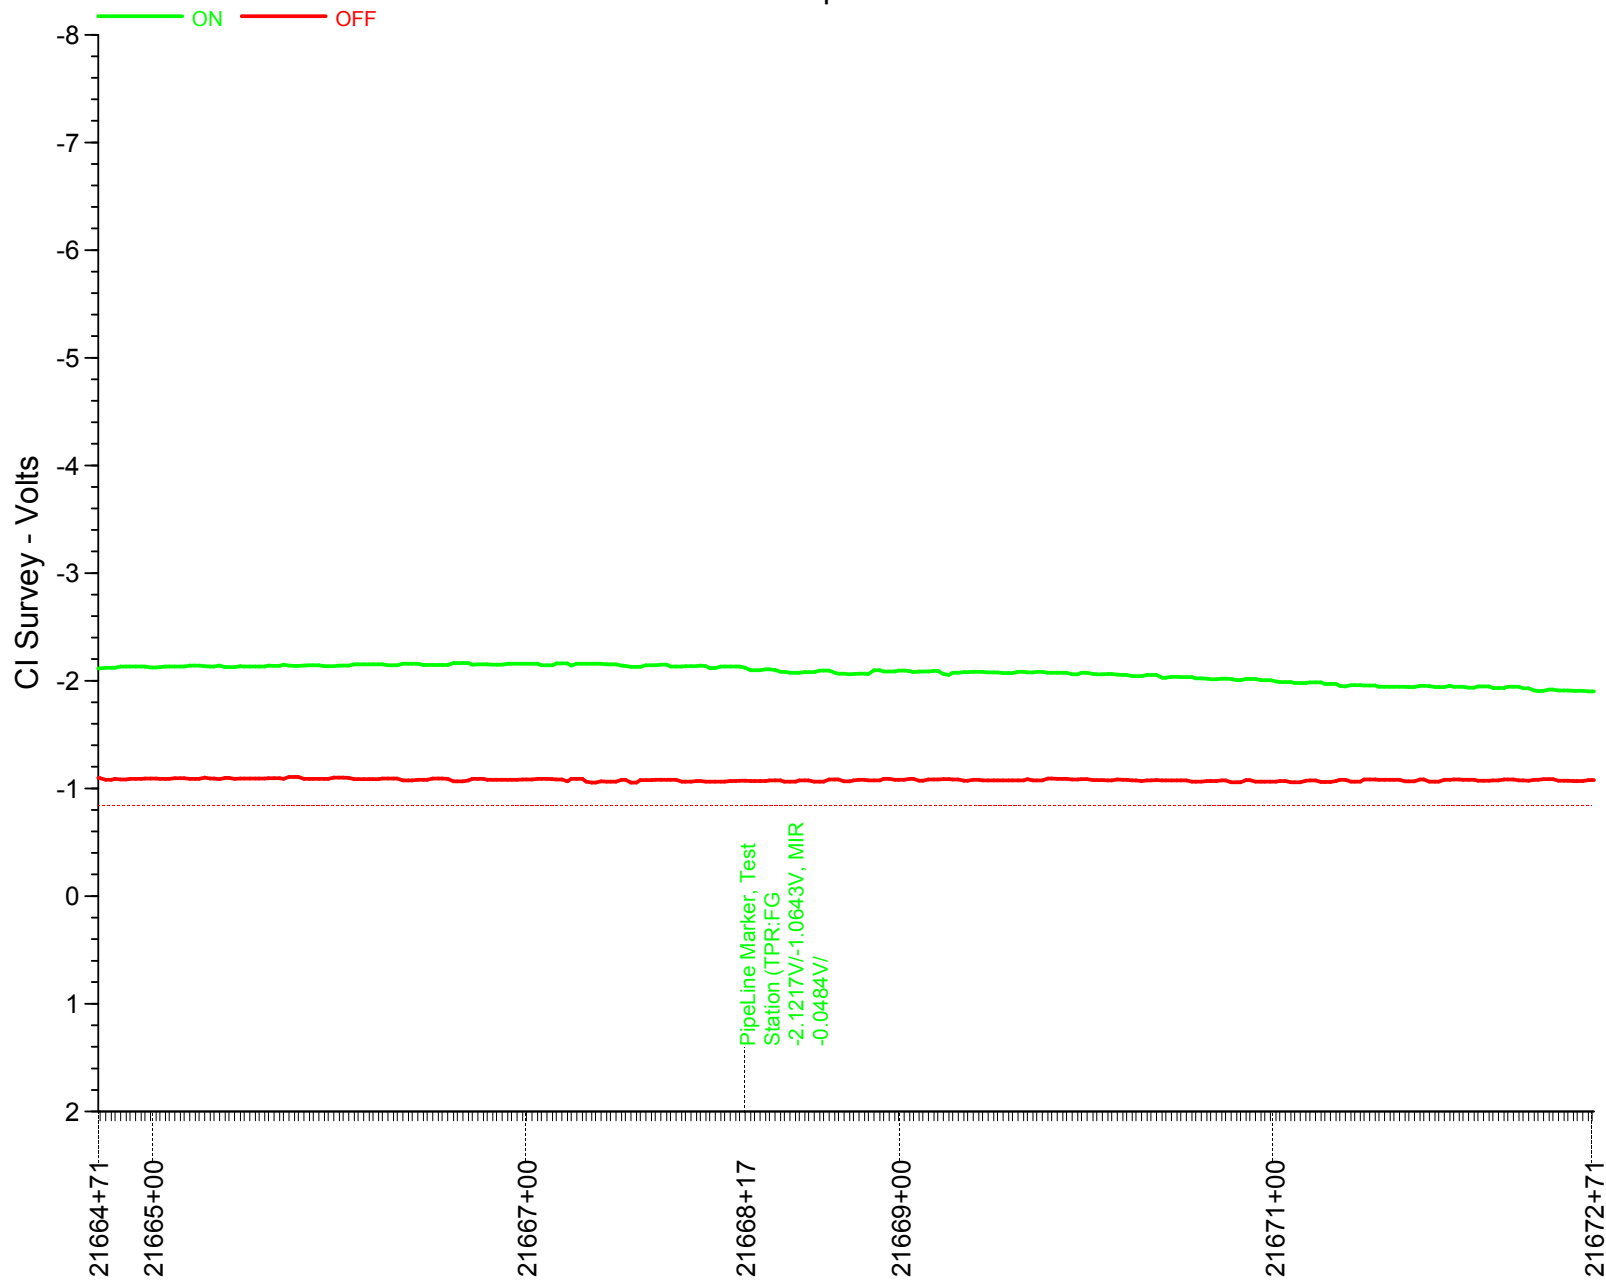

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

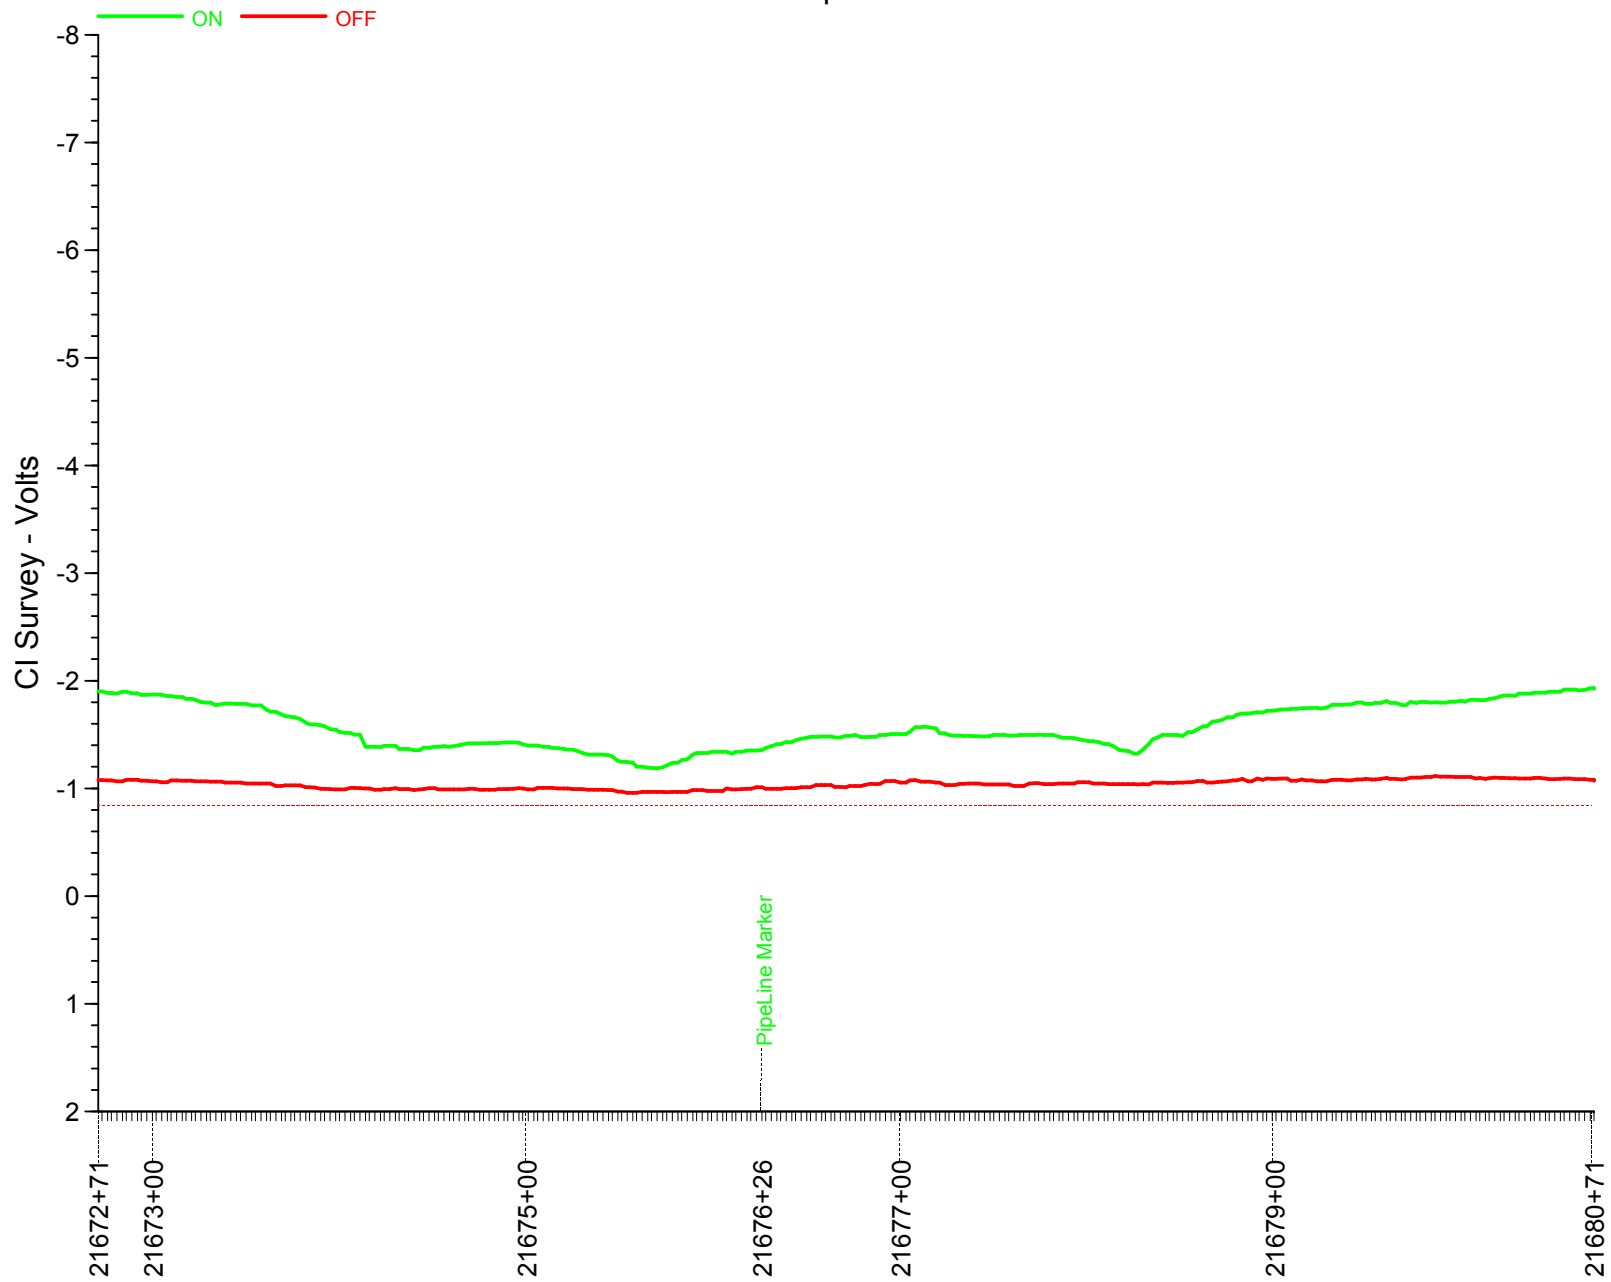

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

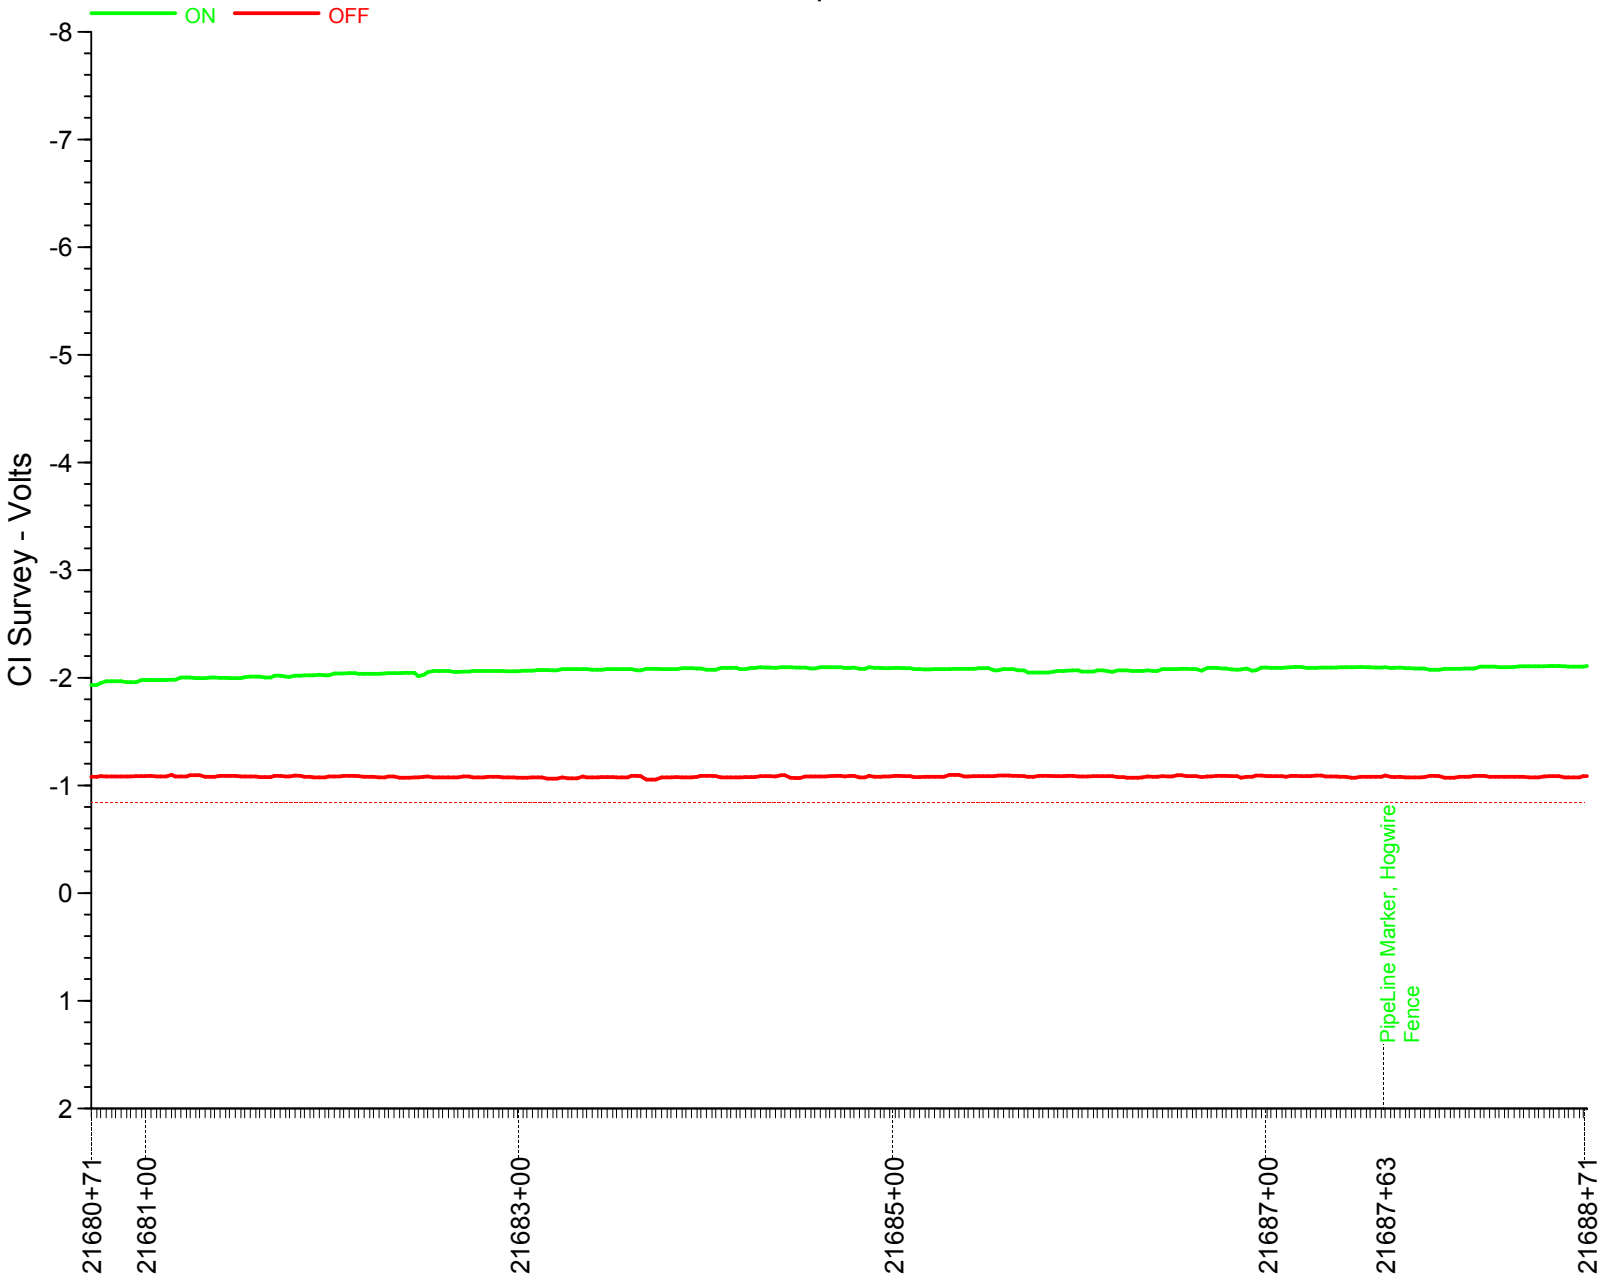


100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION




Pipe: 1

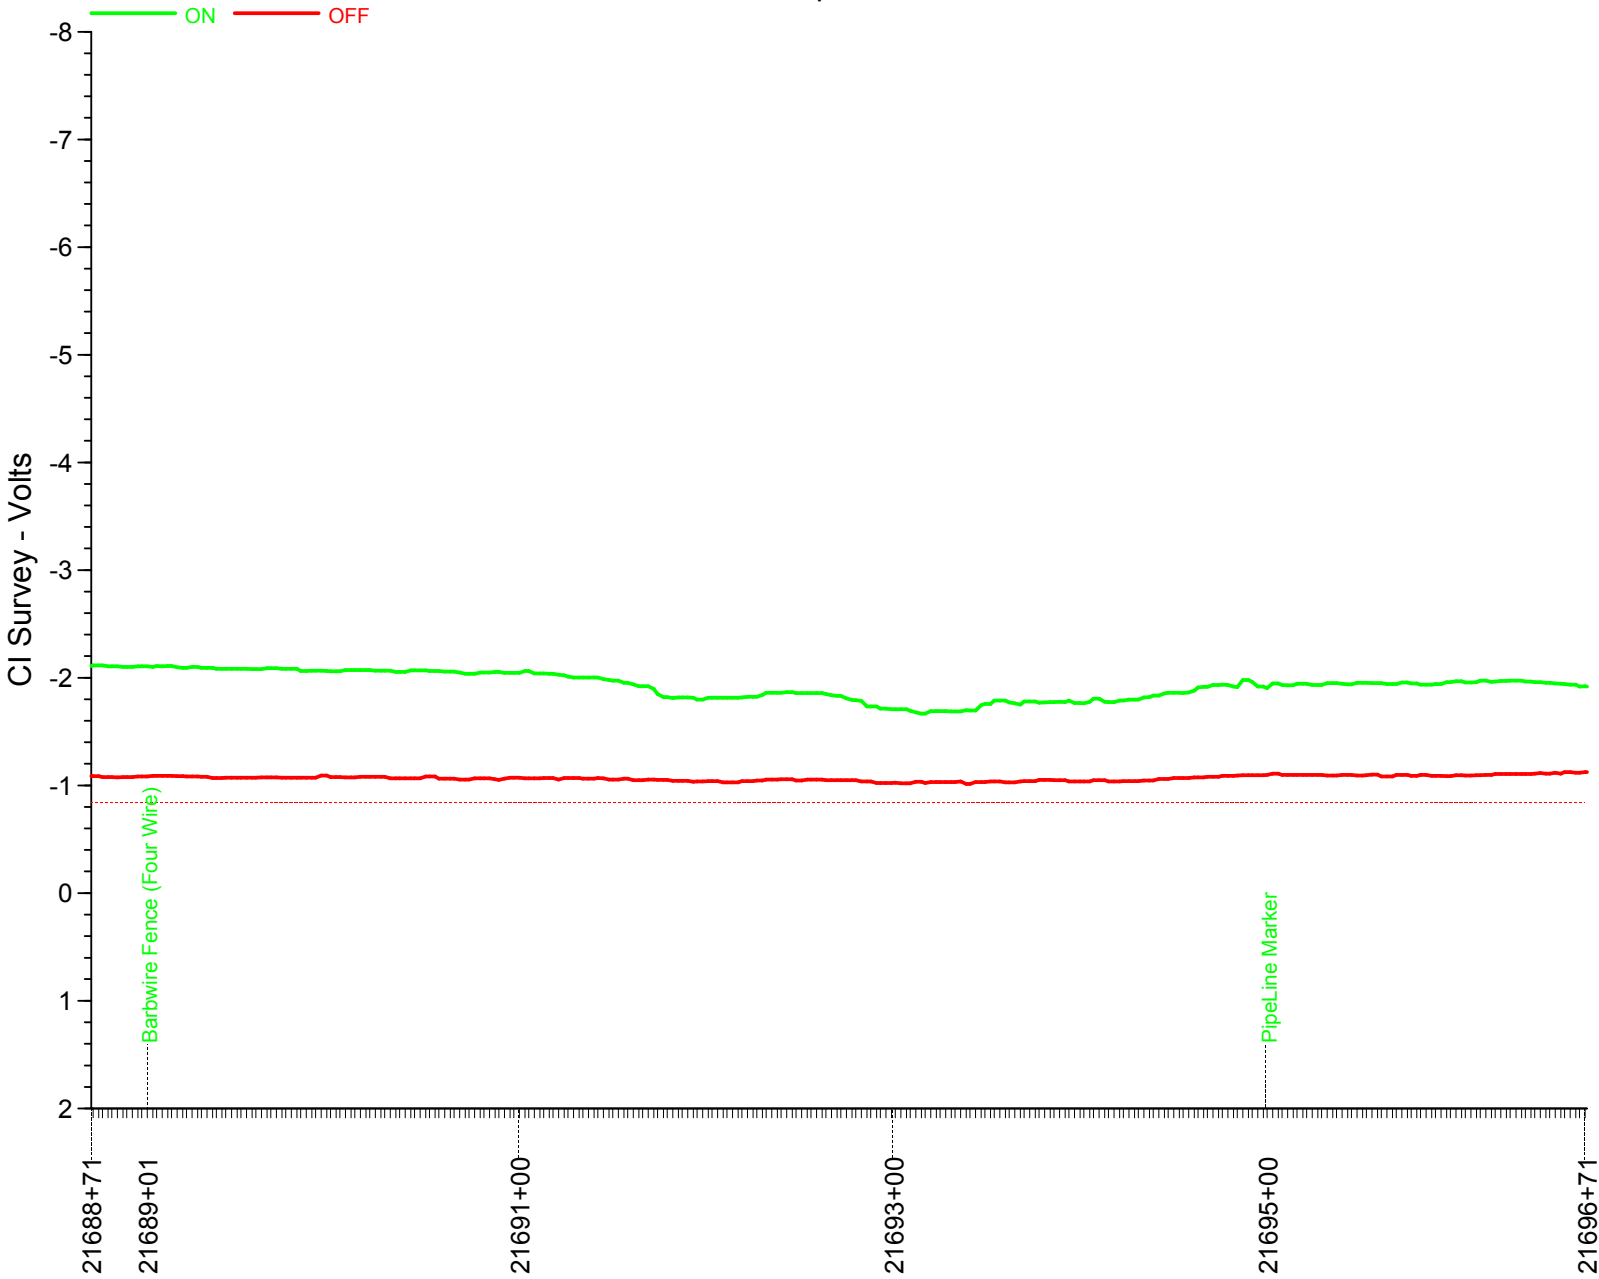

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

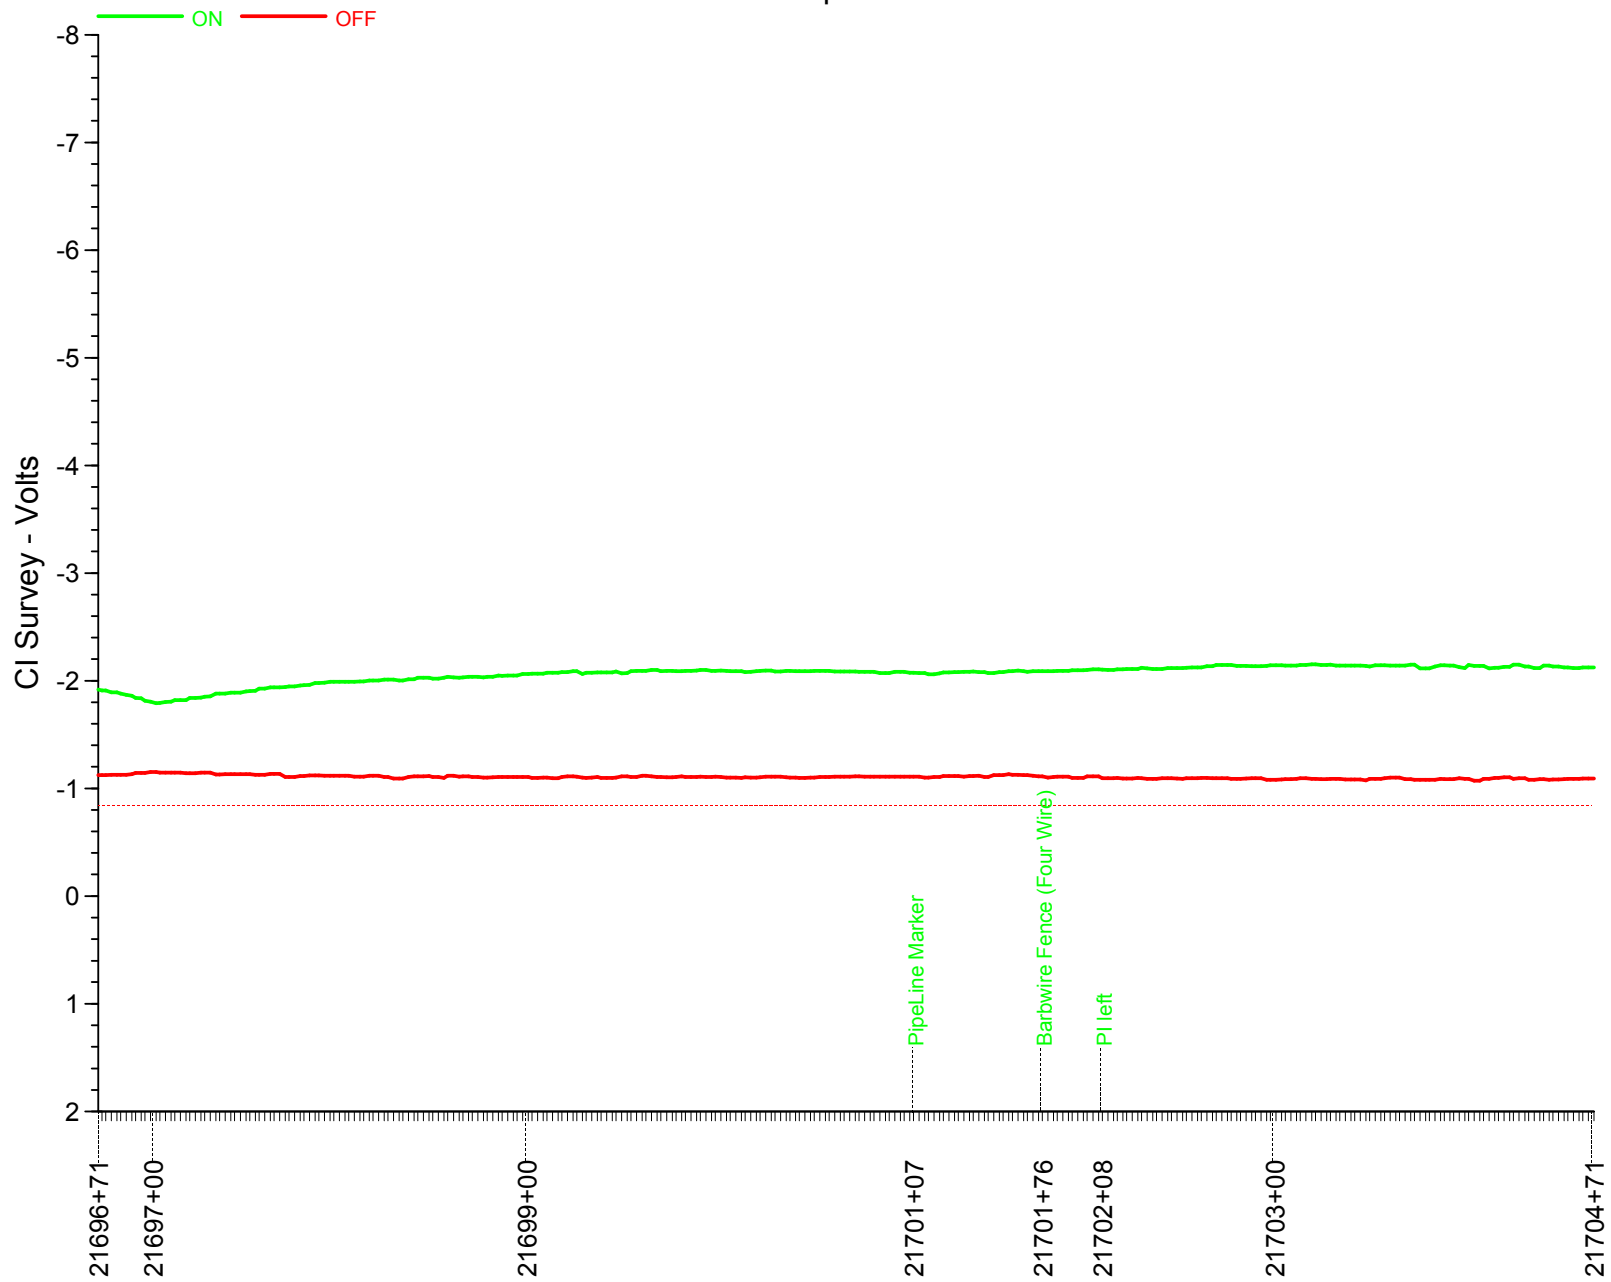

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

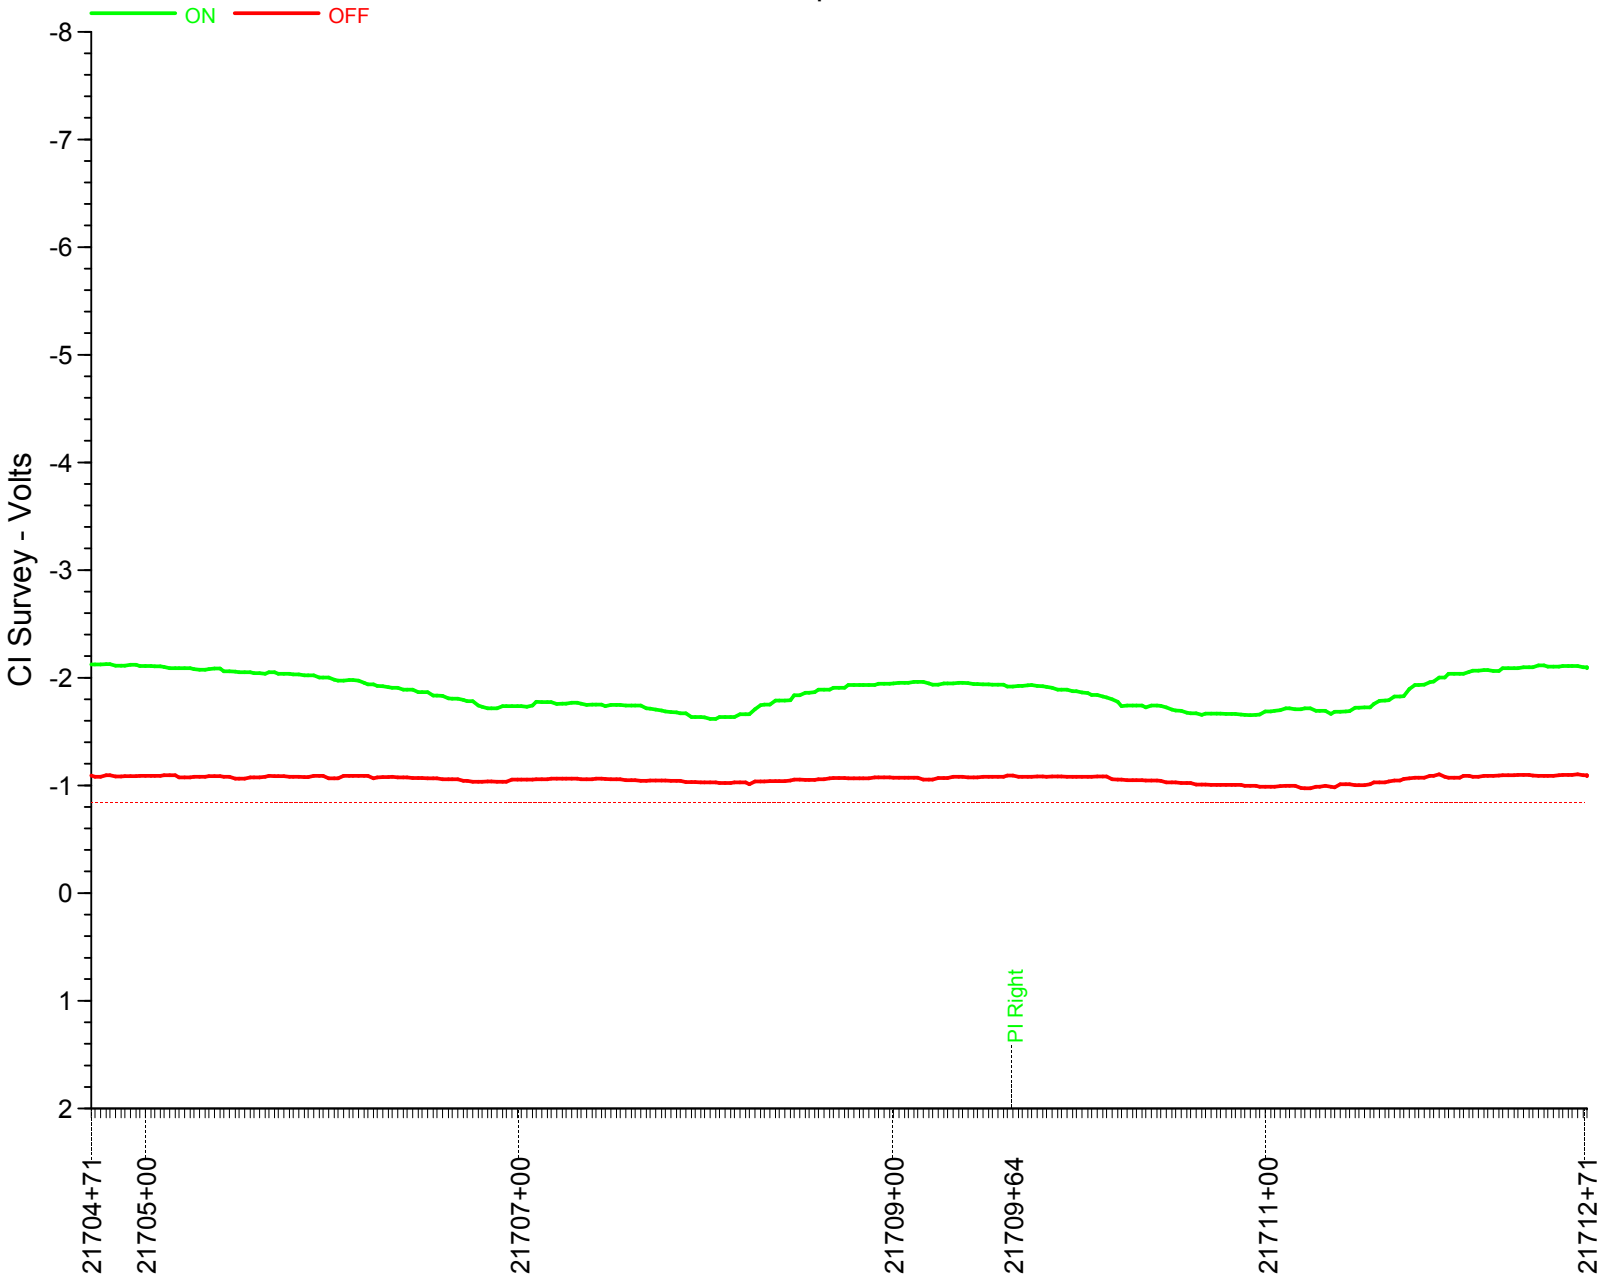

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

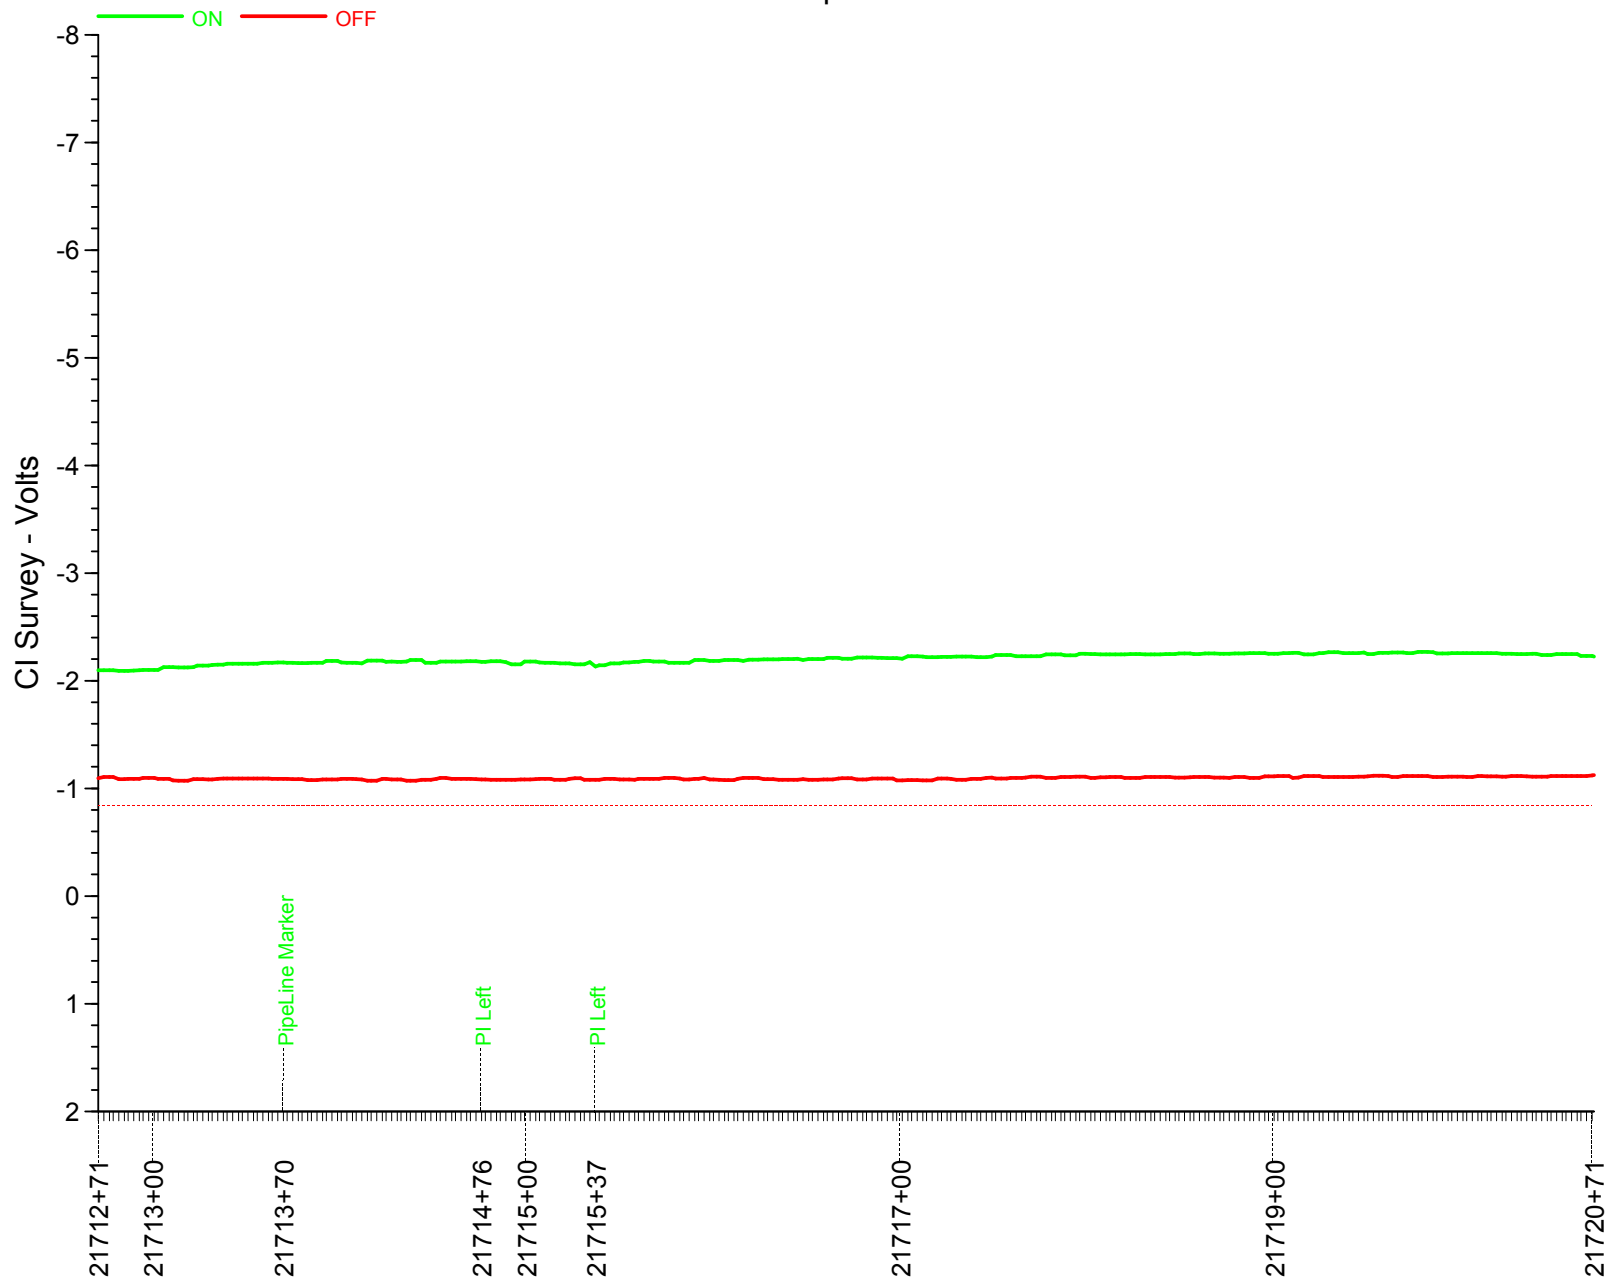

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

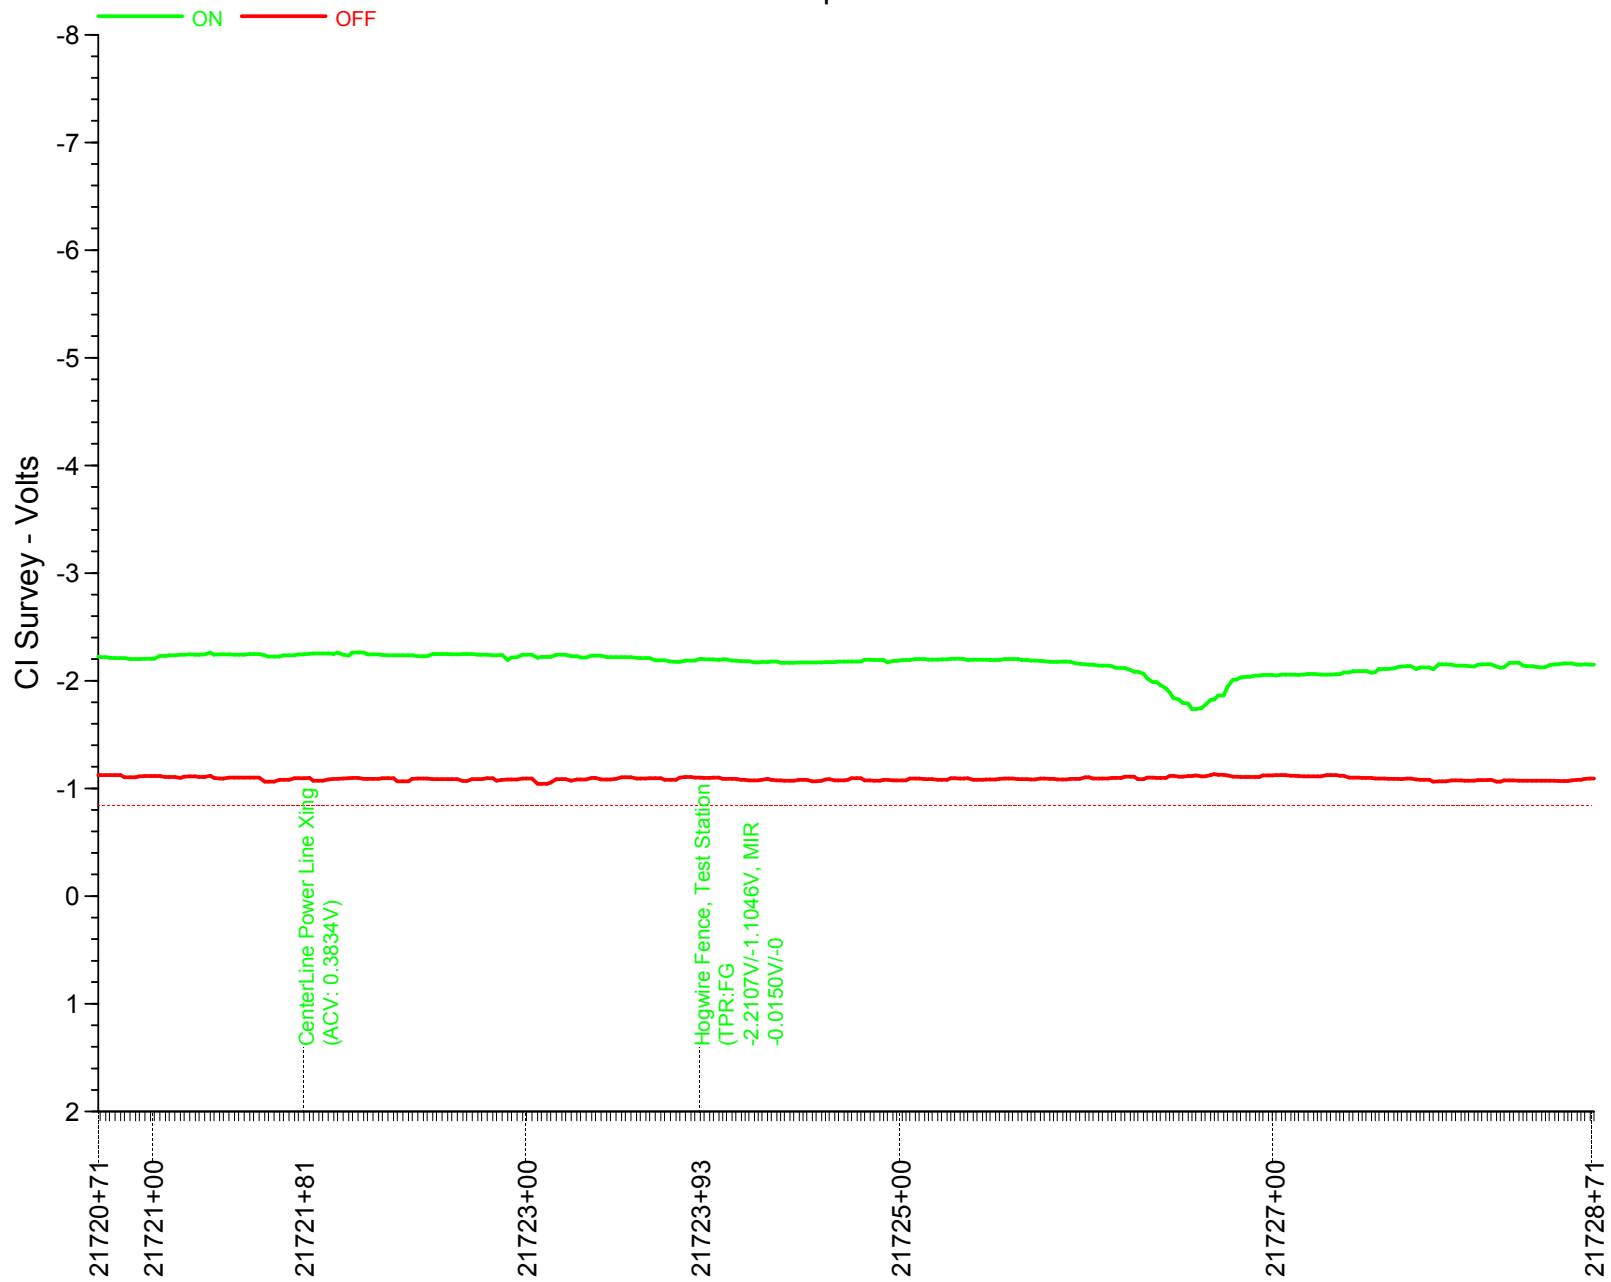

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

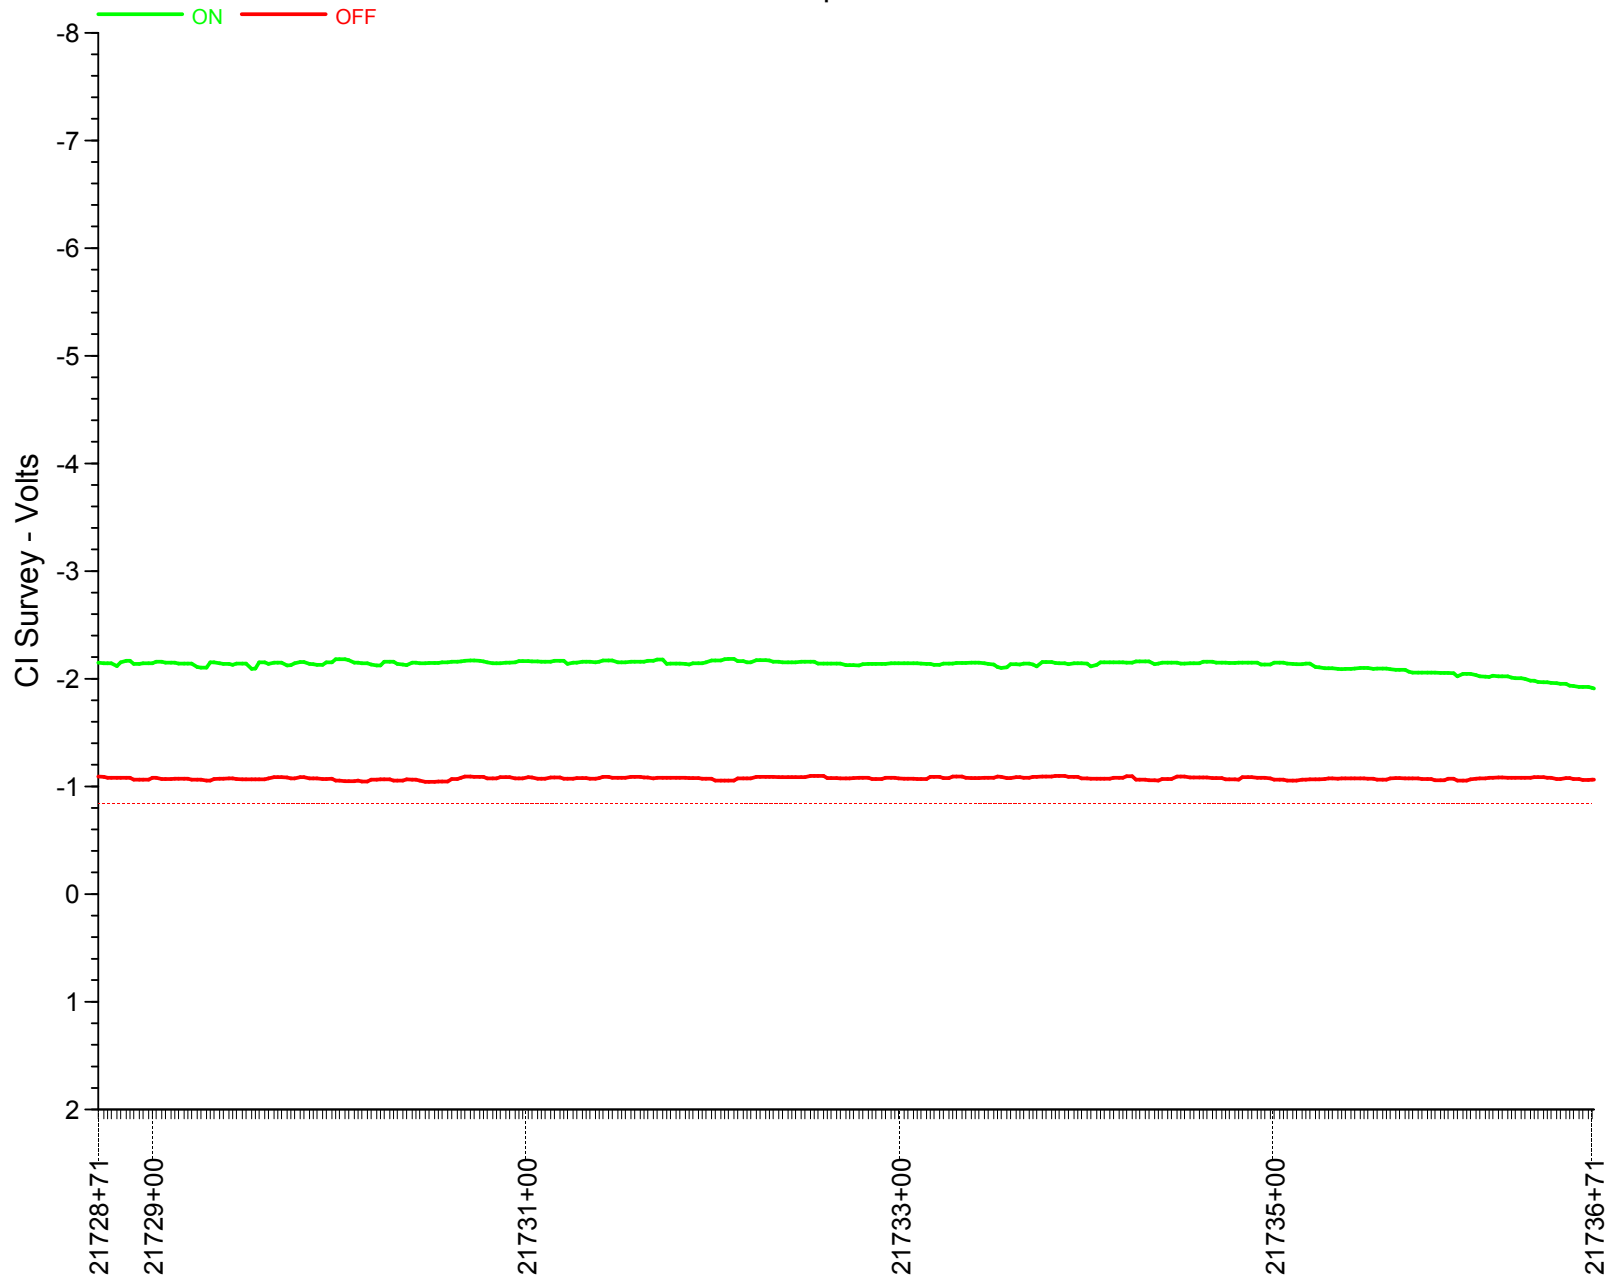


100 Feet/Inch

CP Data Manager 11/28/12 Page 21

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

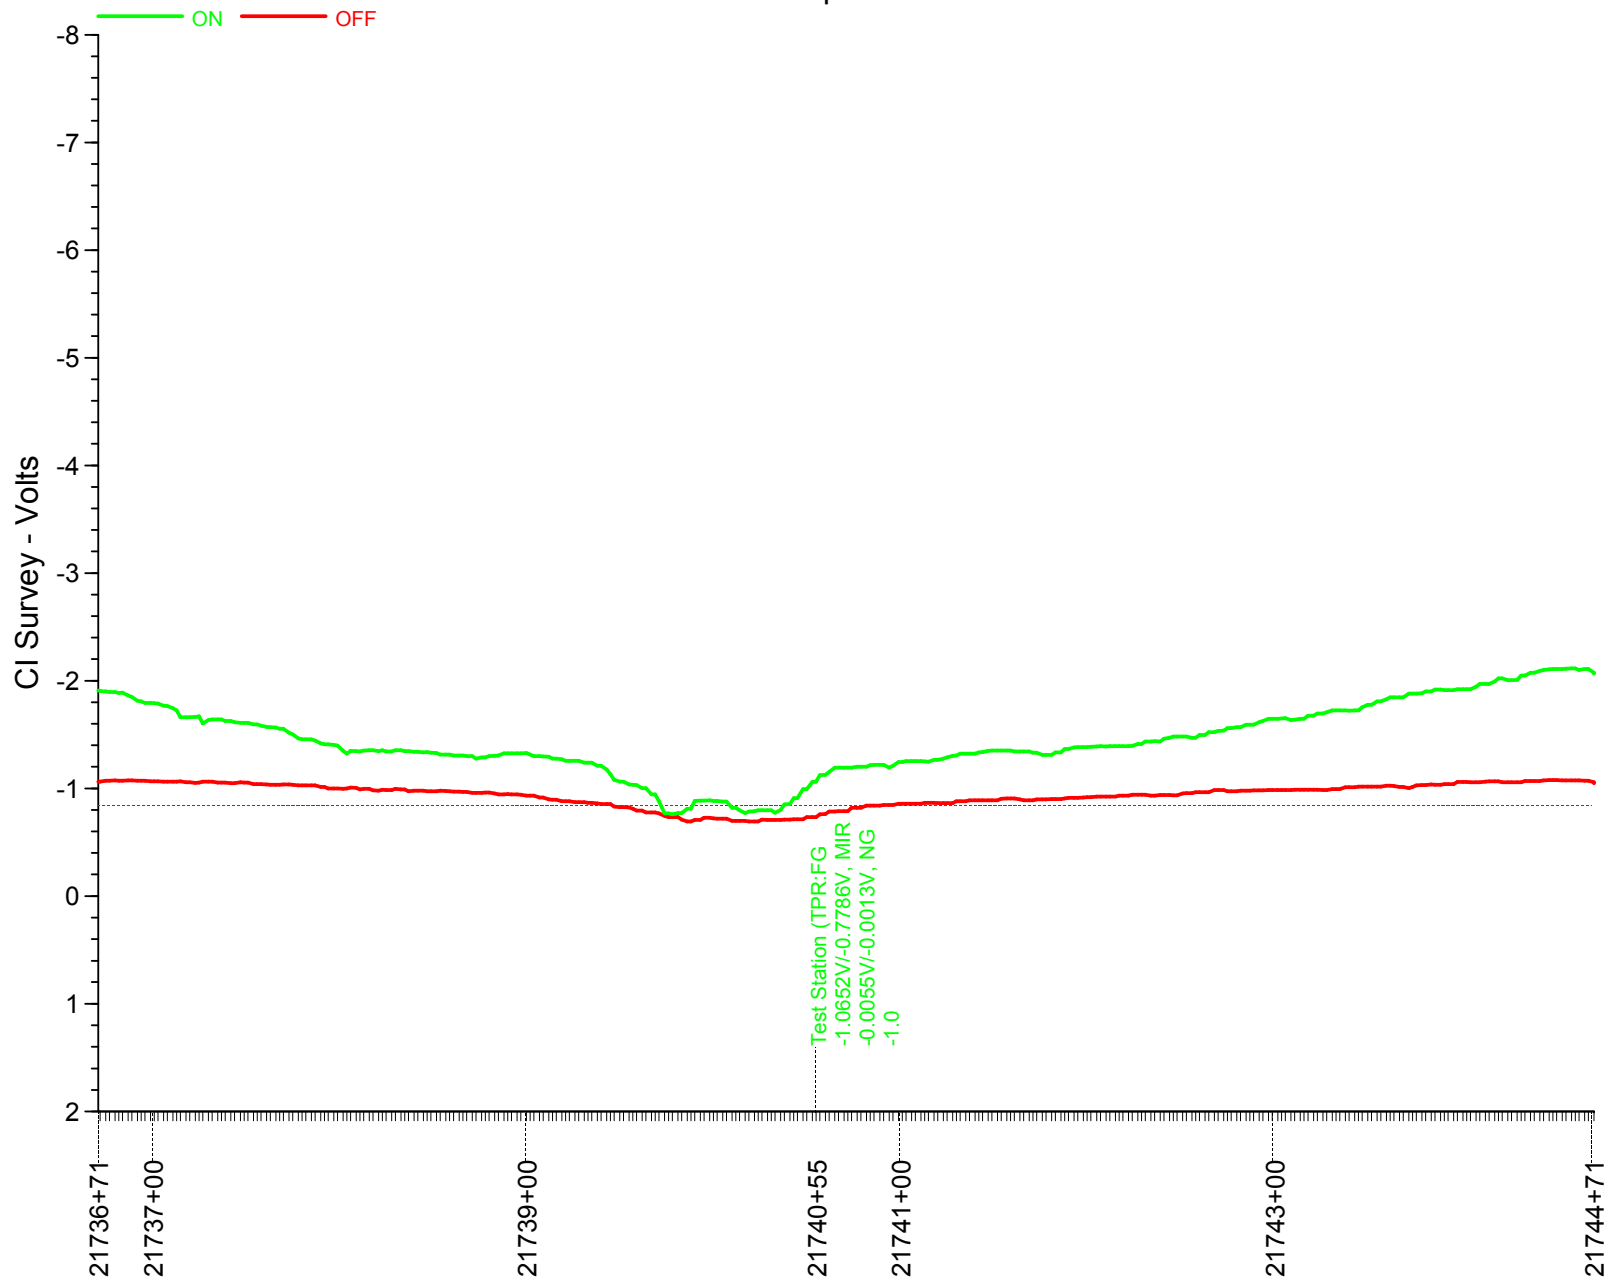

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

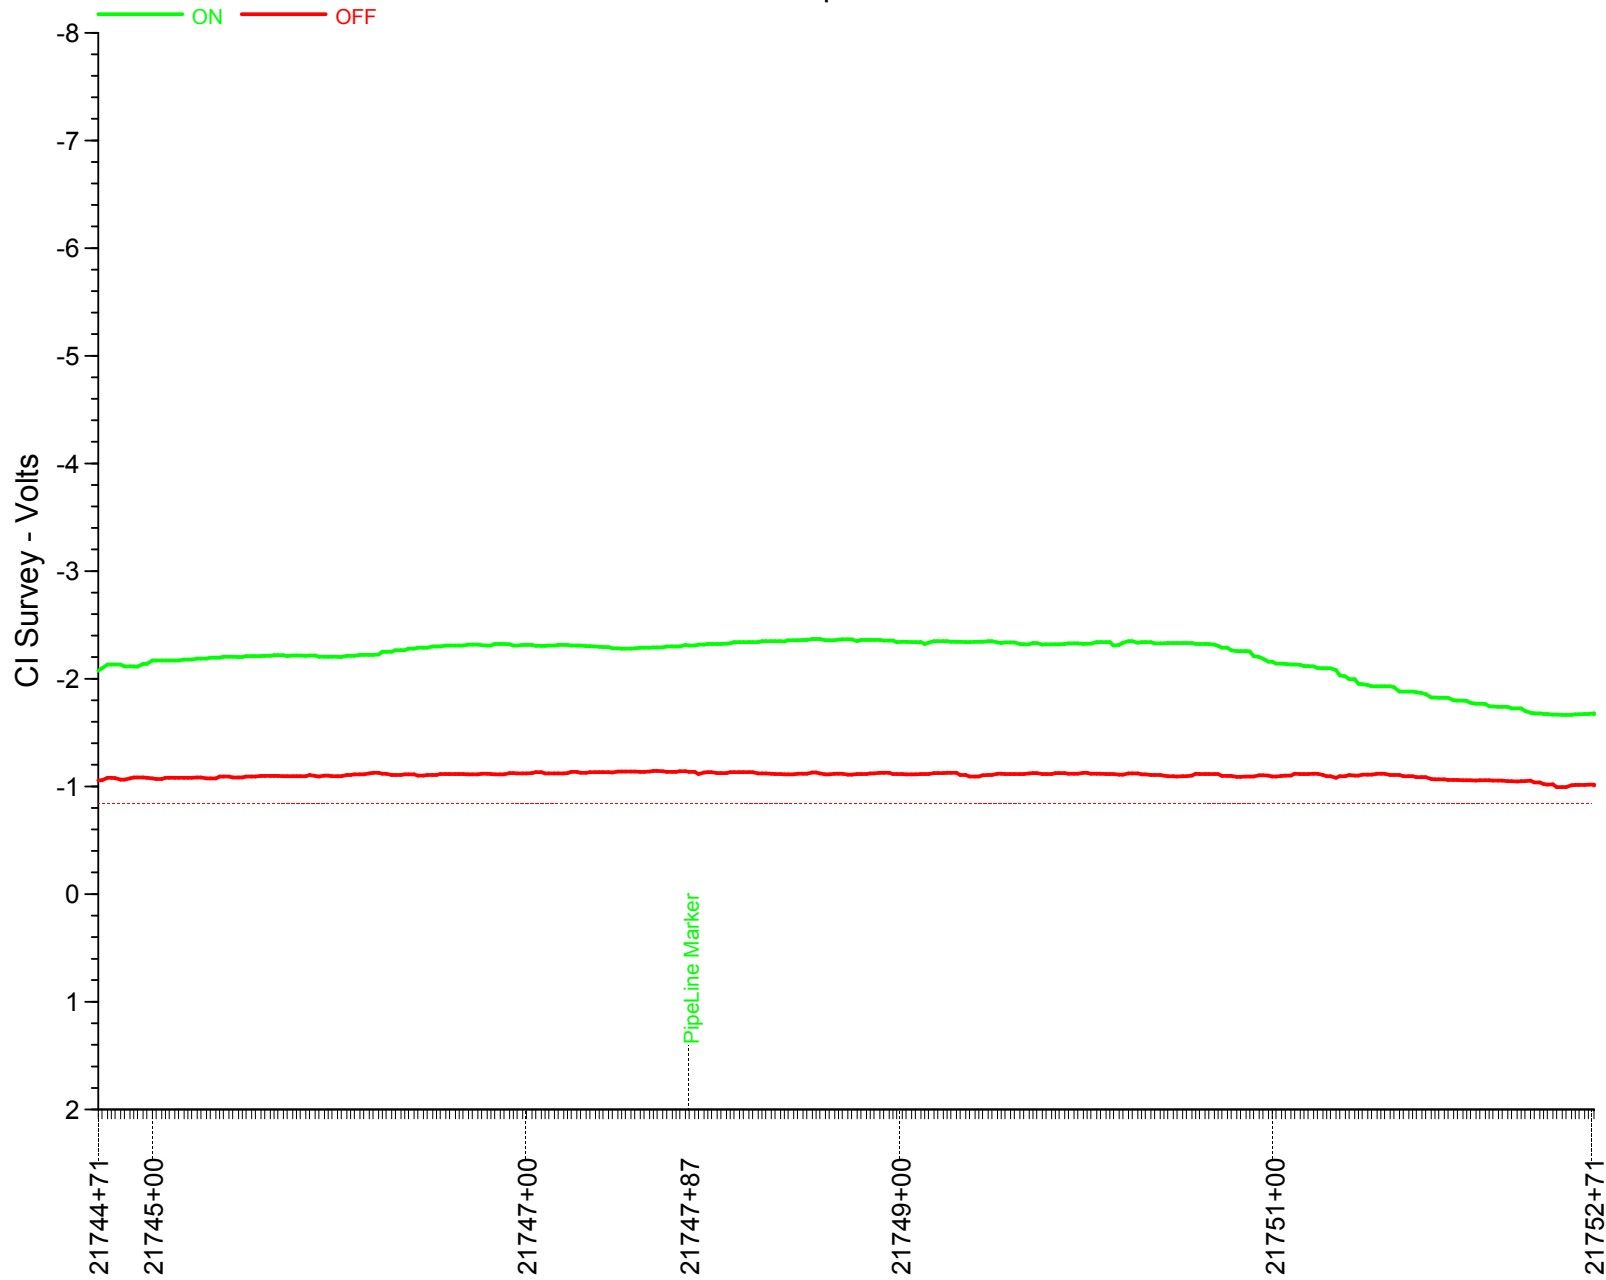


100 Feet/Inch

CP Data Manager 11/28/12 Page 23

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION




Pipe: 1

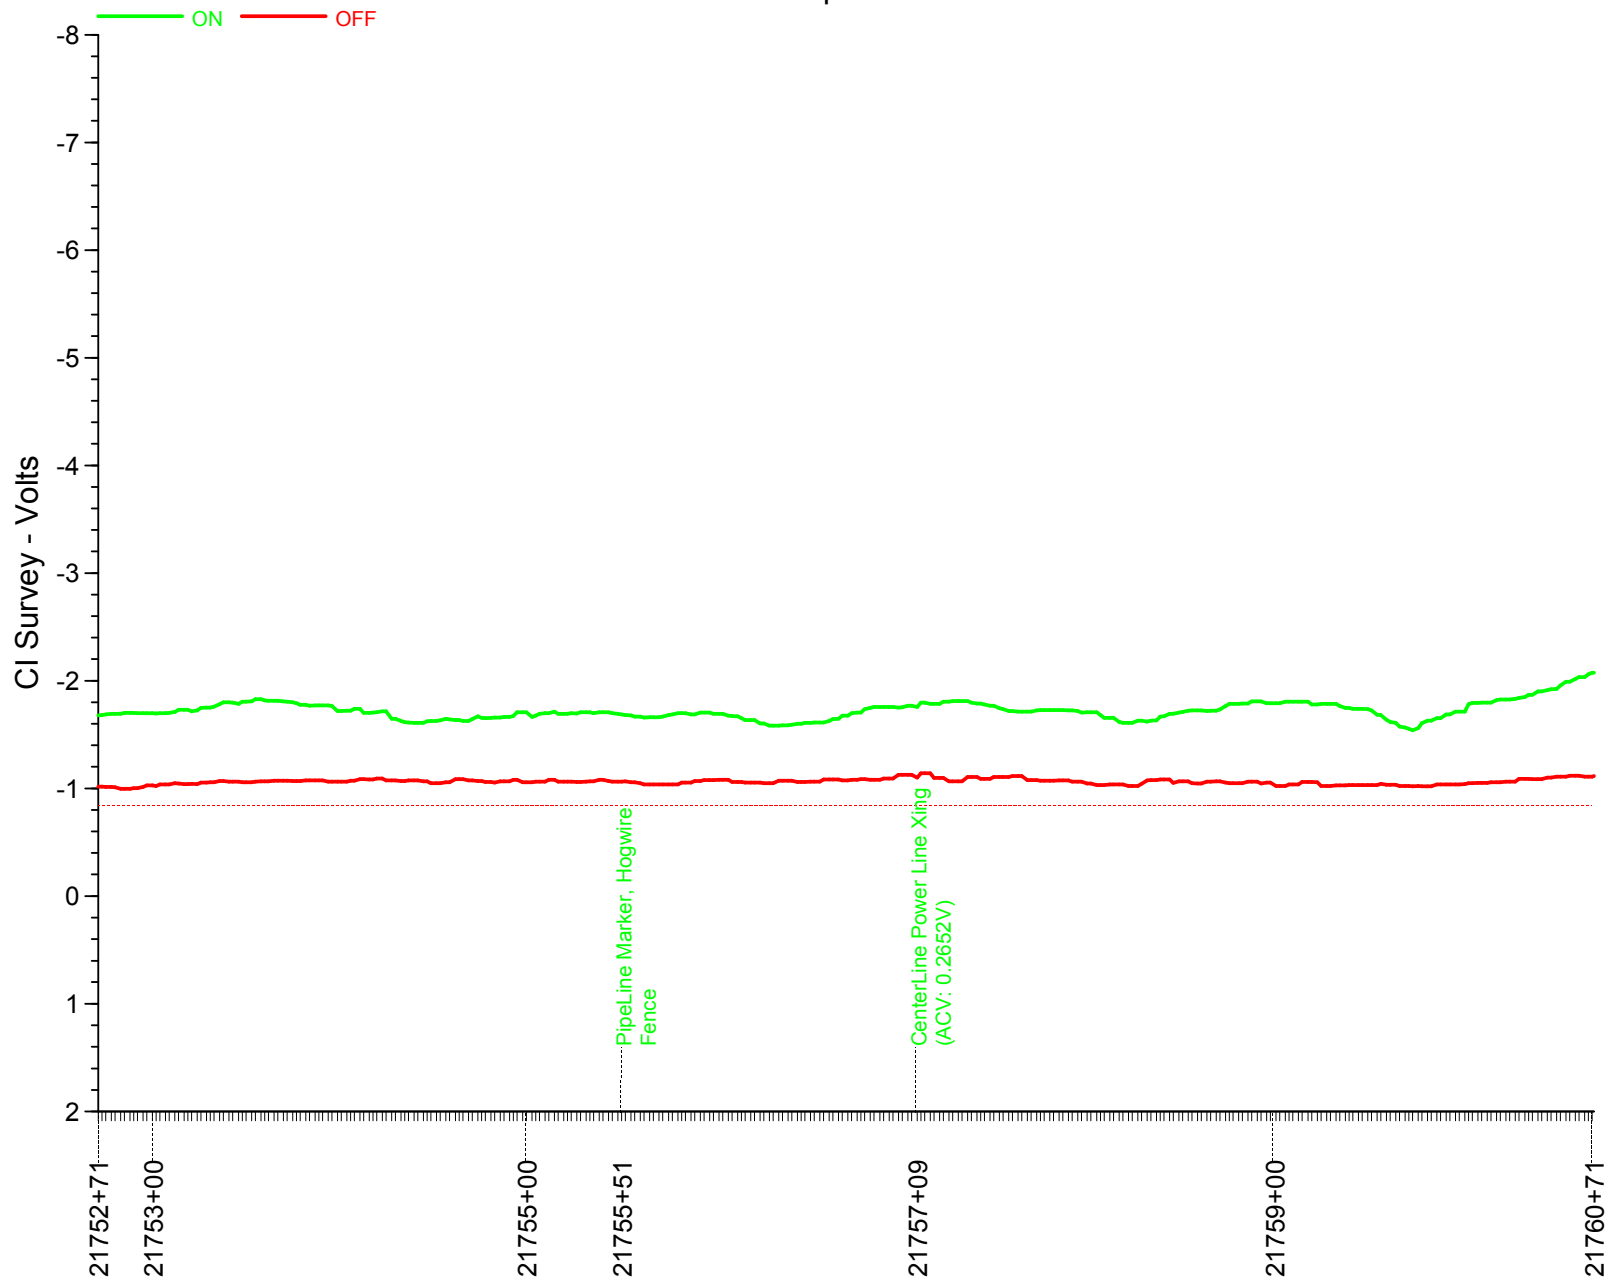

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

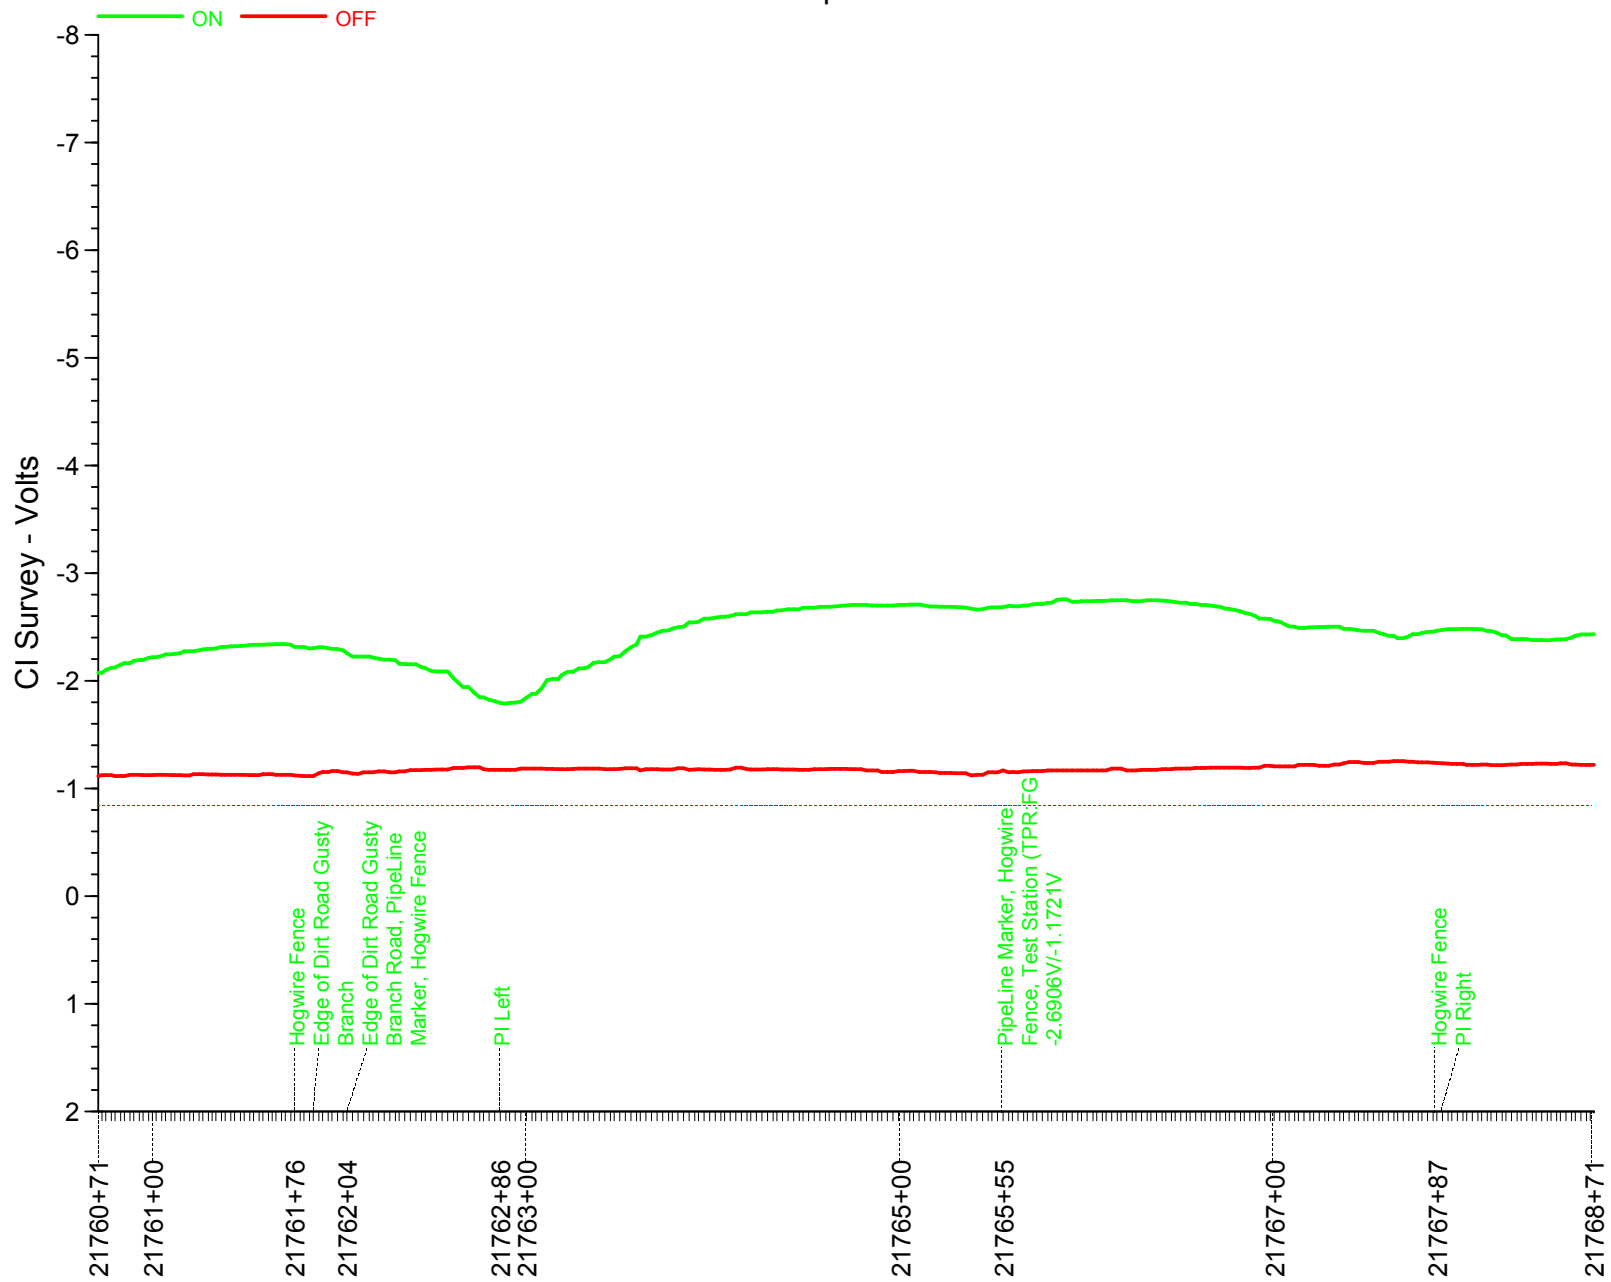

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1



100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

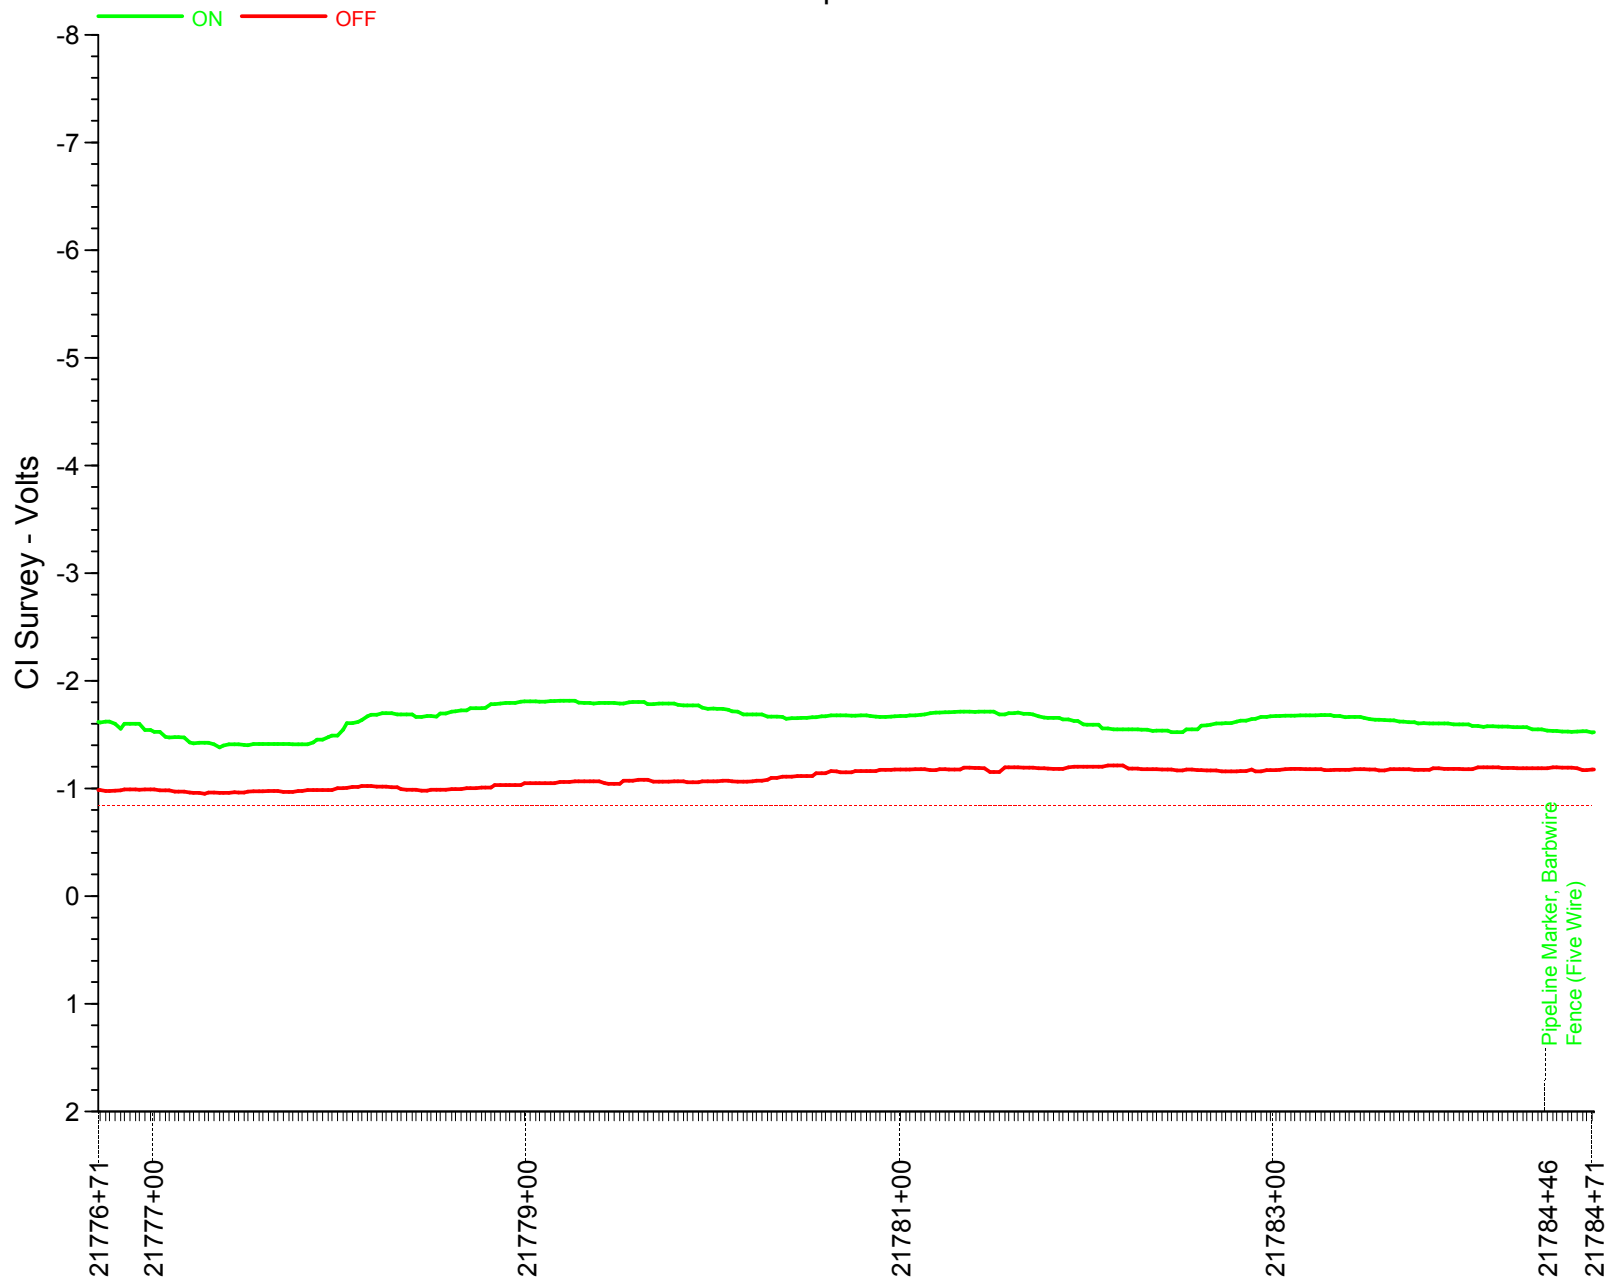

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

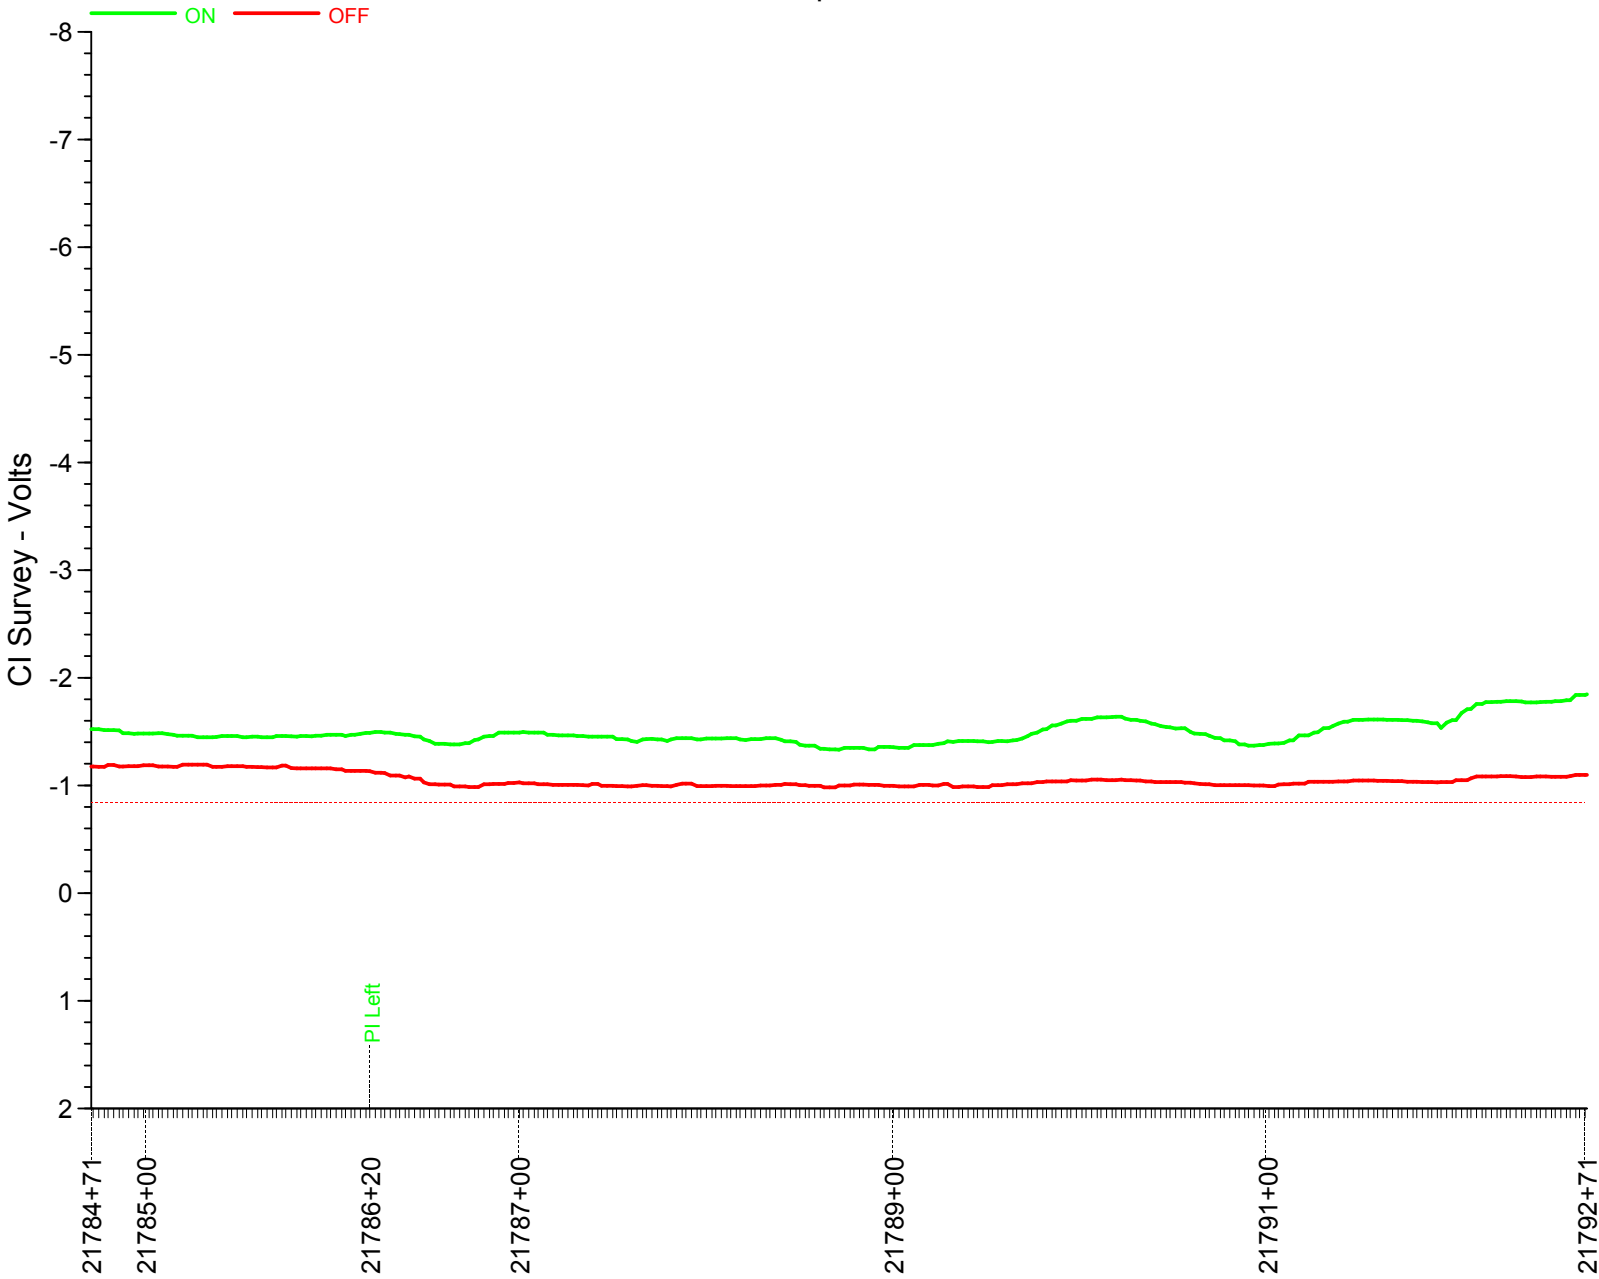

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

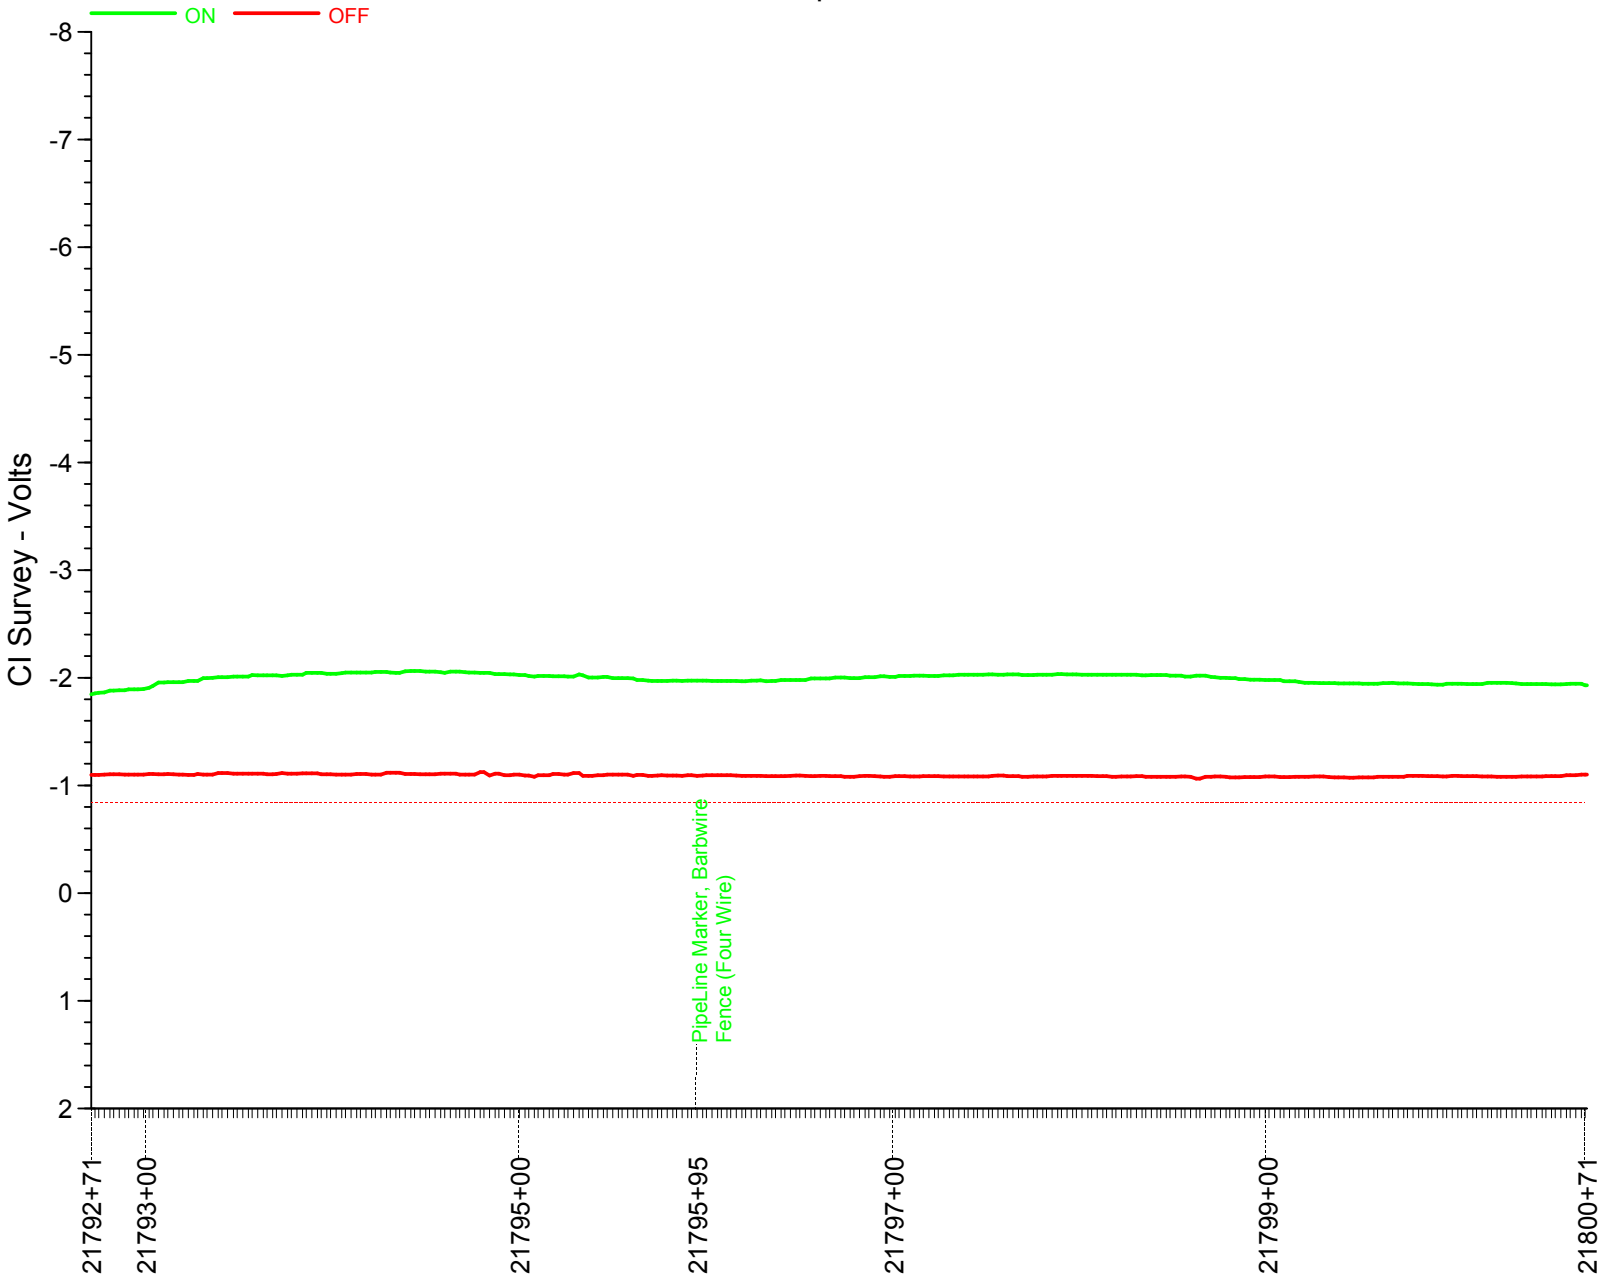

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

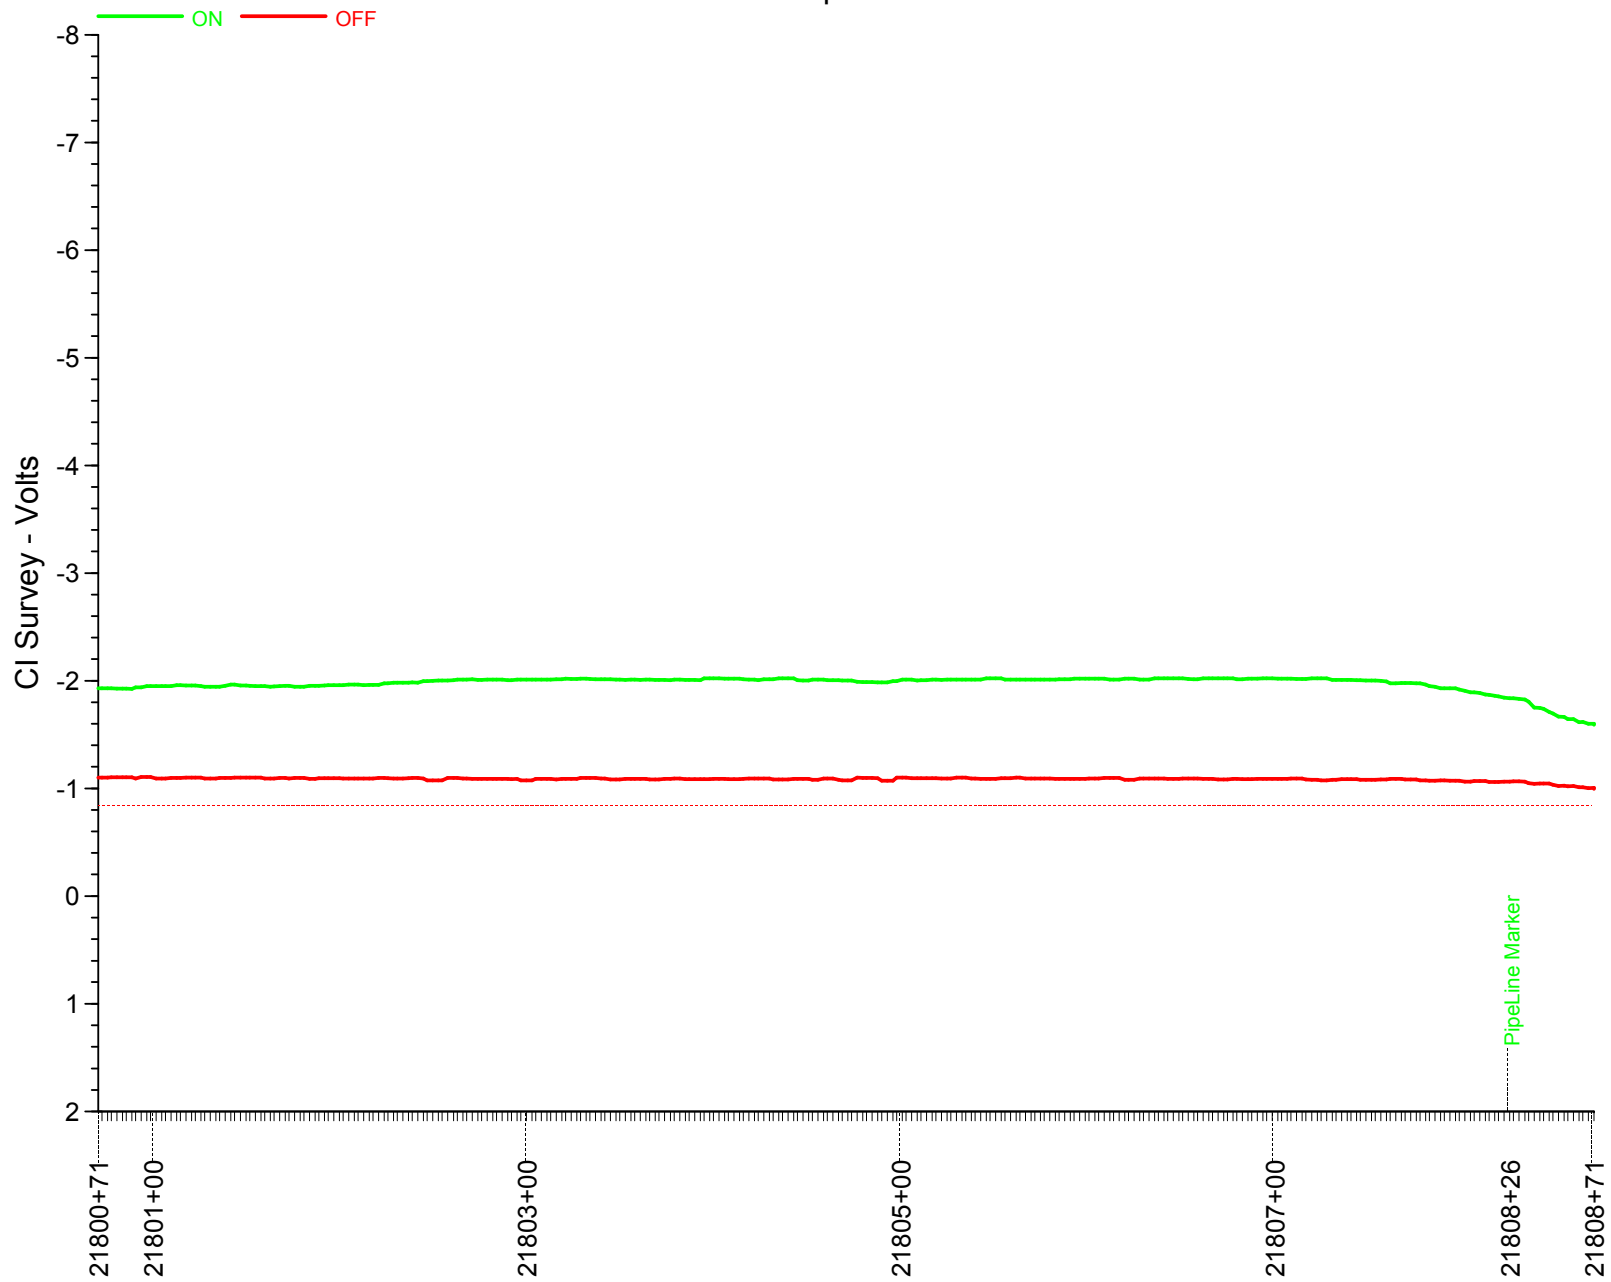

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

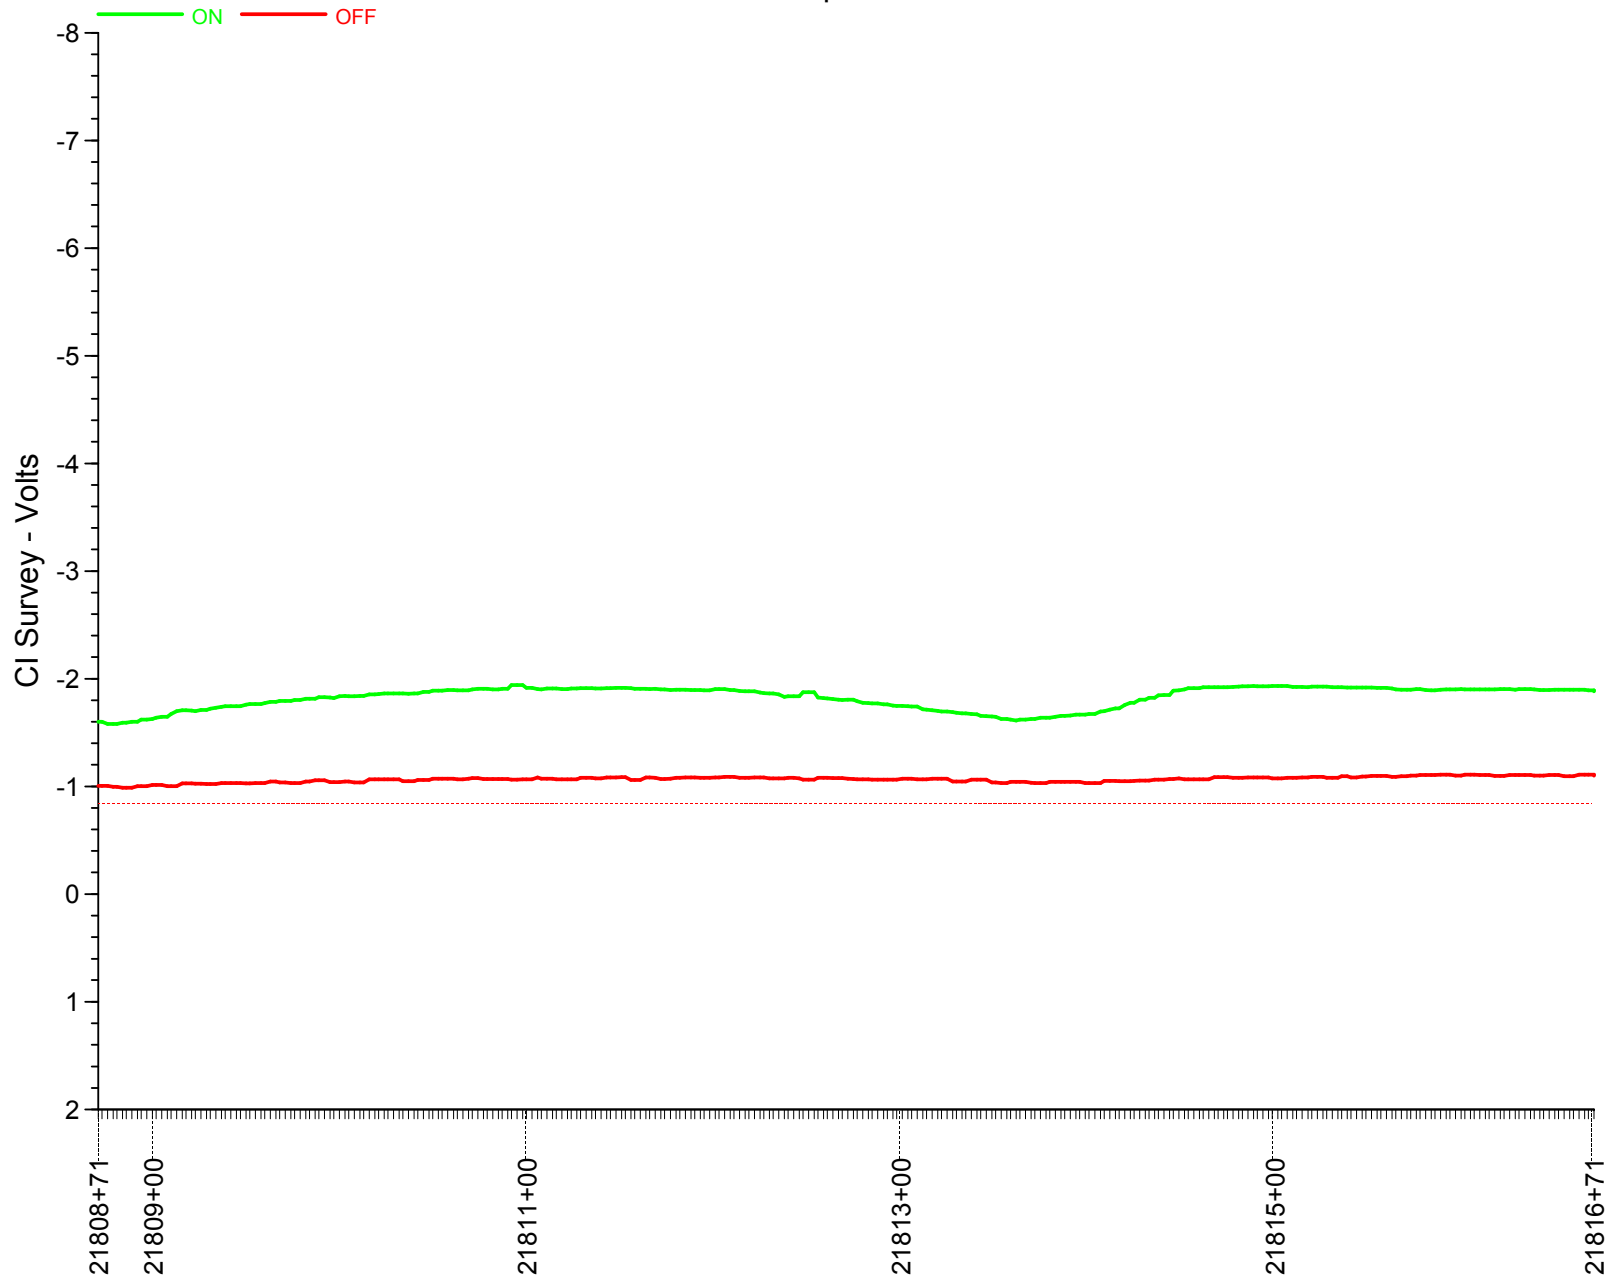


100 Feet/Inch

CP Data Manager 11/28/12 Page 31

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION




Pipe: 1

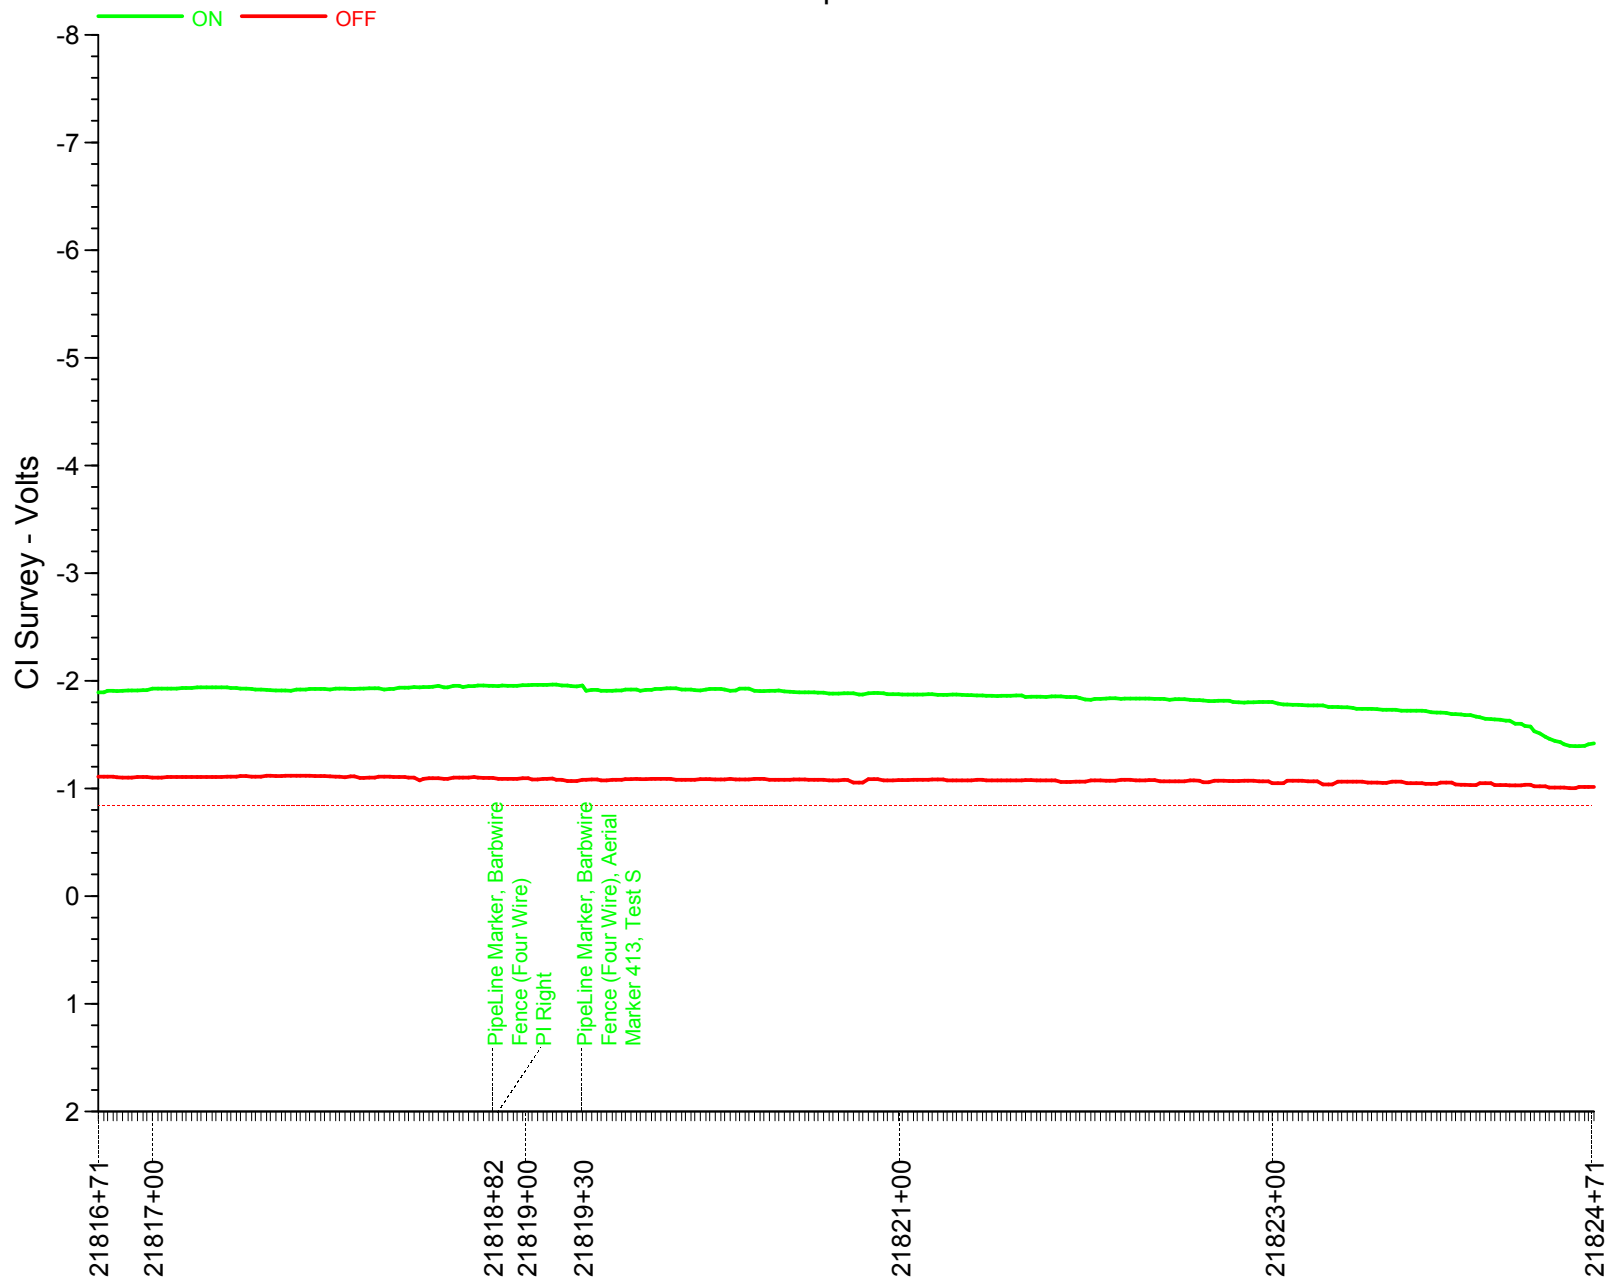

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

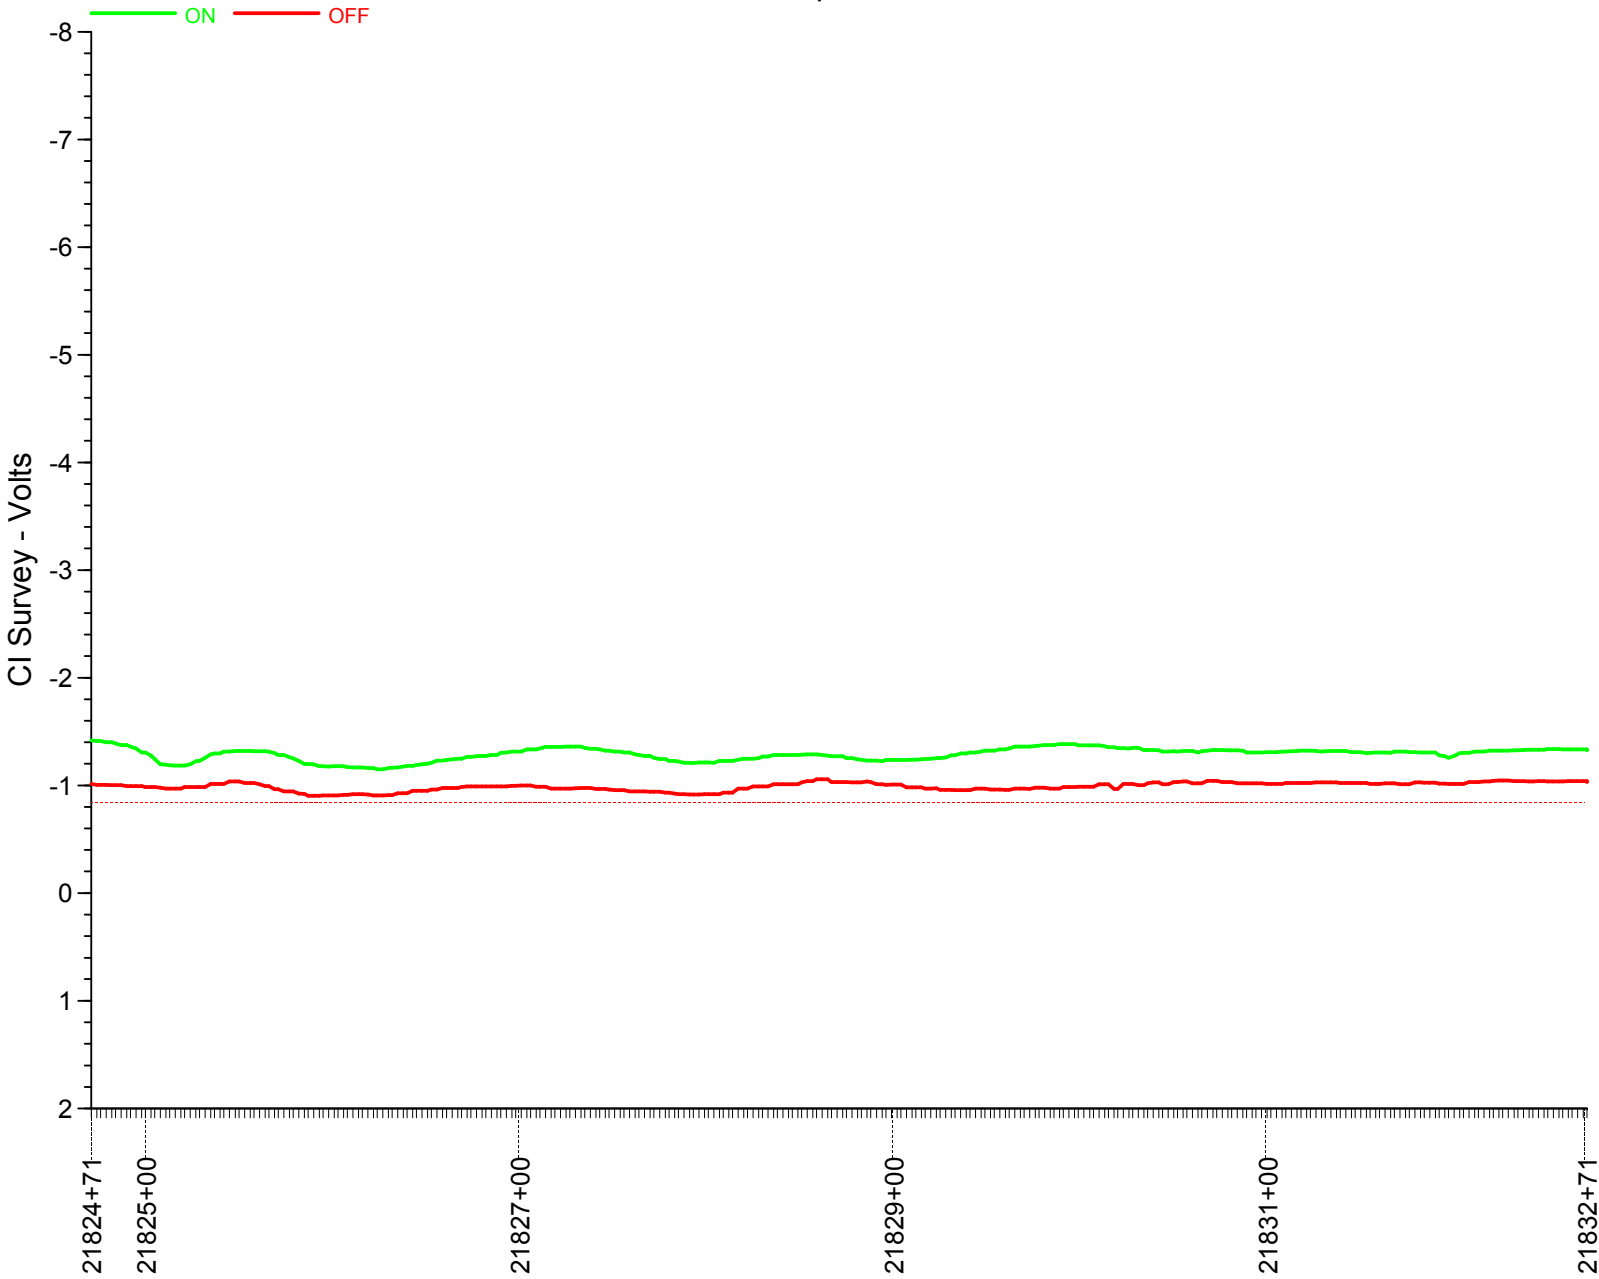

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

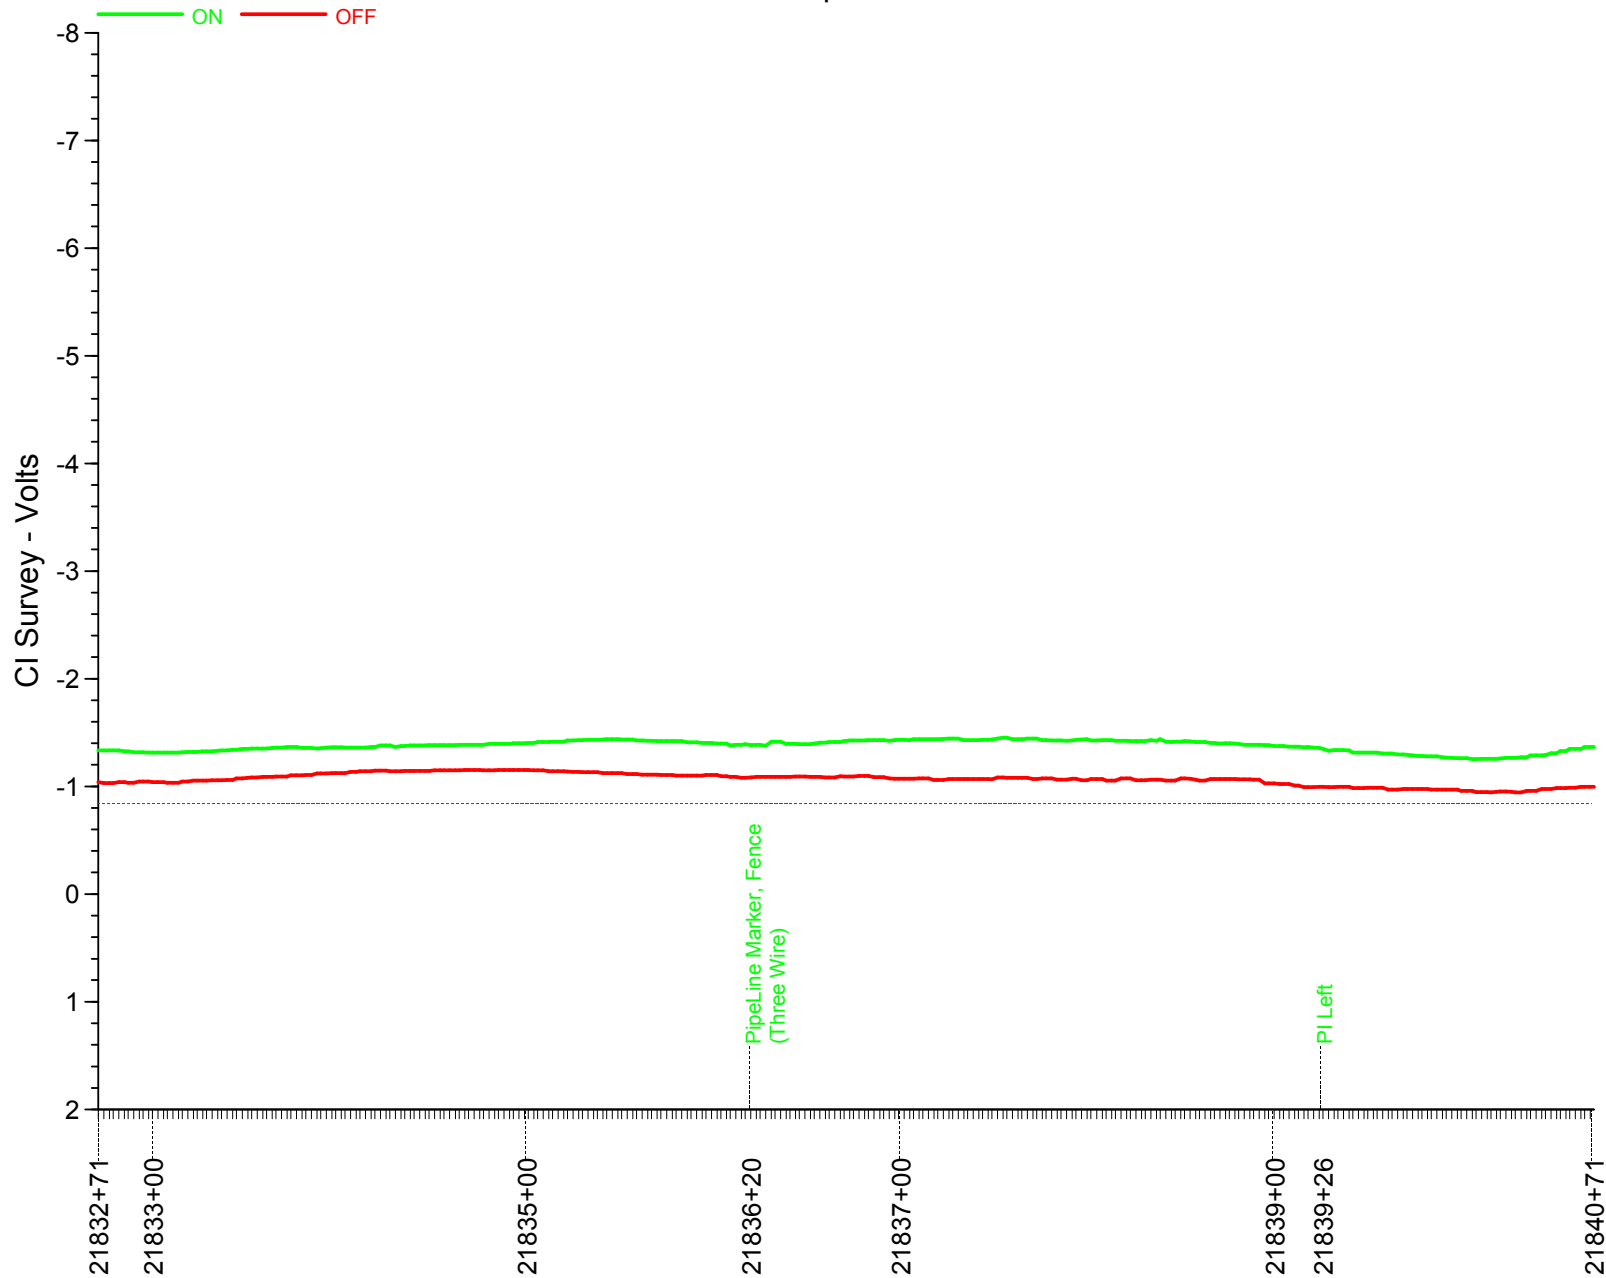

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

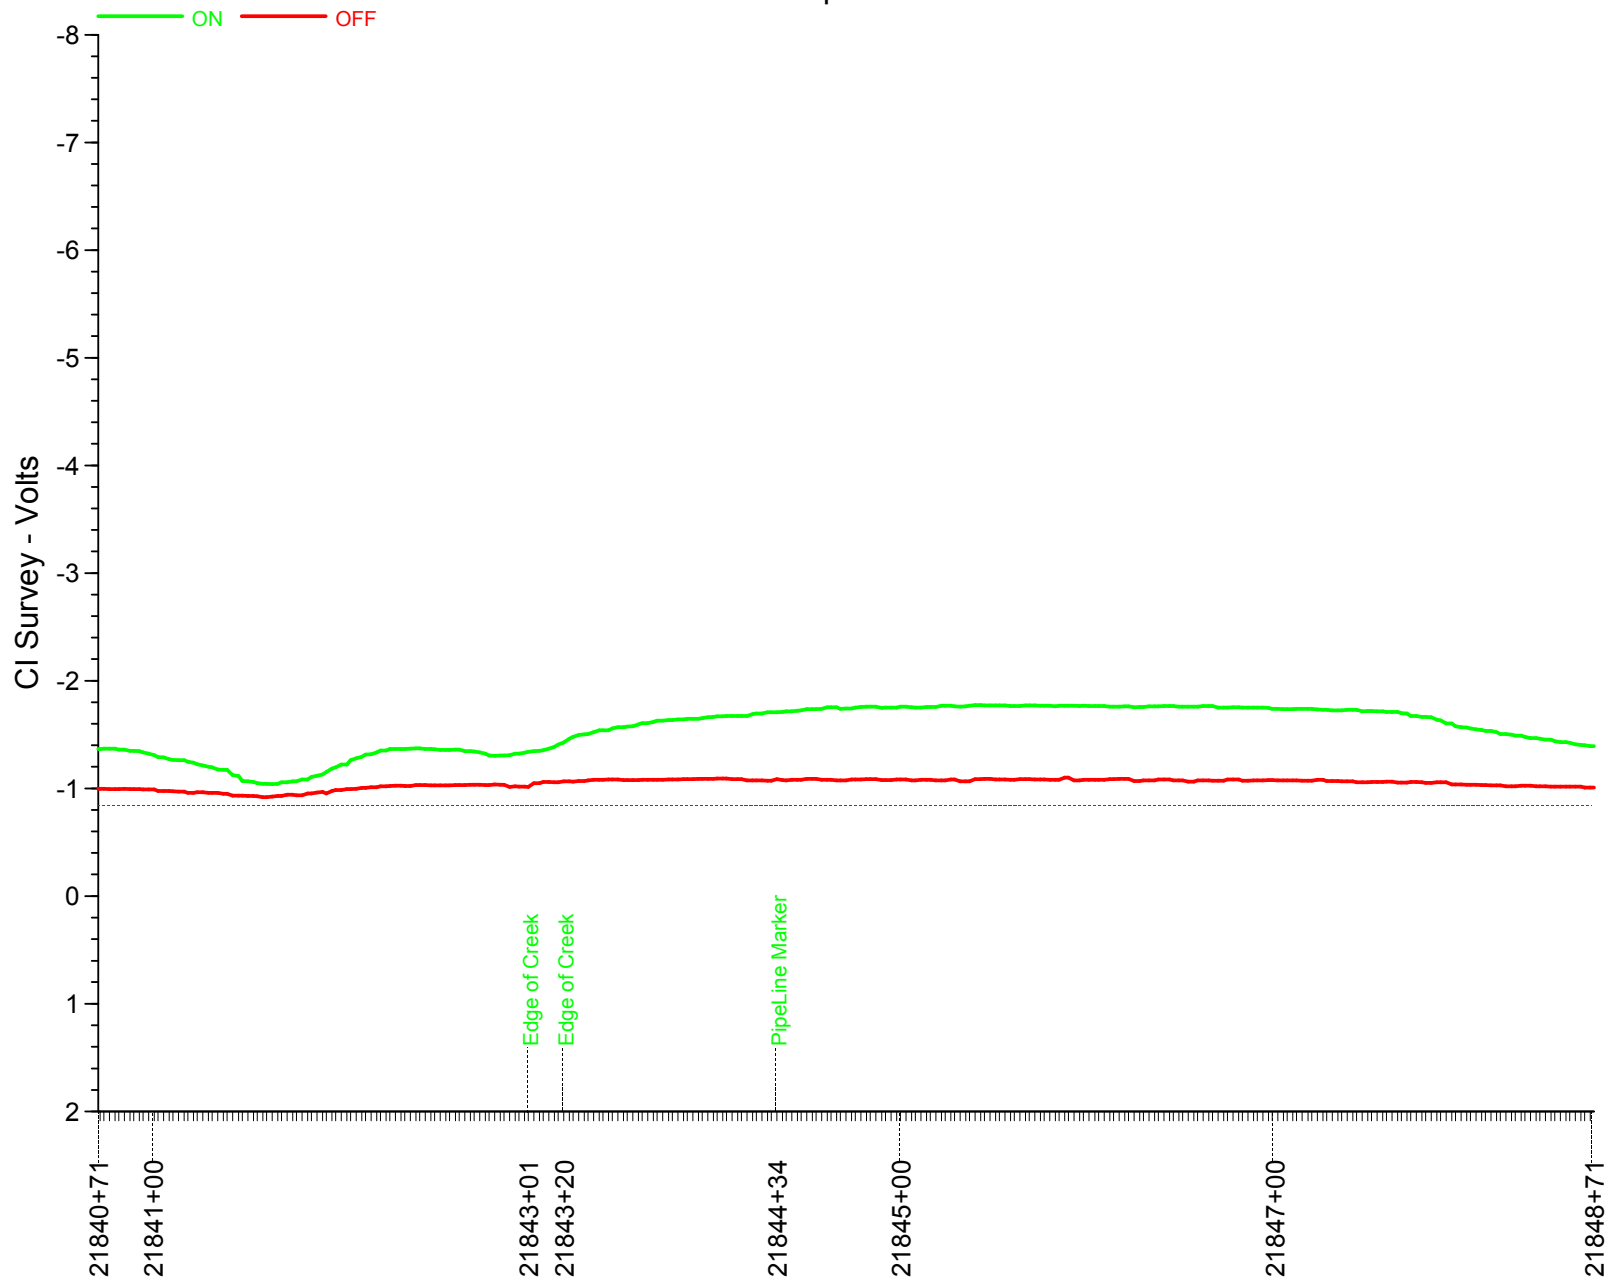

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1



100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

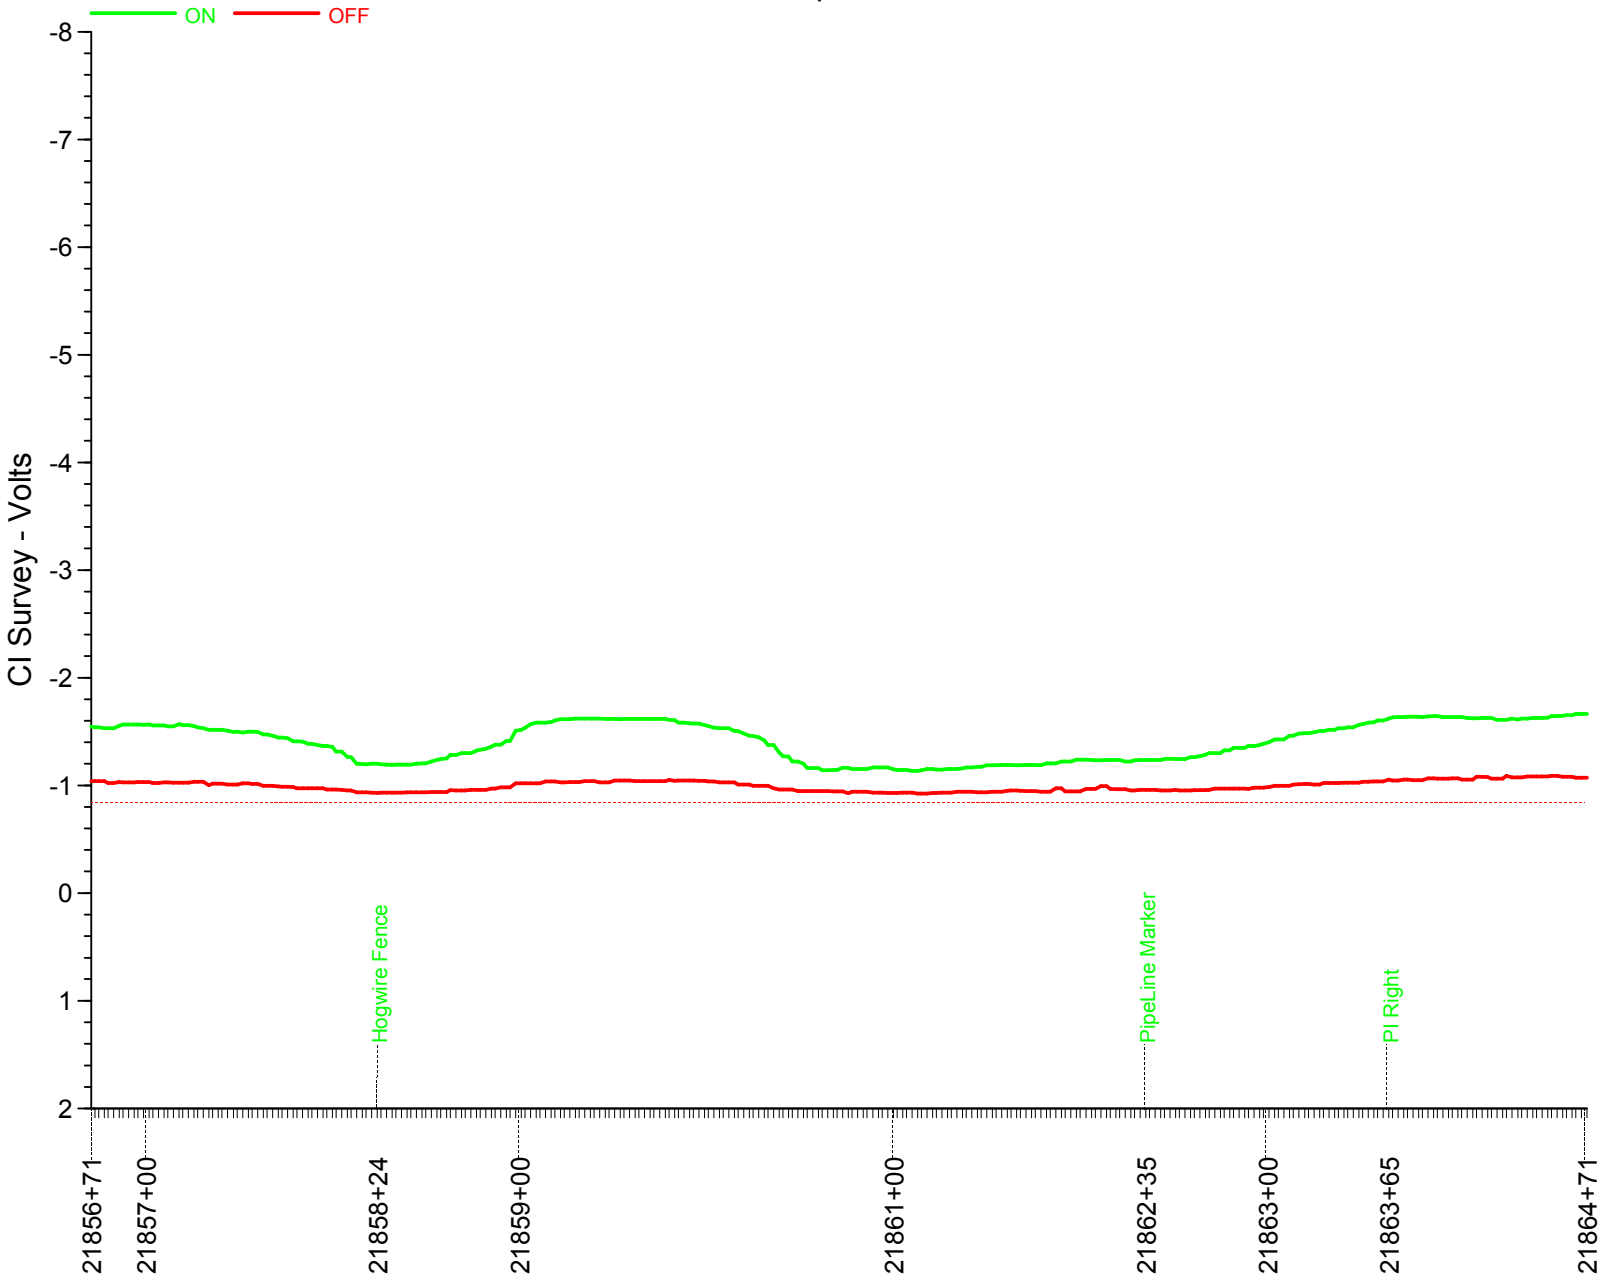

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

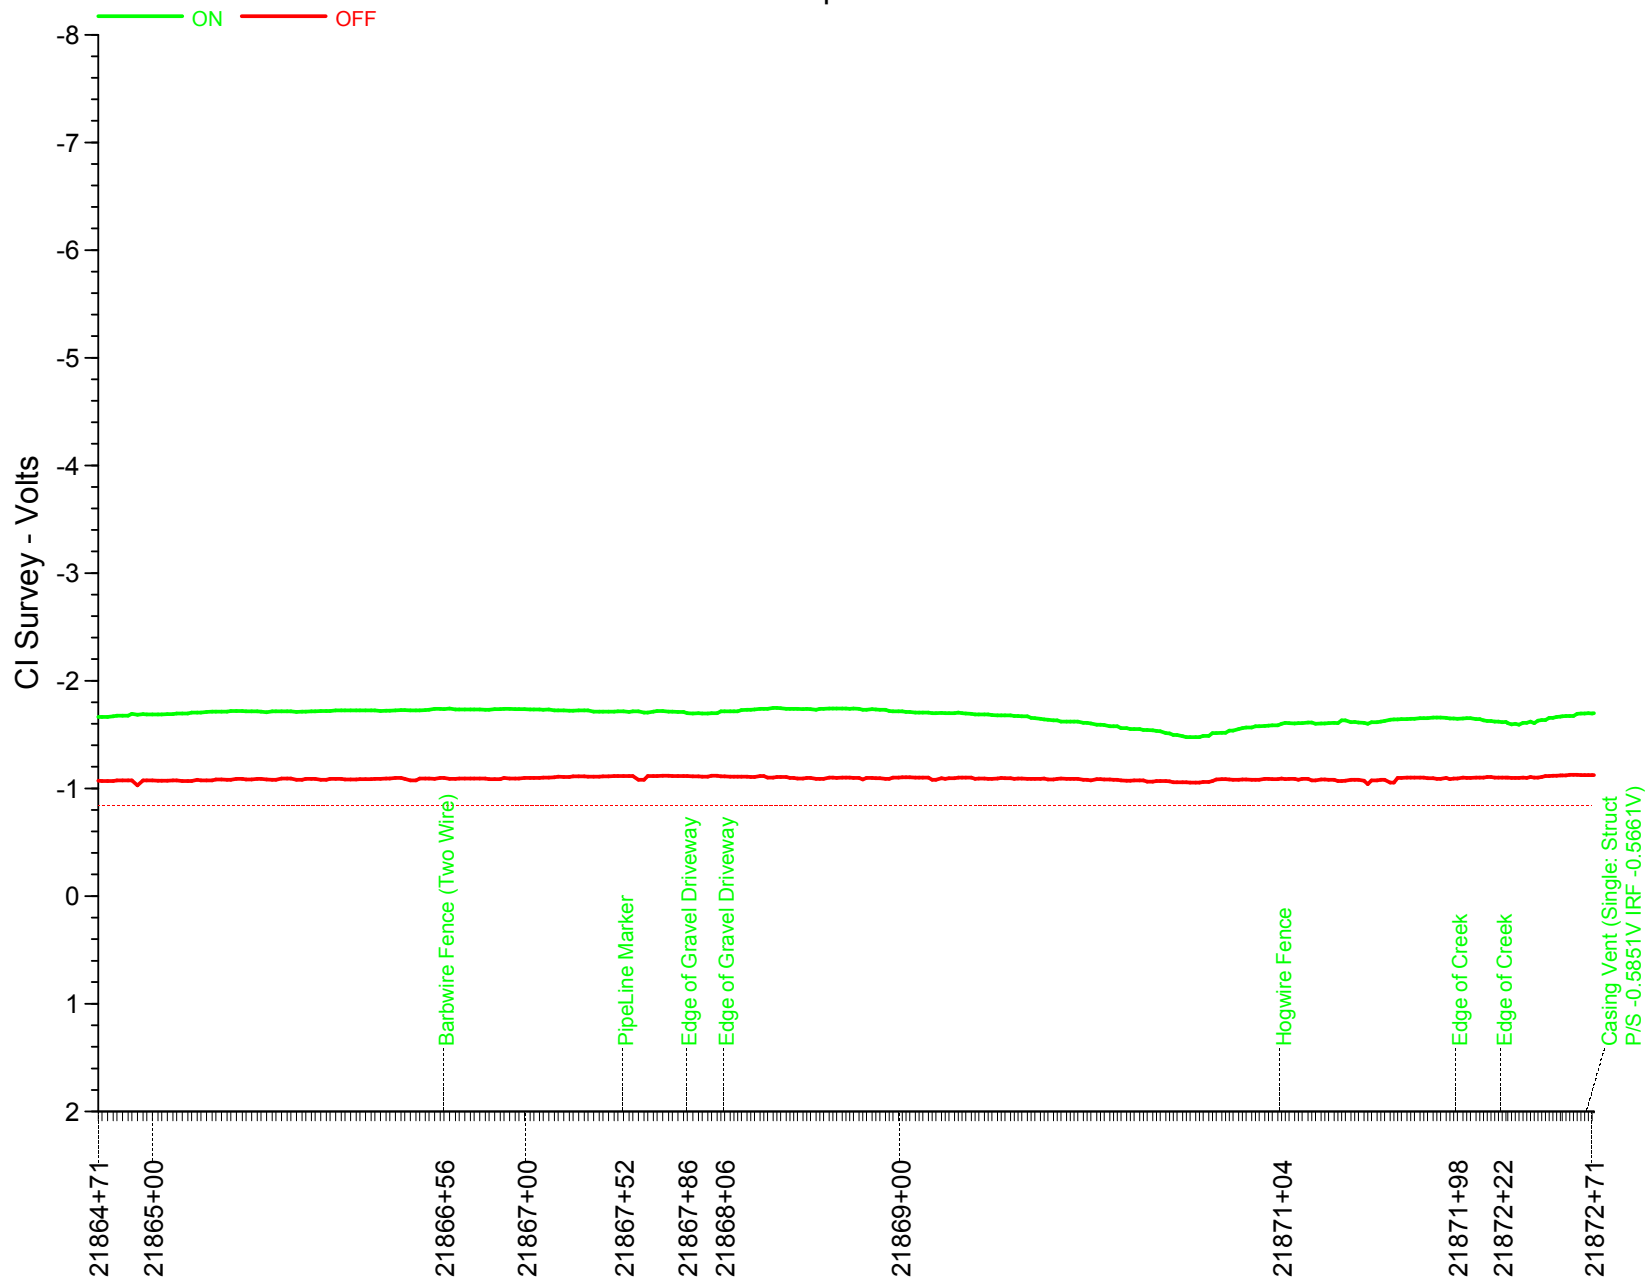

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

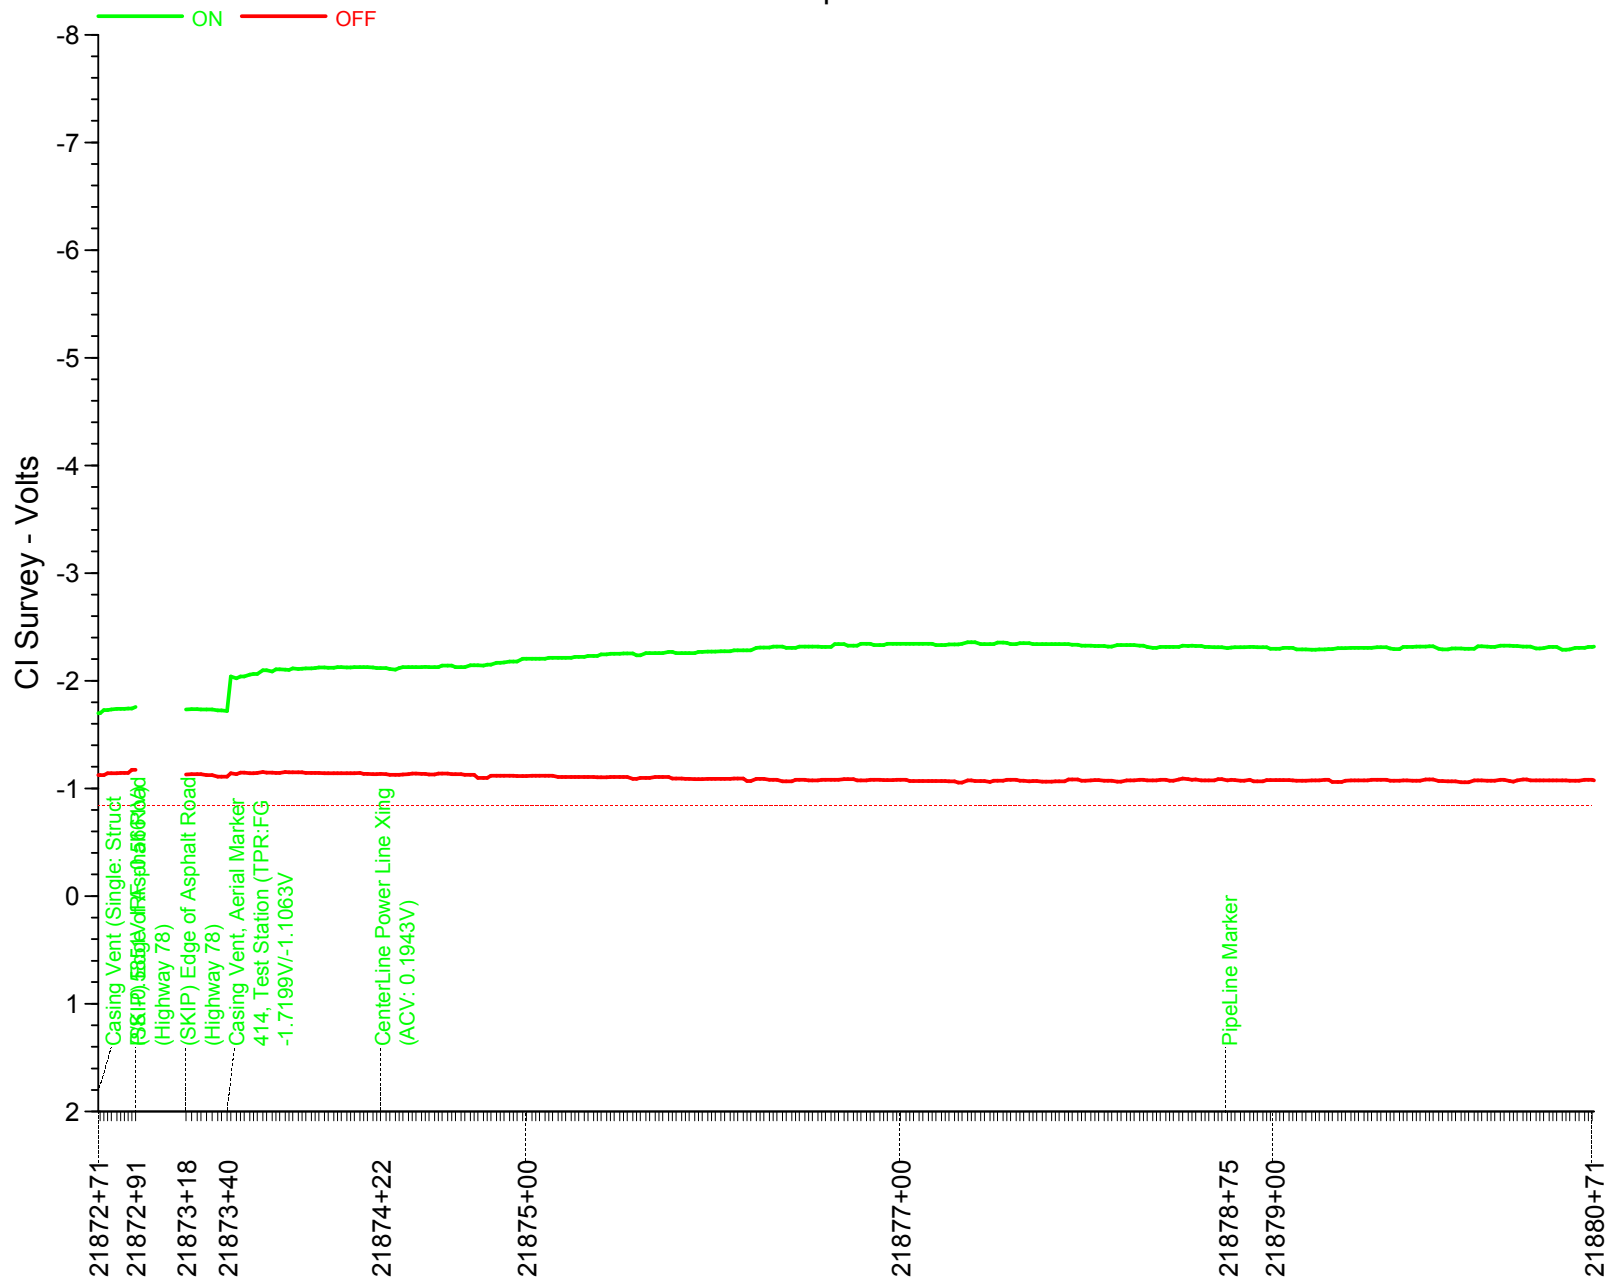


100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION




Pipe: 1

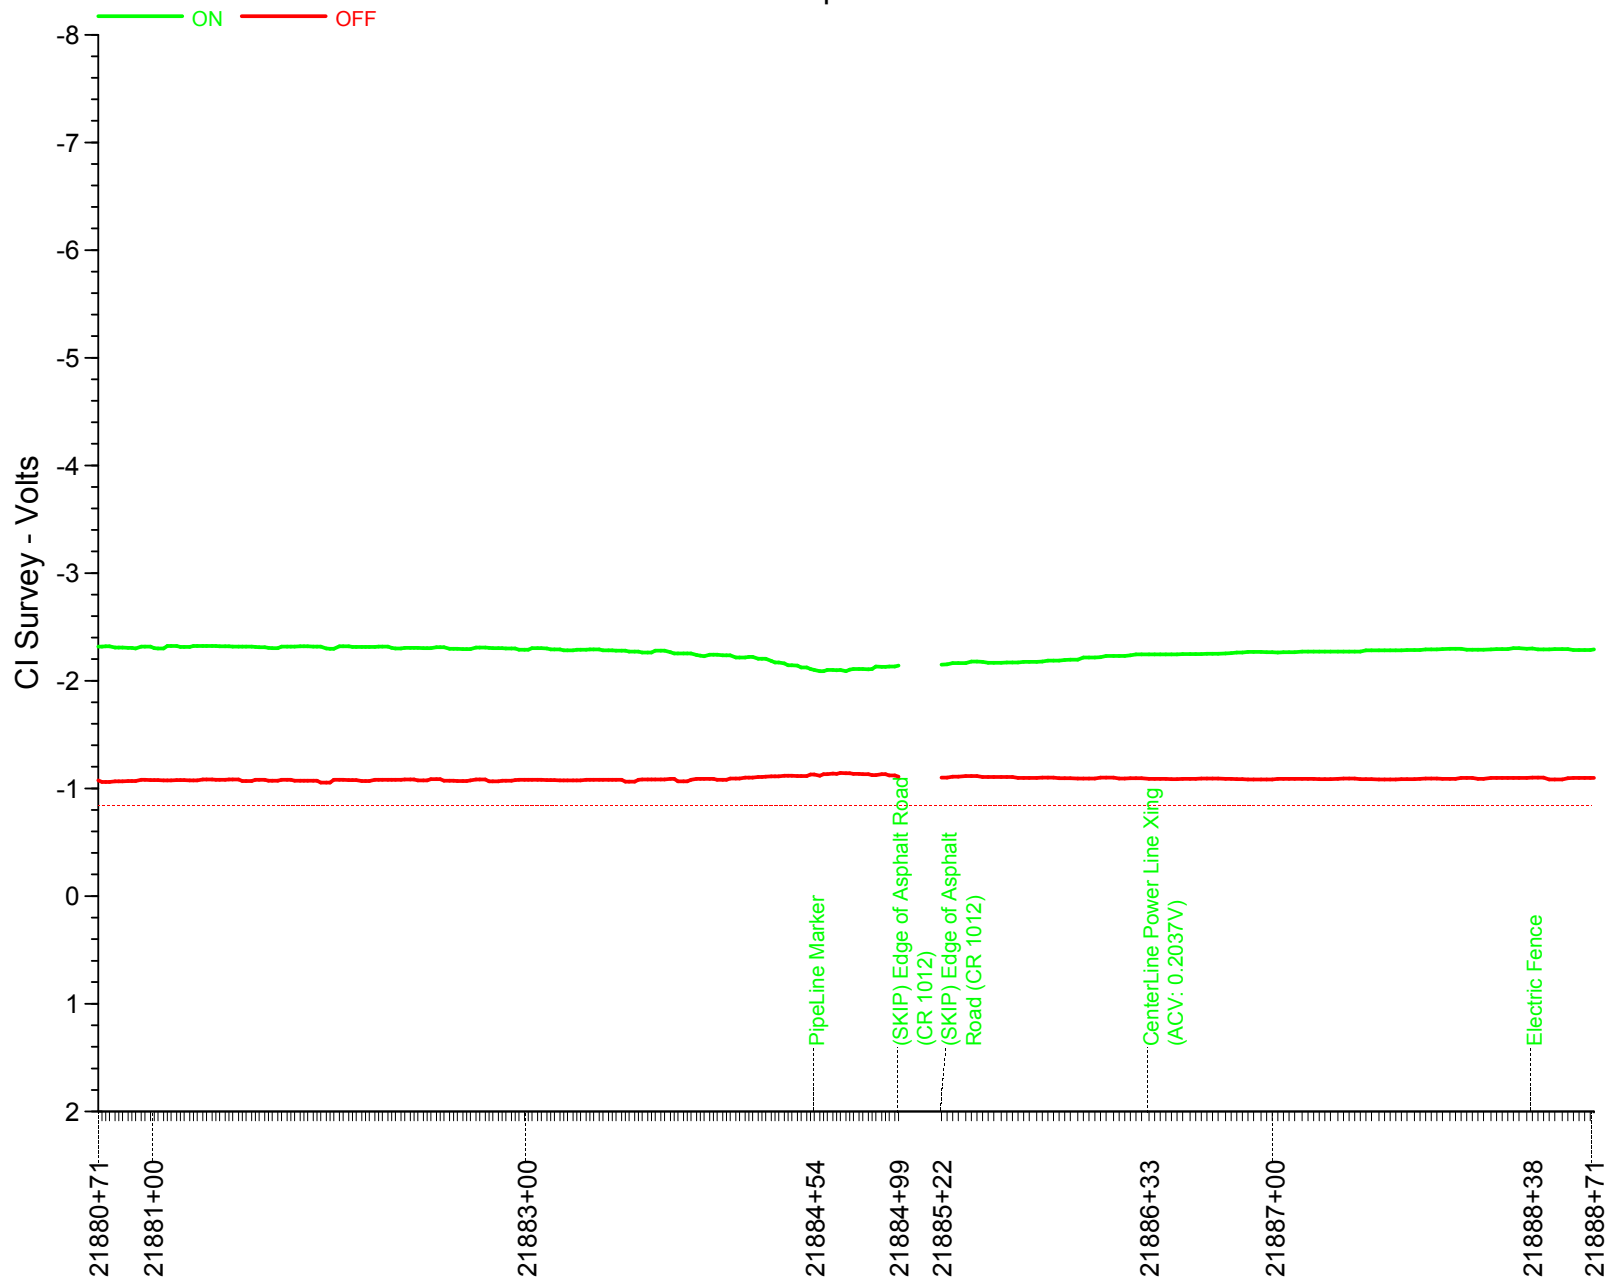

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

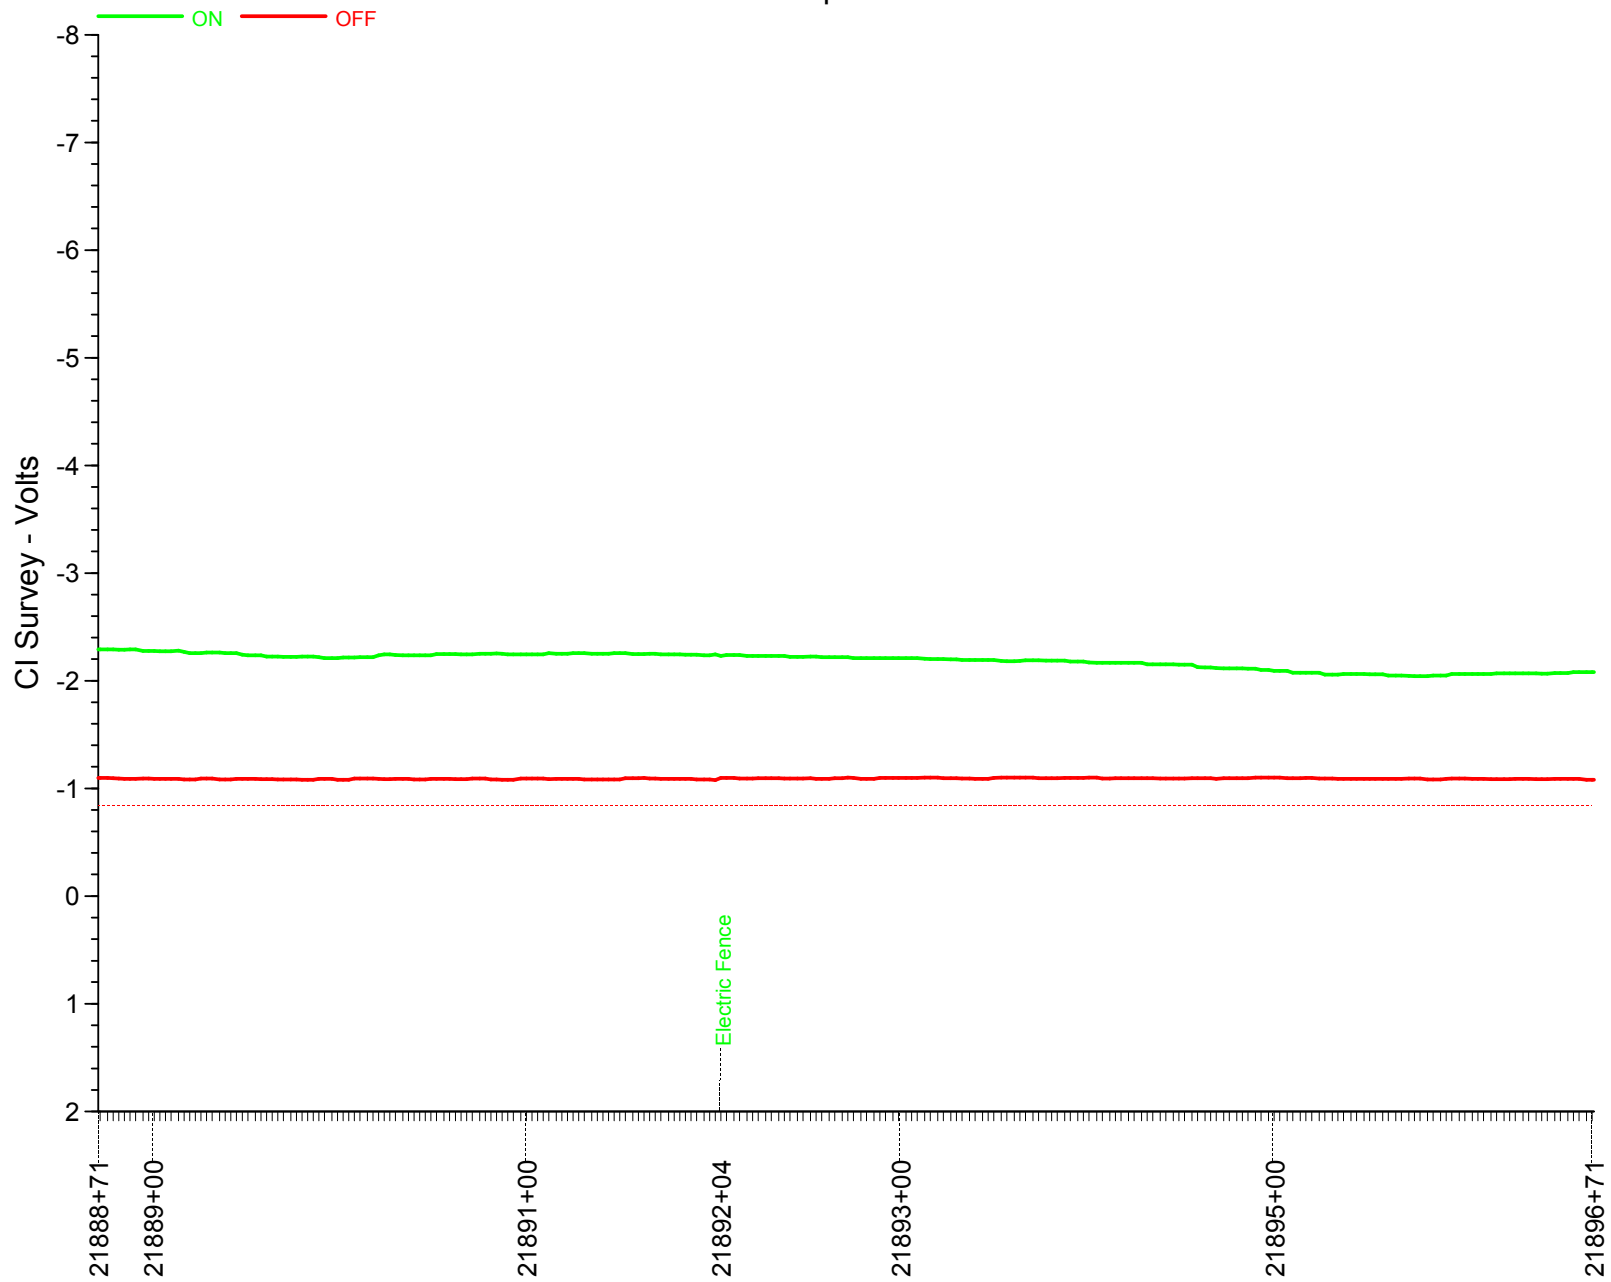

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

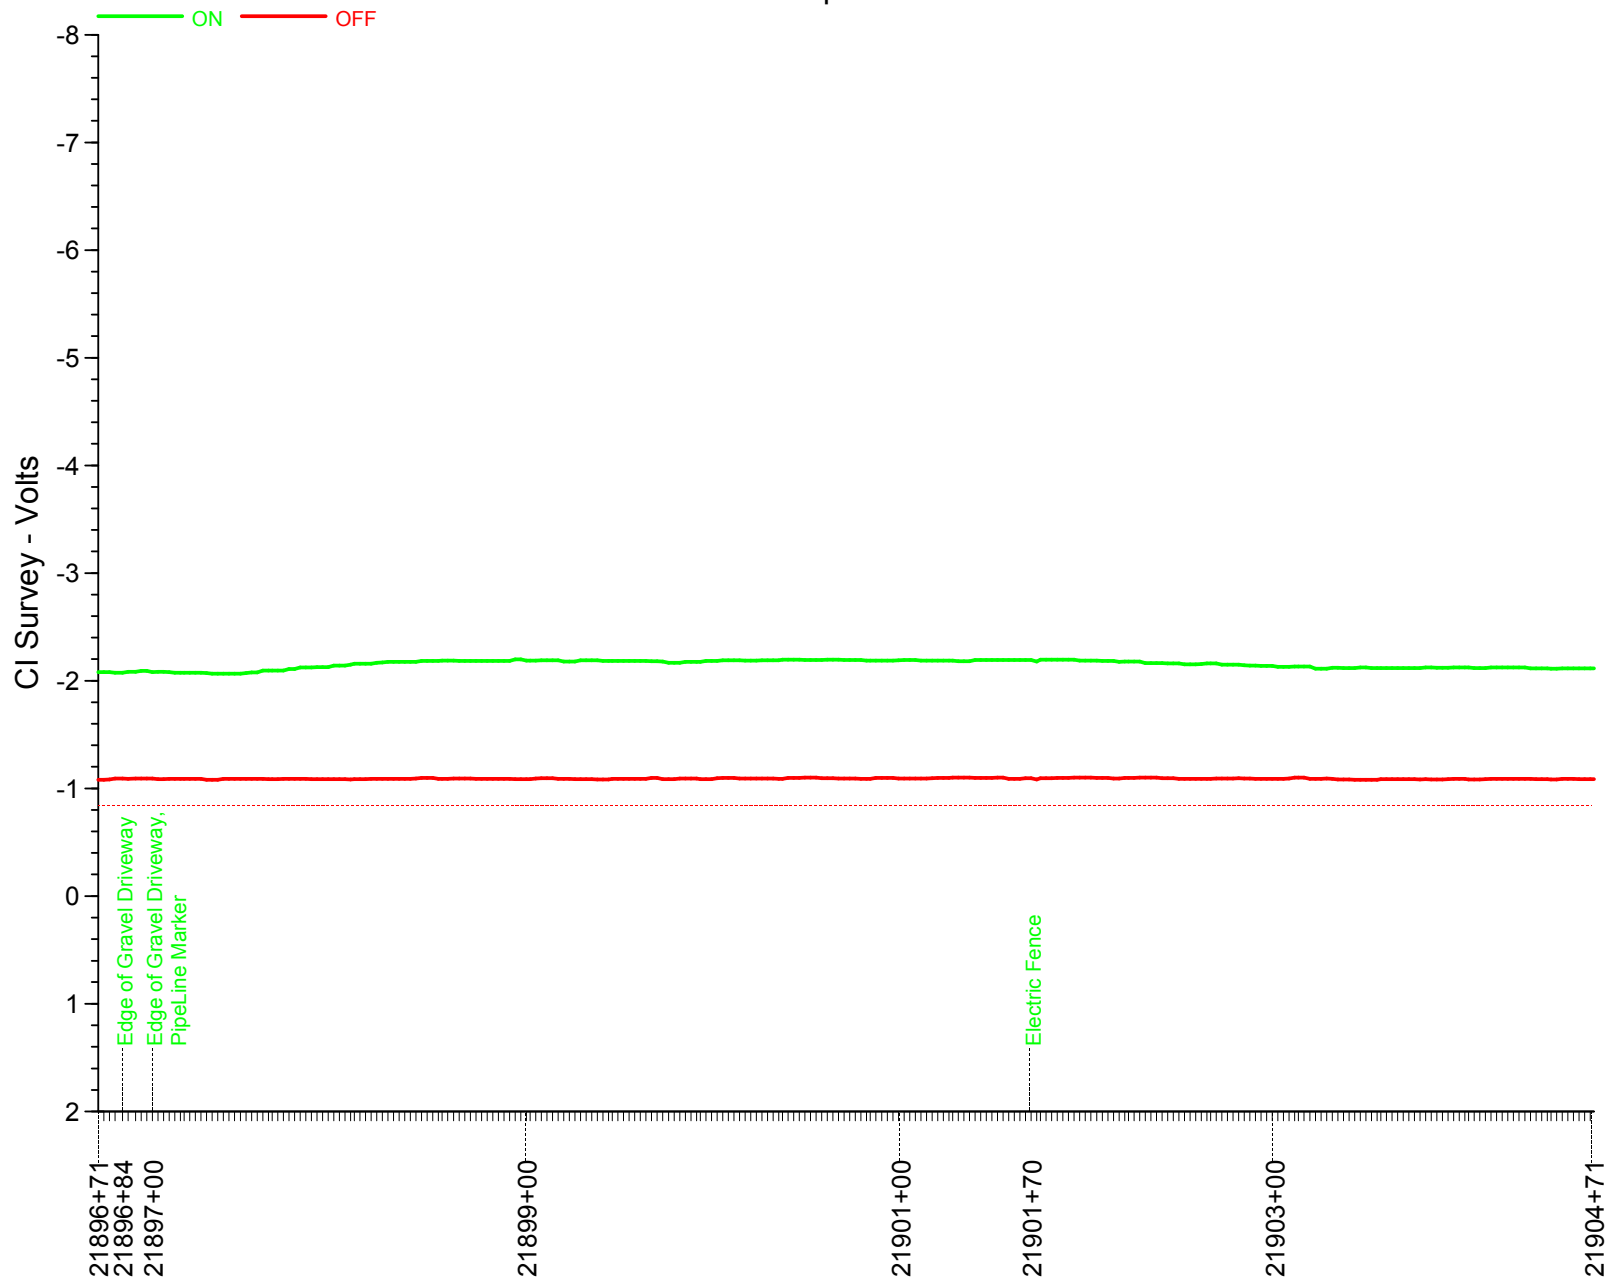

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

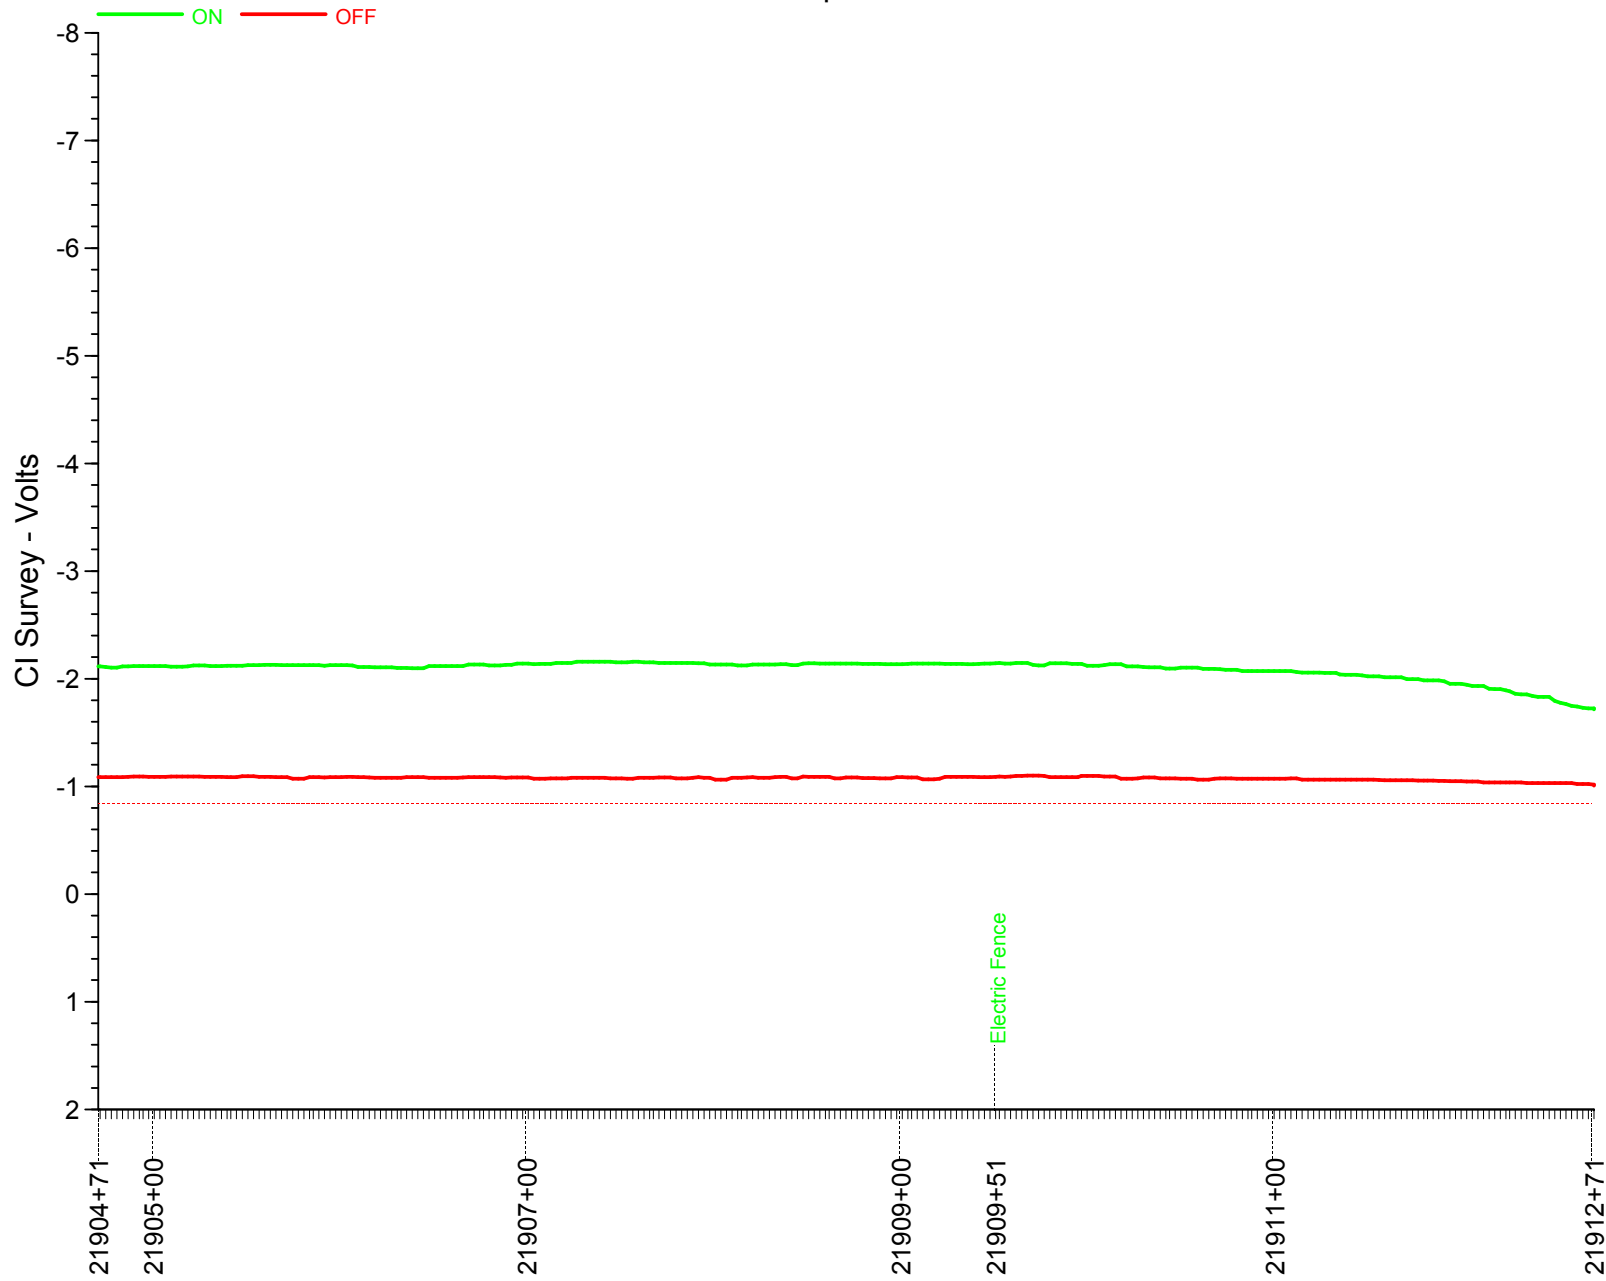


100 Feet/Inch

CP Data Manager 11/28/12 Page 43

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

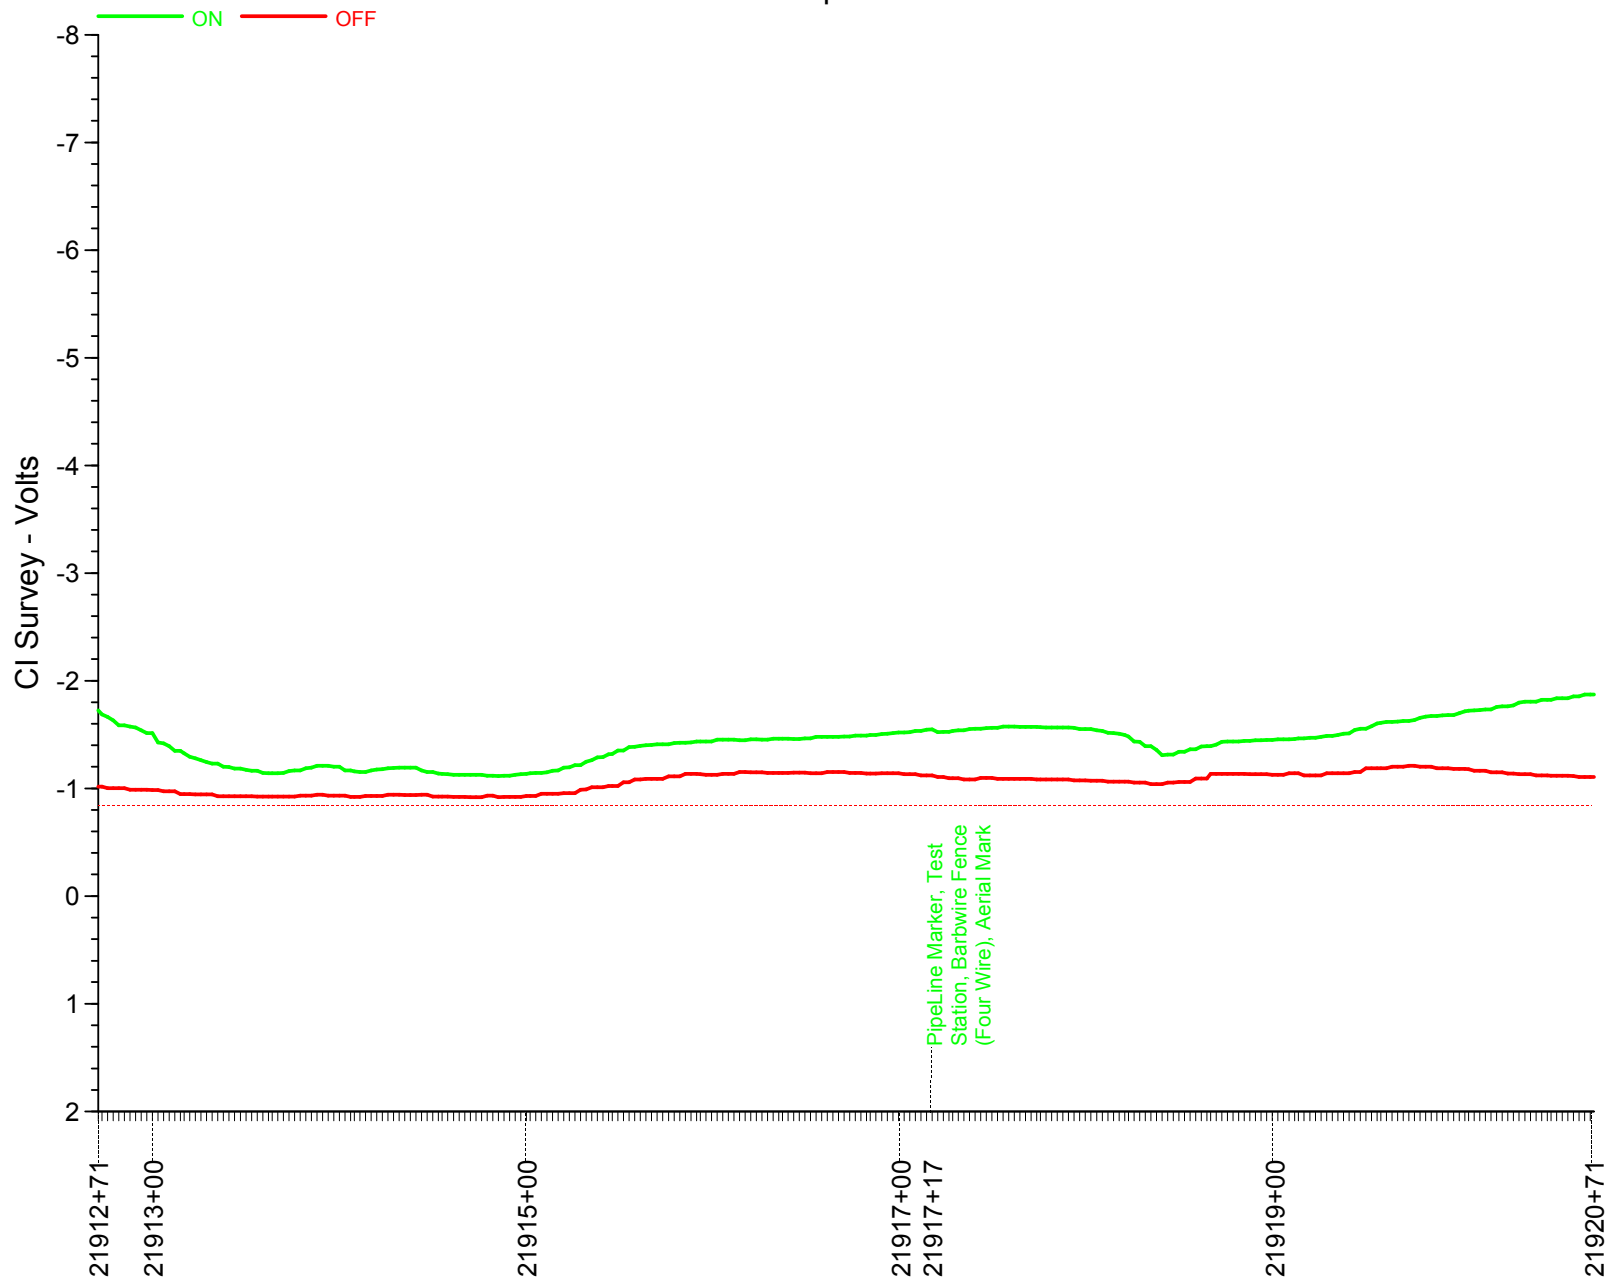

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

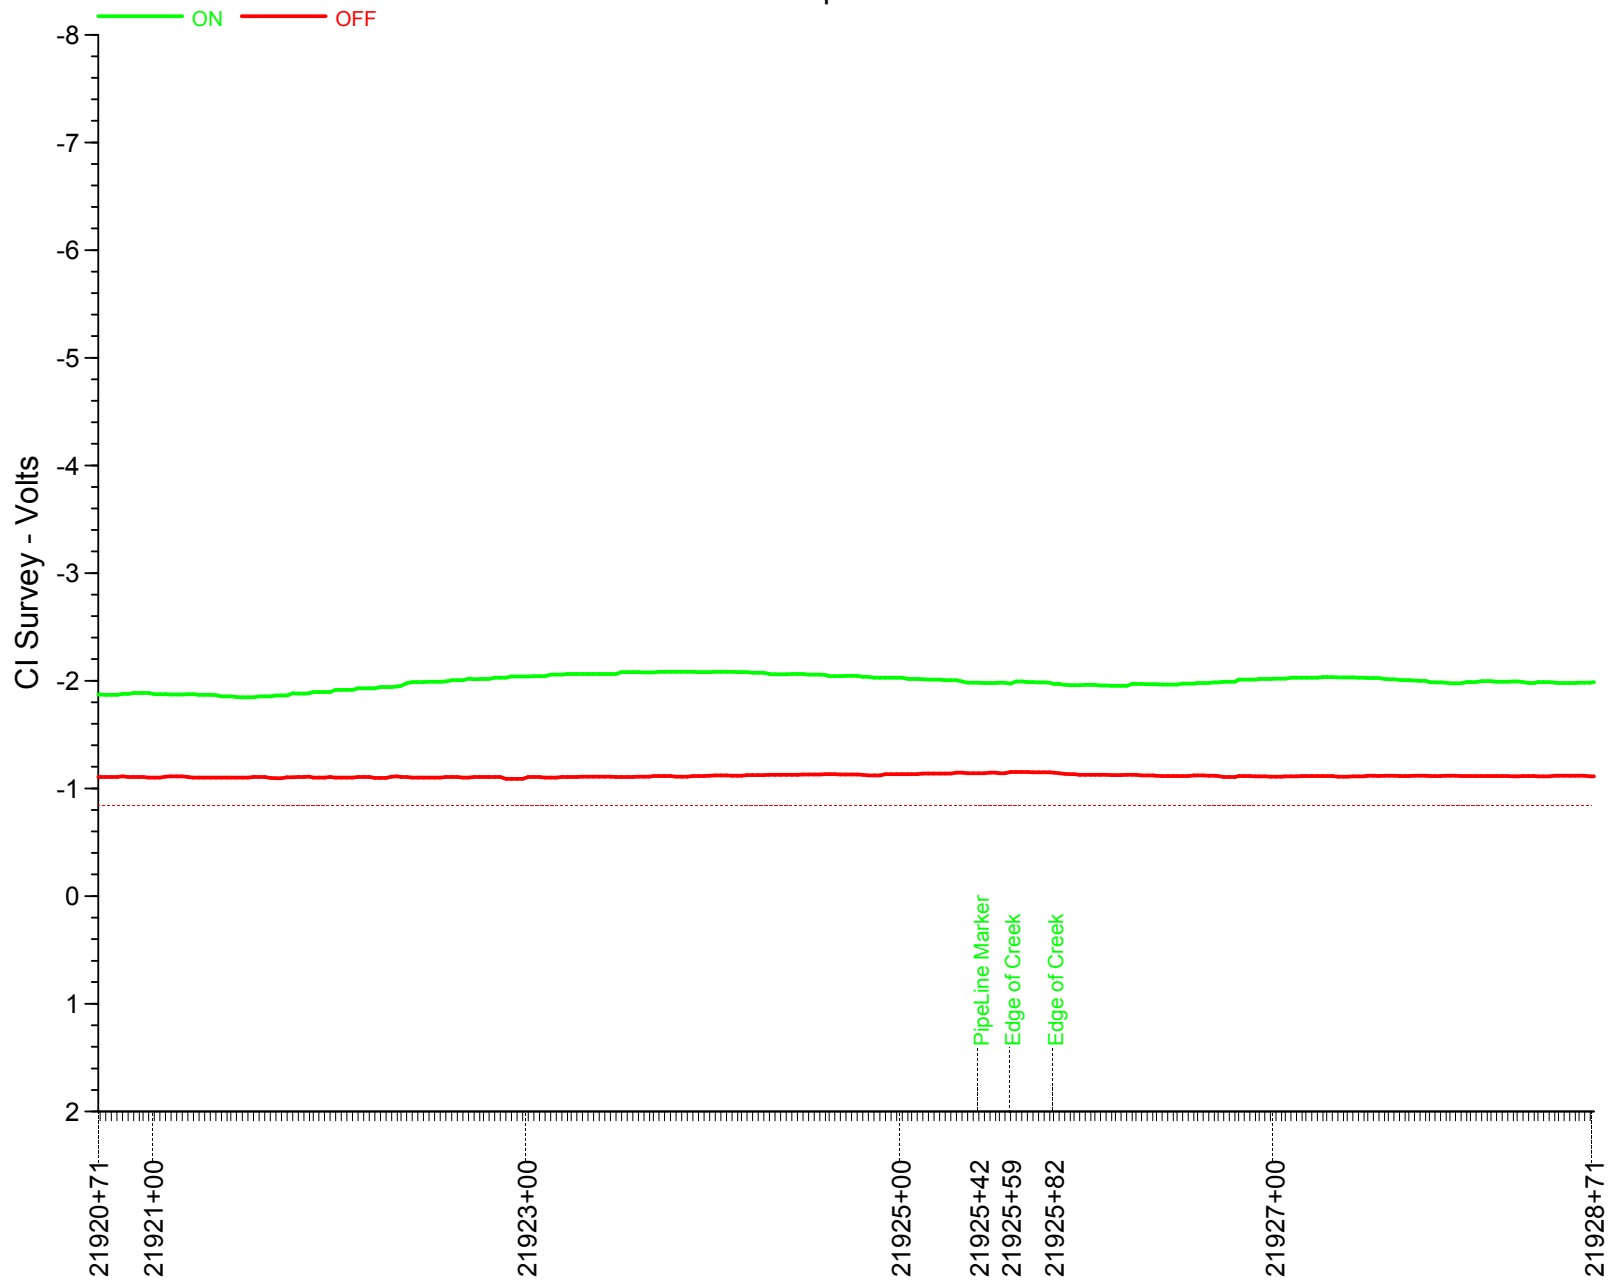

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

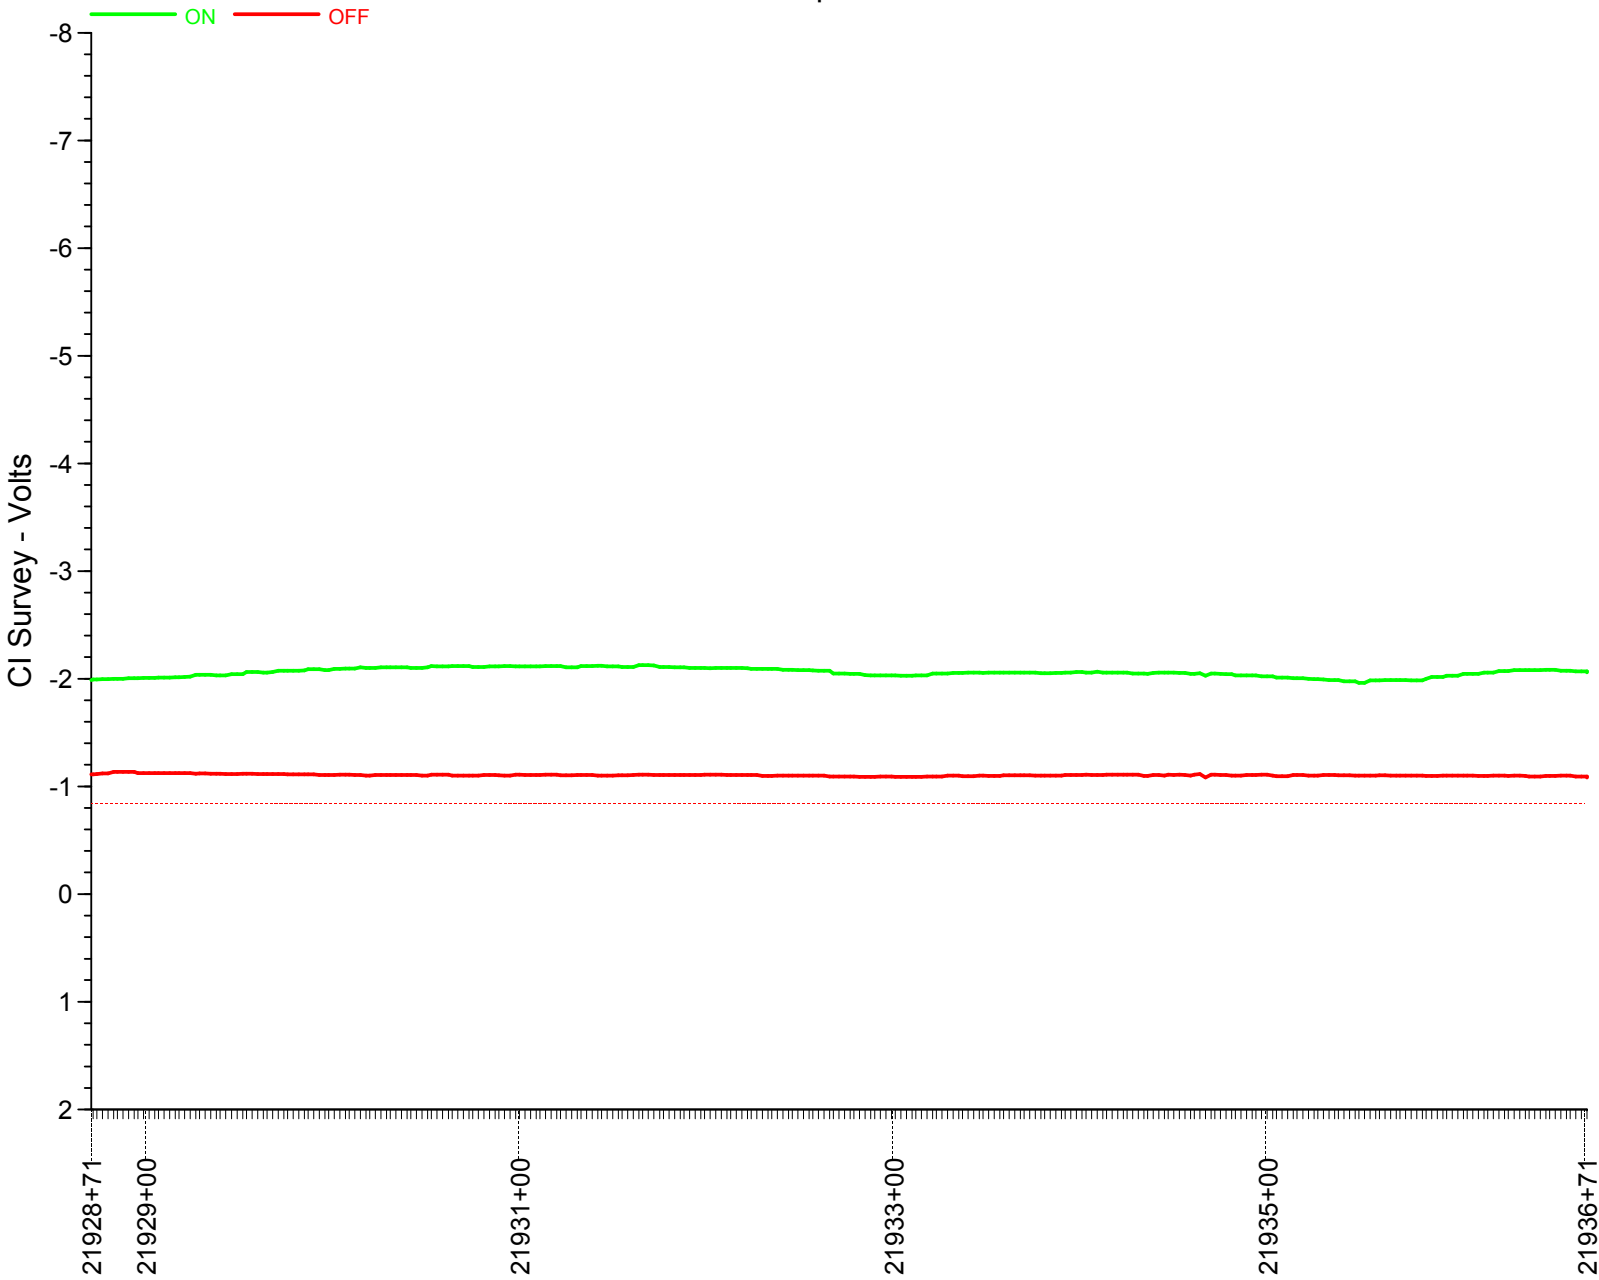

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

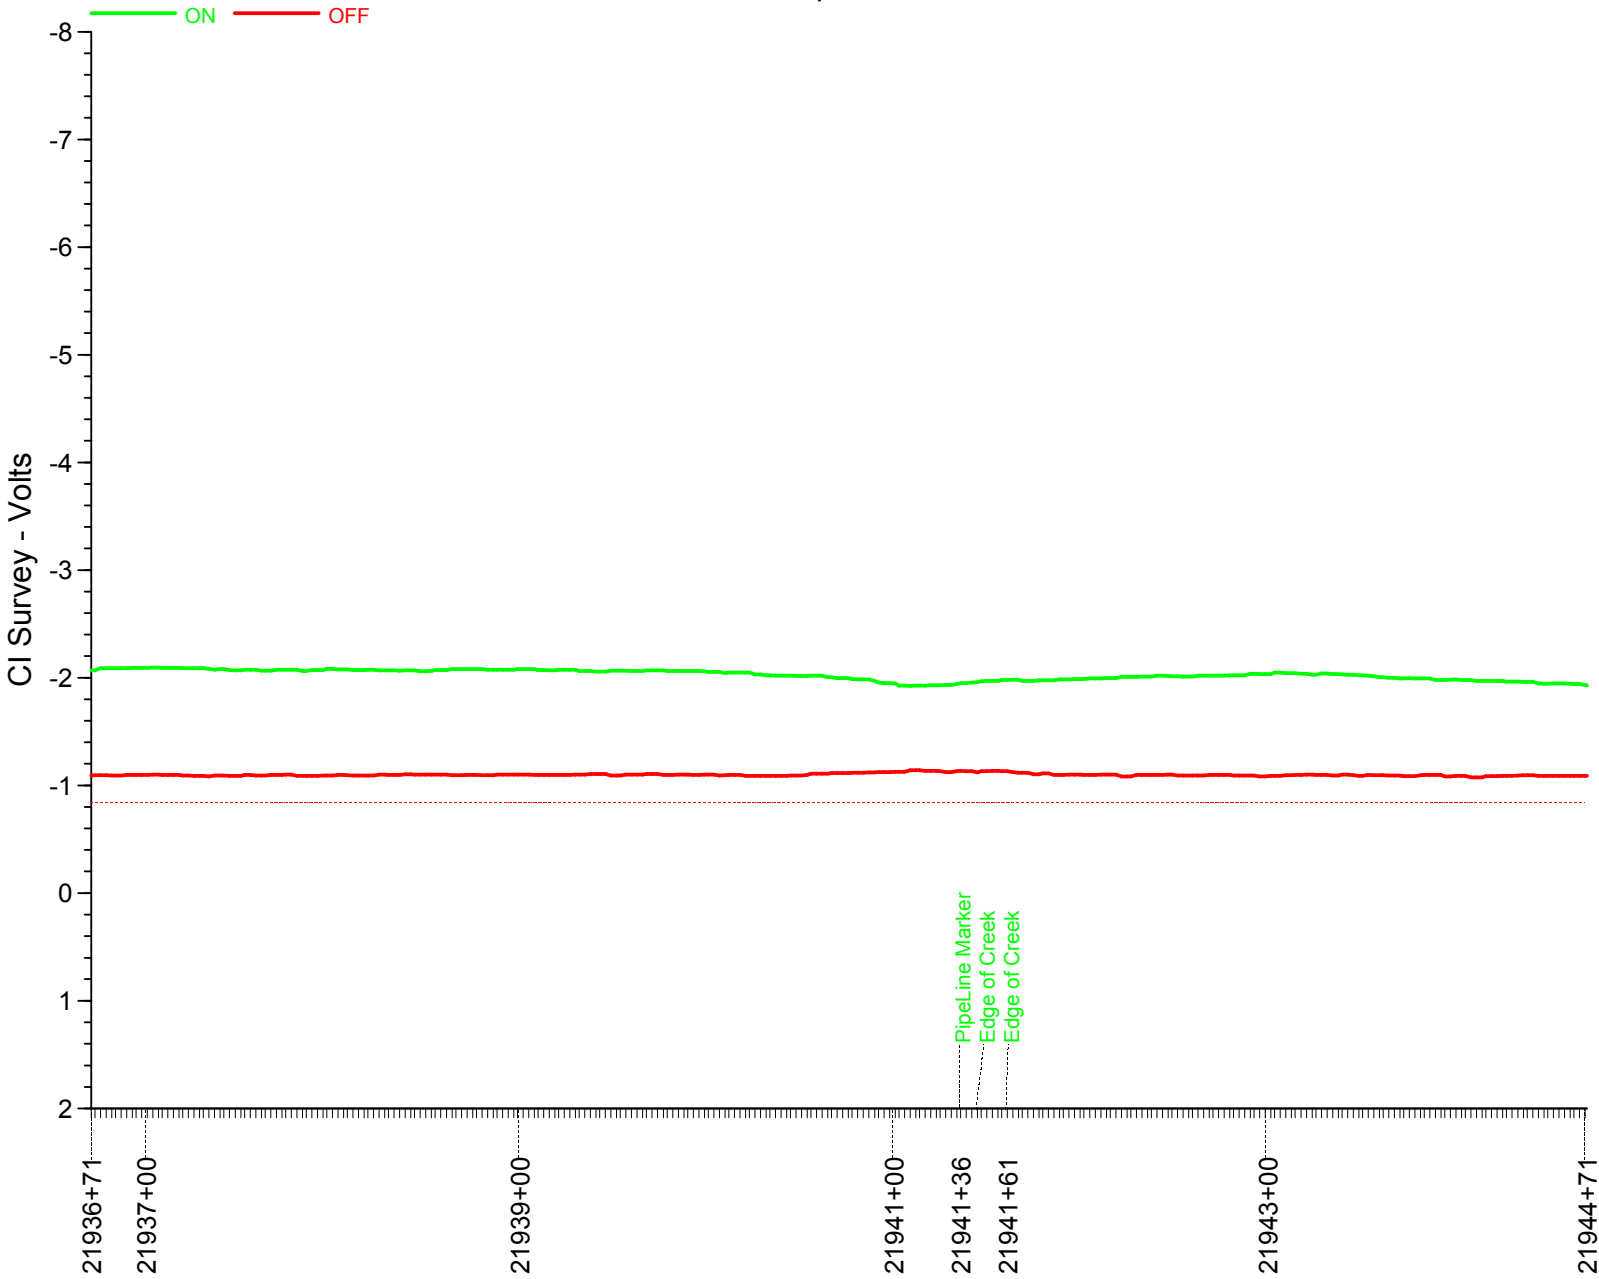


100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION




Pipe: 1

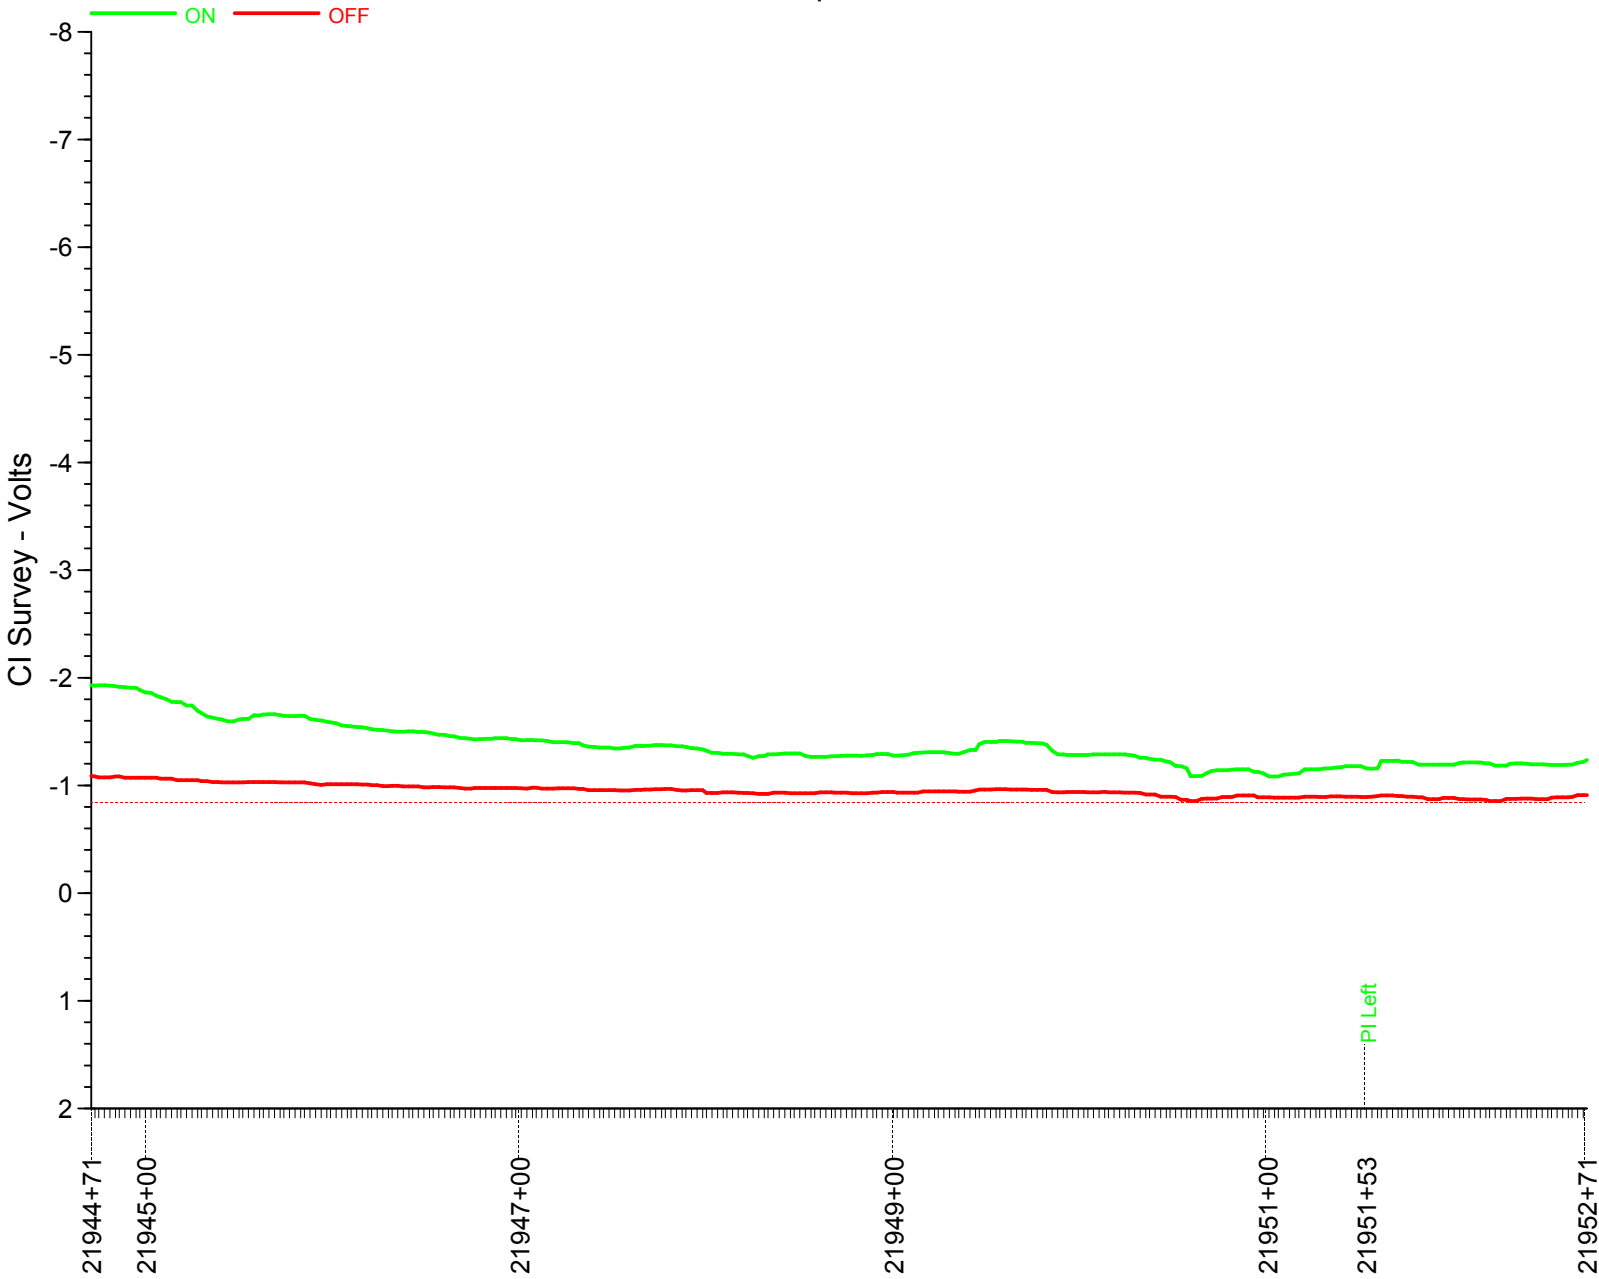

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

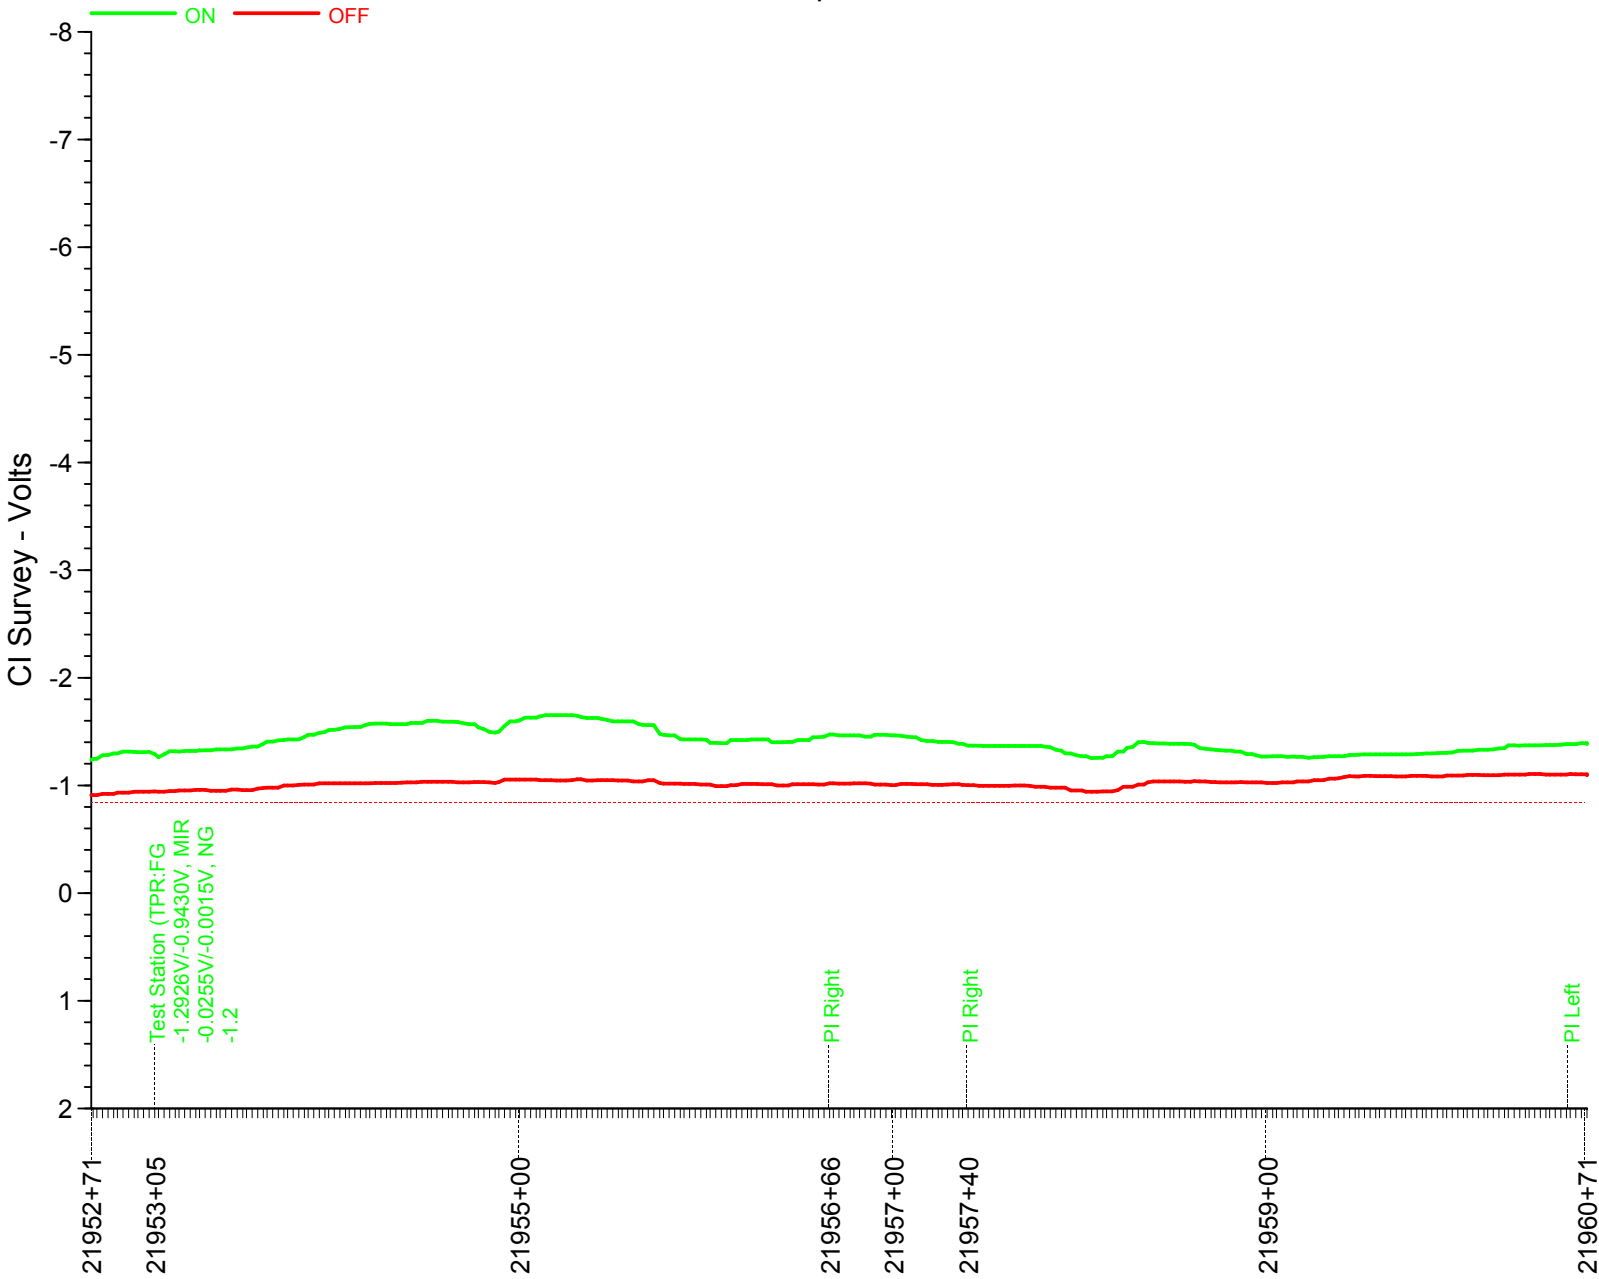

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

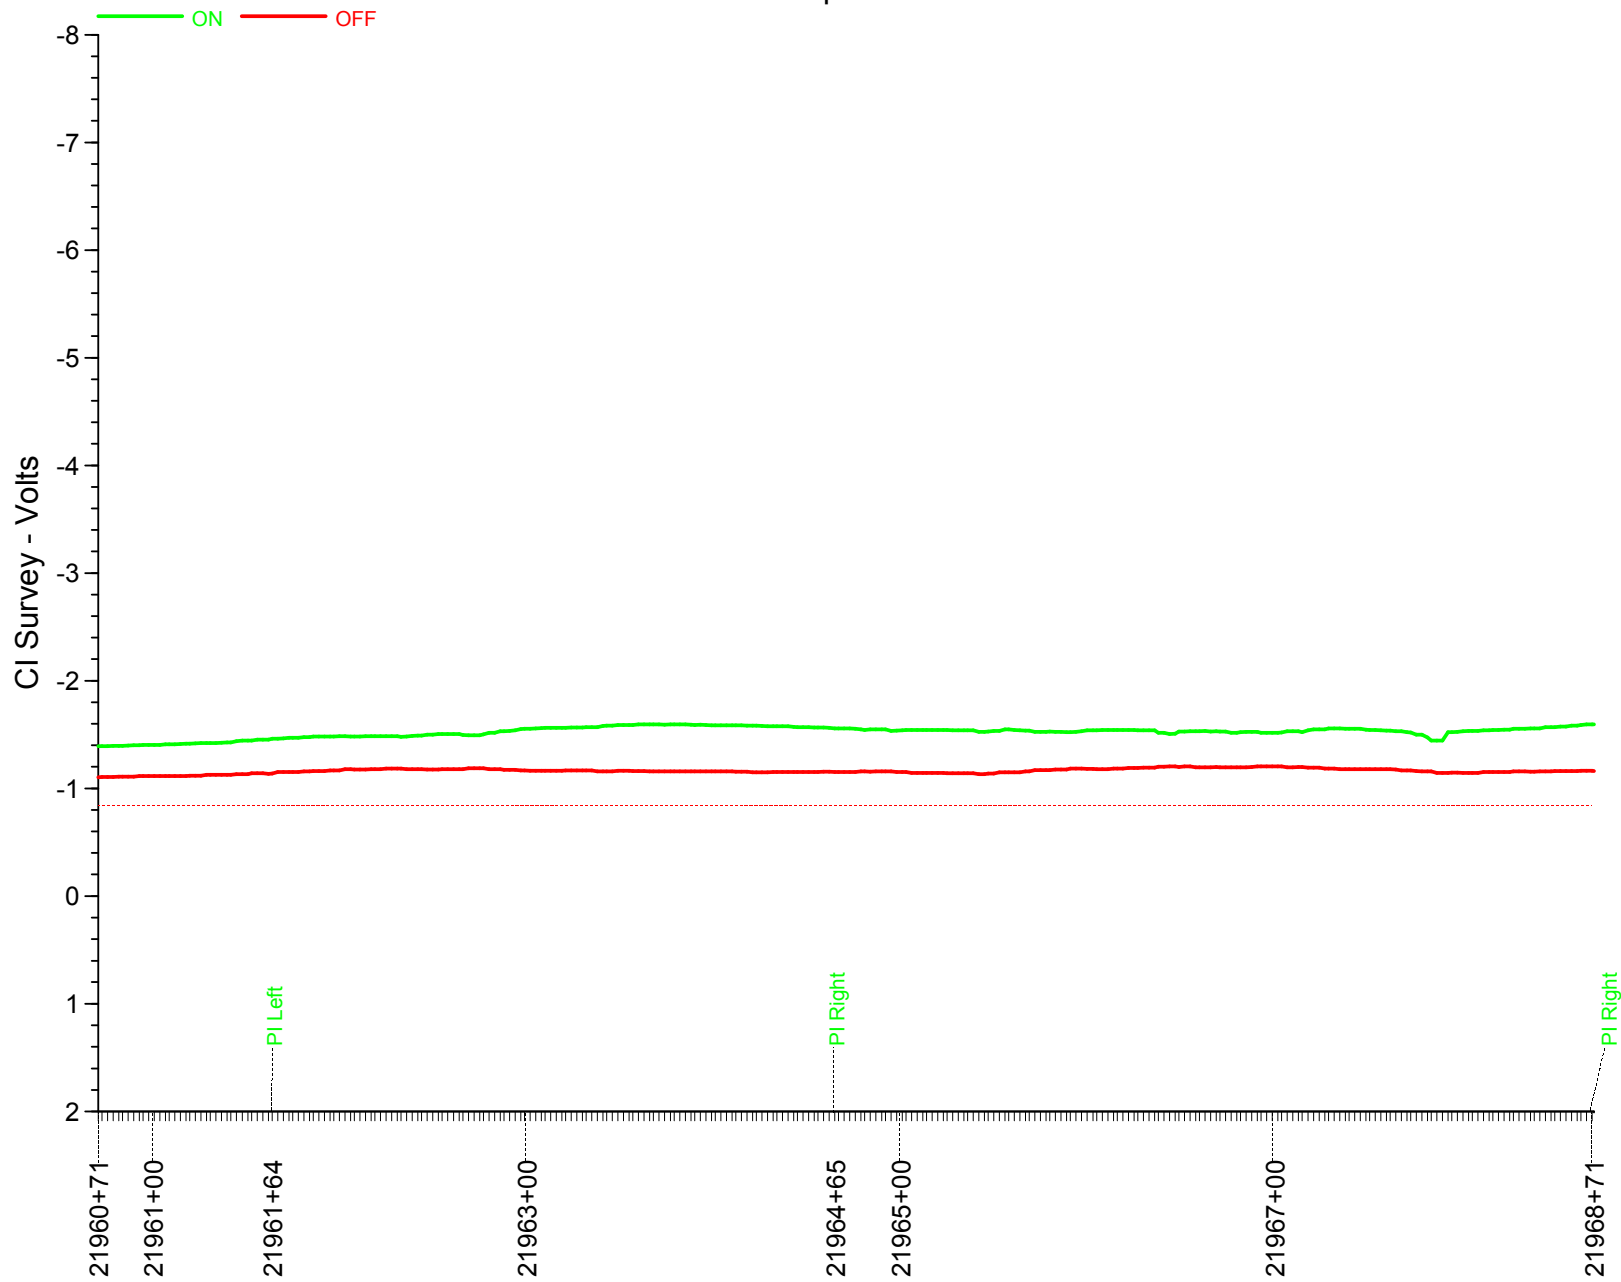

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

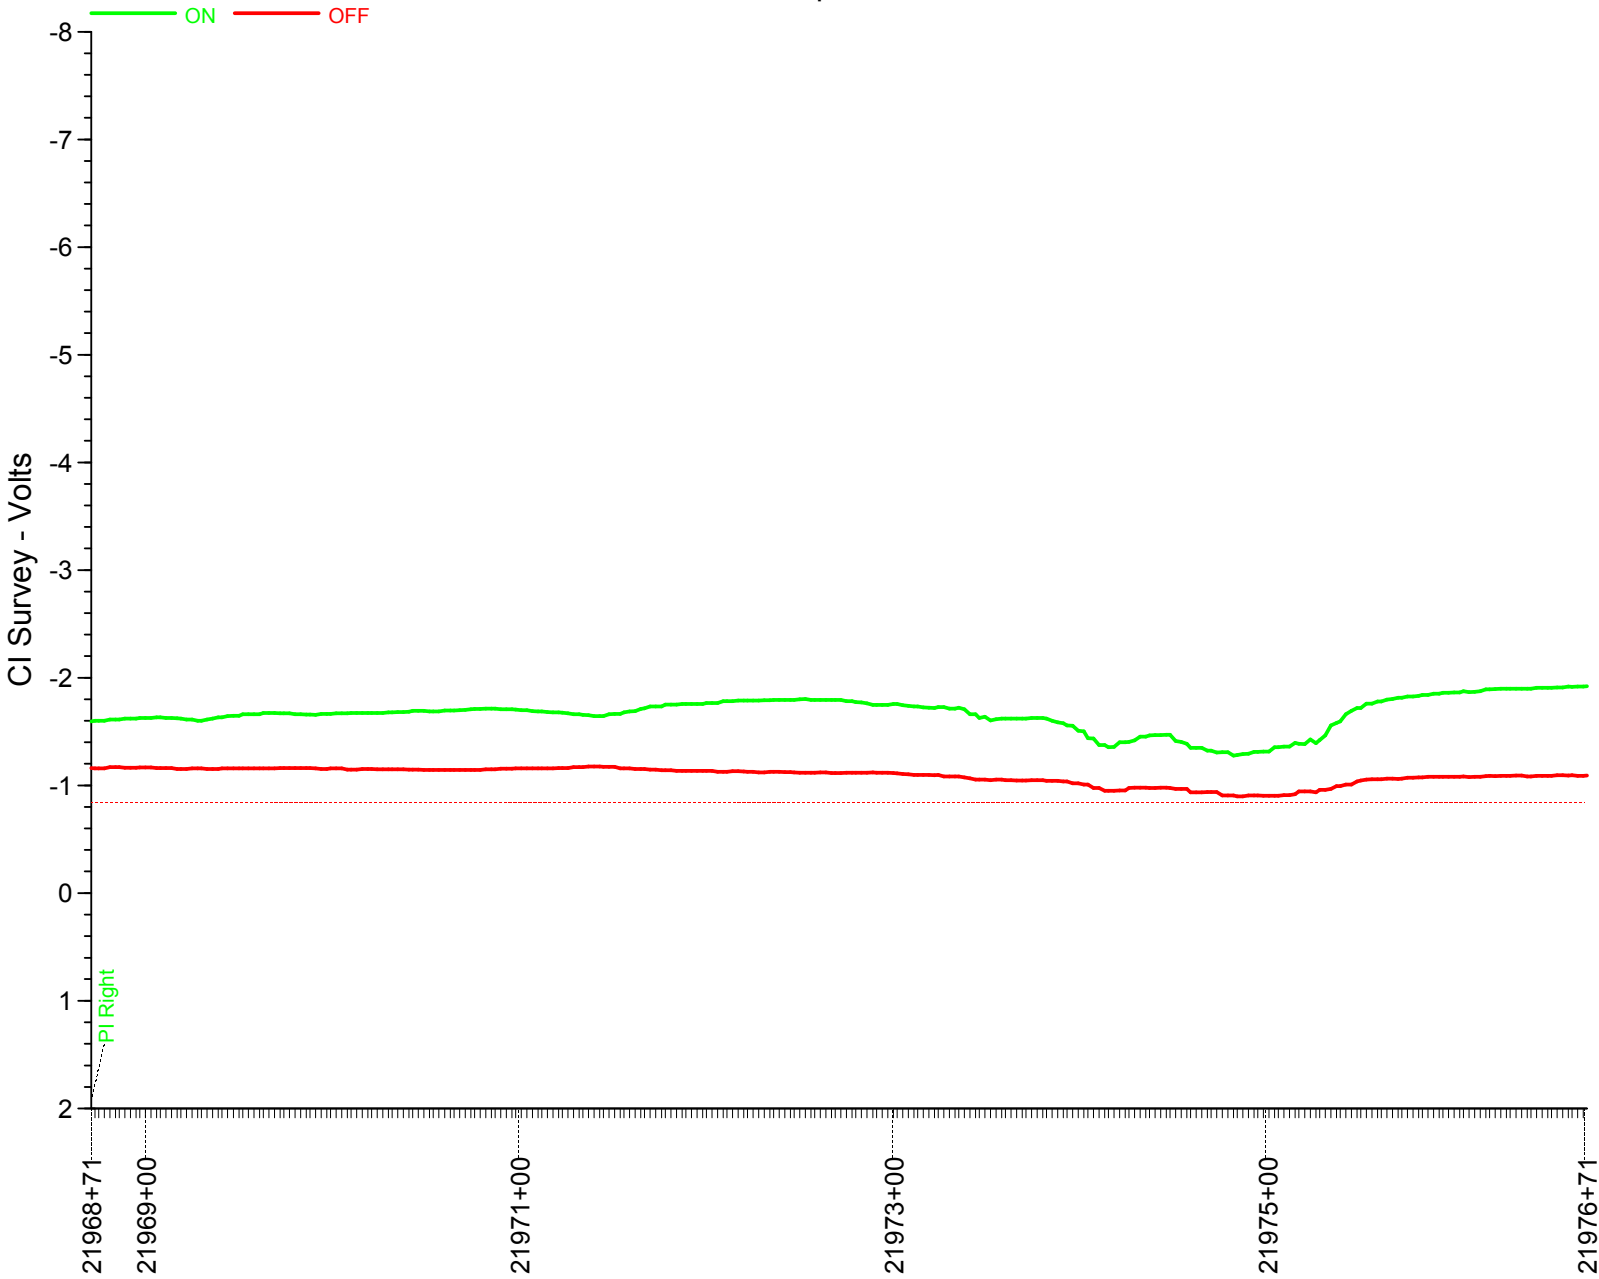

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

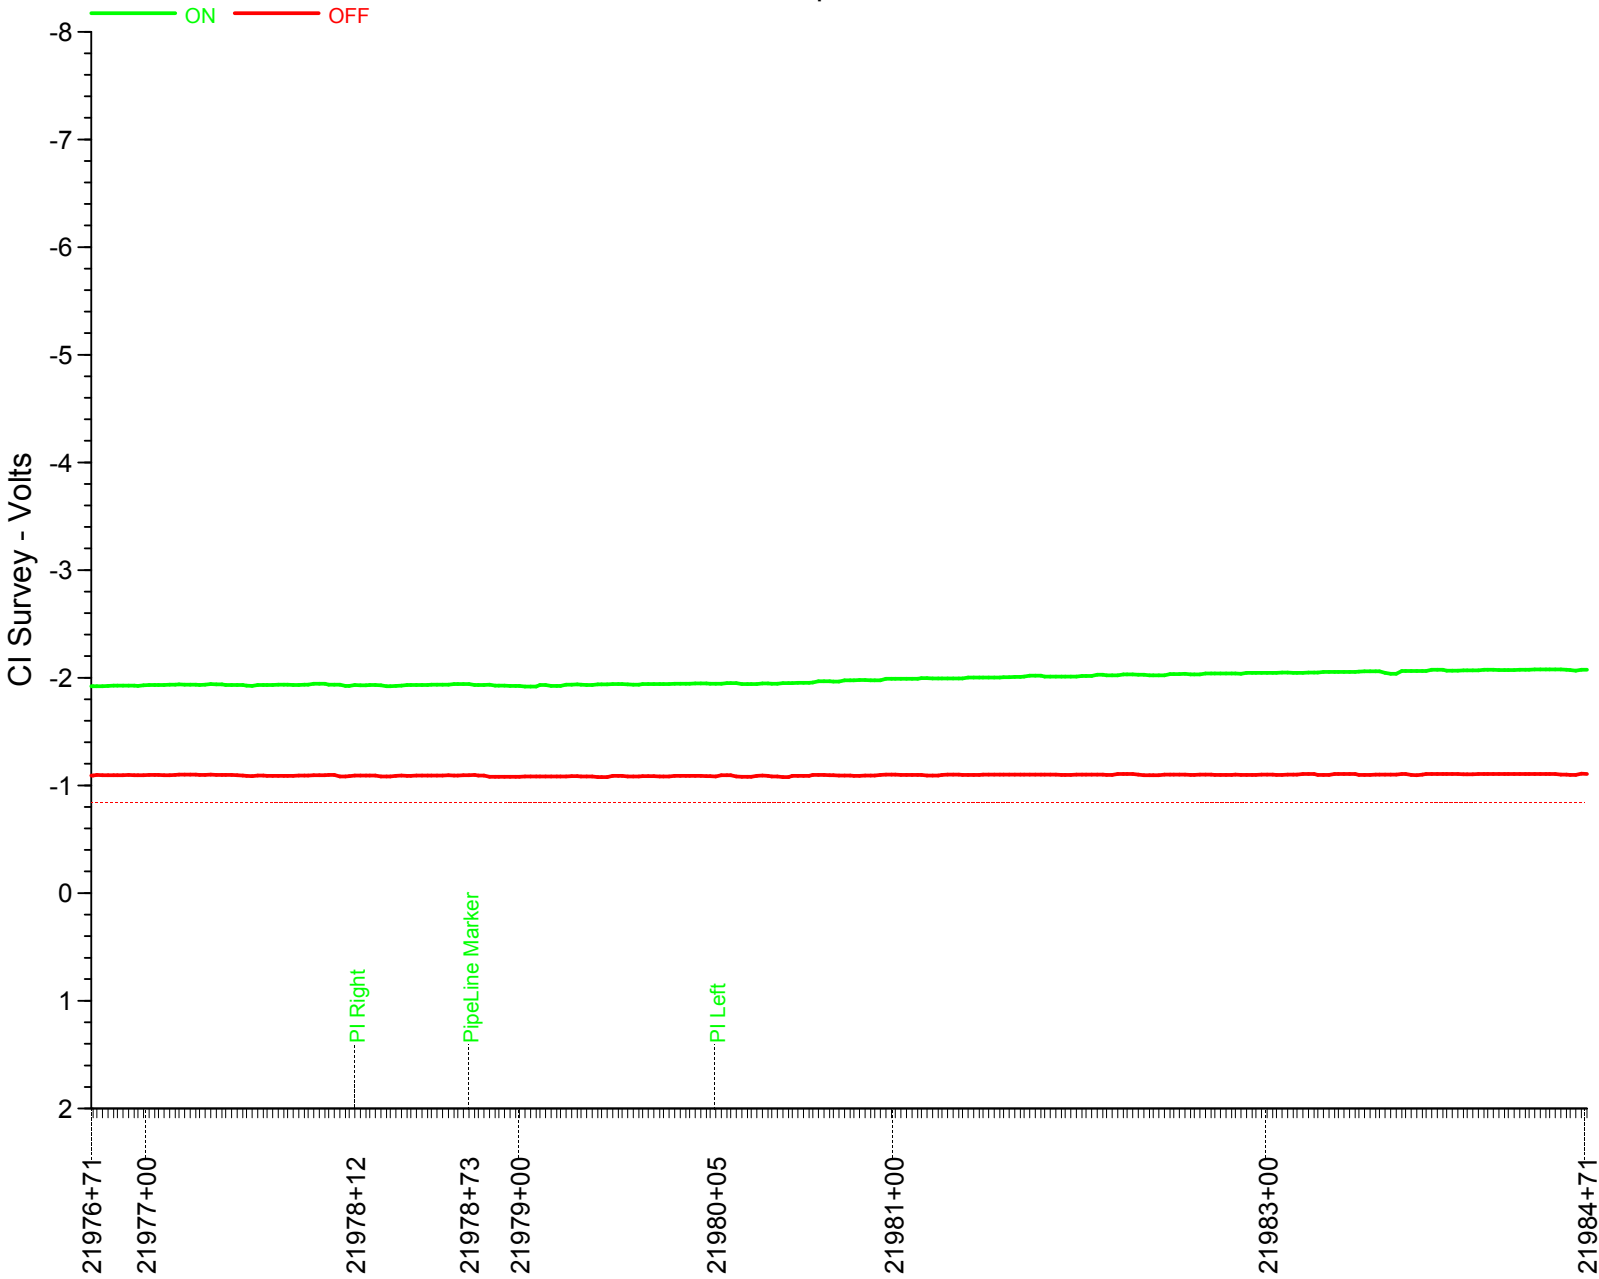

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

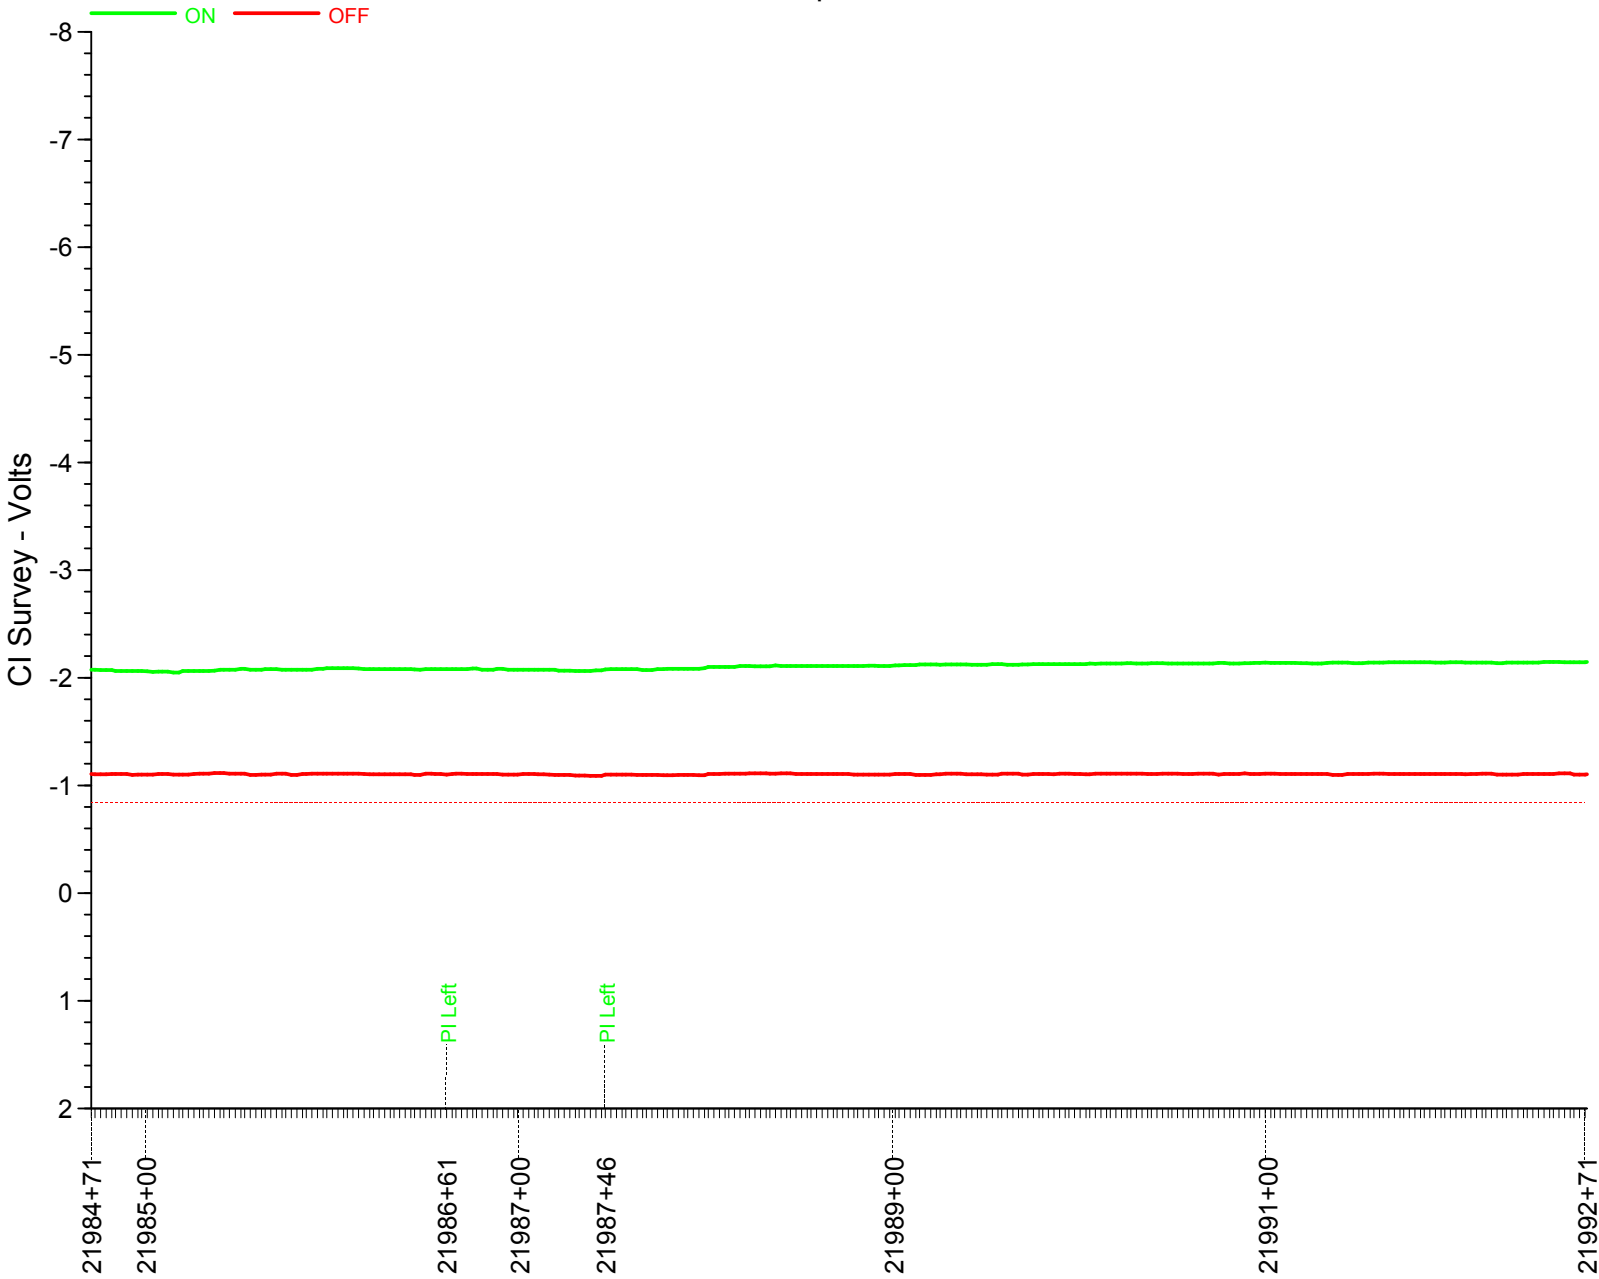

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

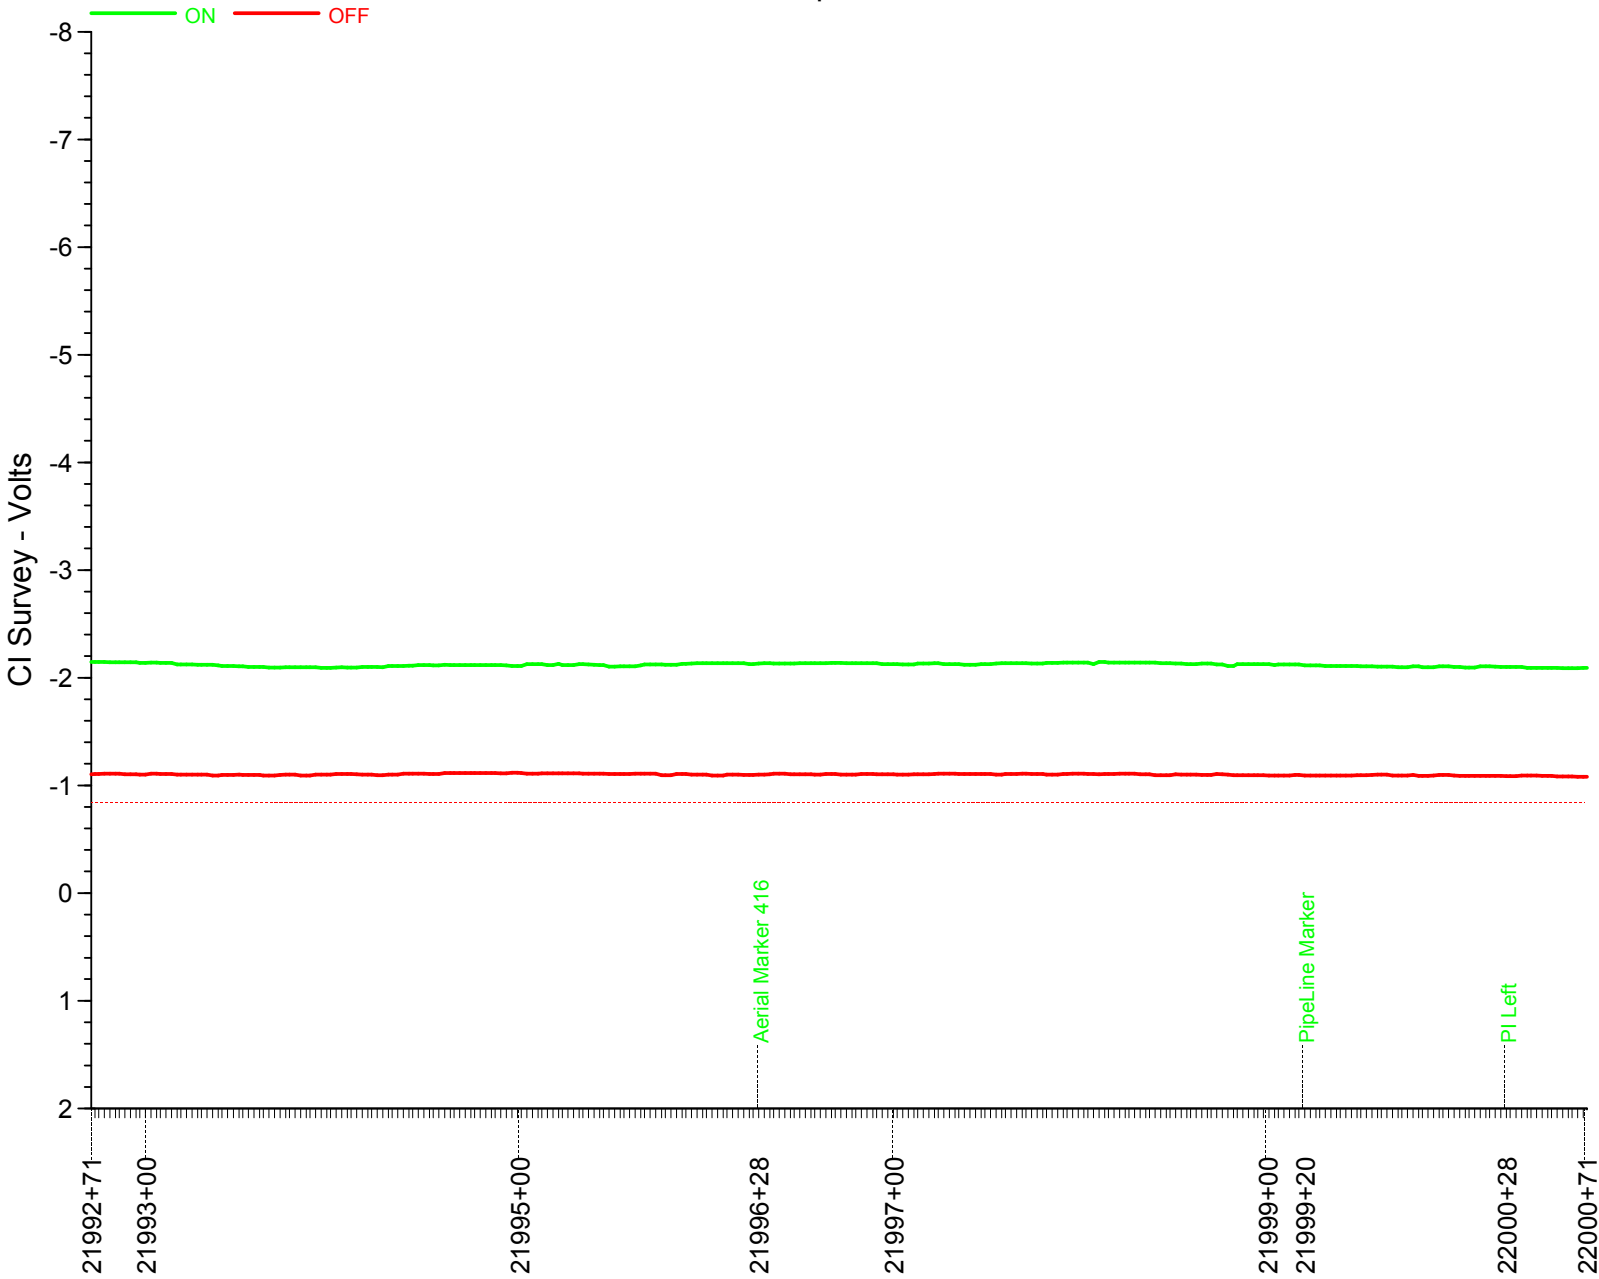

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

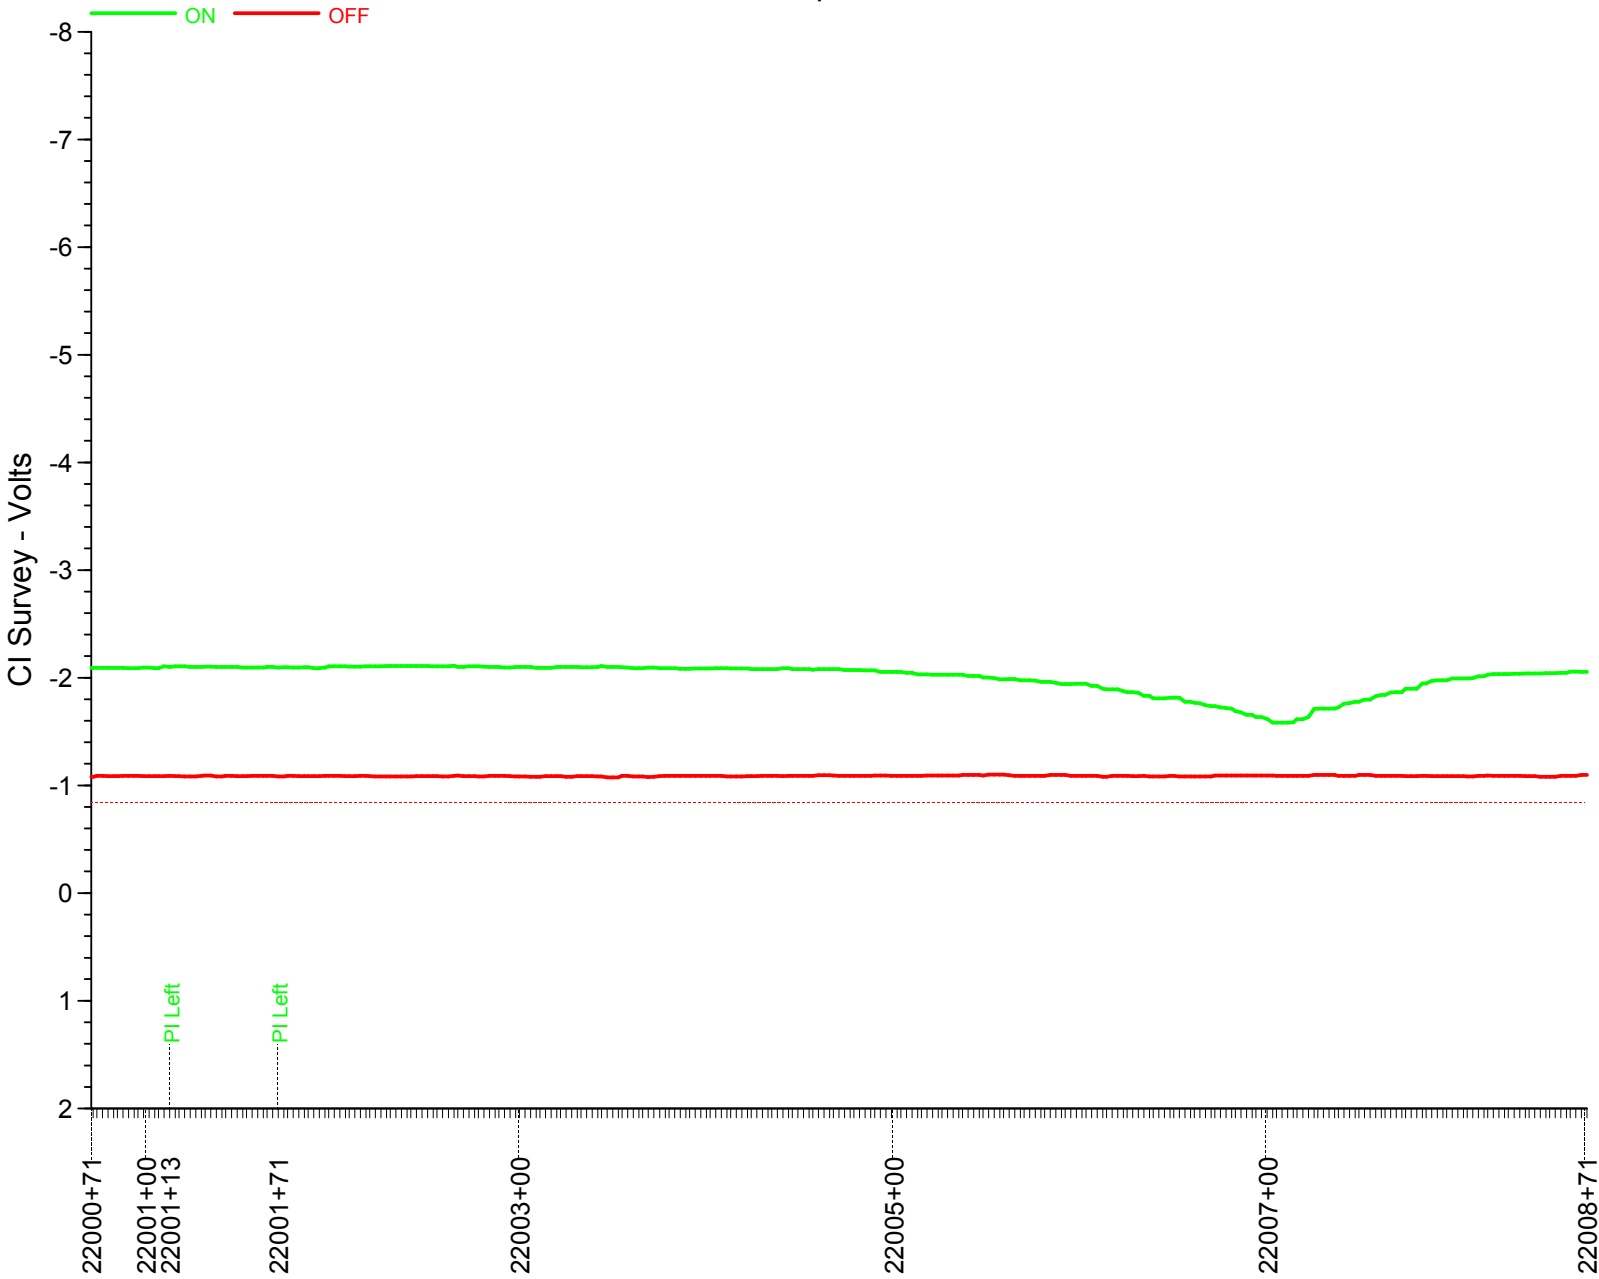


100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION



Pipe: 1

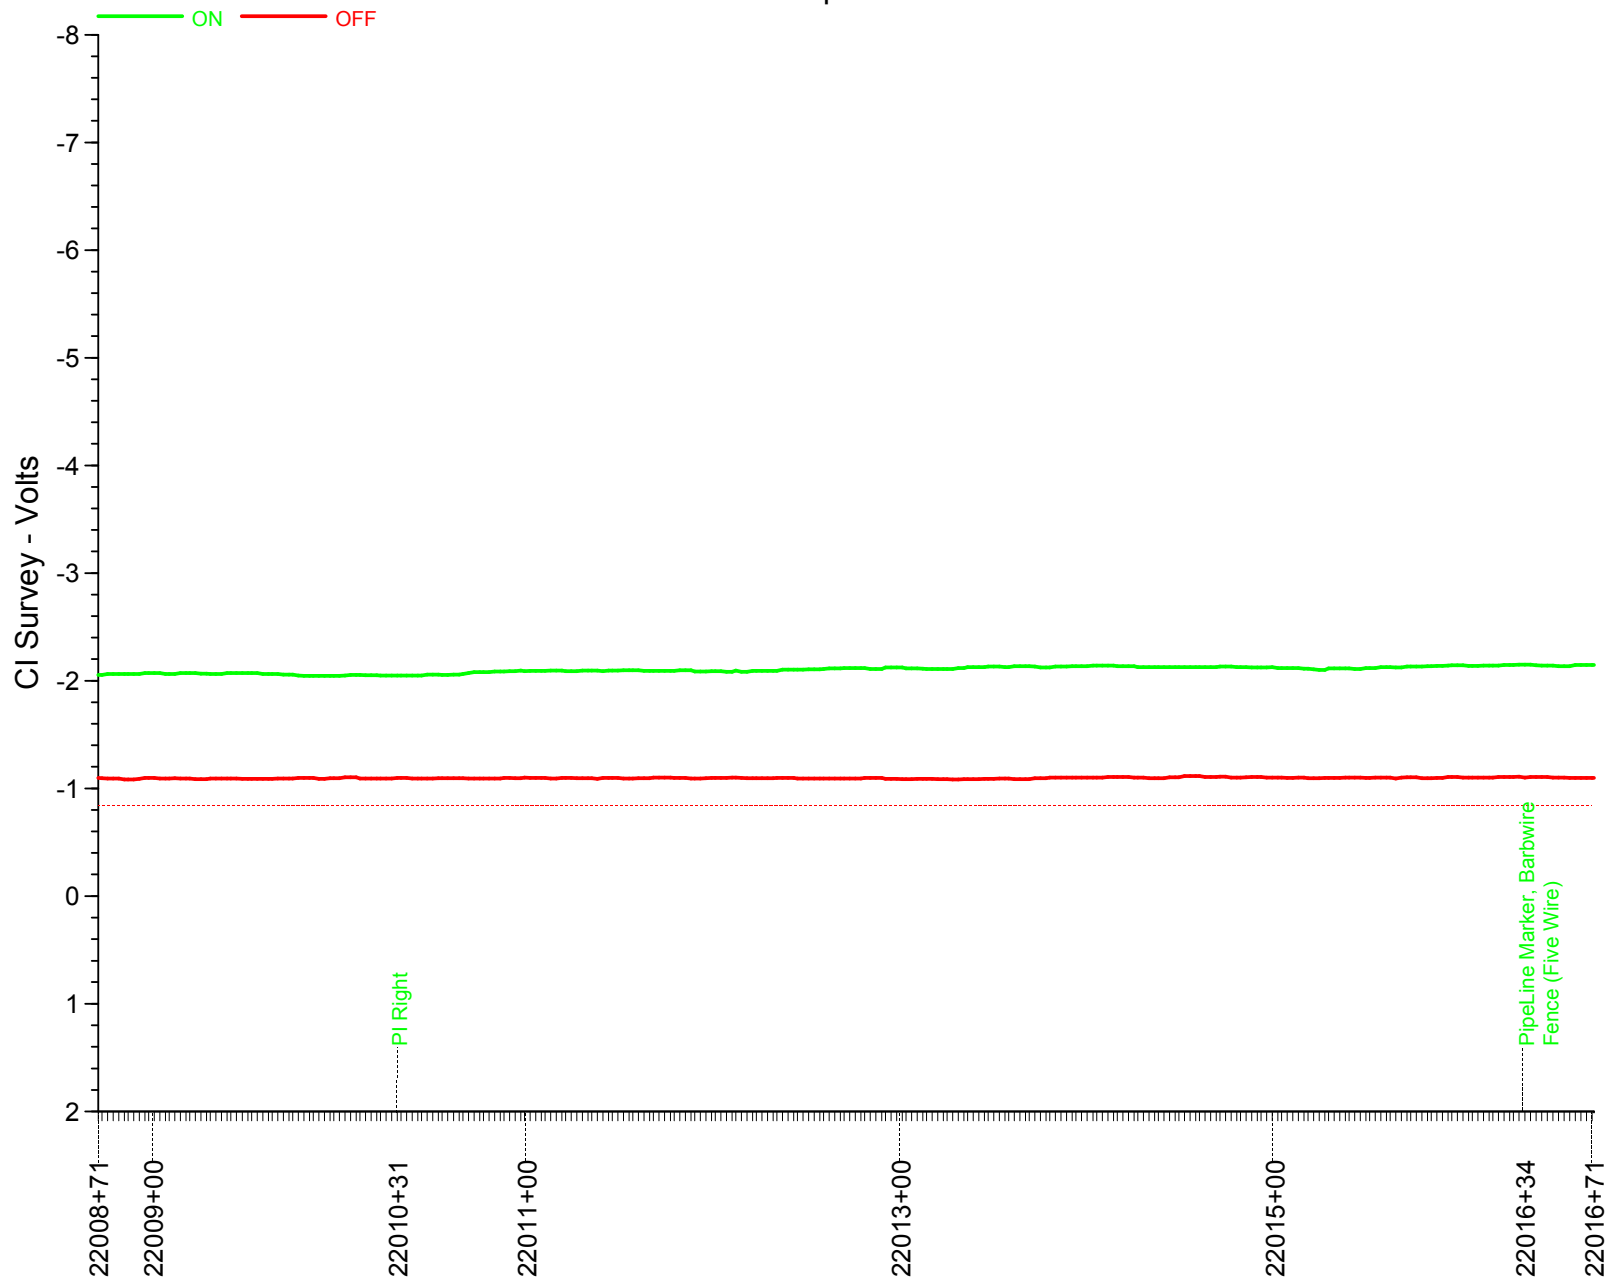


100 Feet/Inch

CP Data Manager 11/28/12 Page 56

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

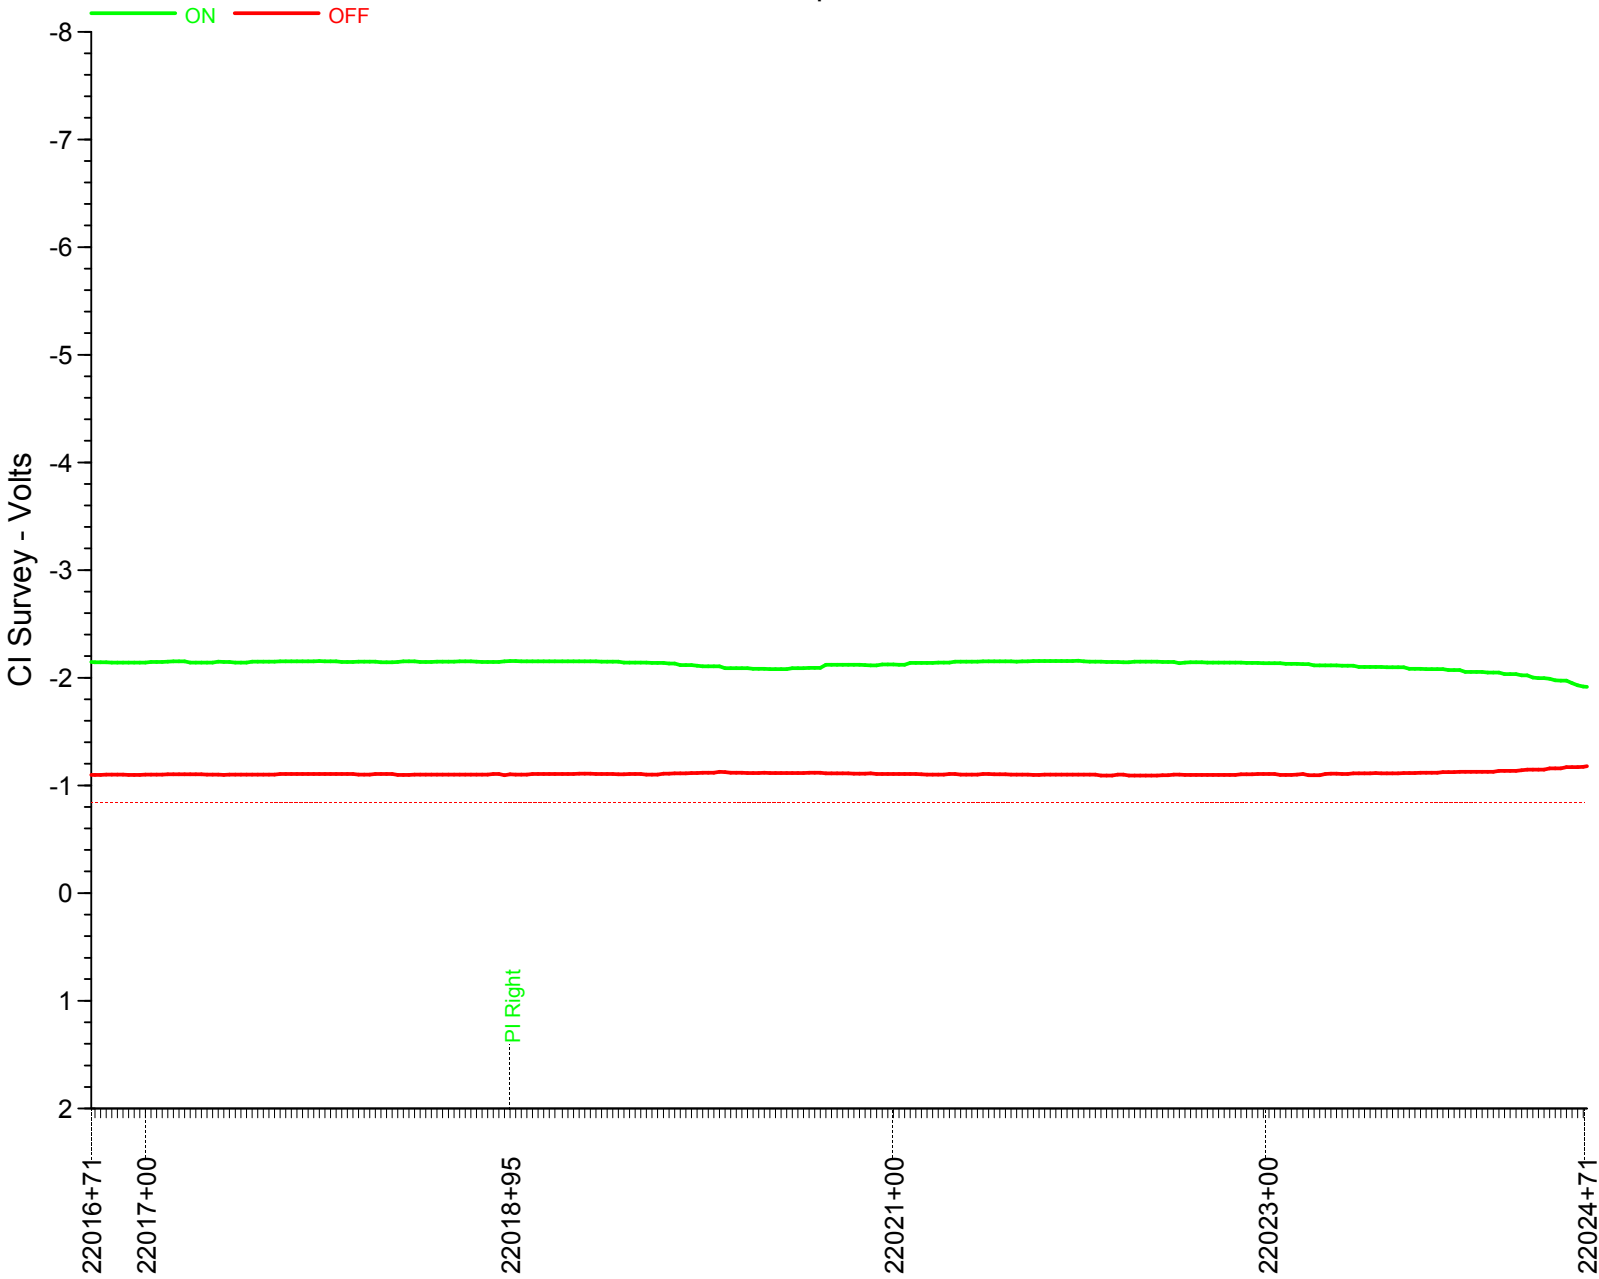

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

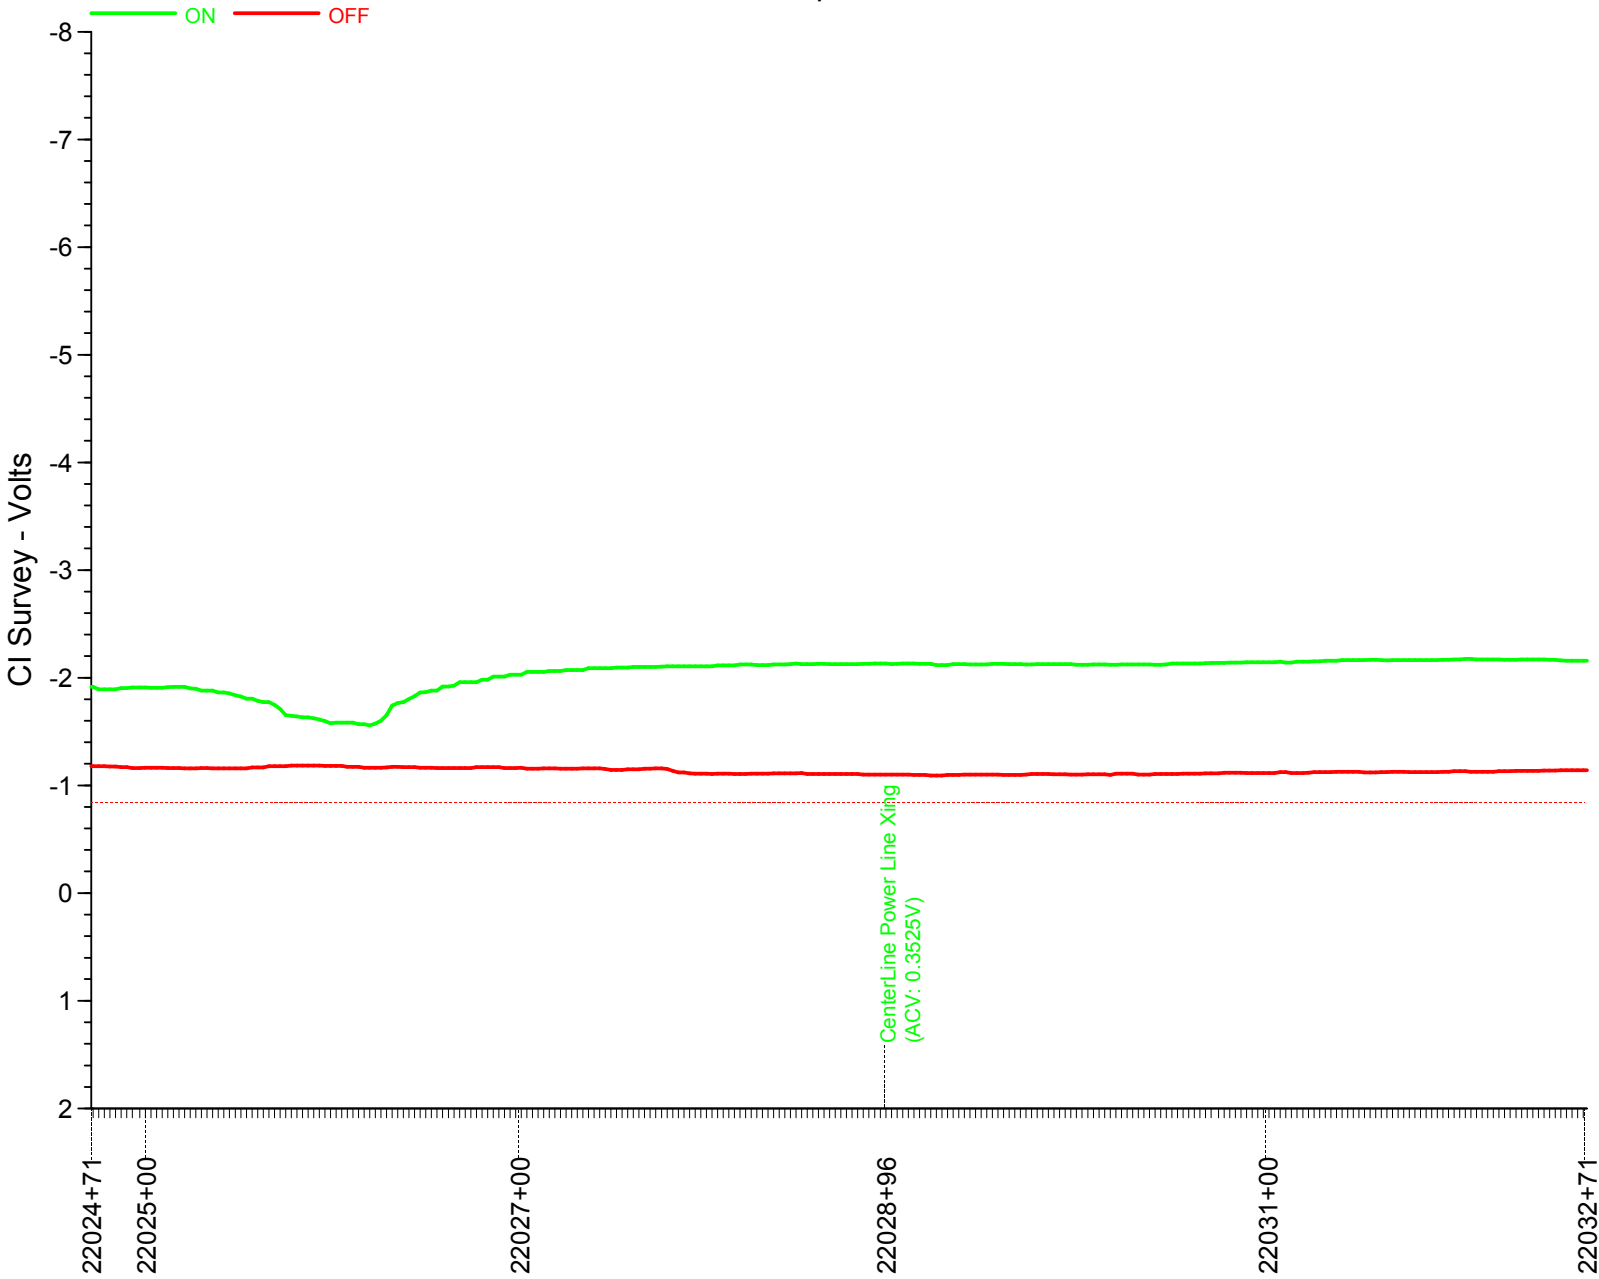

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

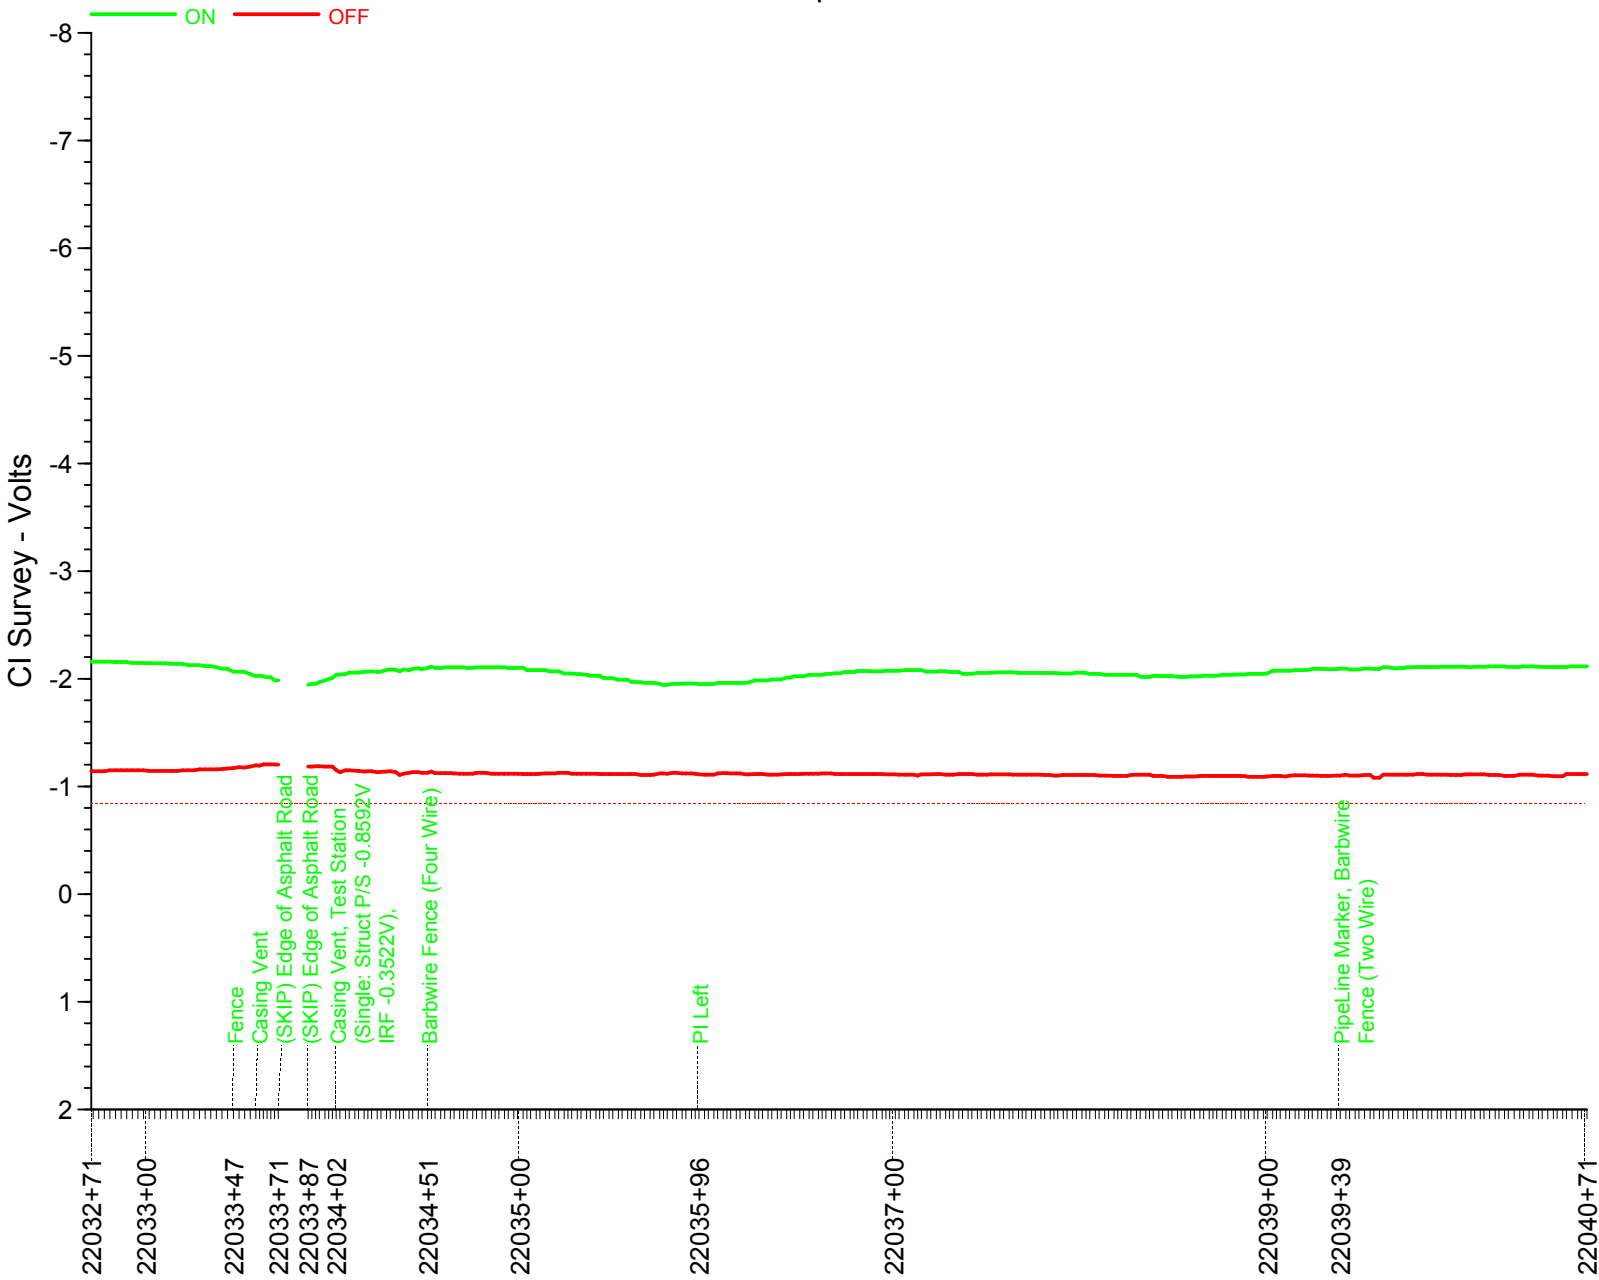

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

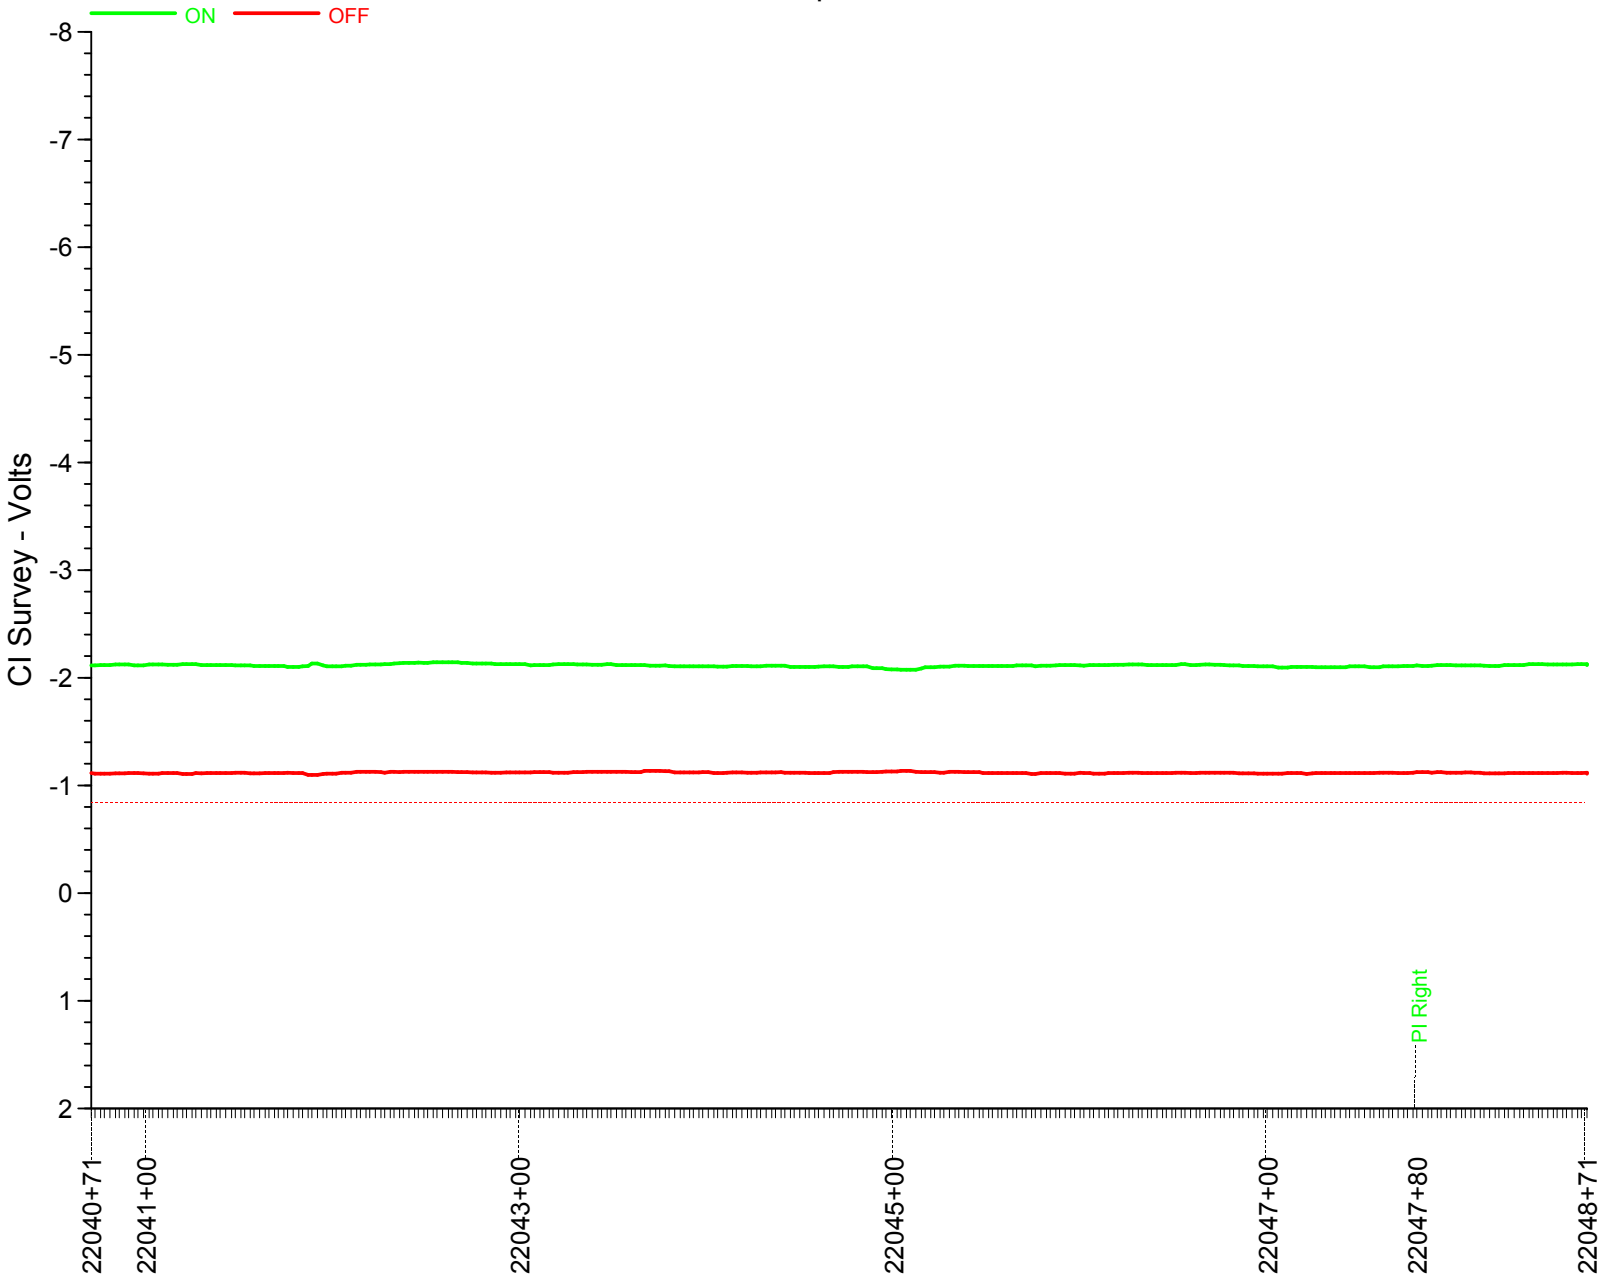

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

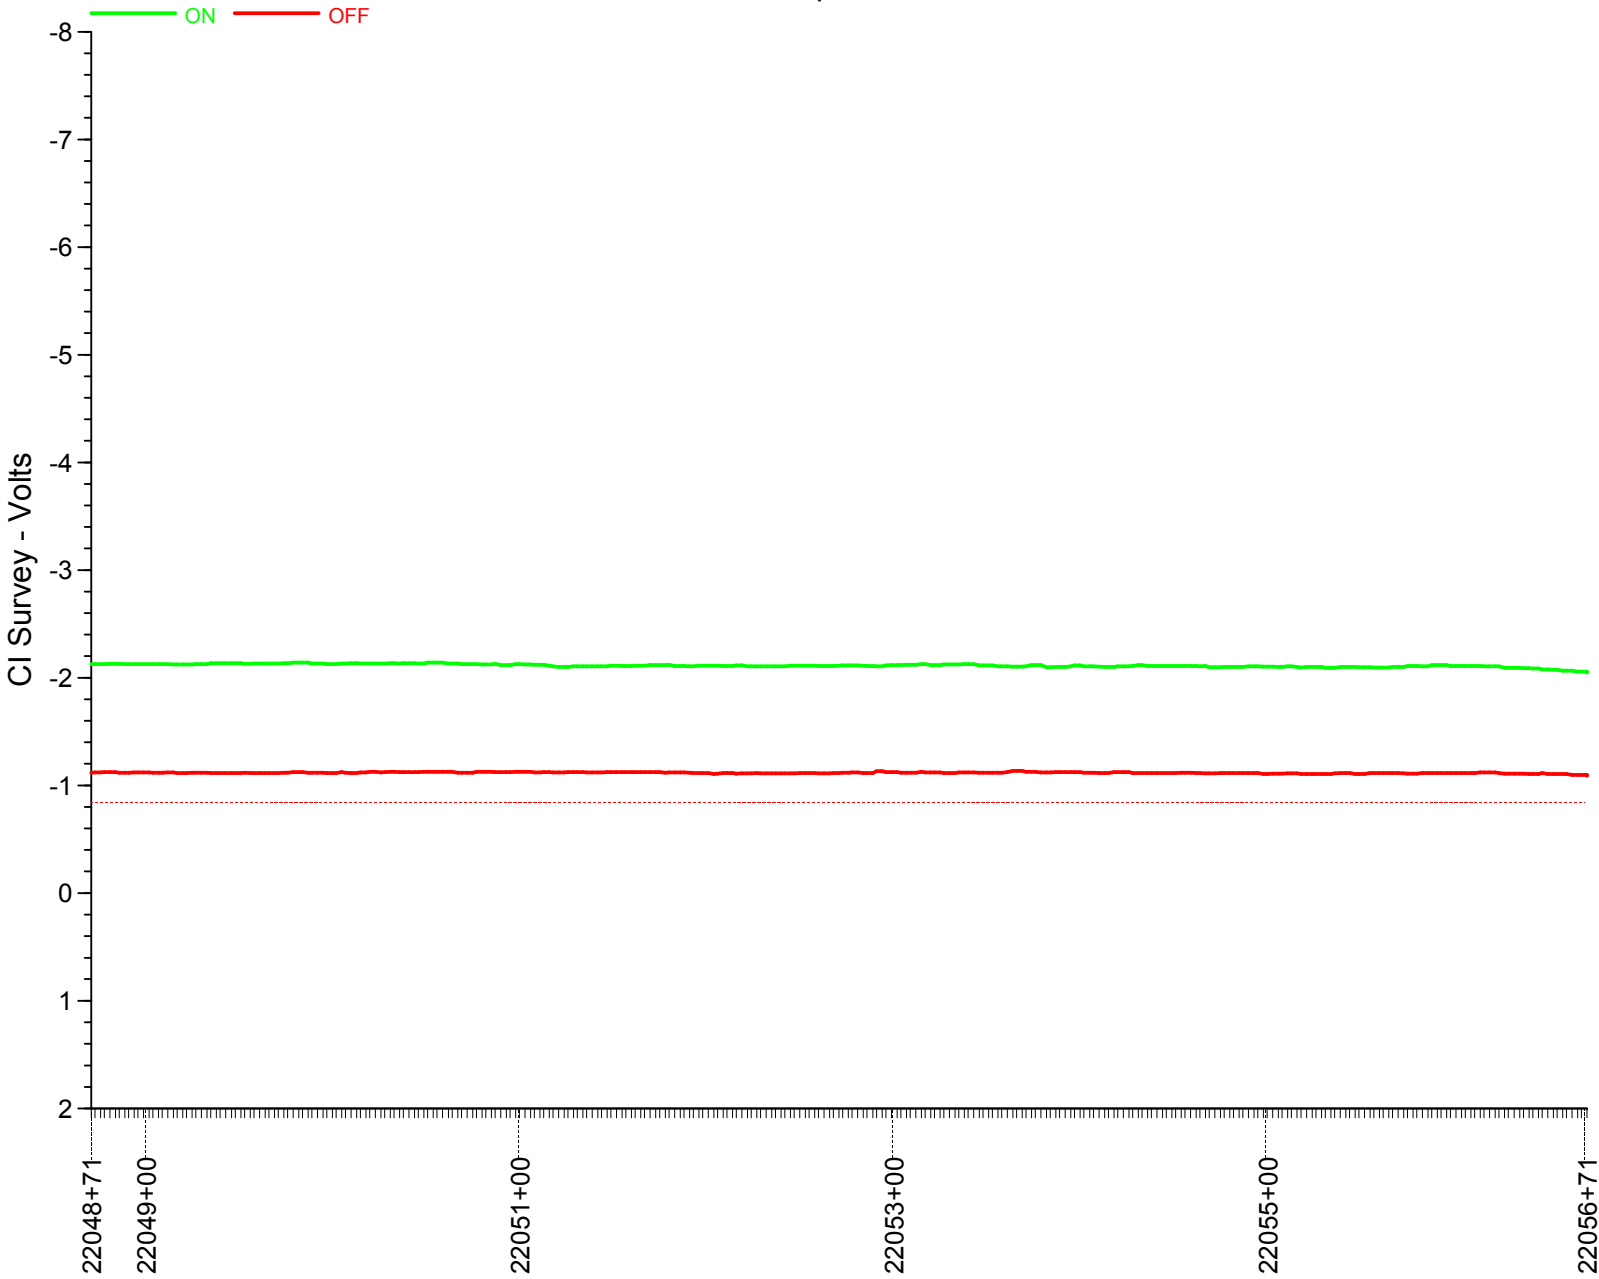

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

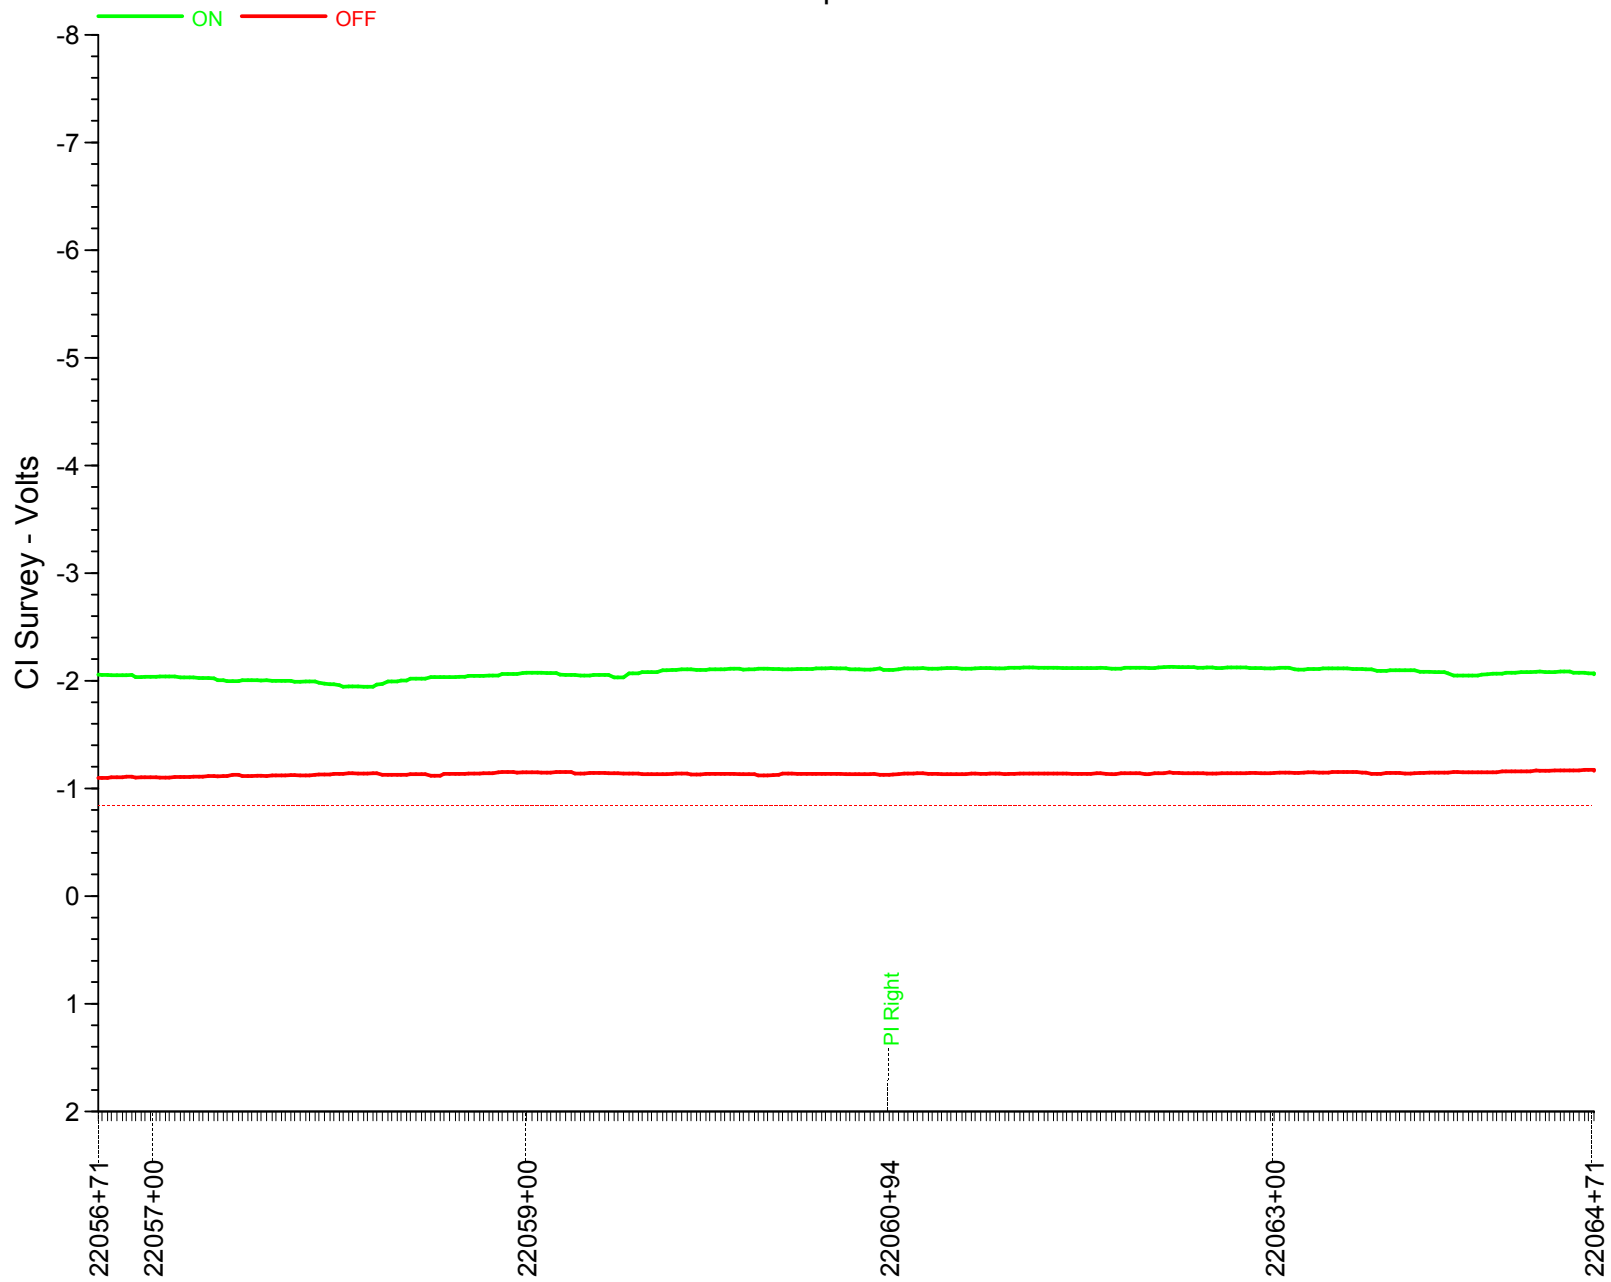

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

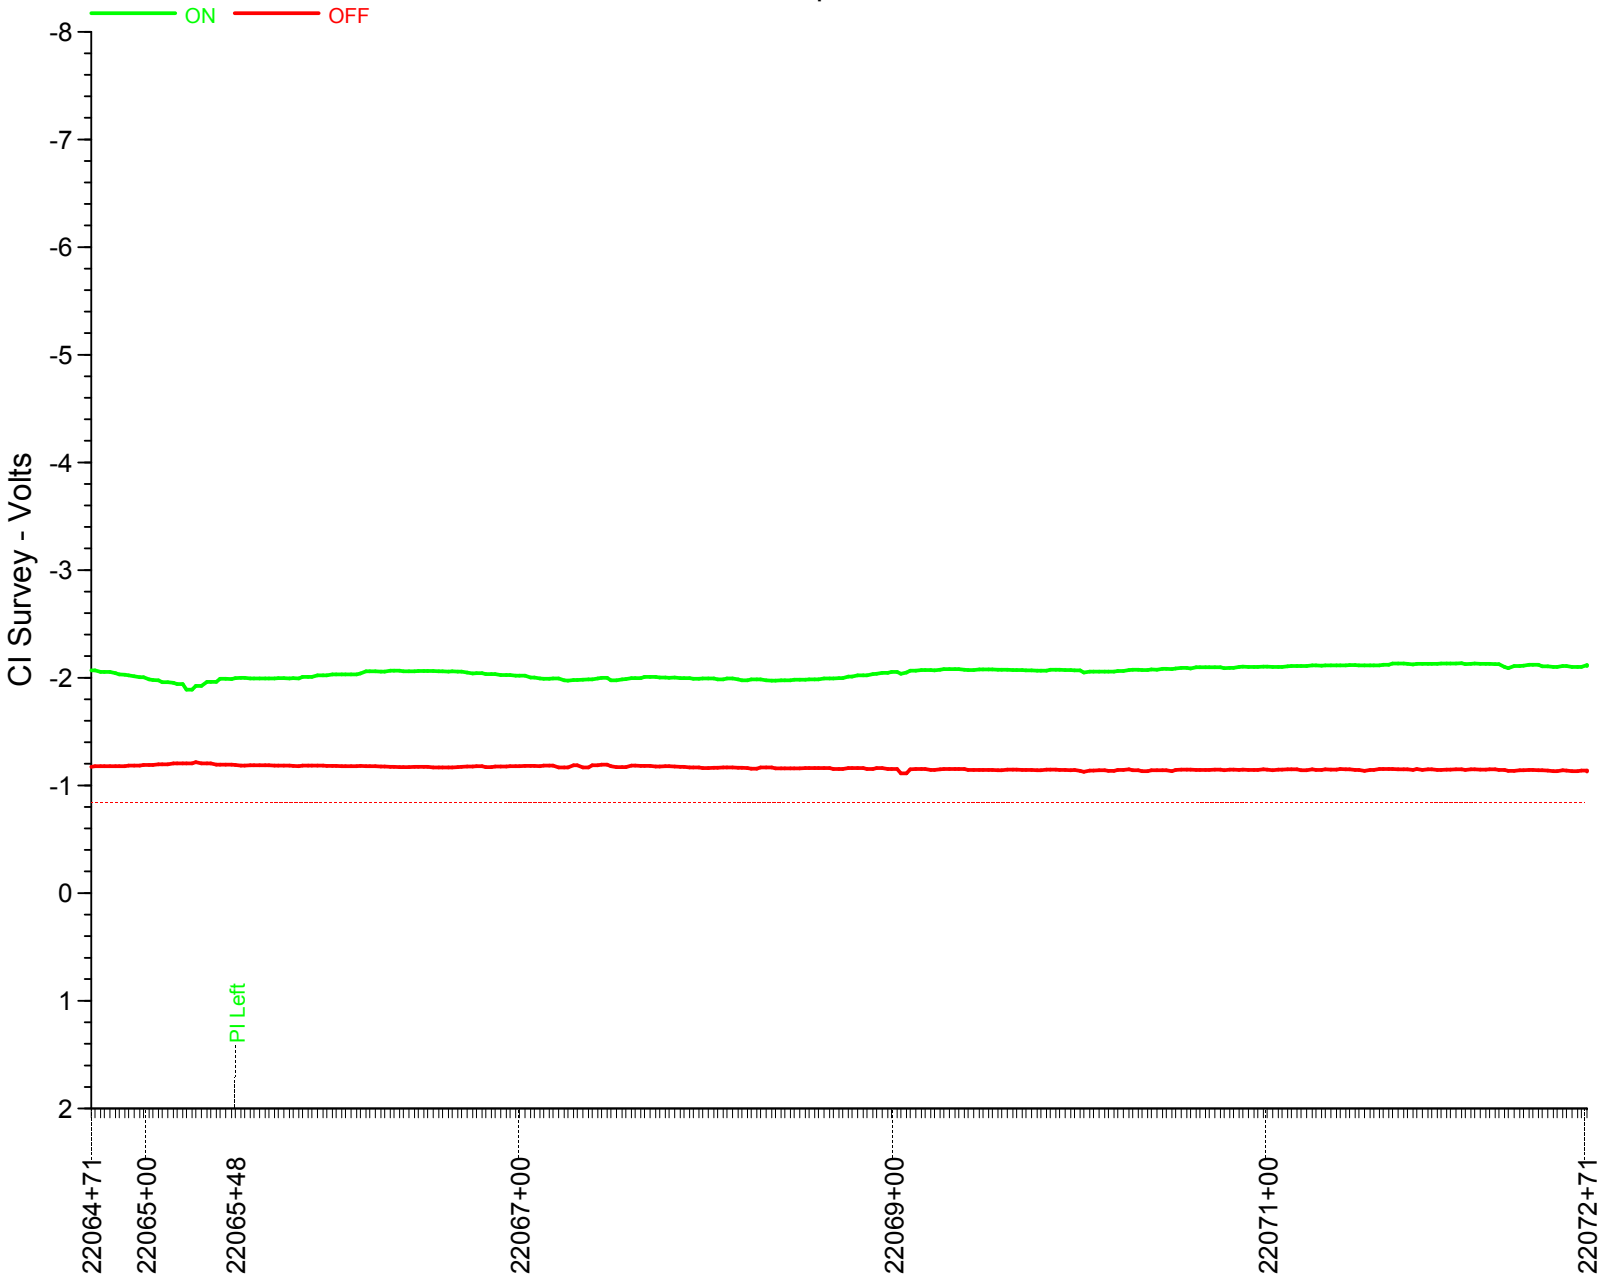


100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION




Pipe: 1

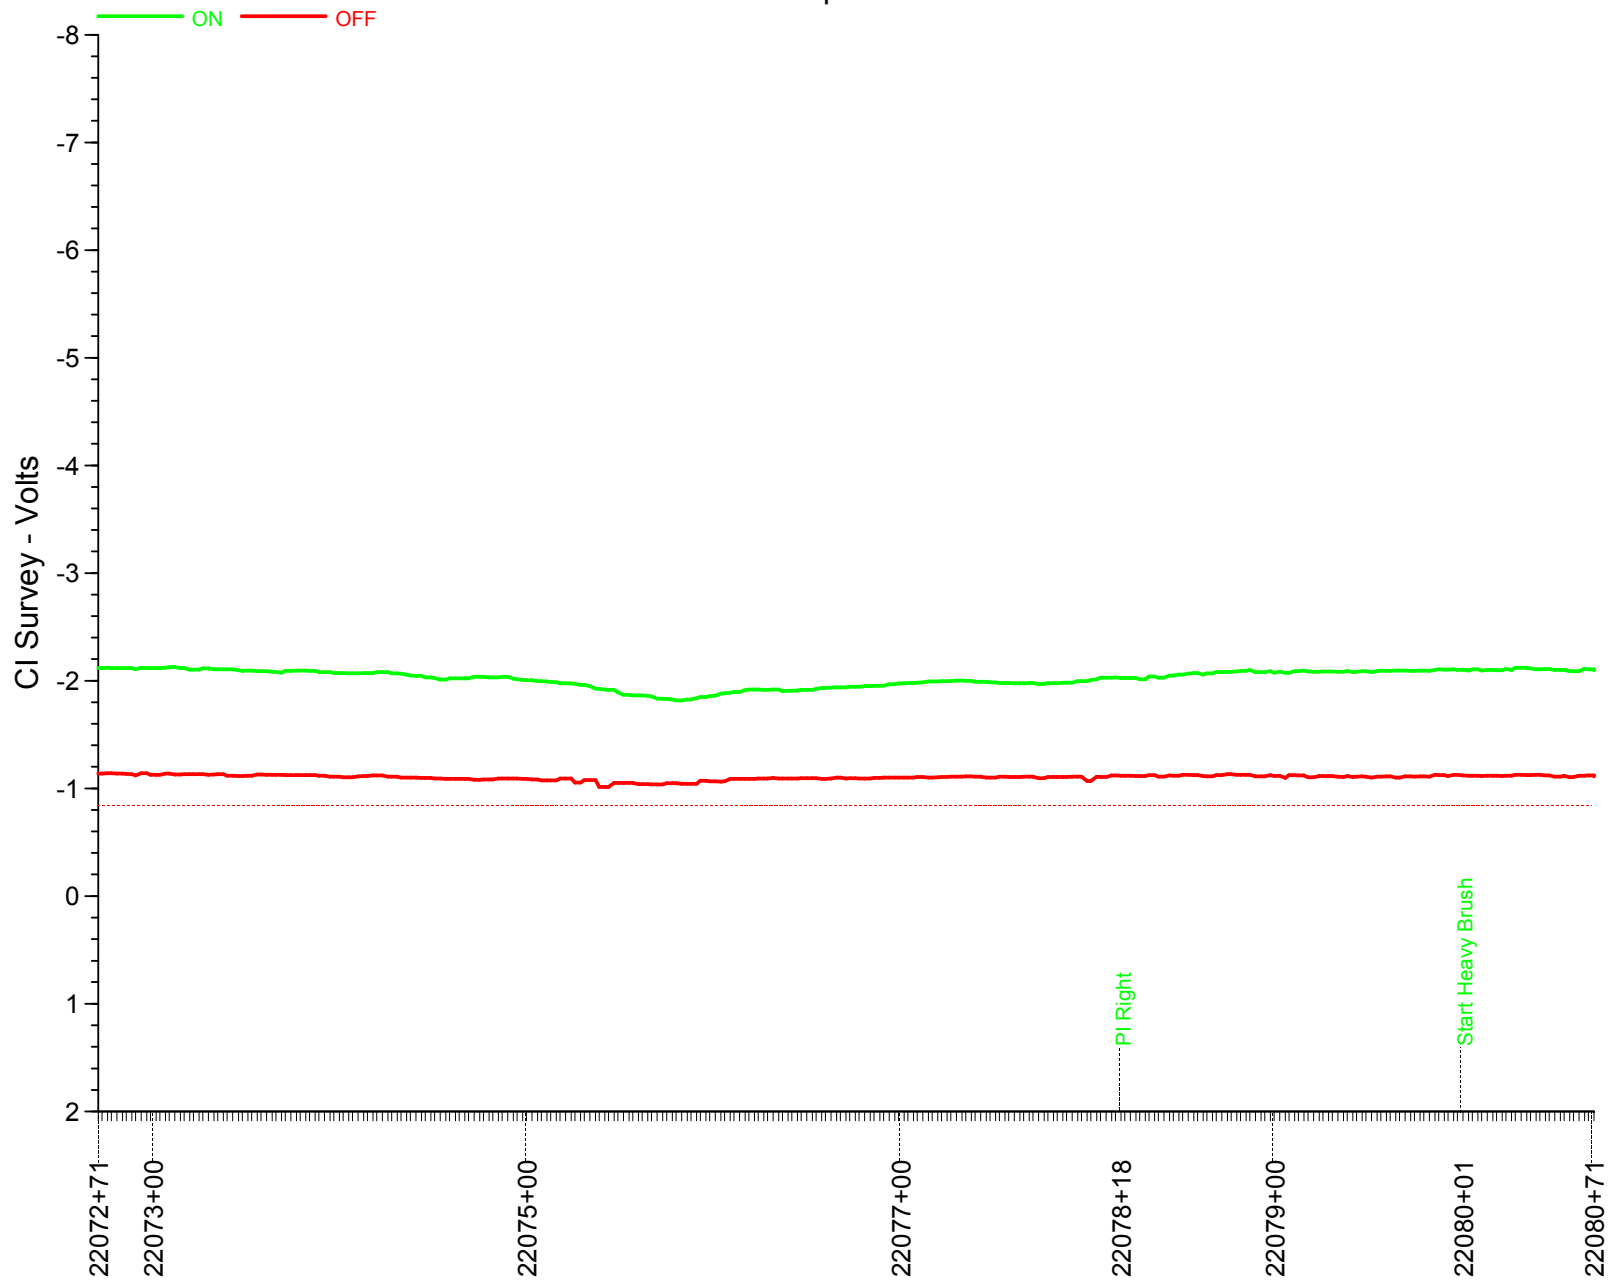

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

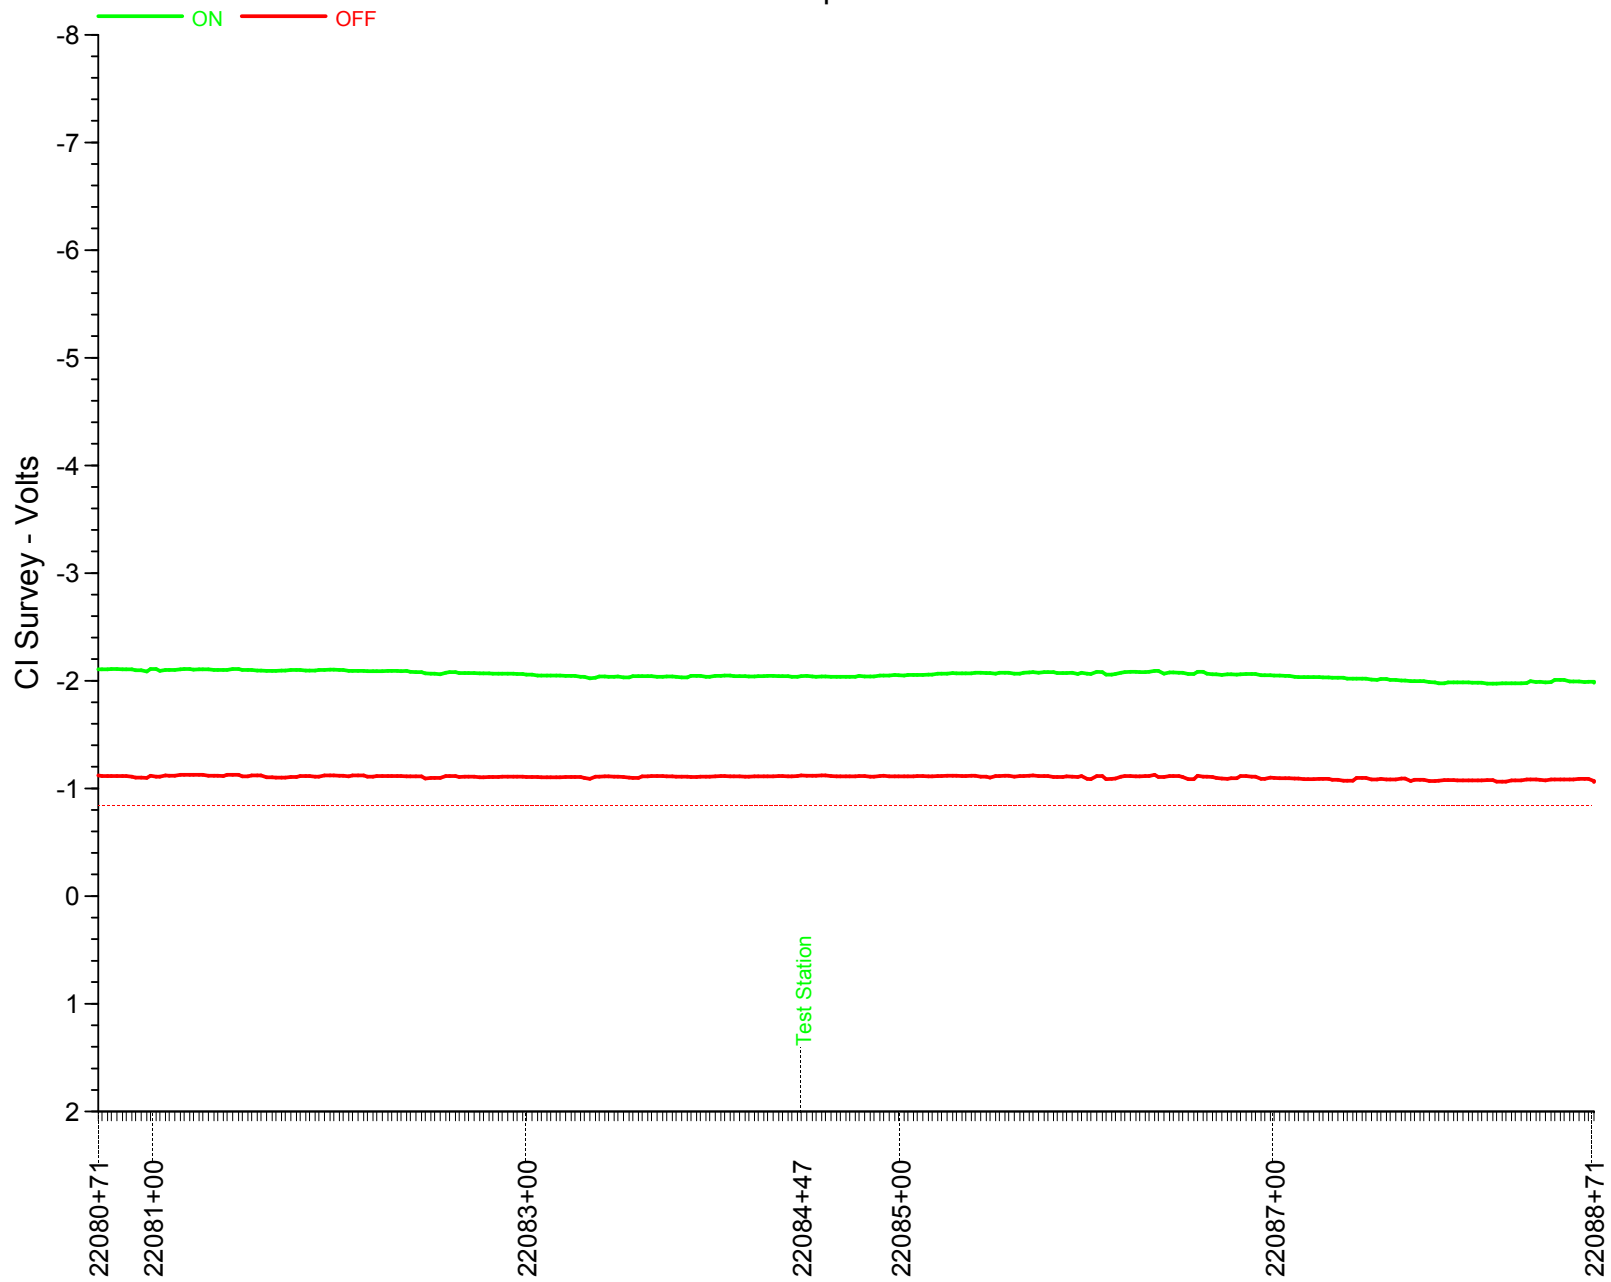

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

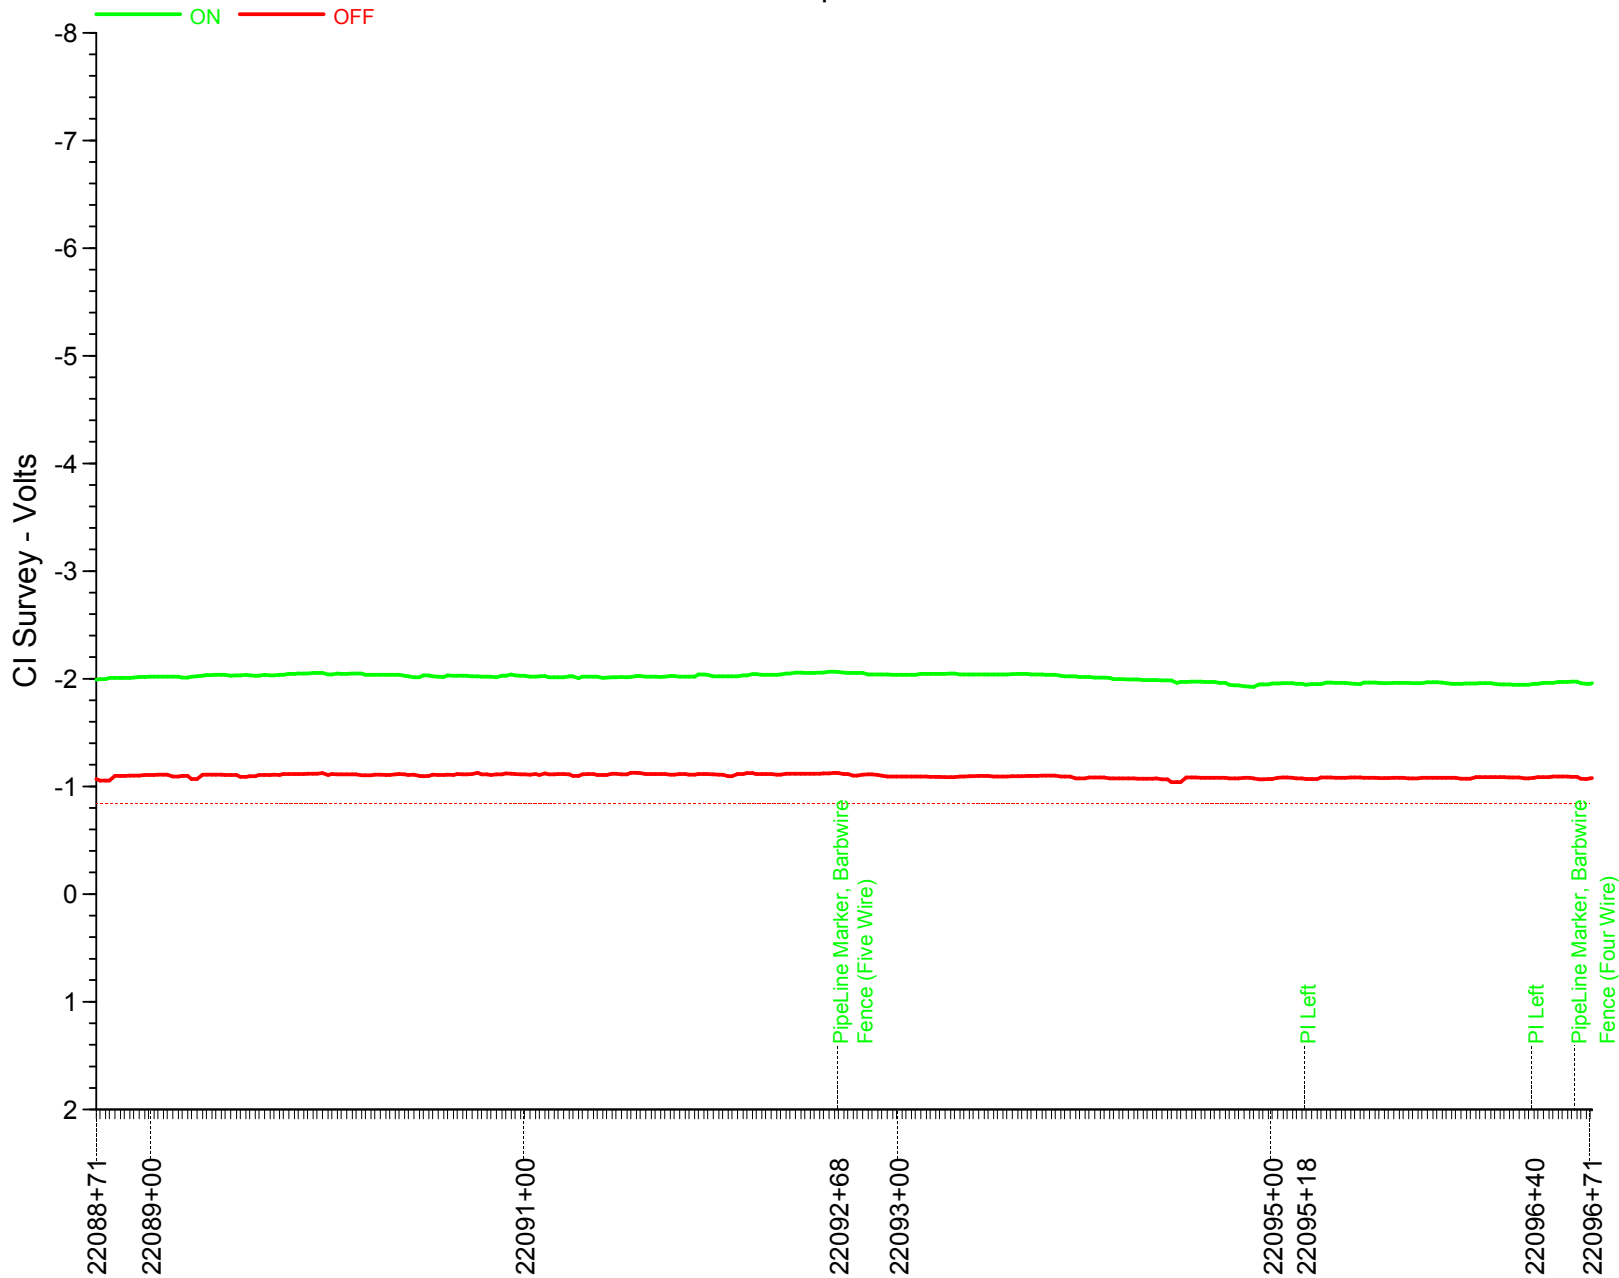

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

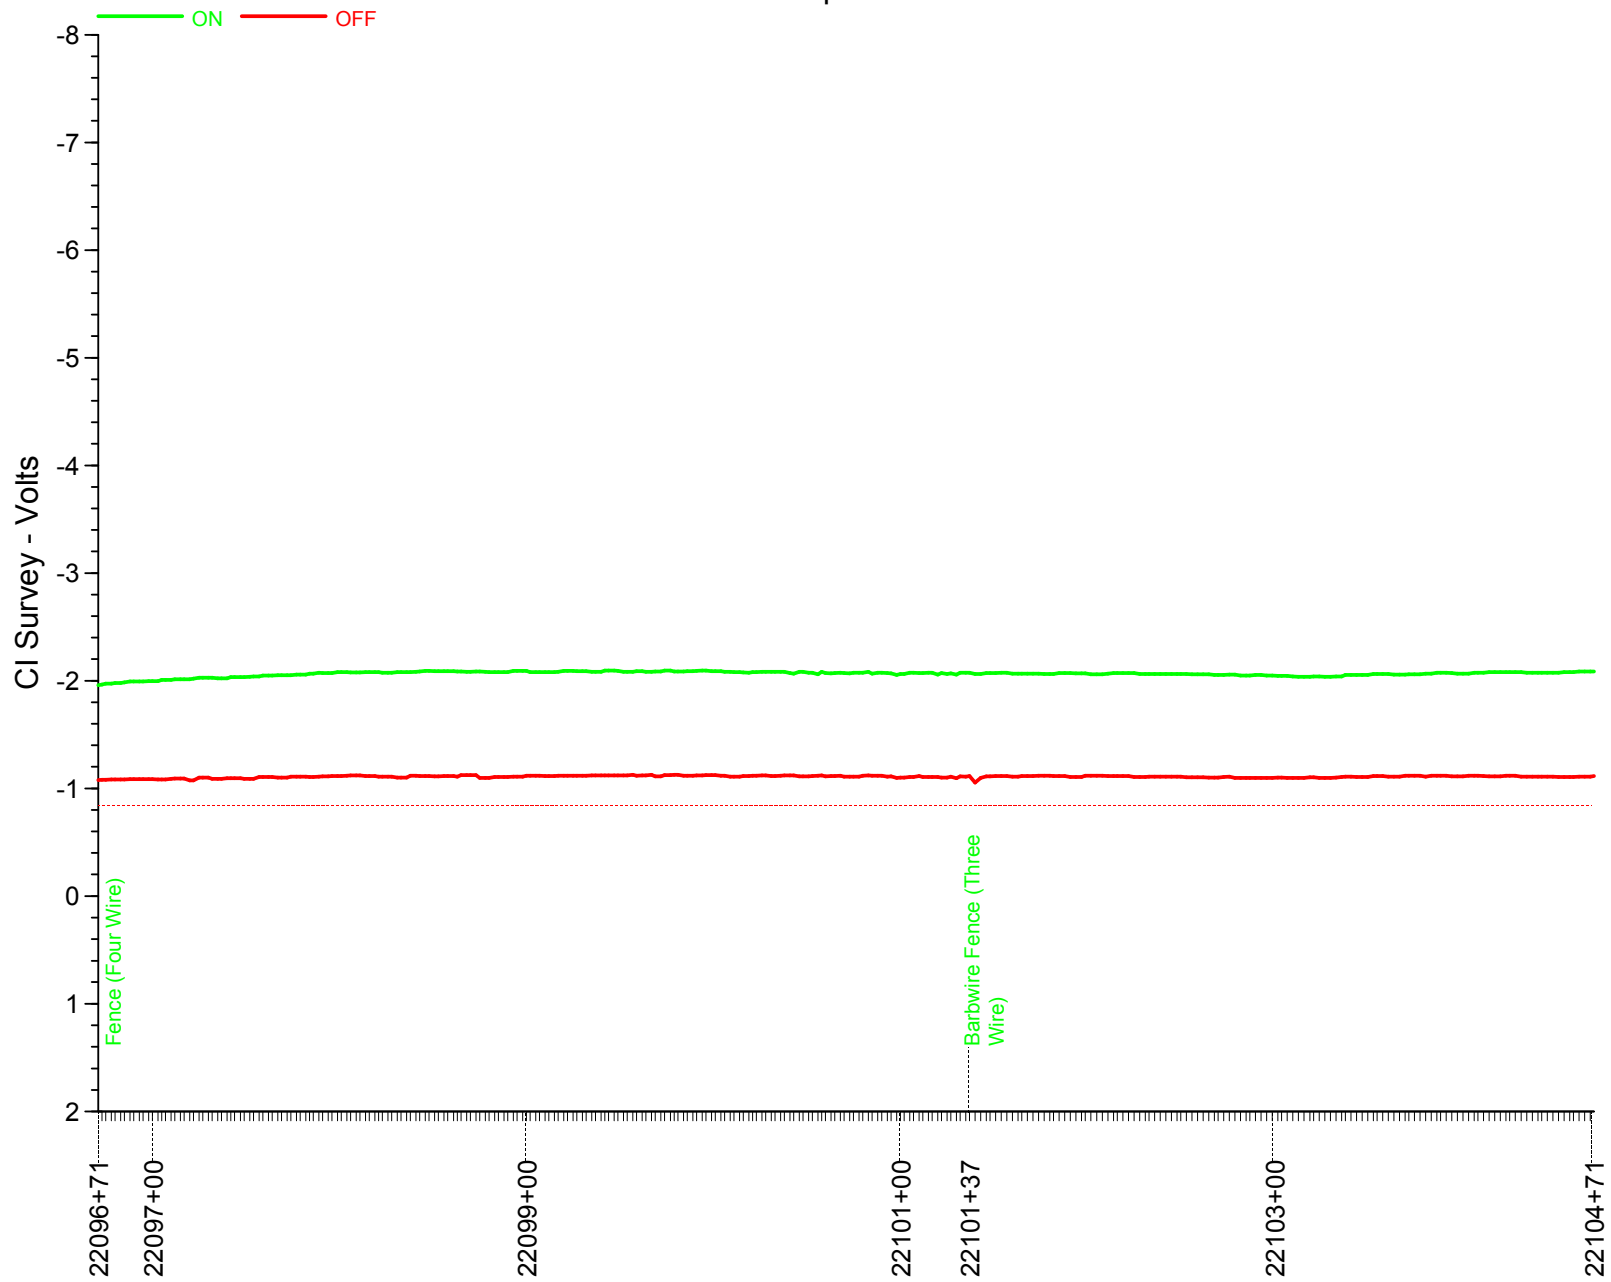

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

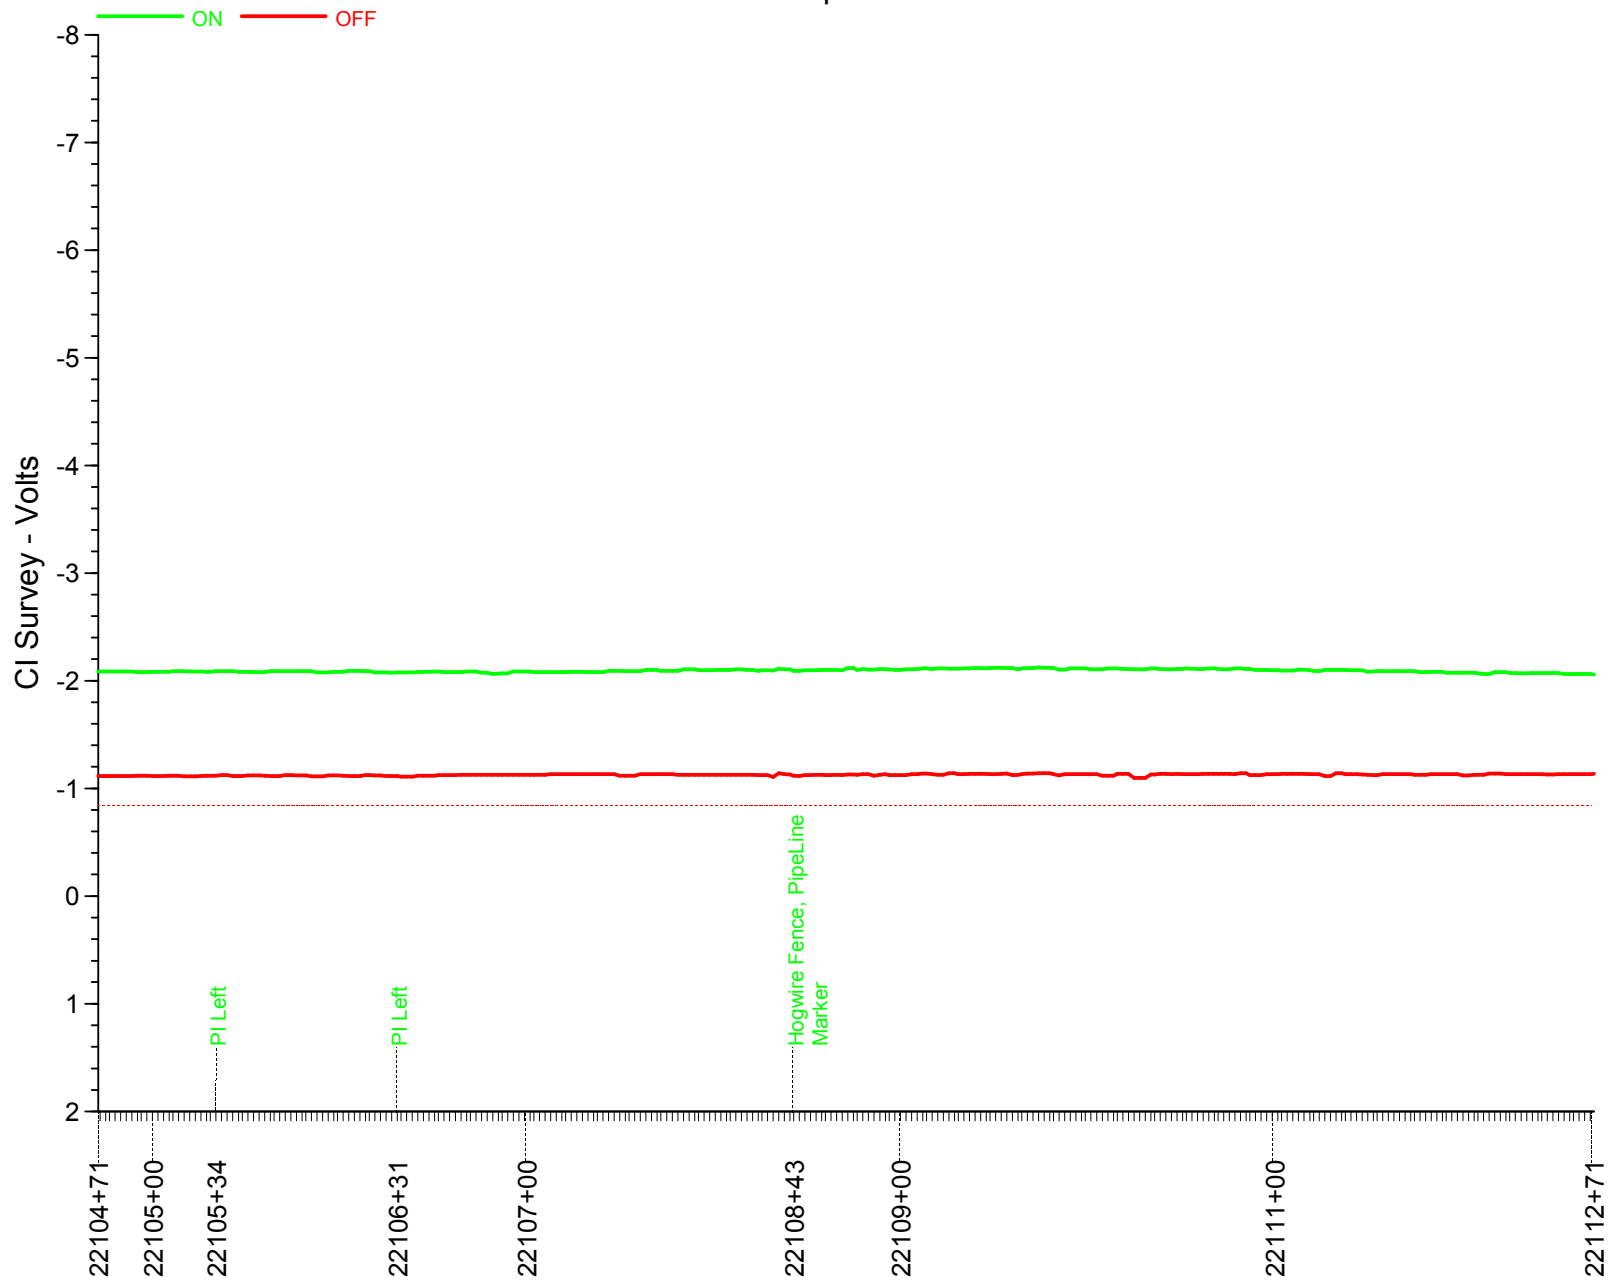

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

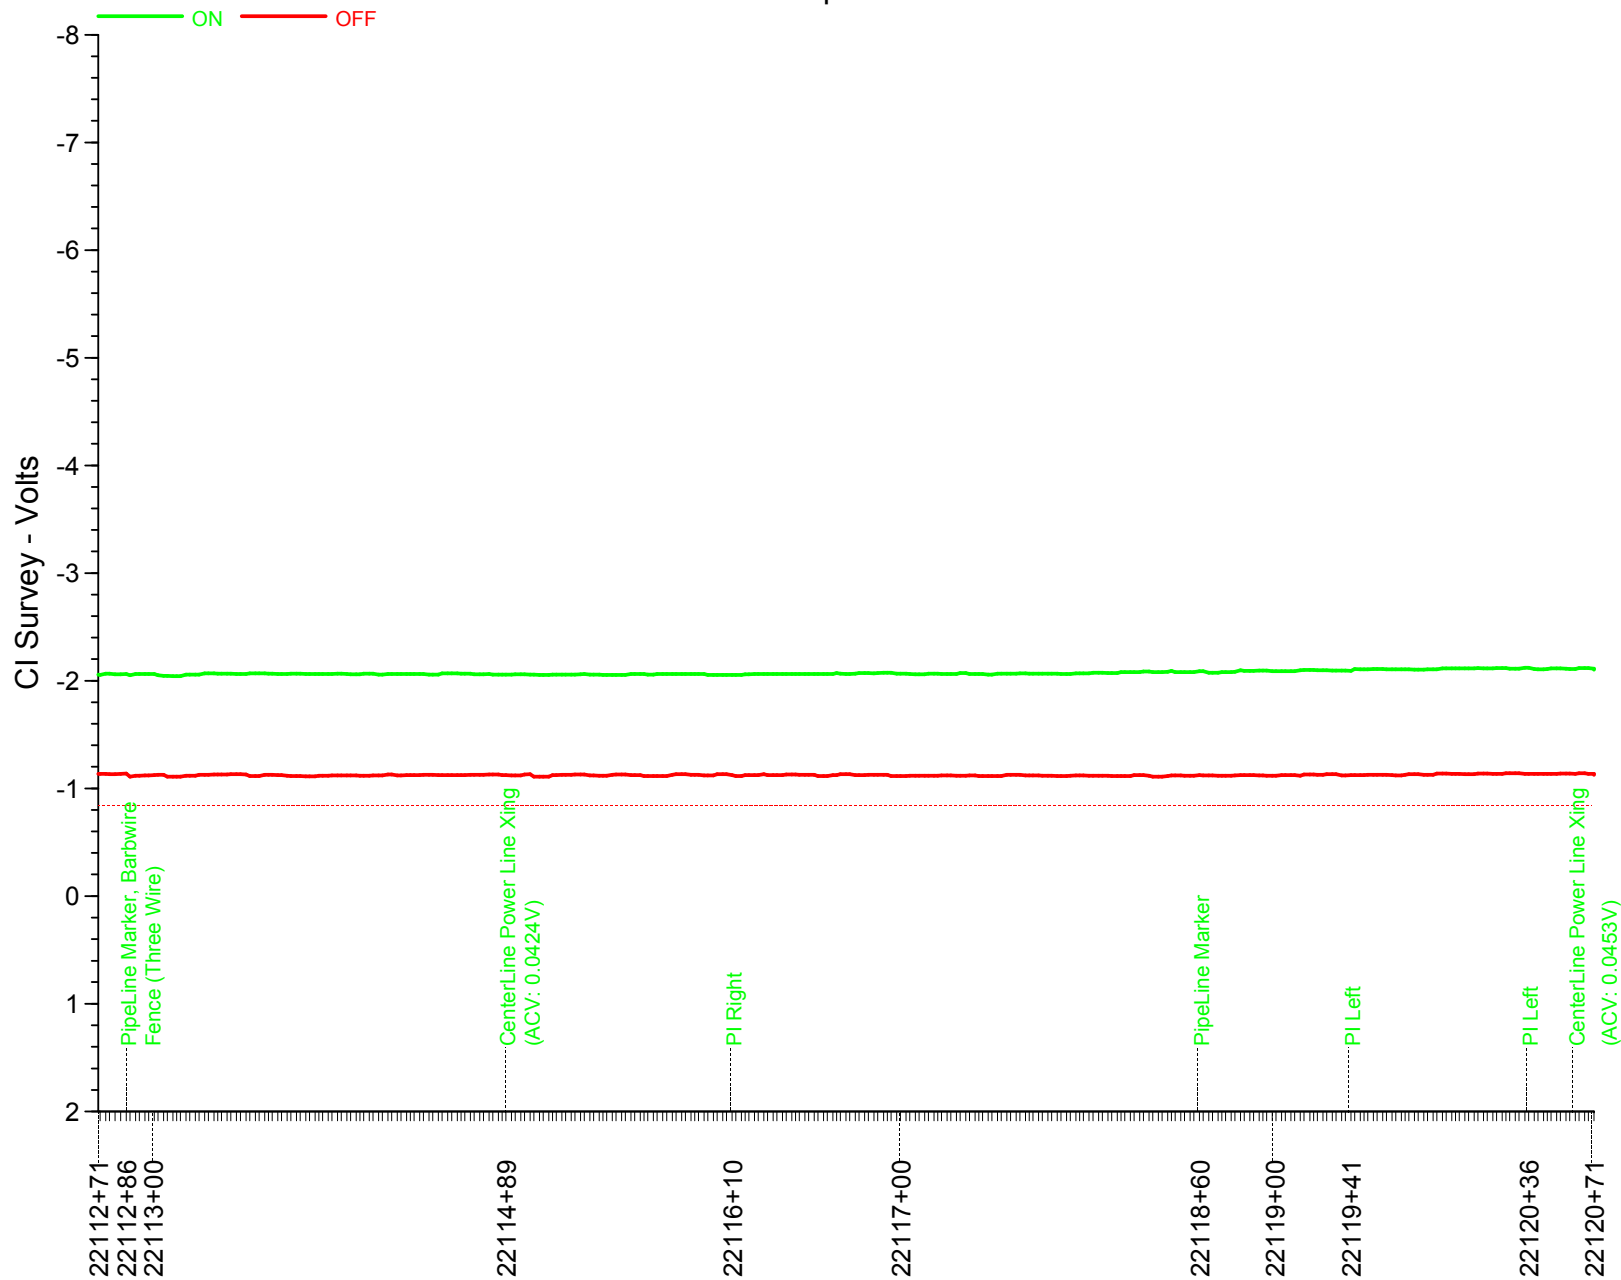

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

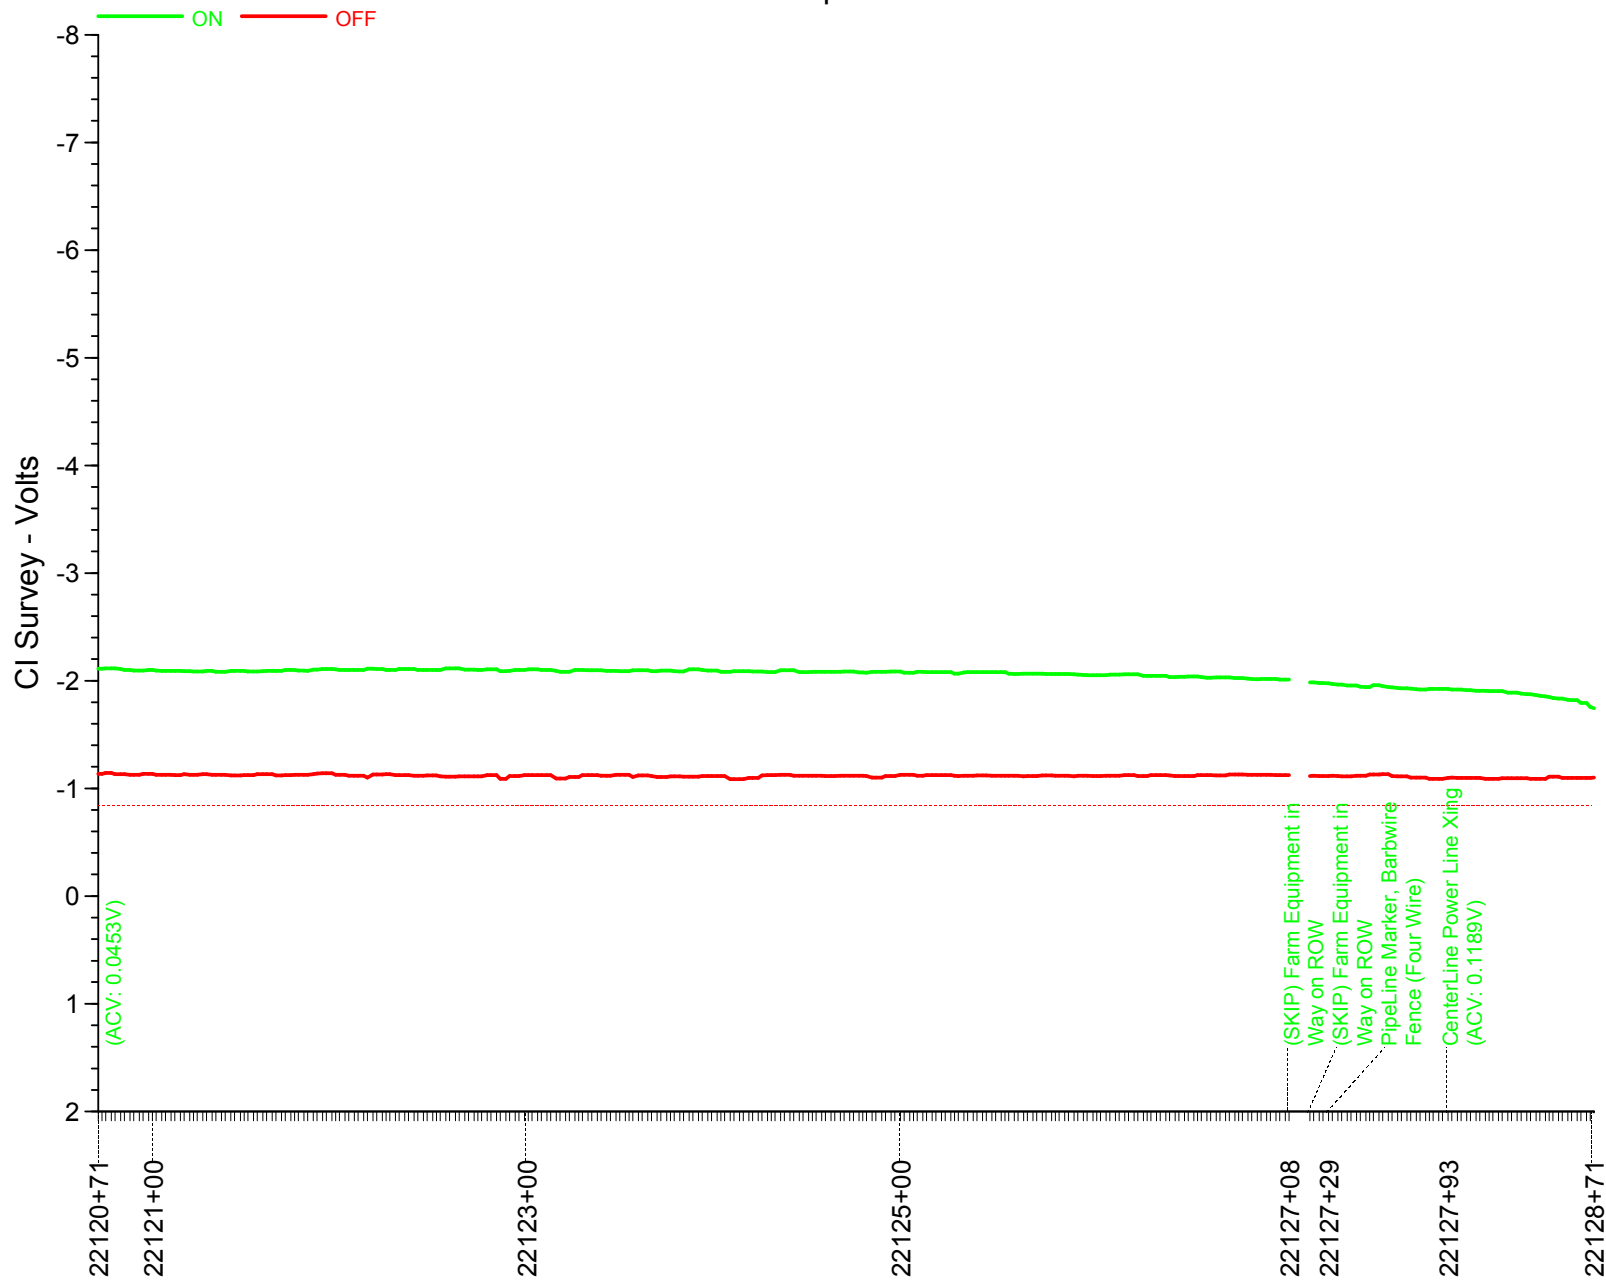

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

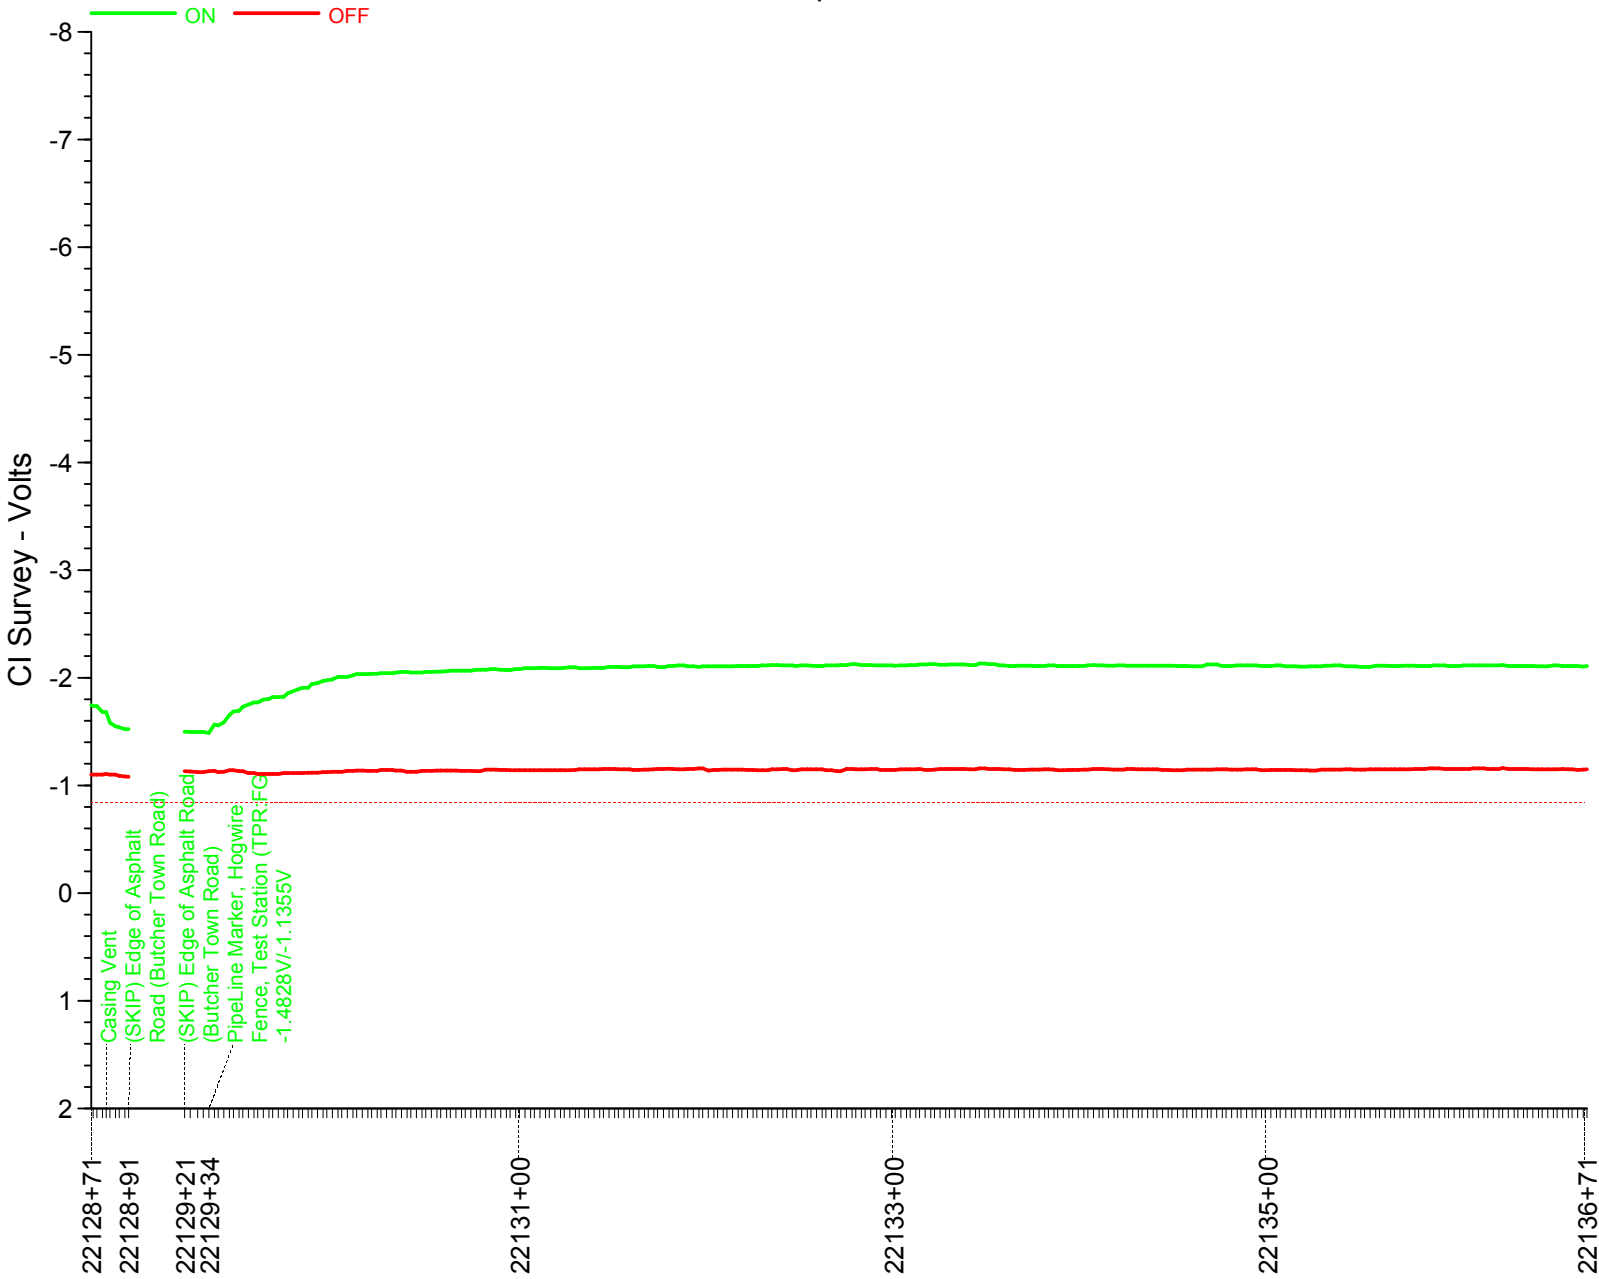


100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION




Pipe: 1

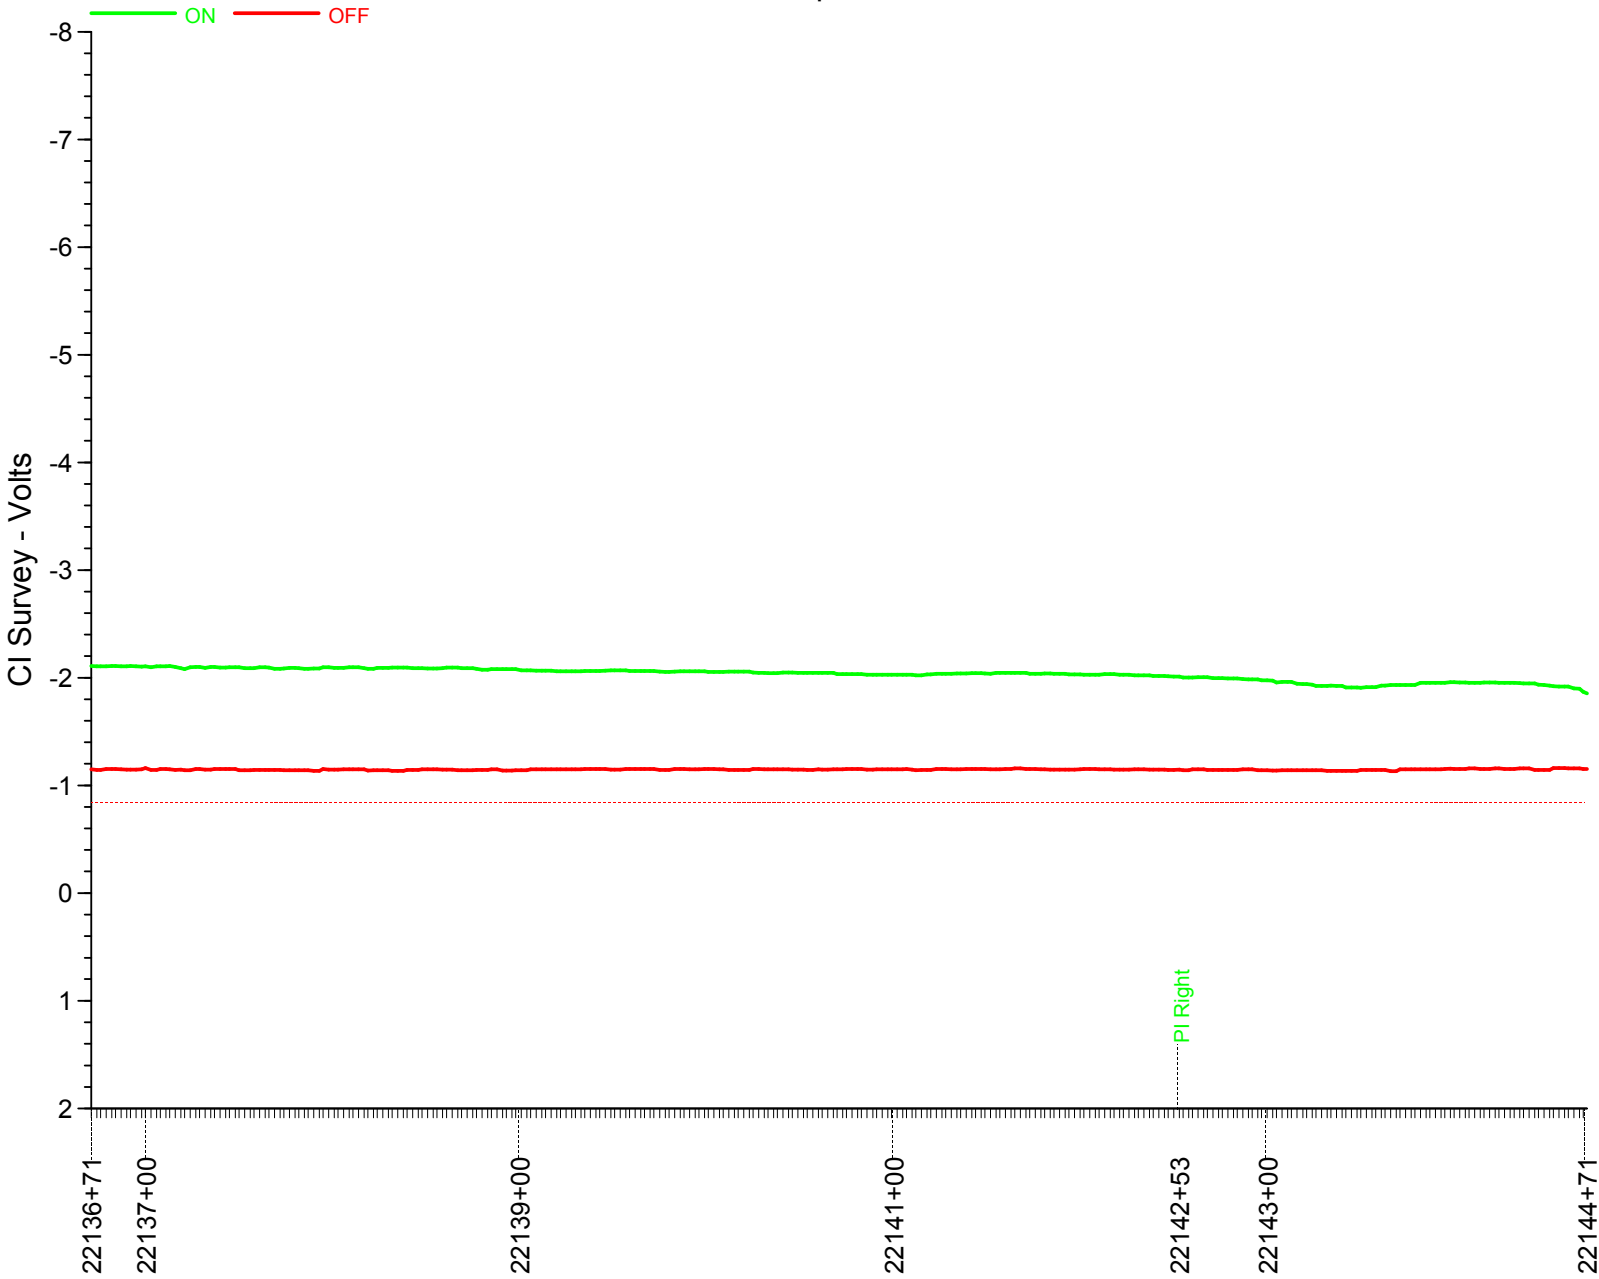

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

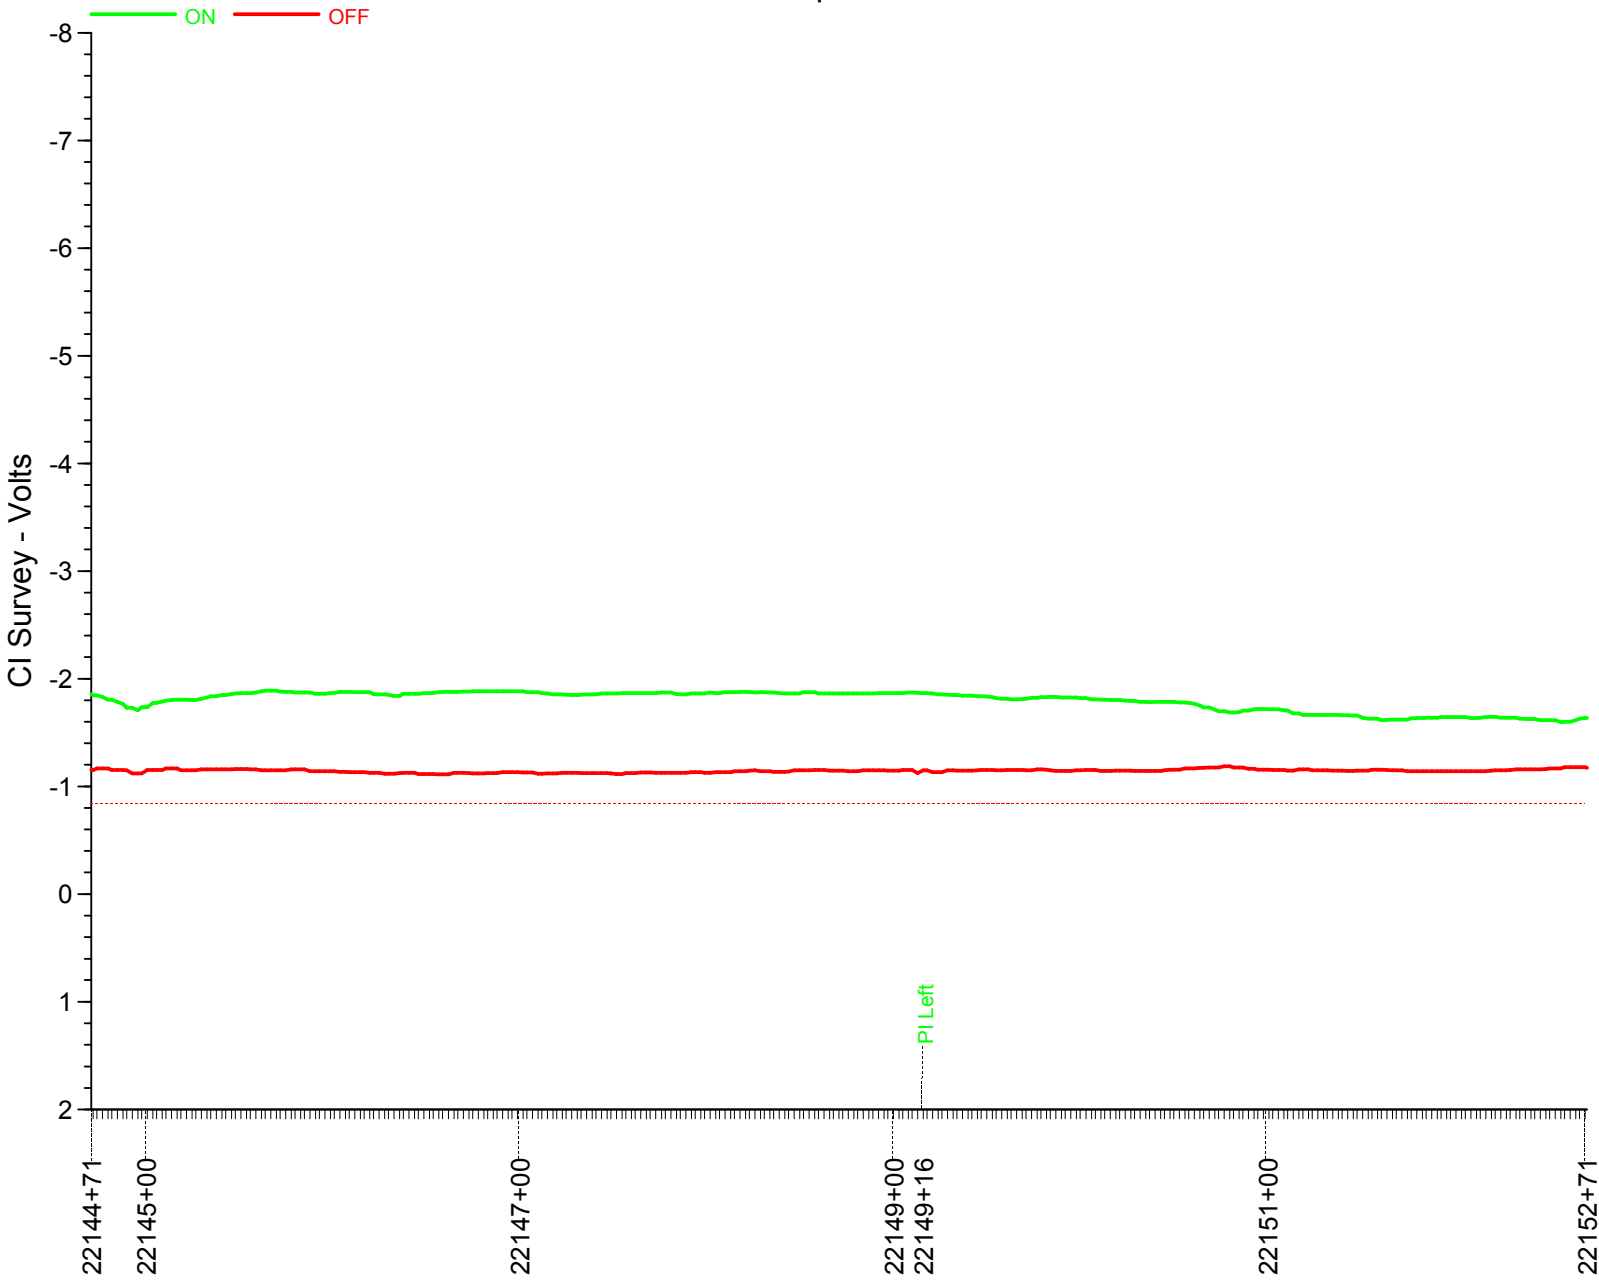

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

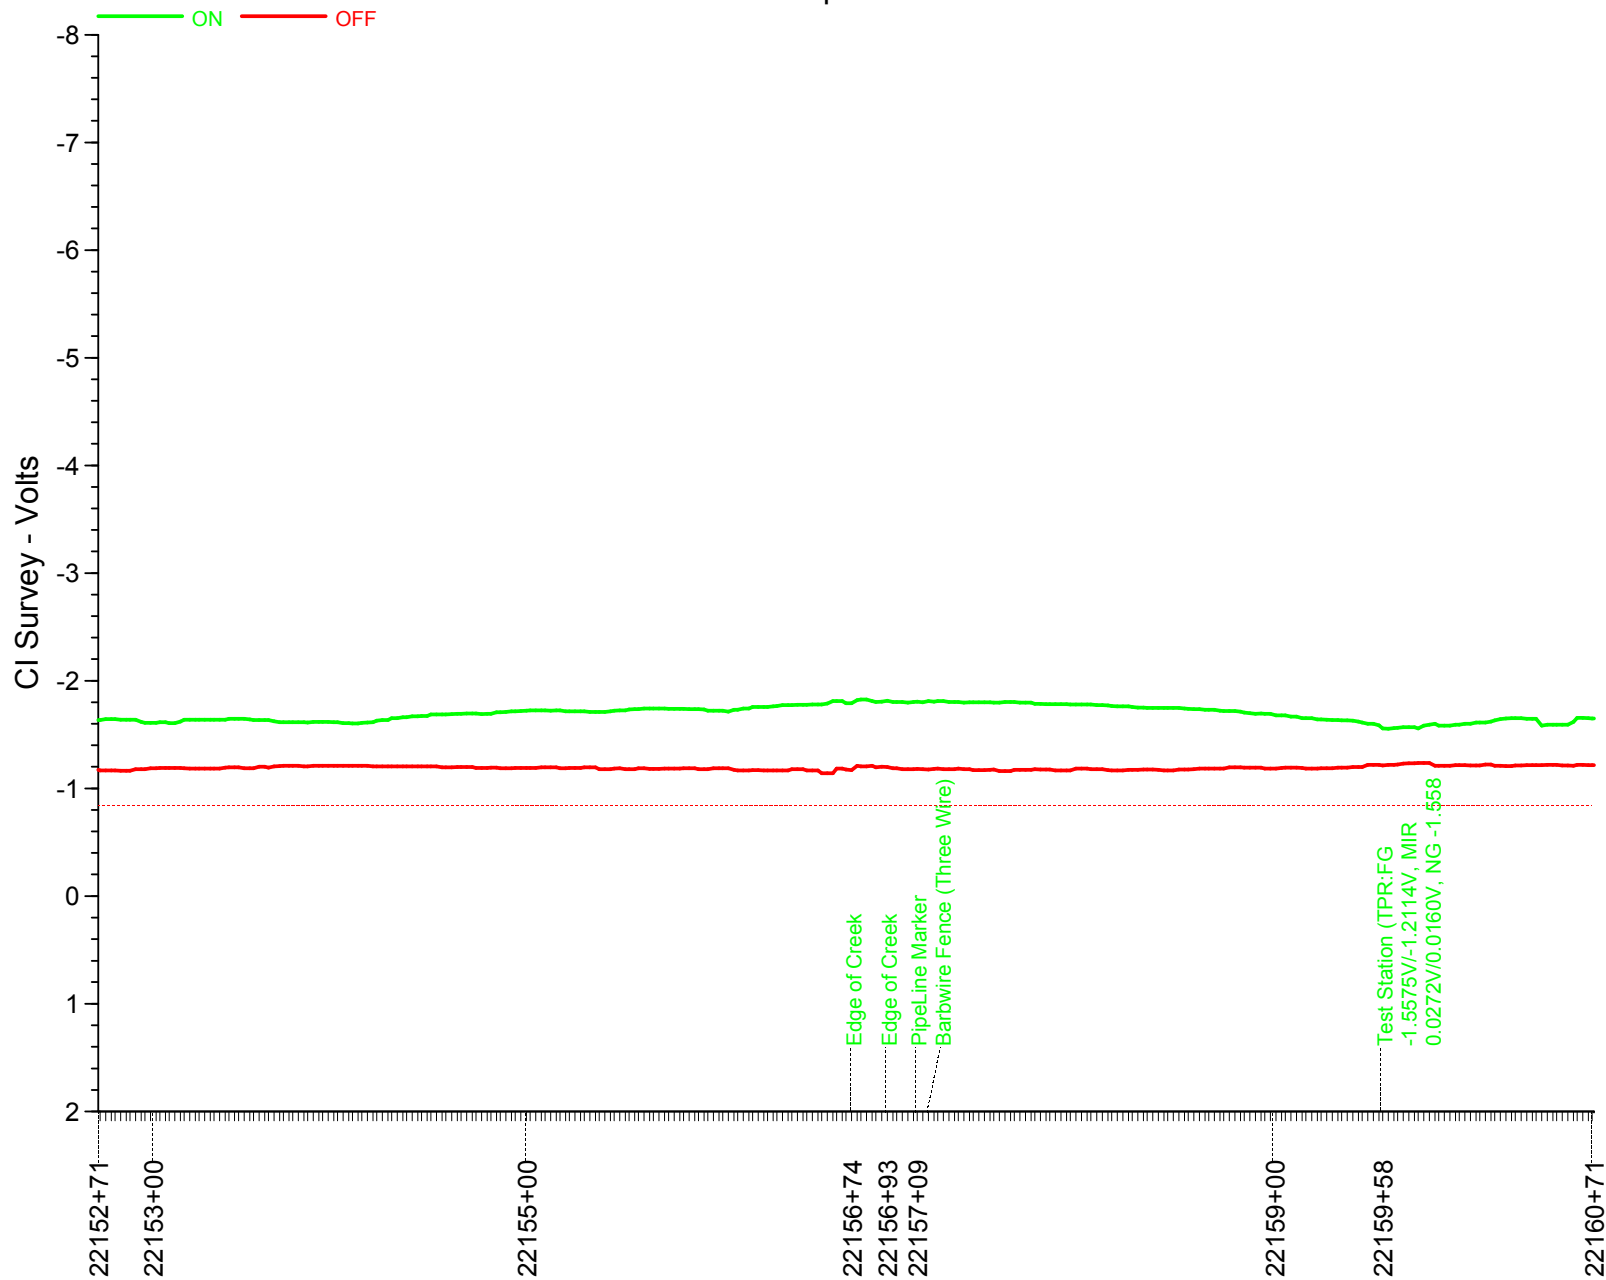

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

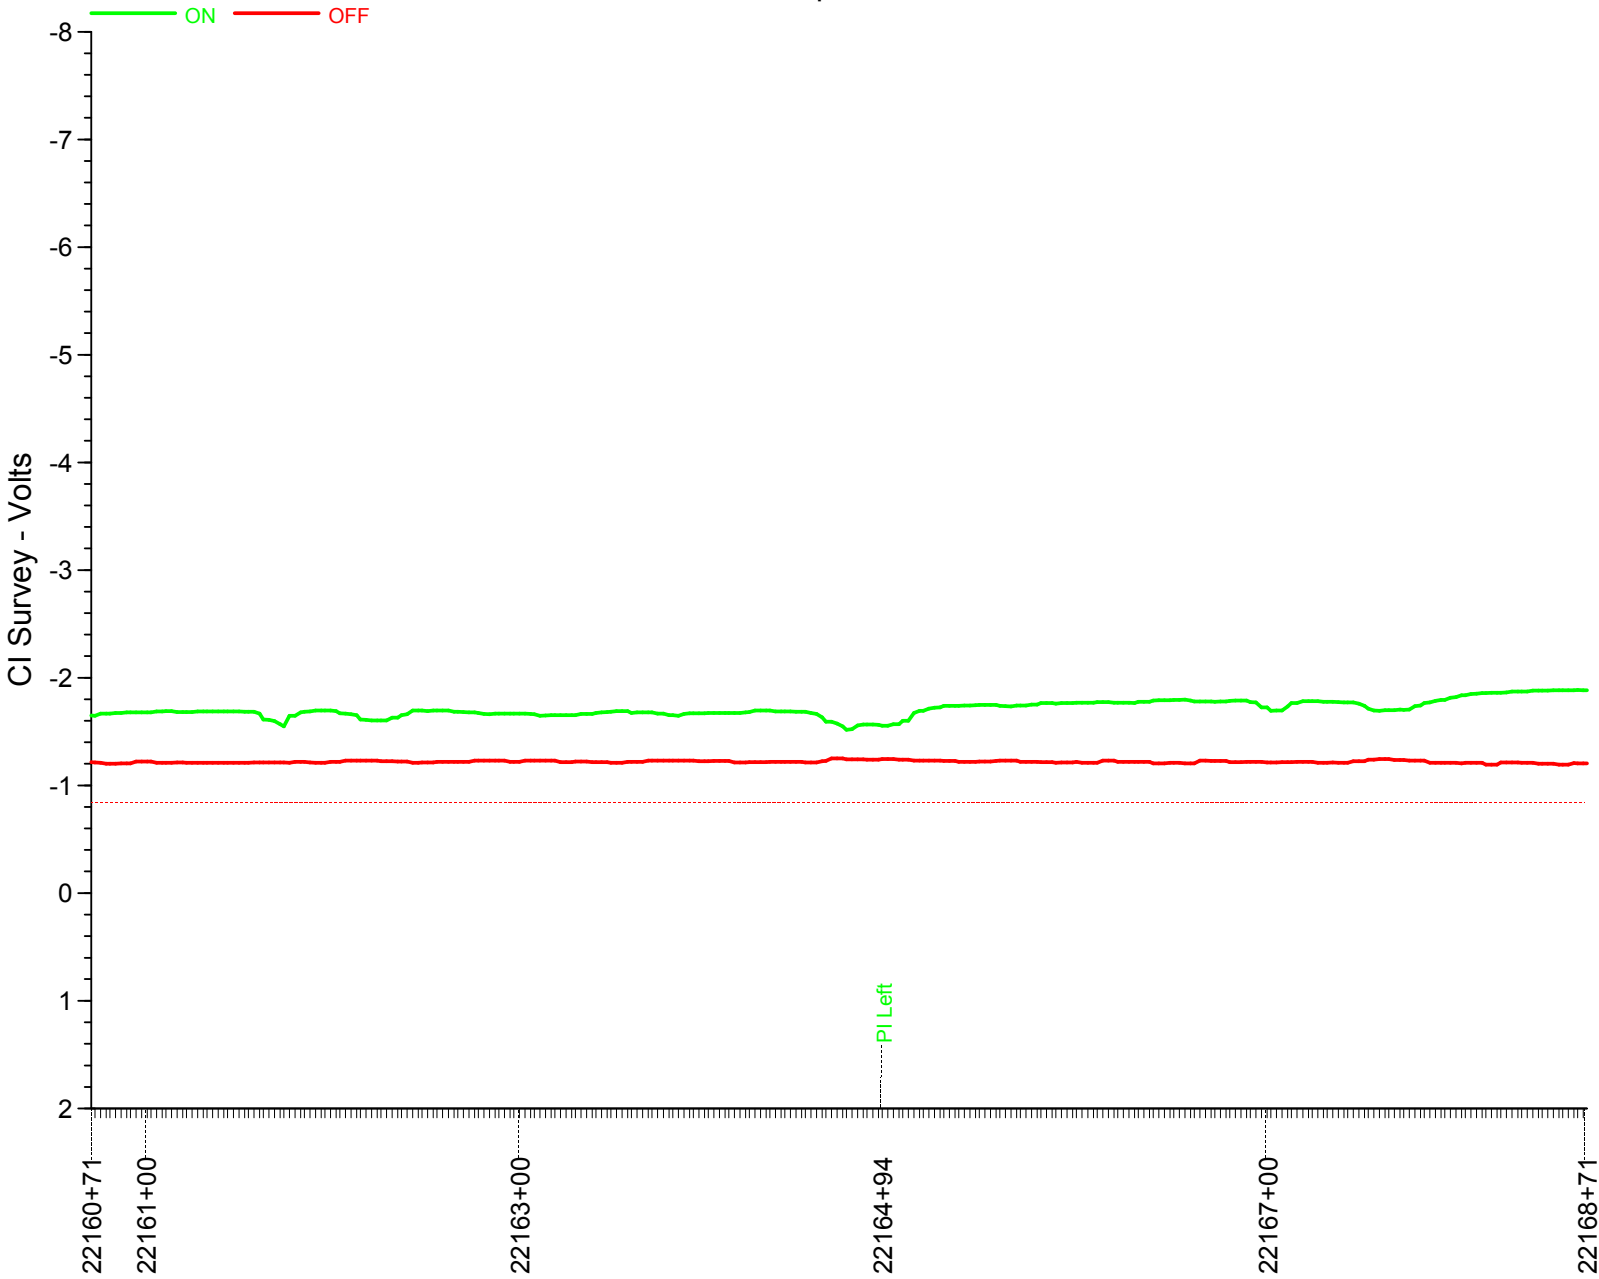

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

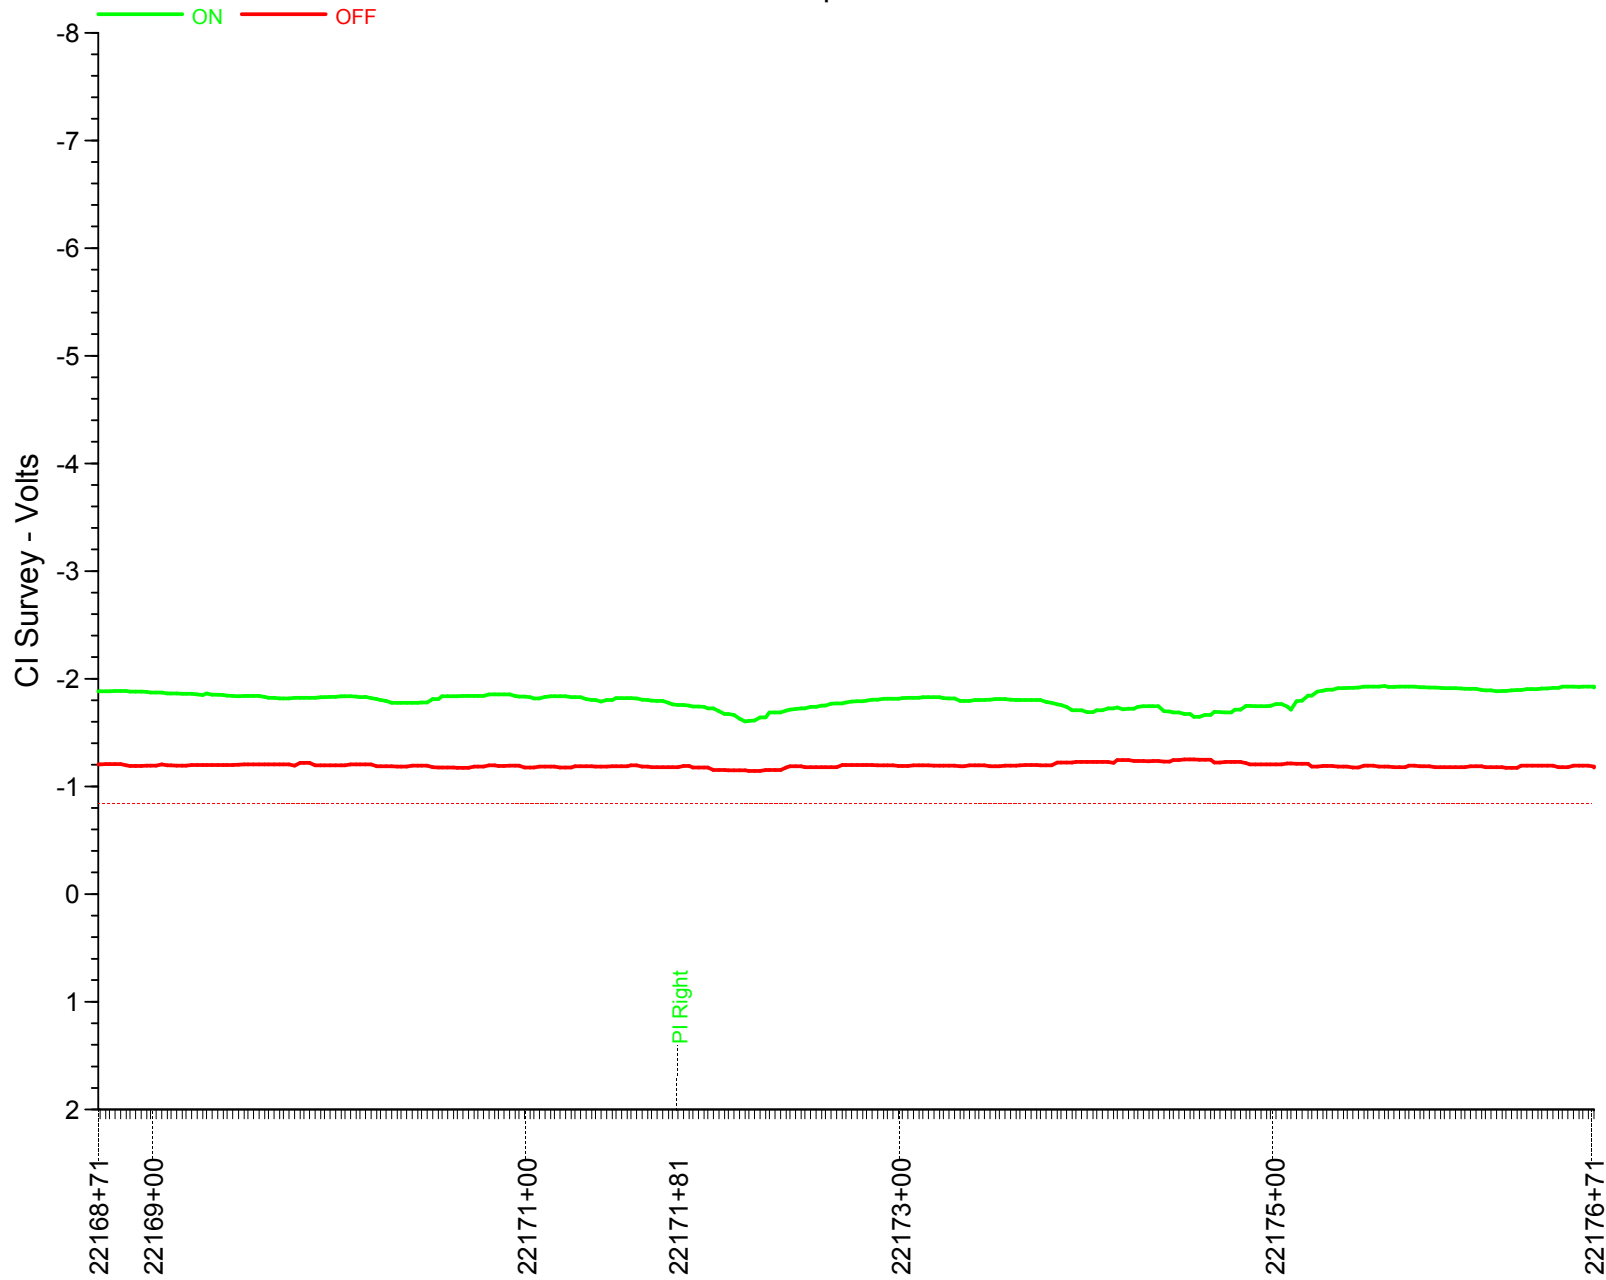


100 Feet/Inch

CP Data Manager 11/28/12 Page 76

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

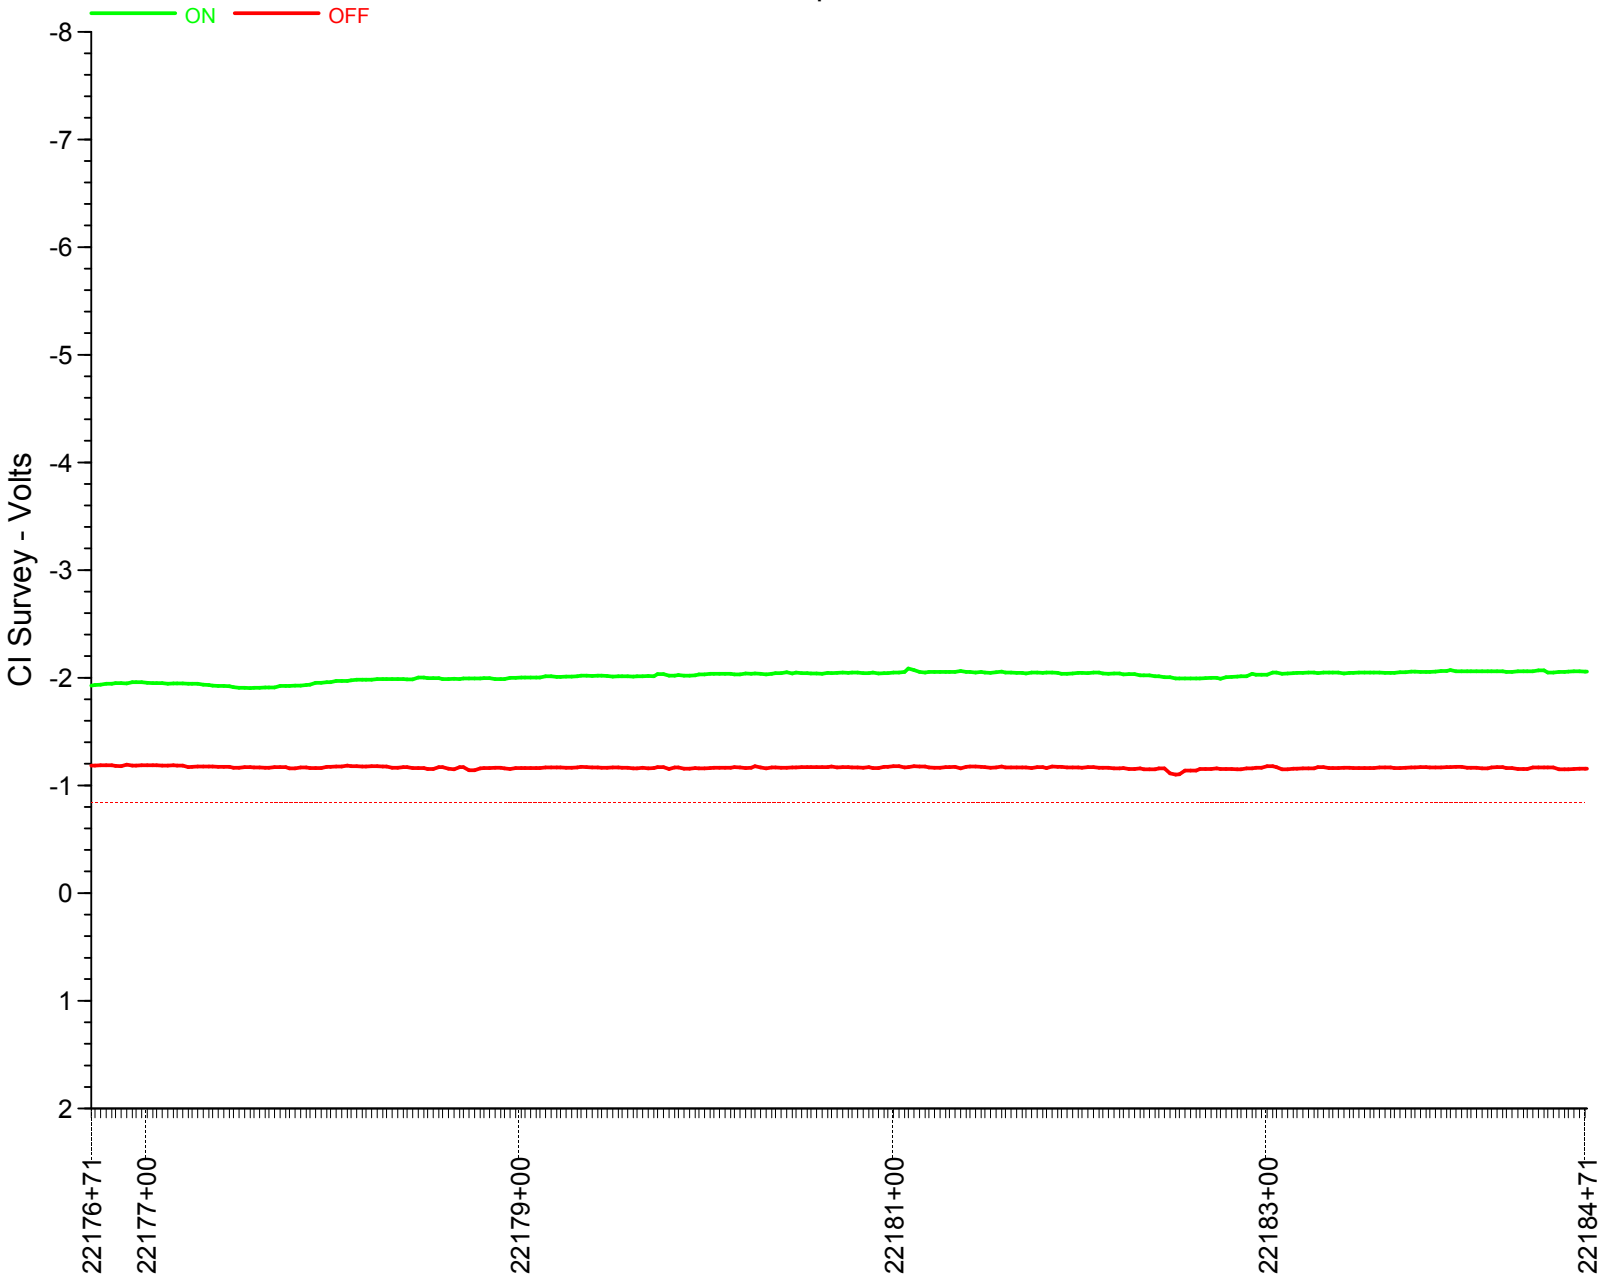

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

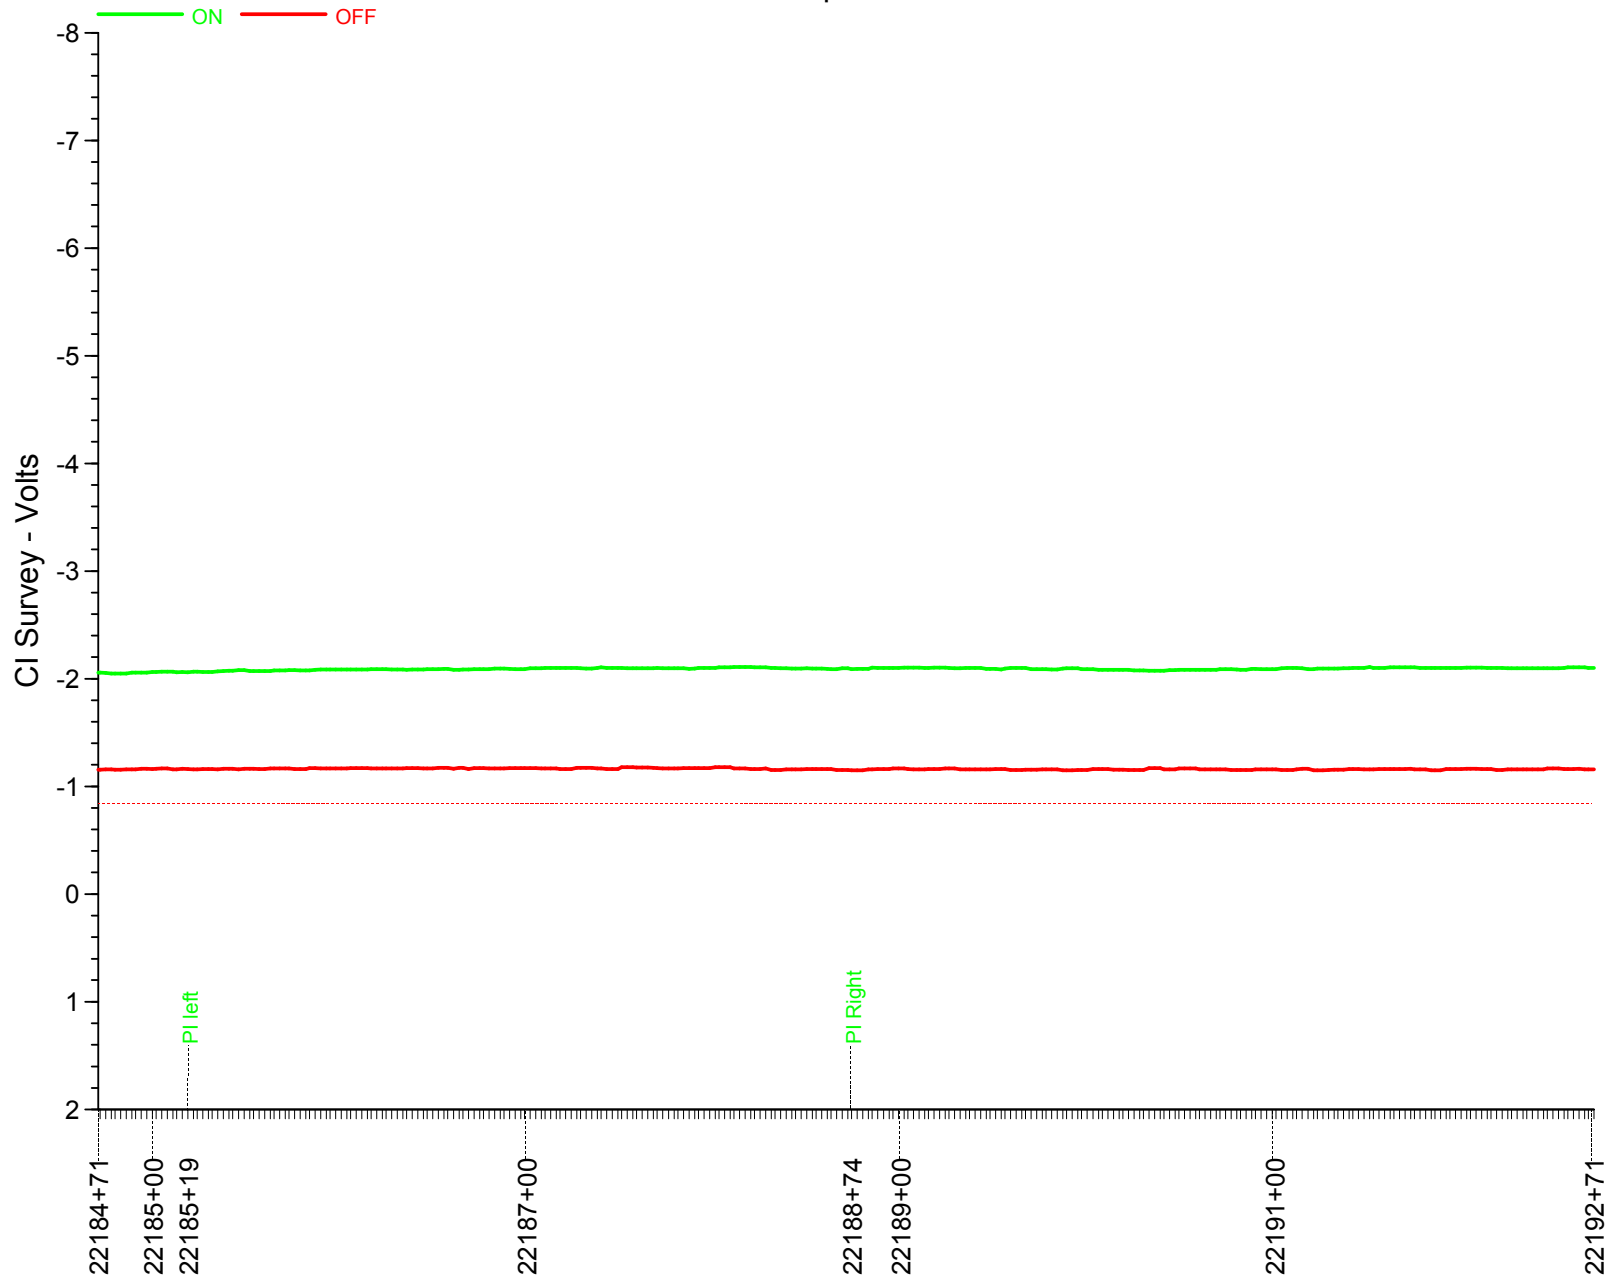

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

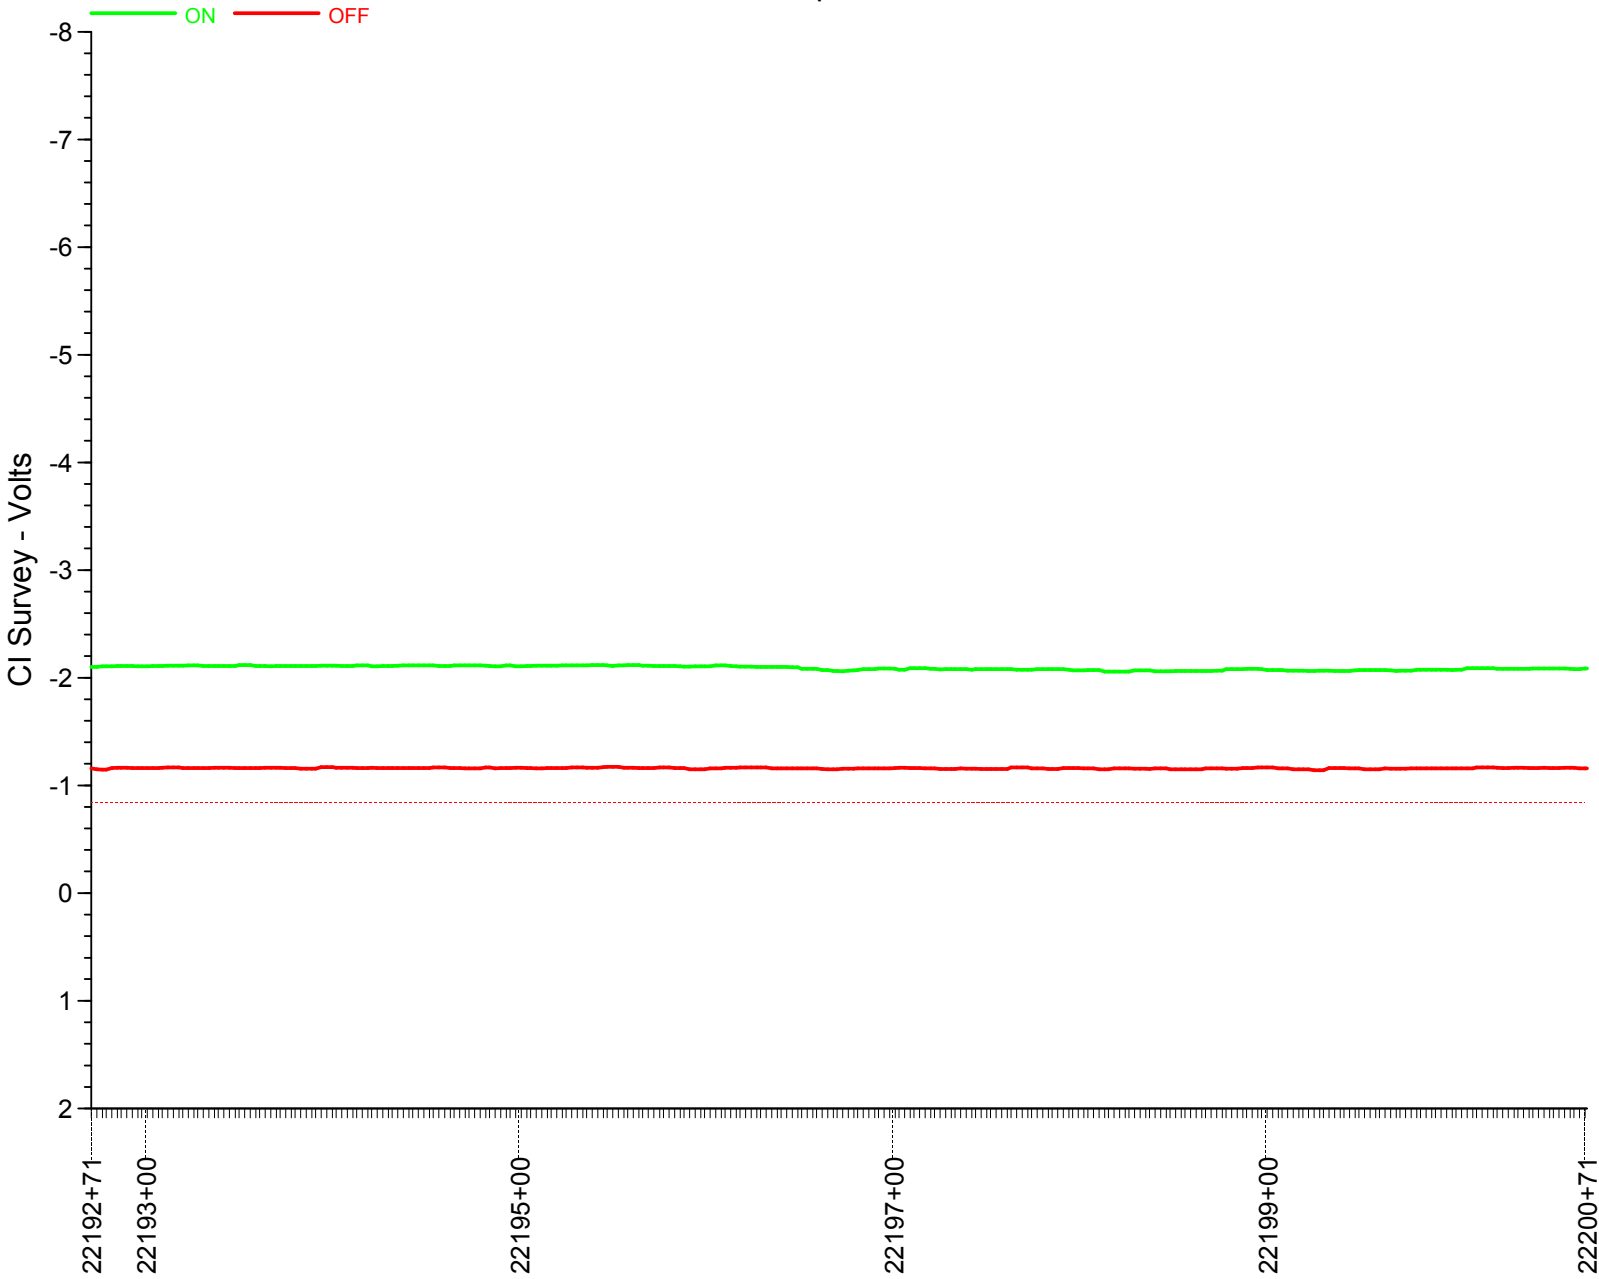


100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION




Pipe: 1

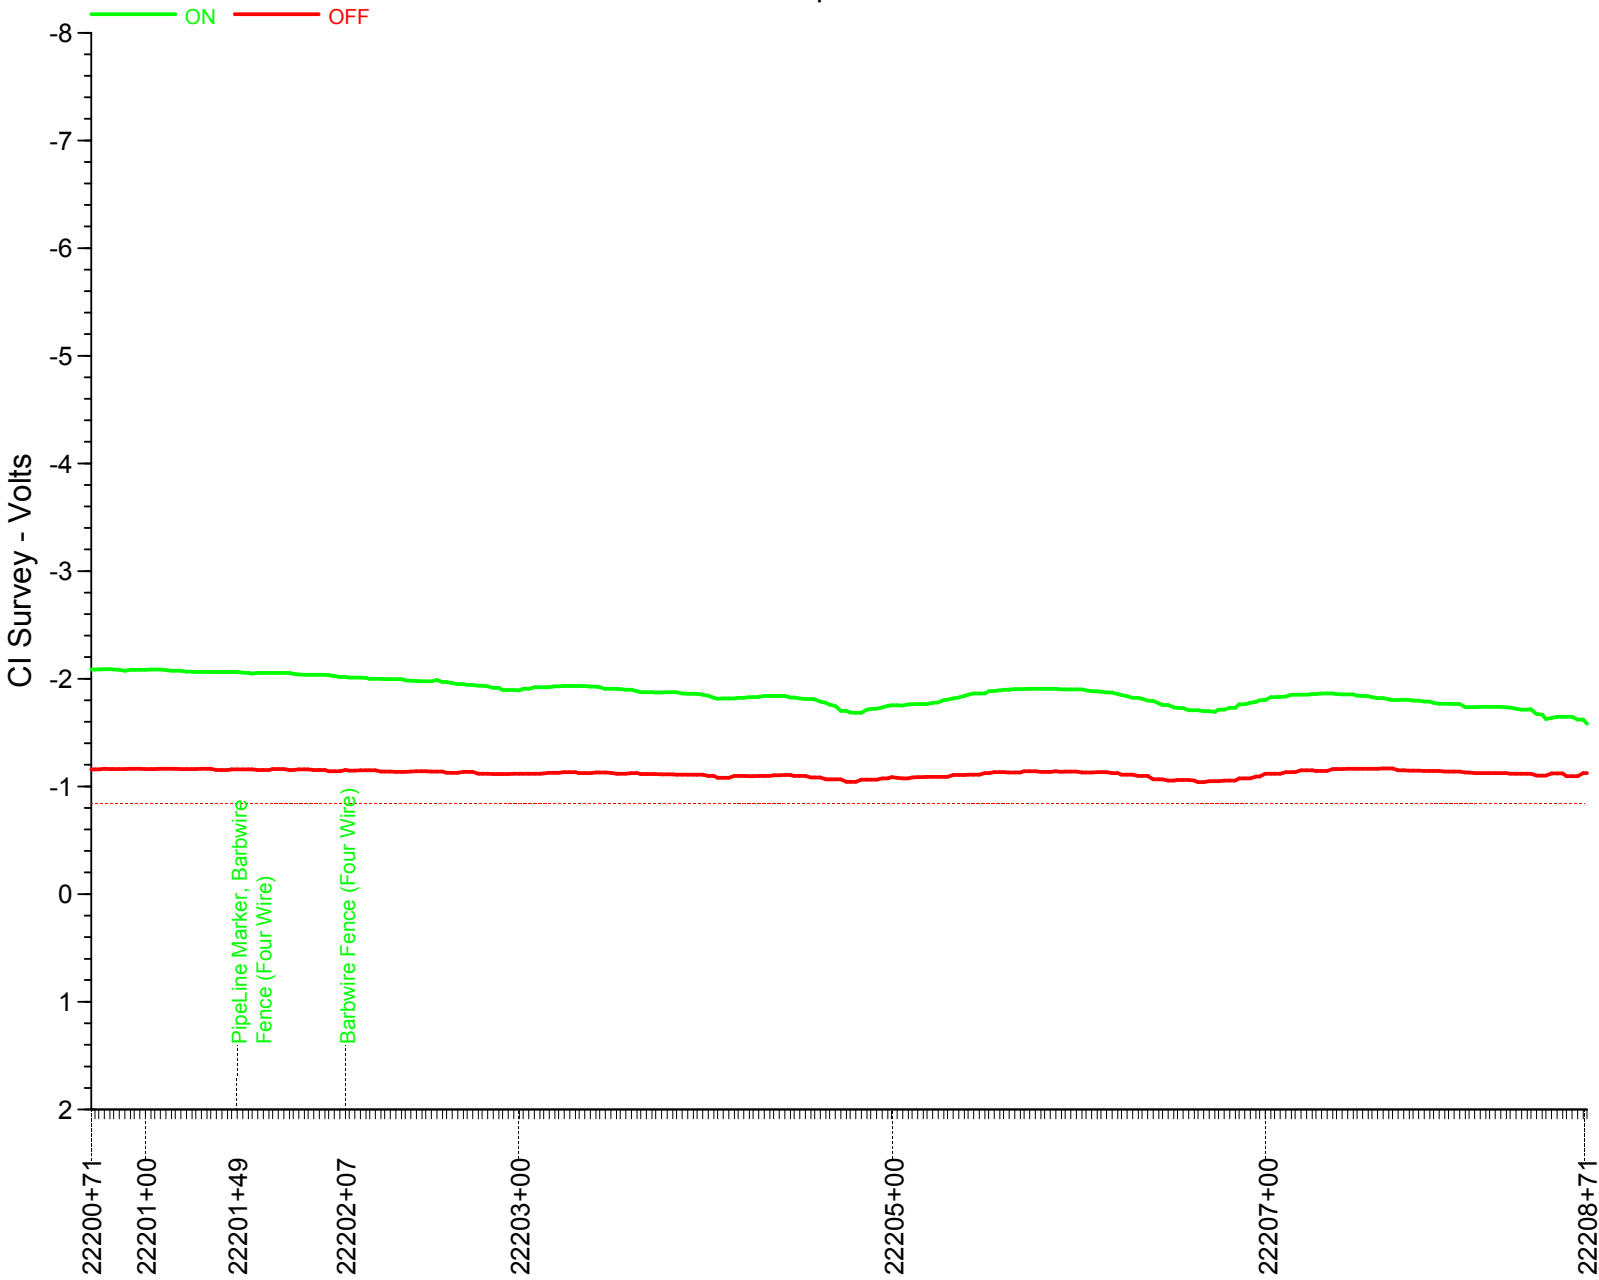

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

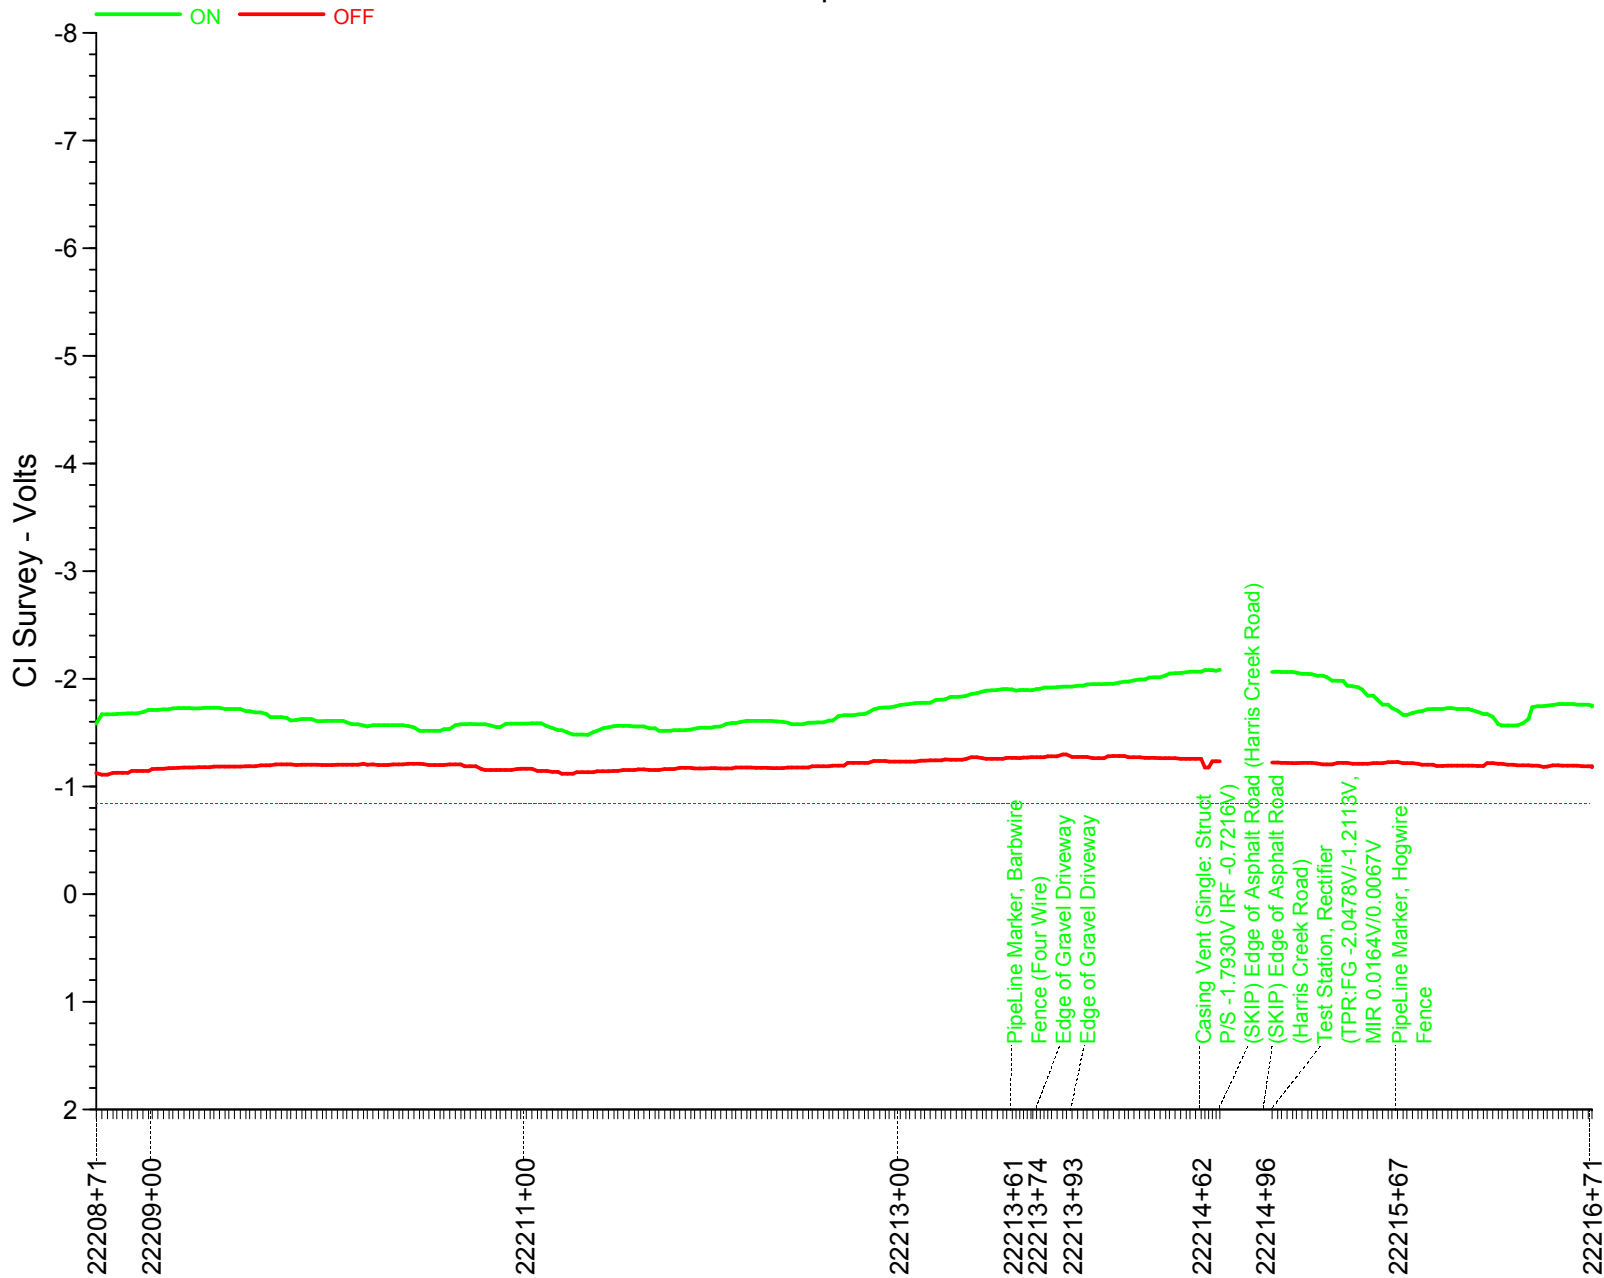

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

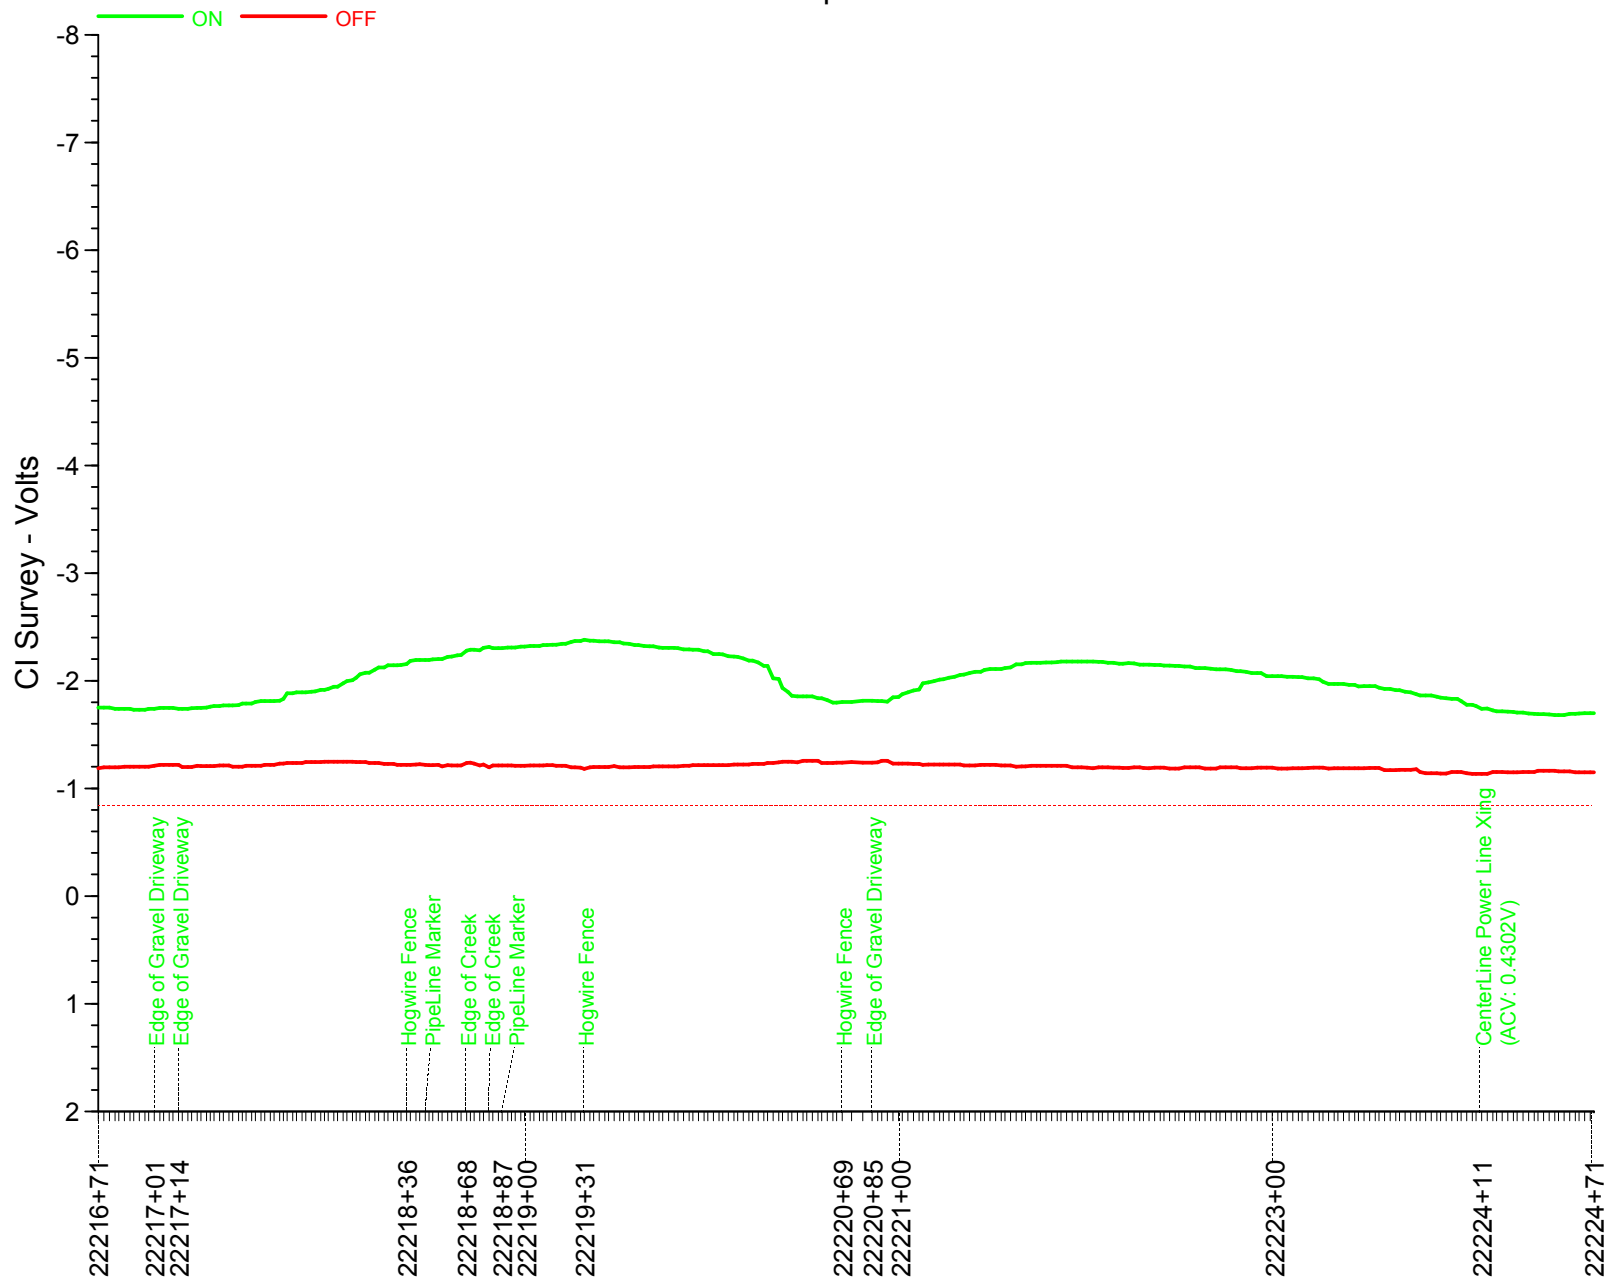

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

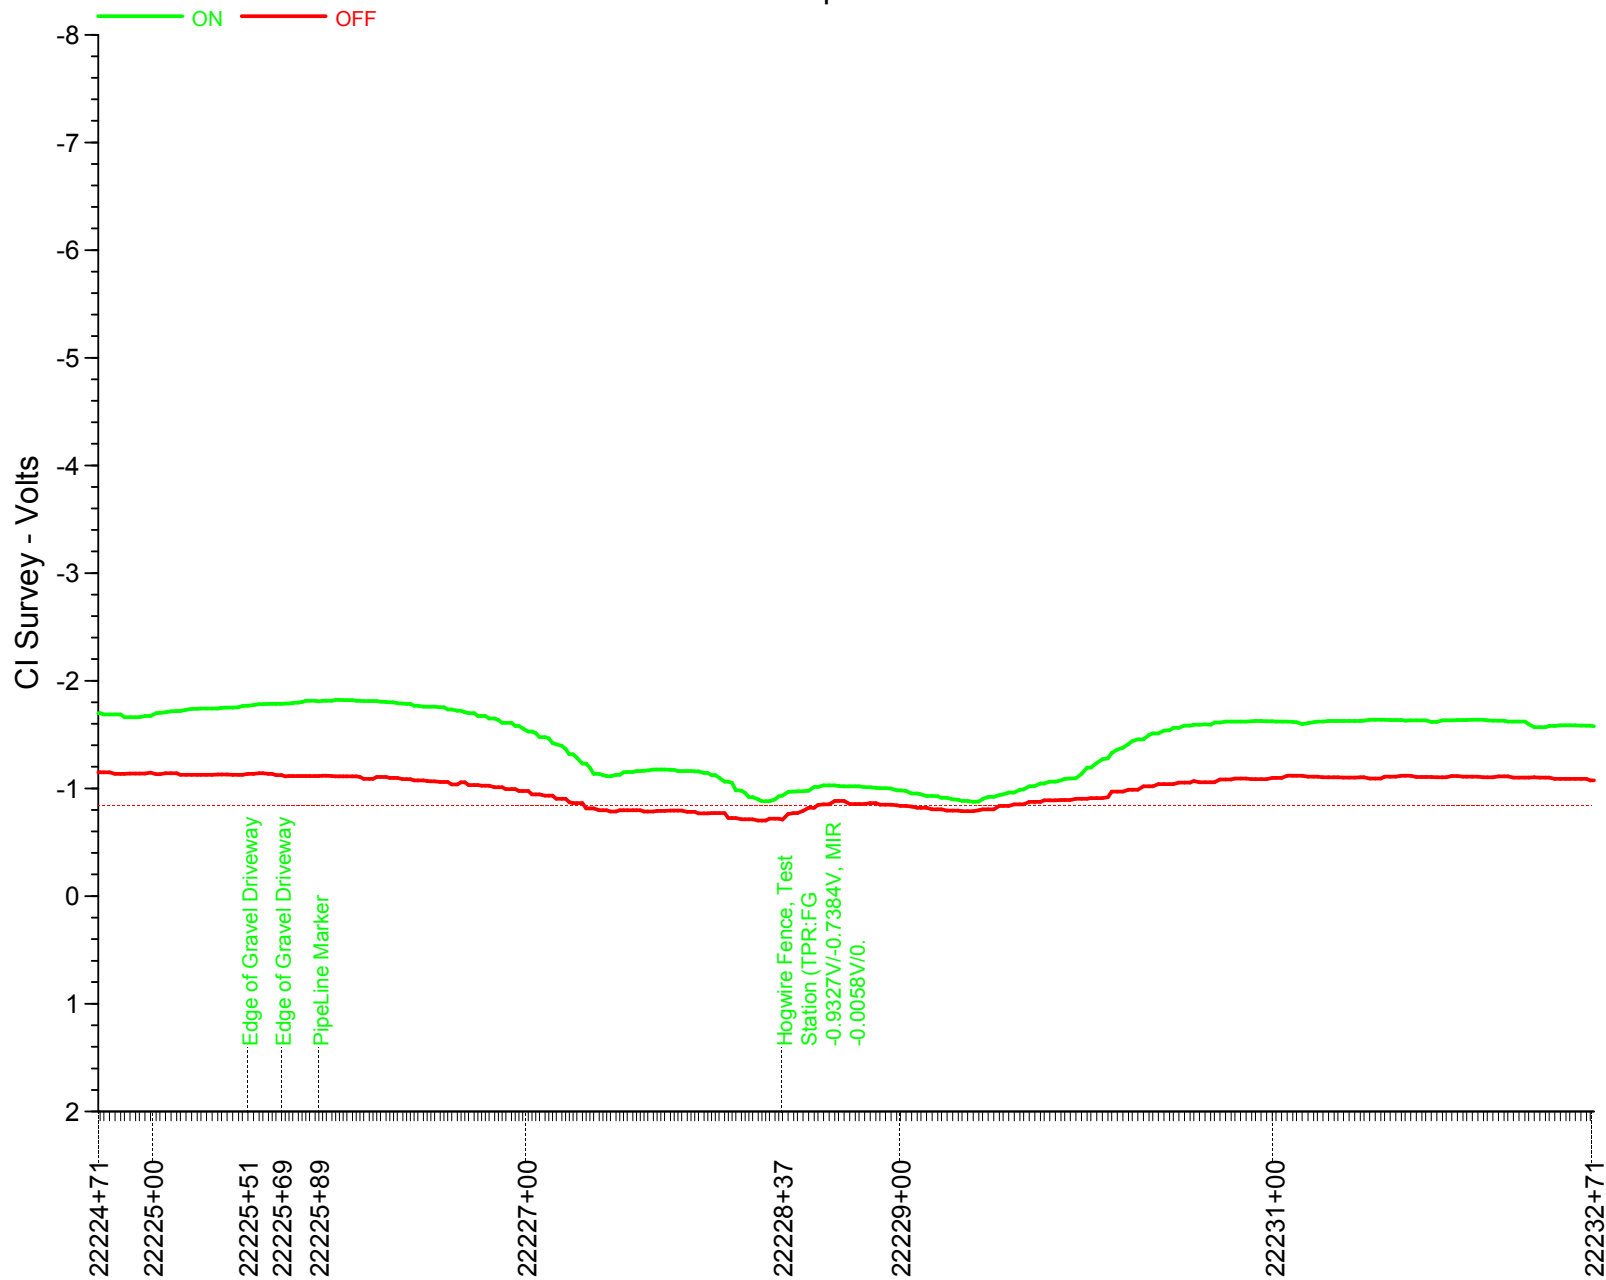


100 Feet/Inch

CP Data Manager 11/28/12 Page 83

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

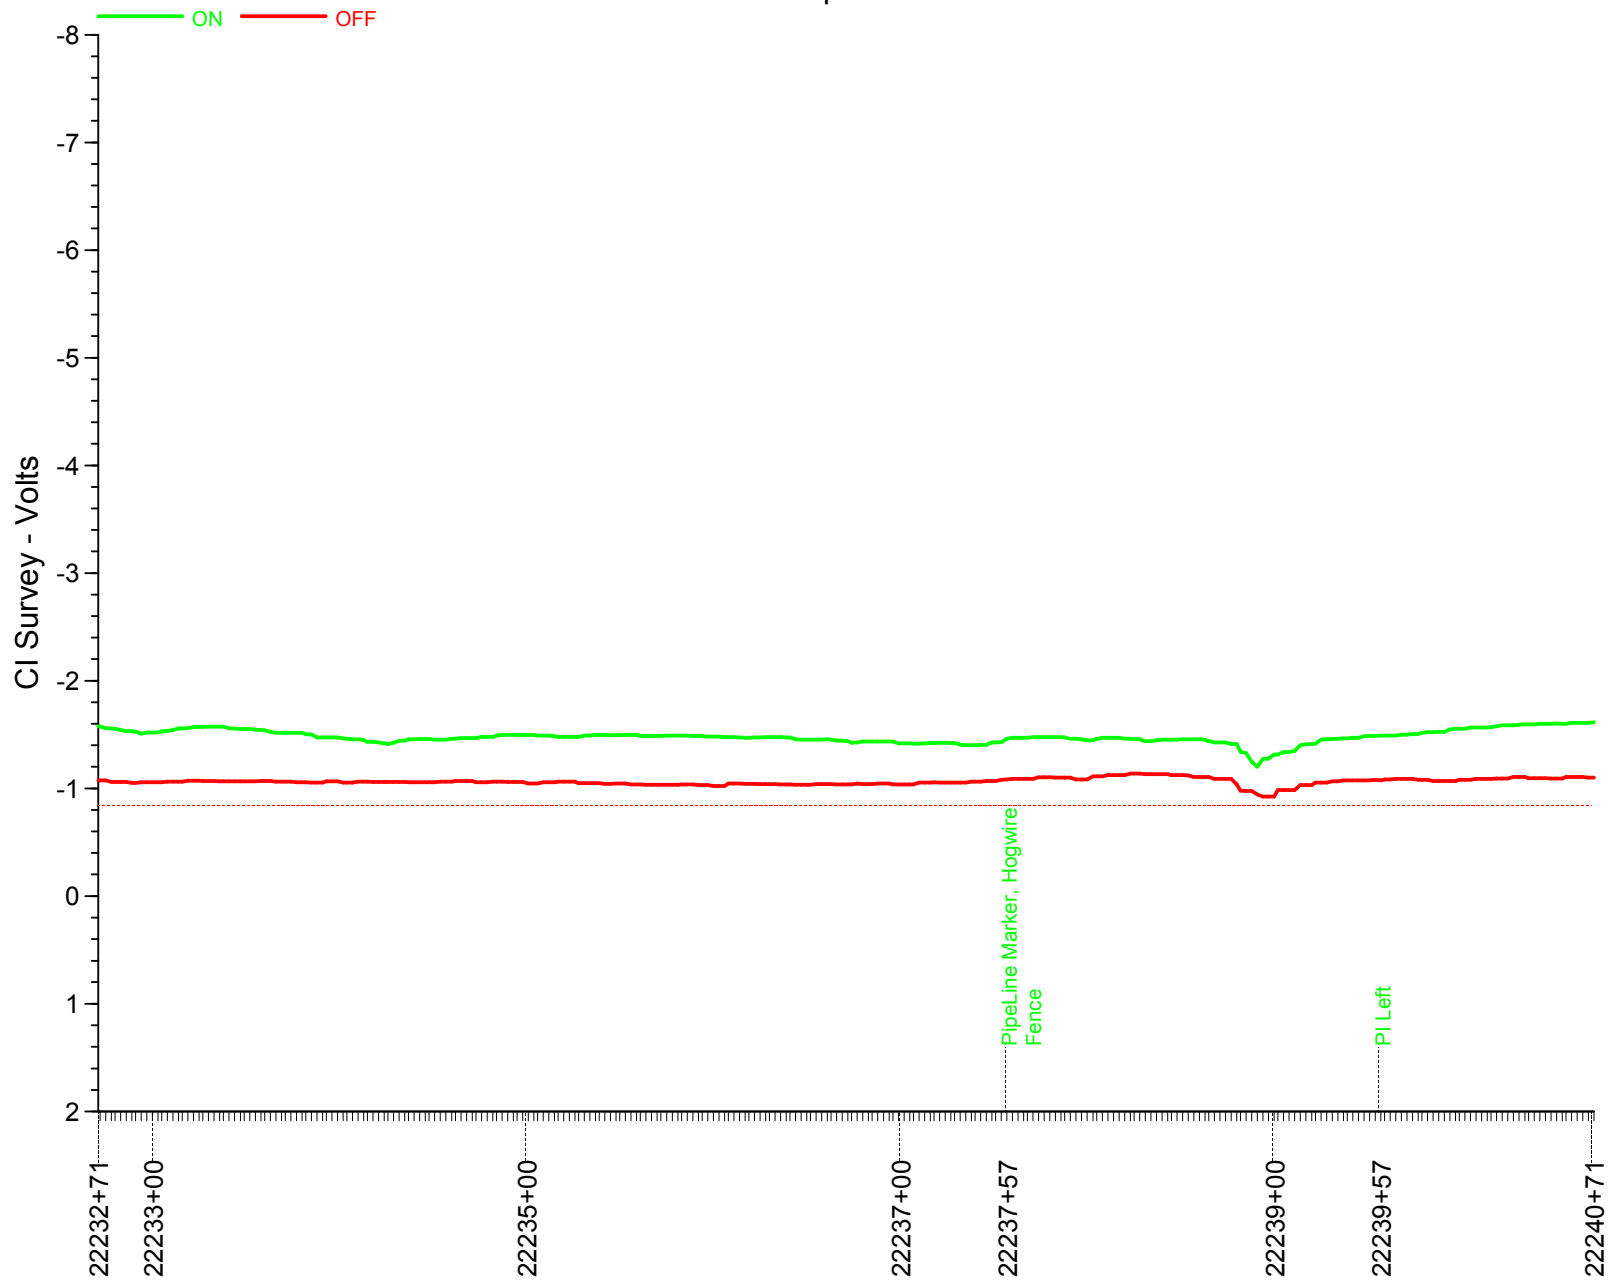

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

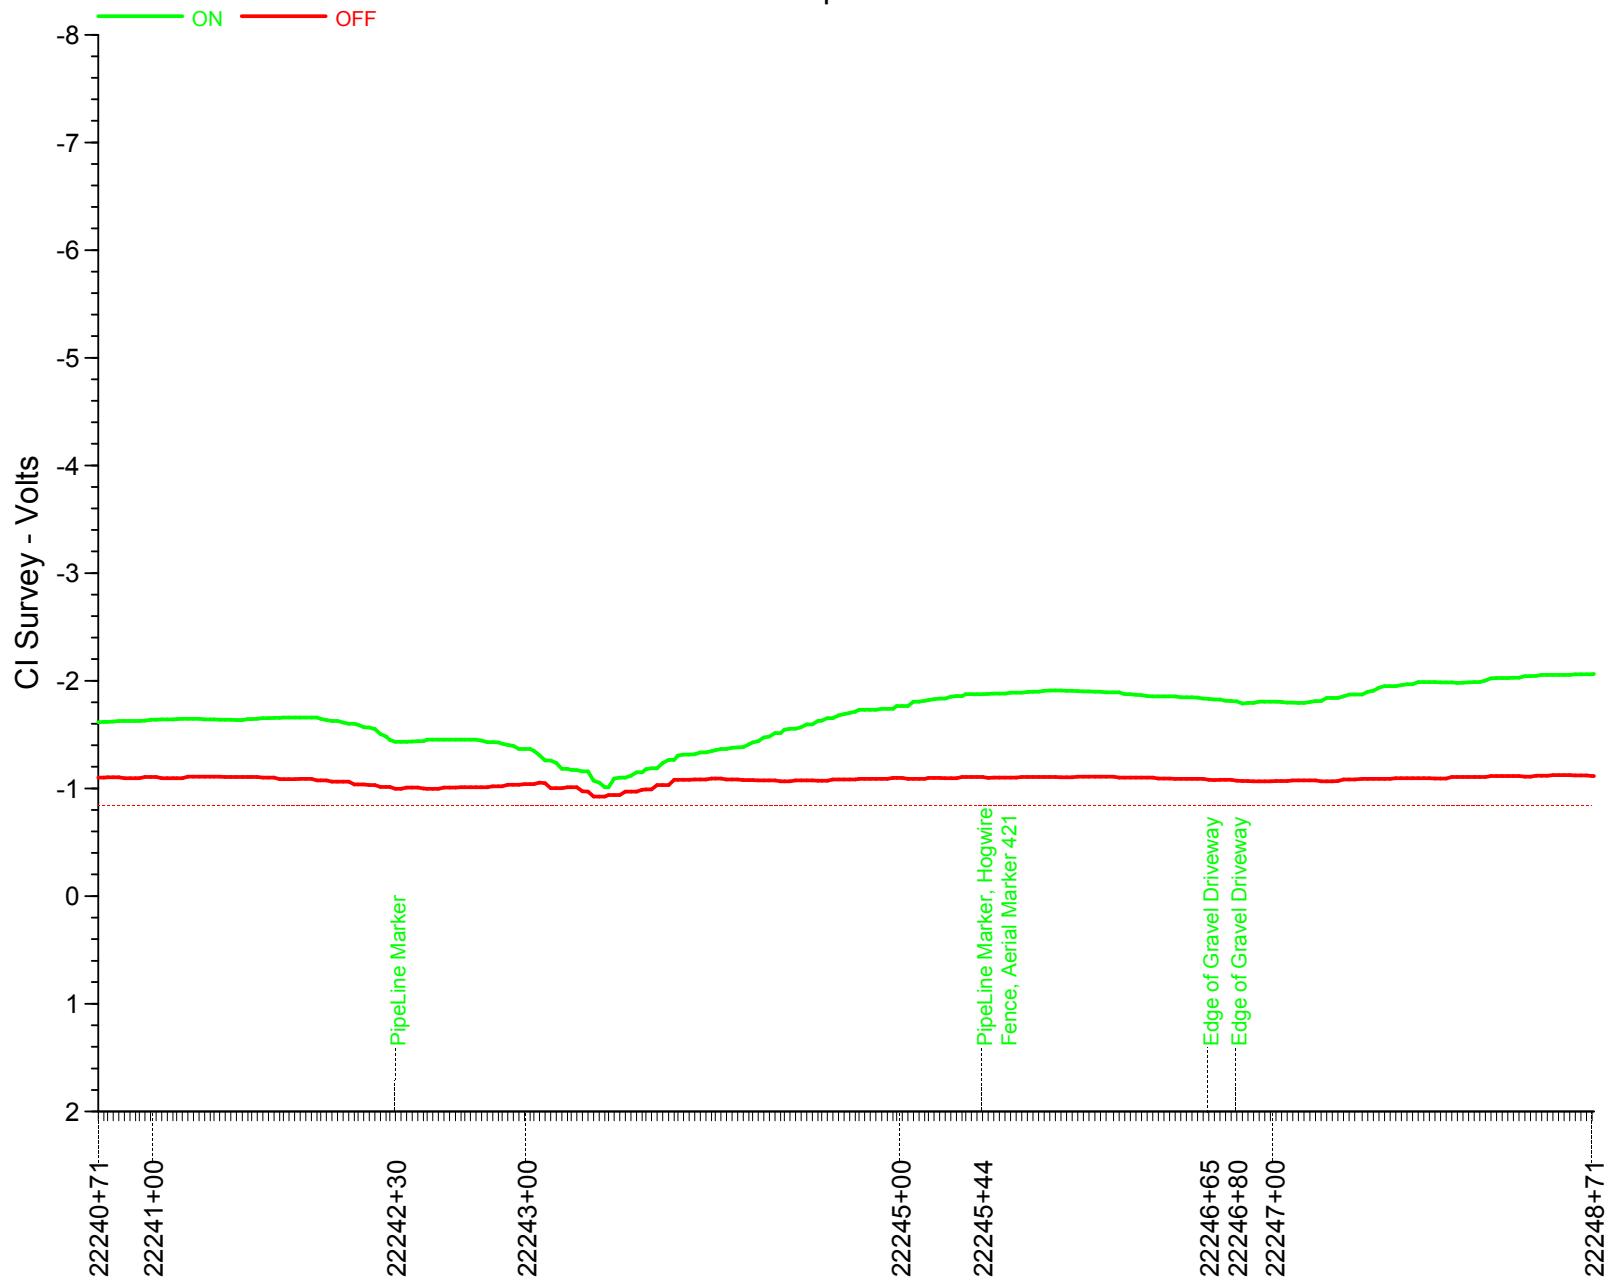

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

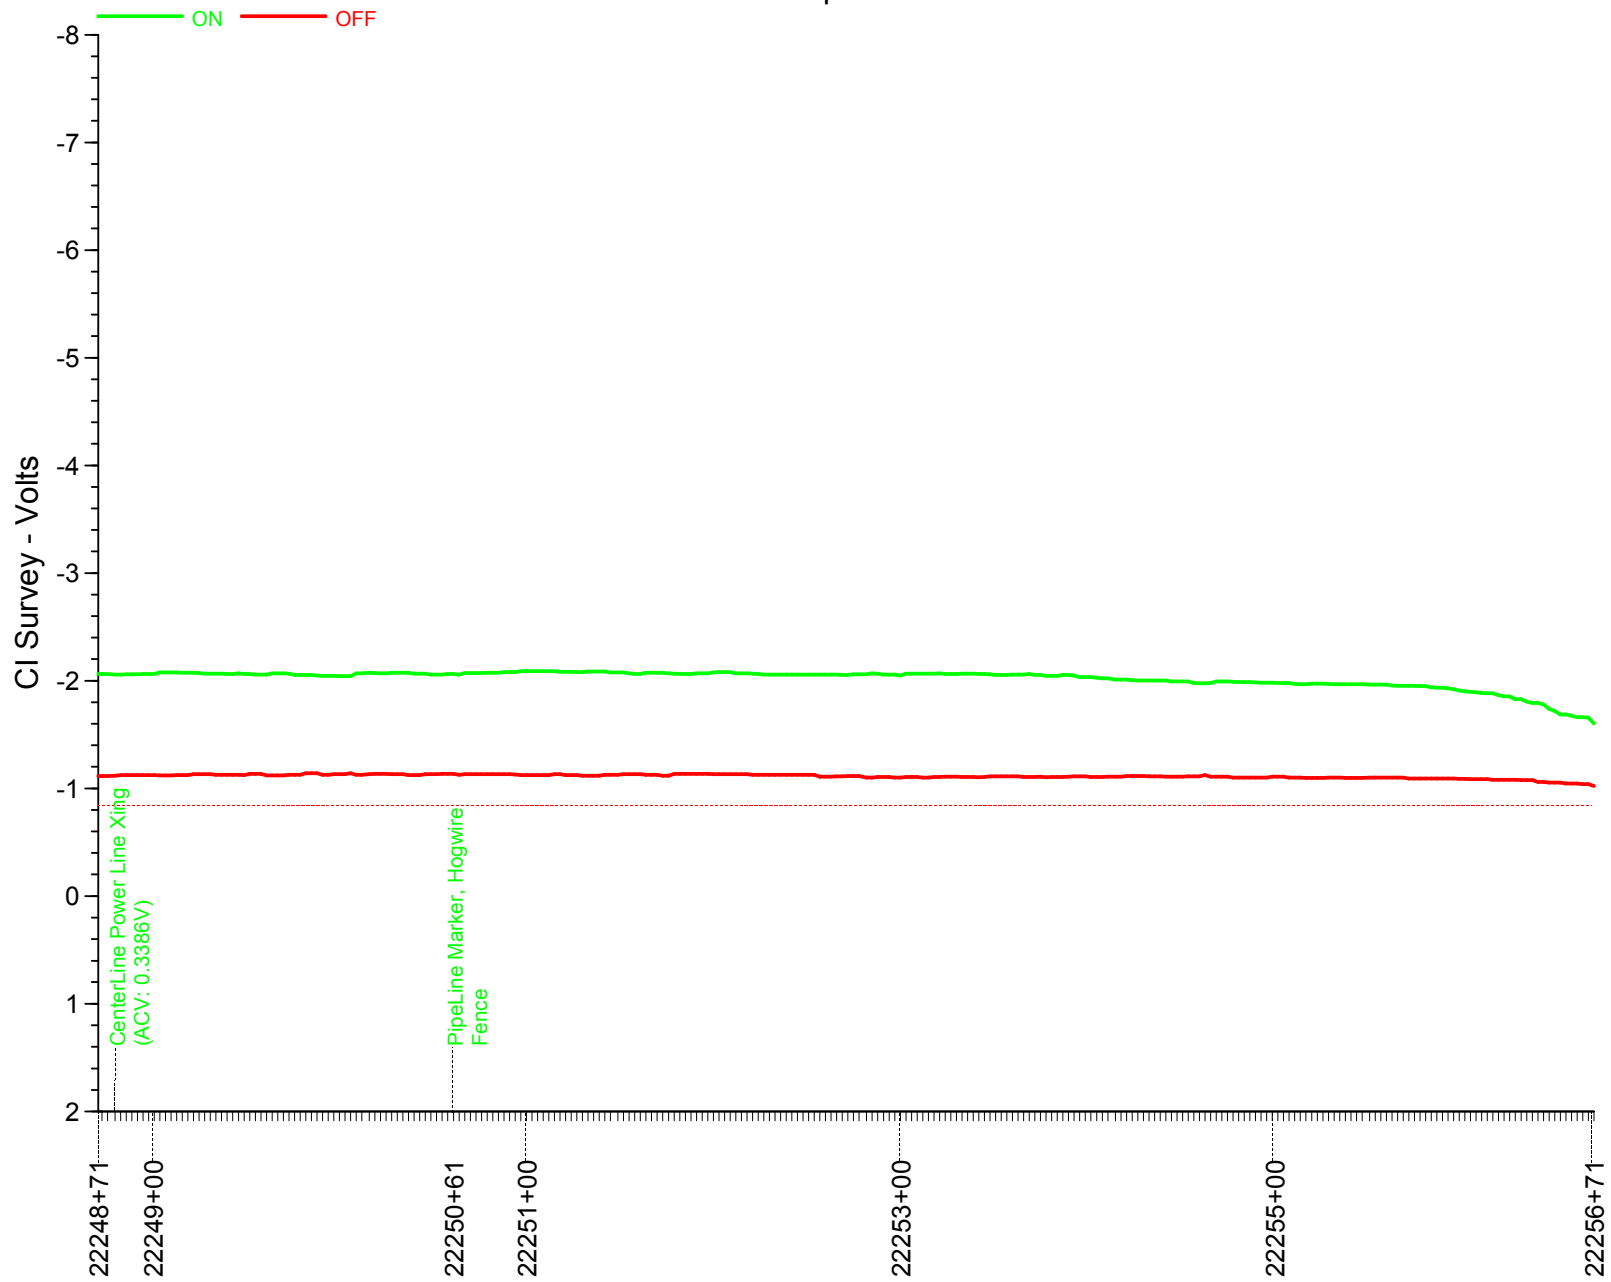

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1




100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION




Pipe: 1

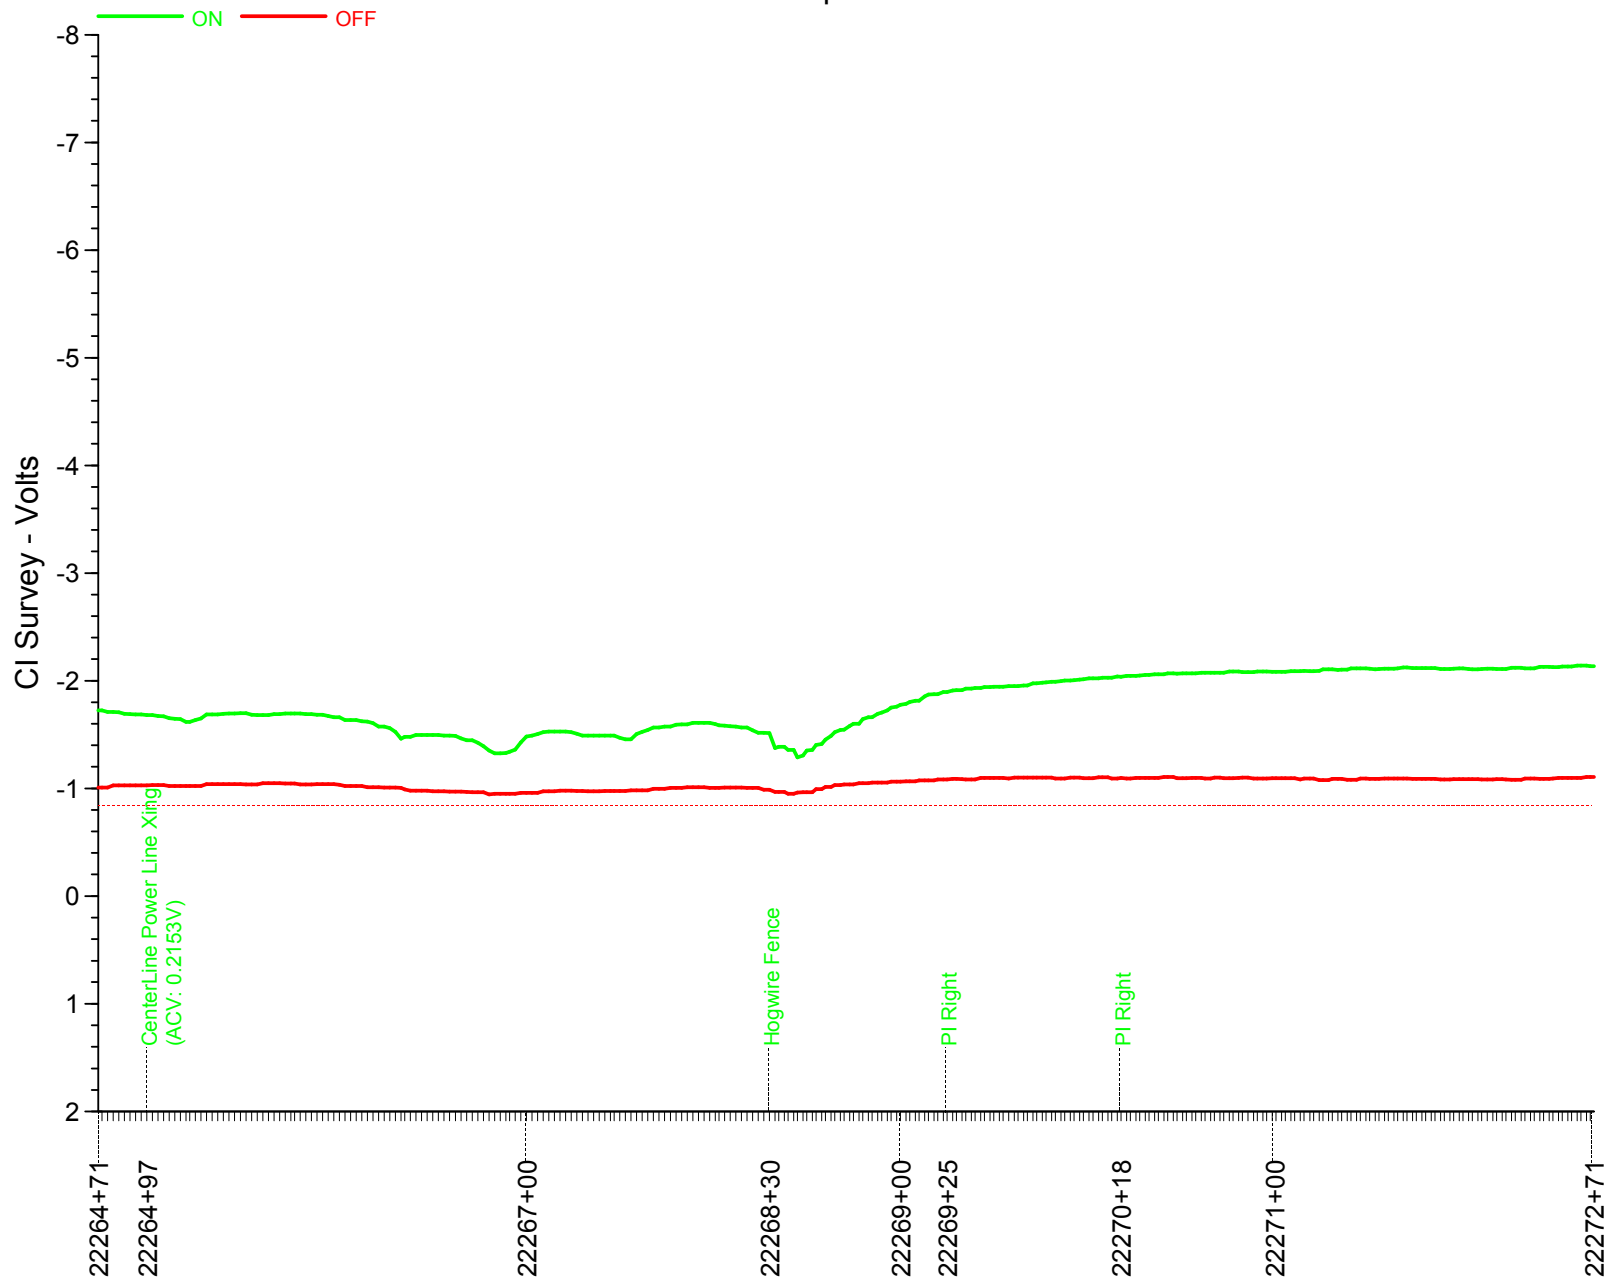

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

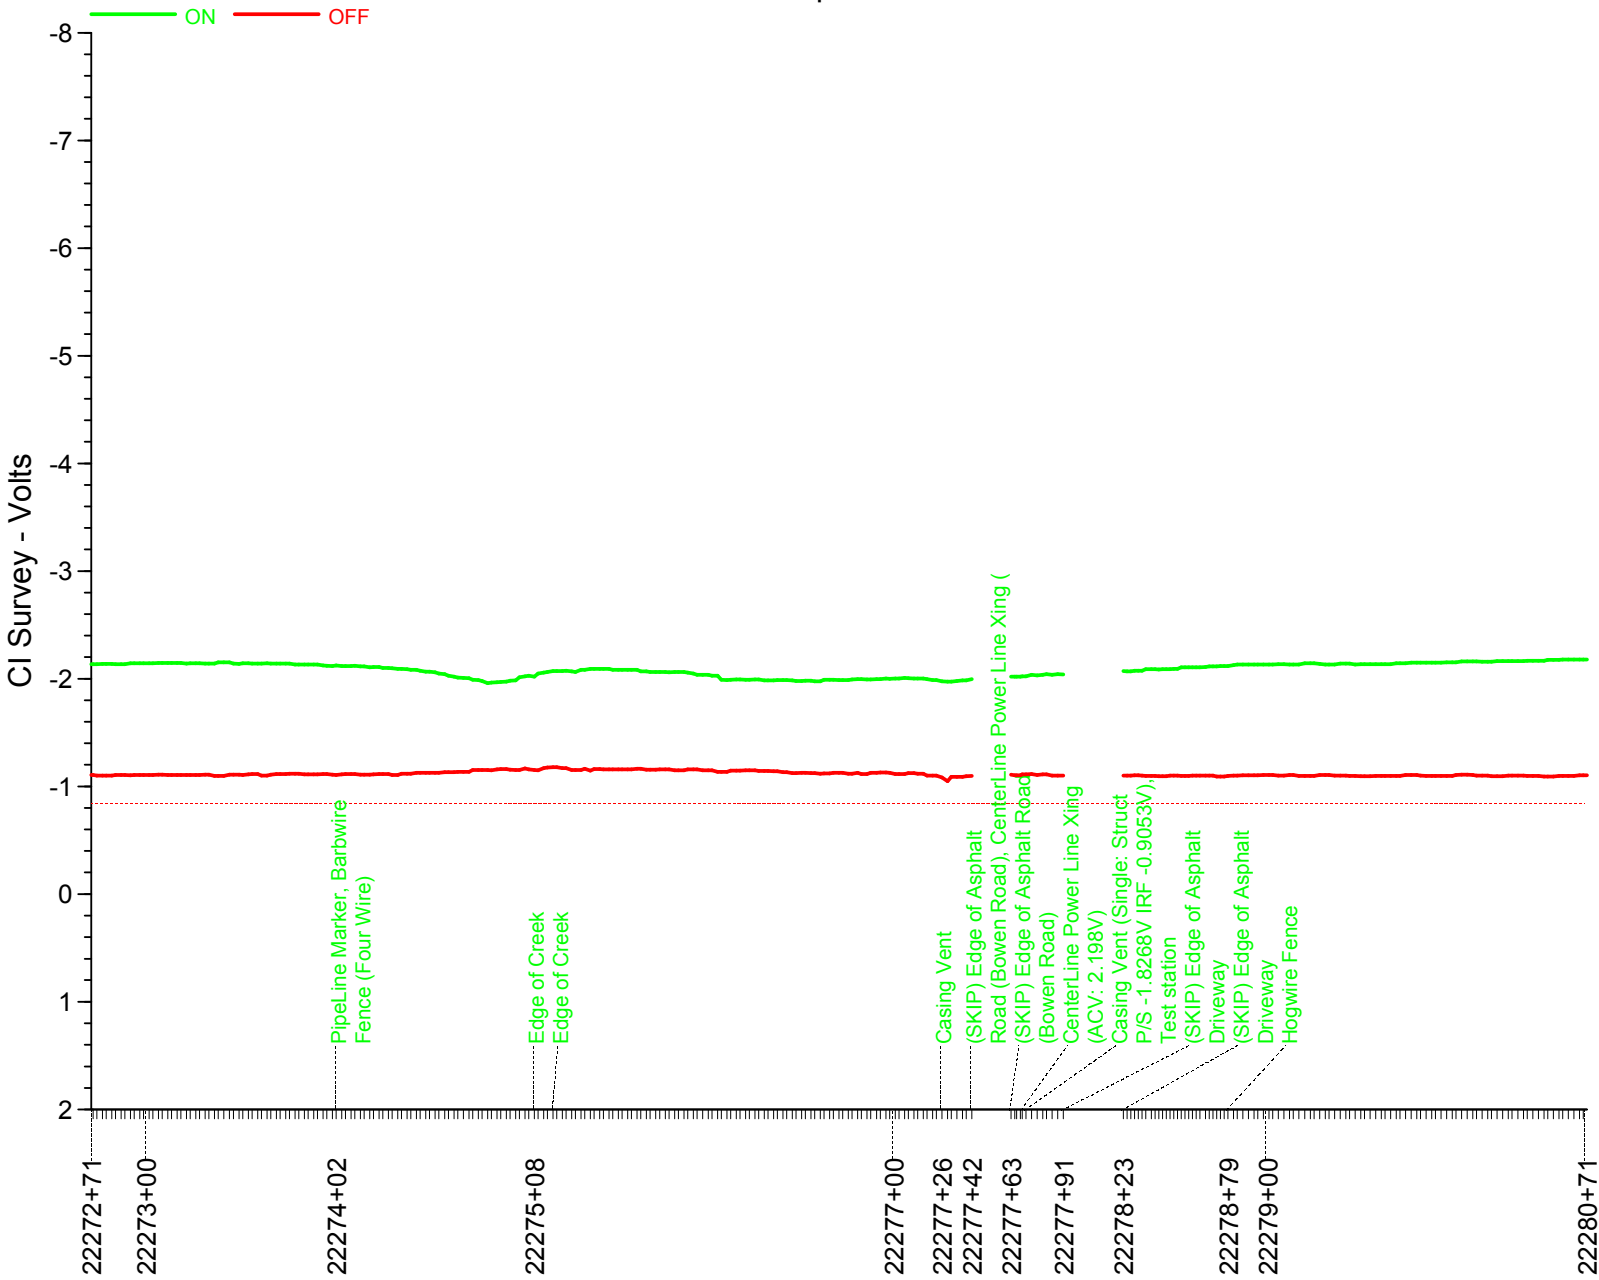

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

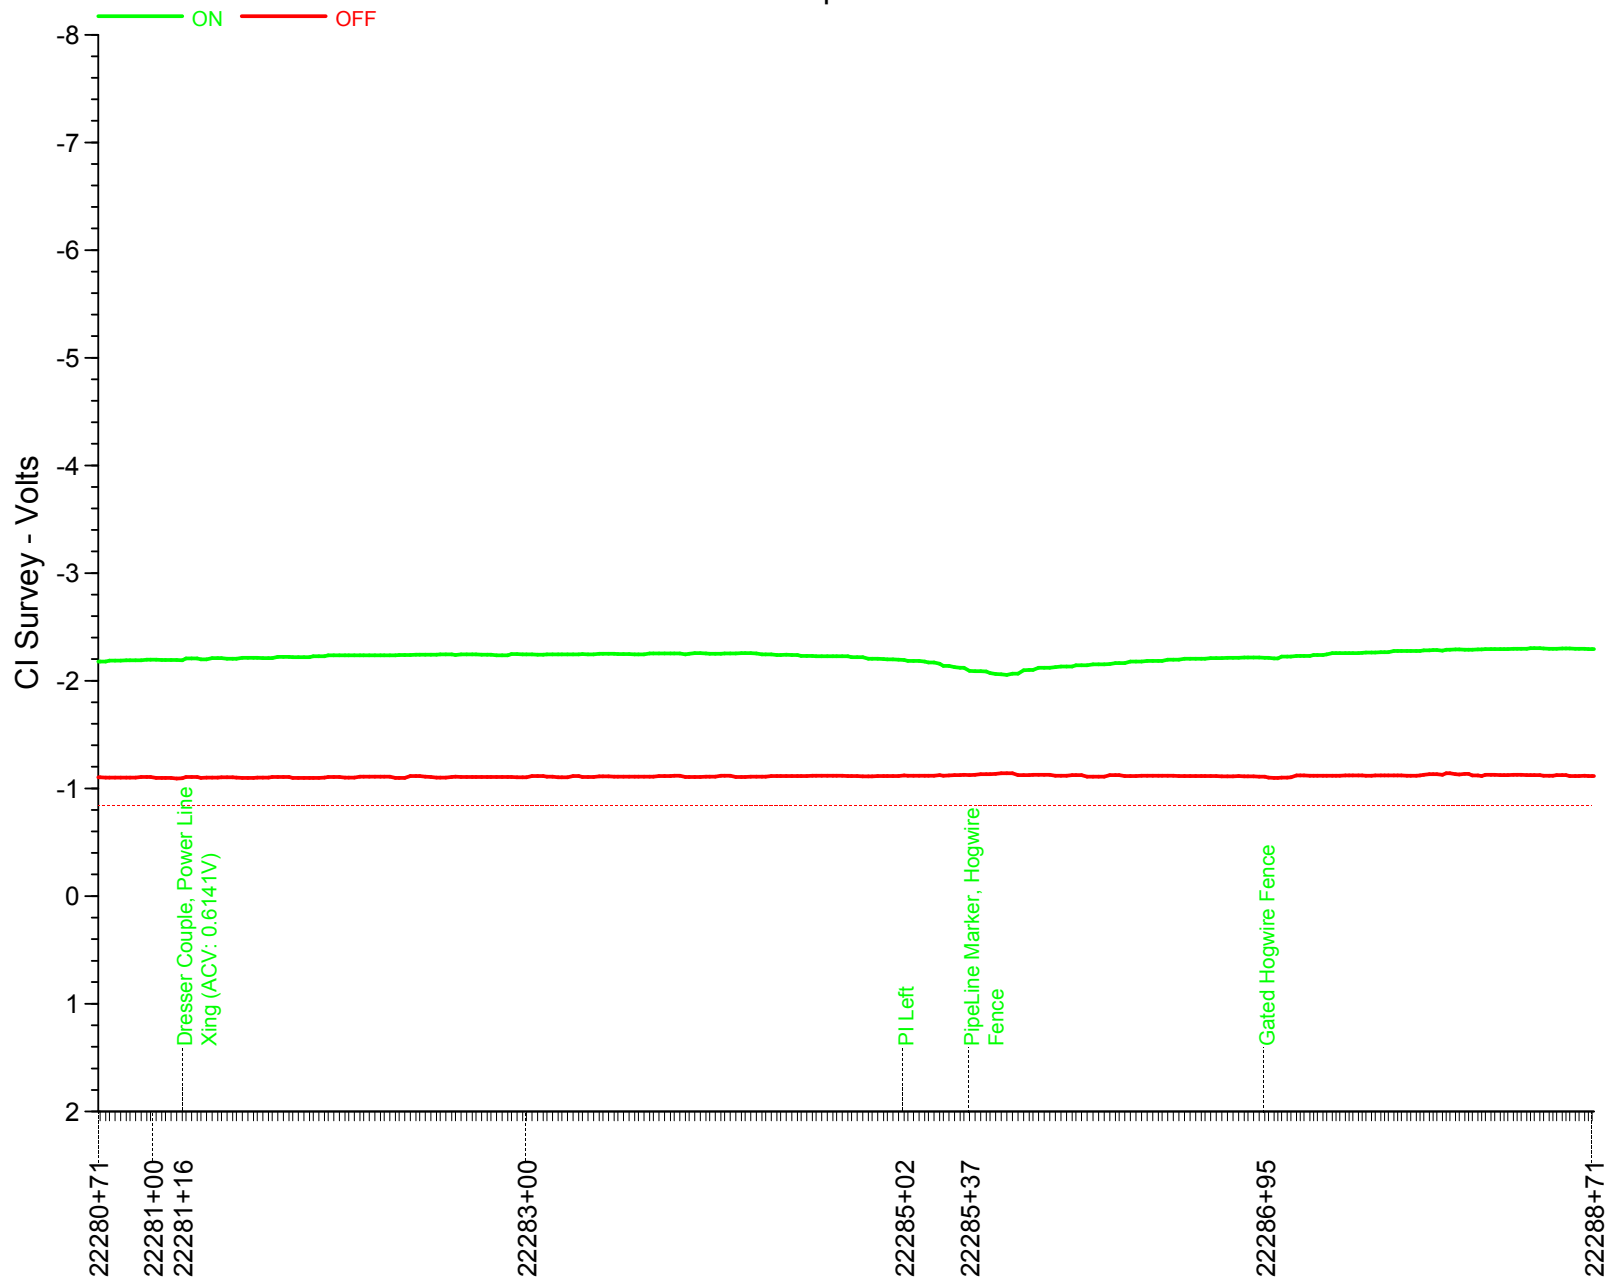

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

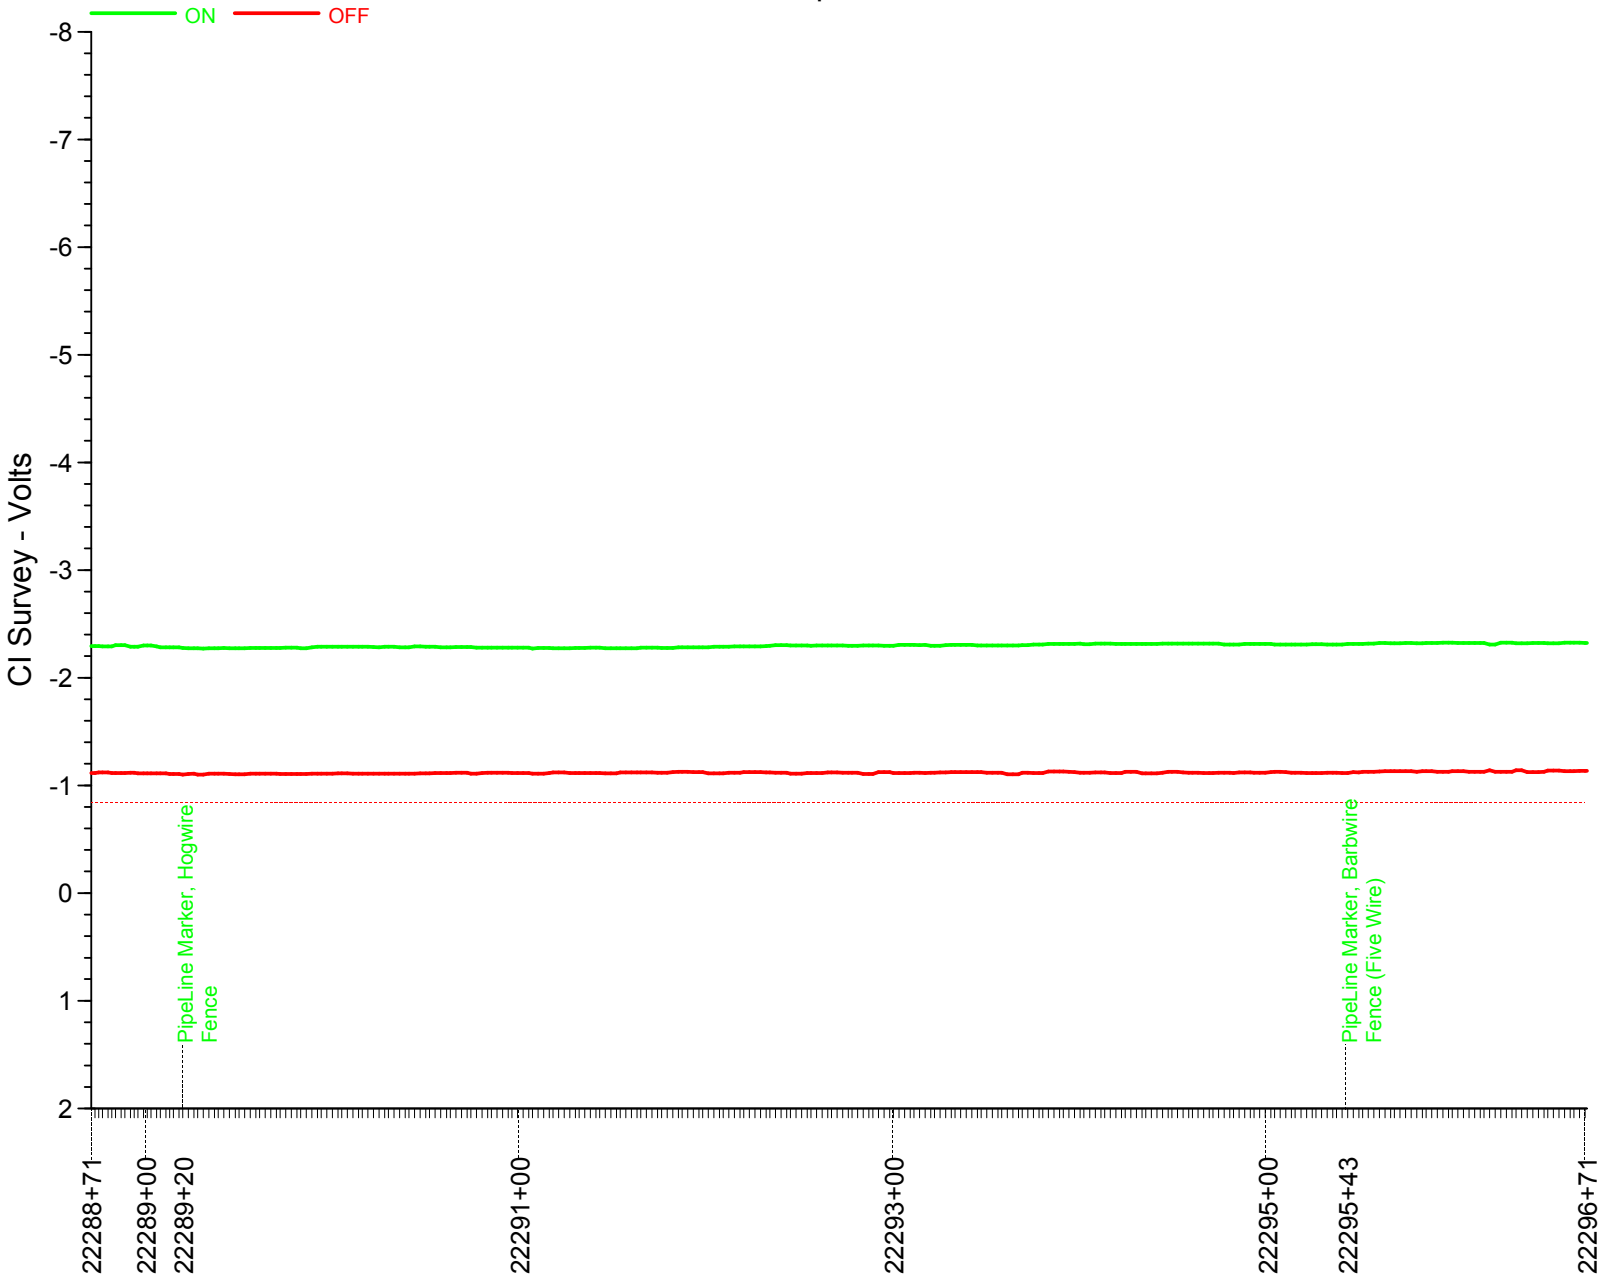

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

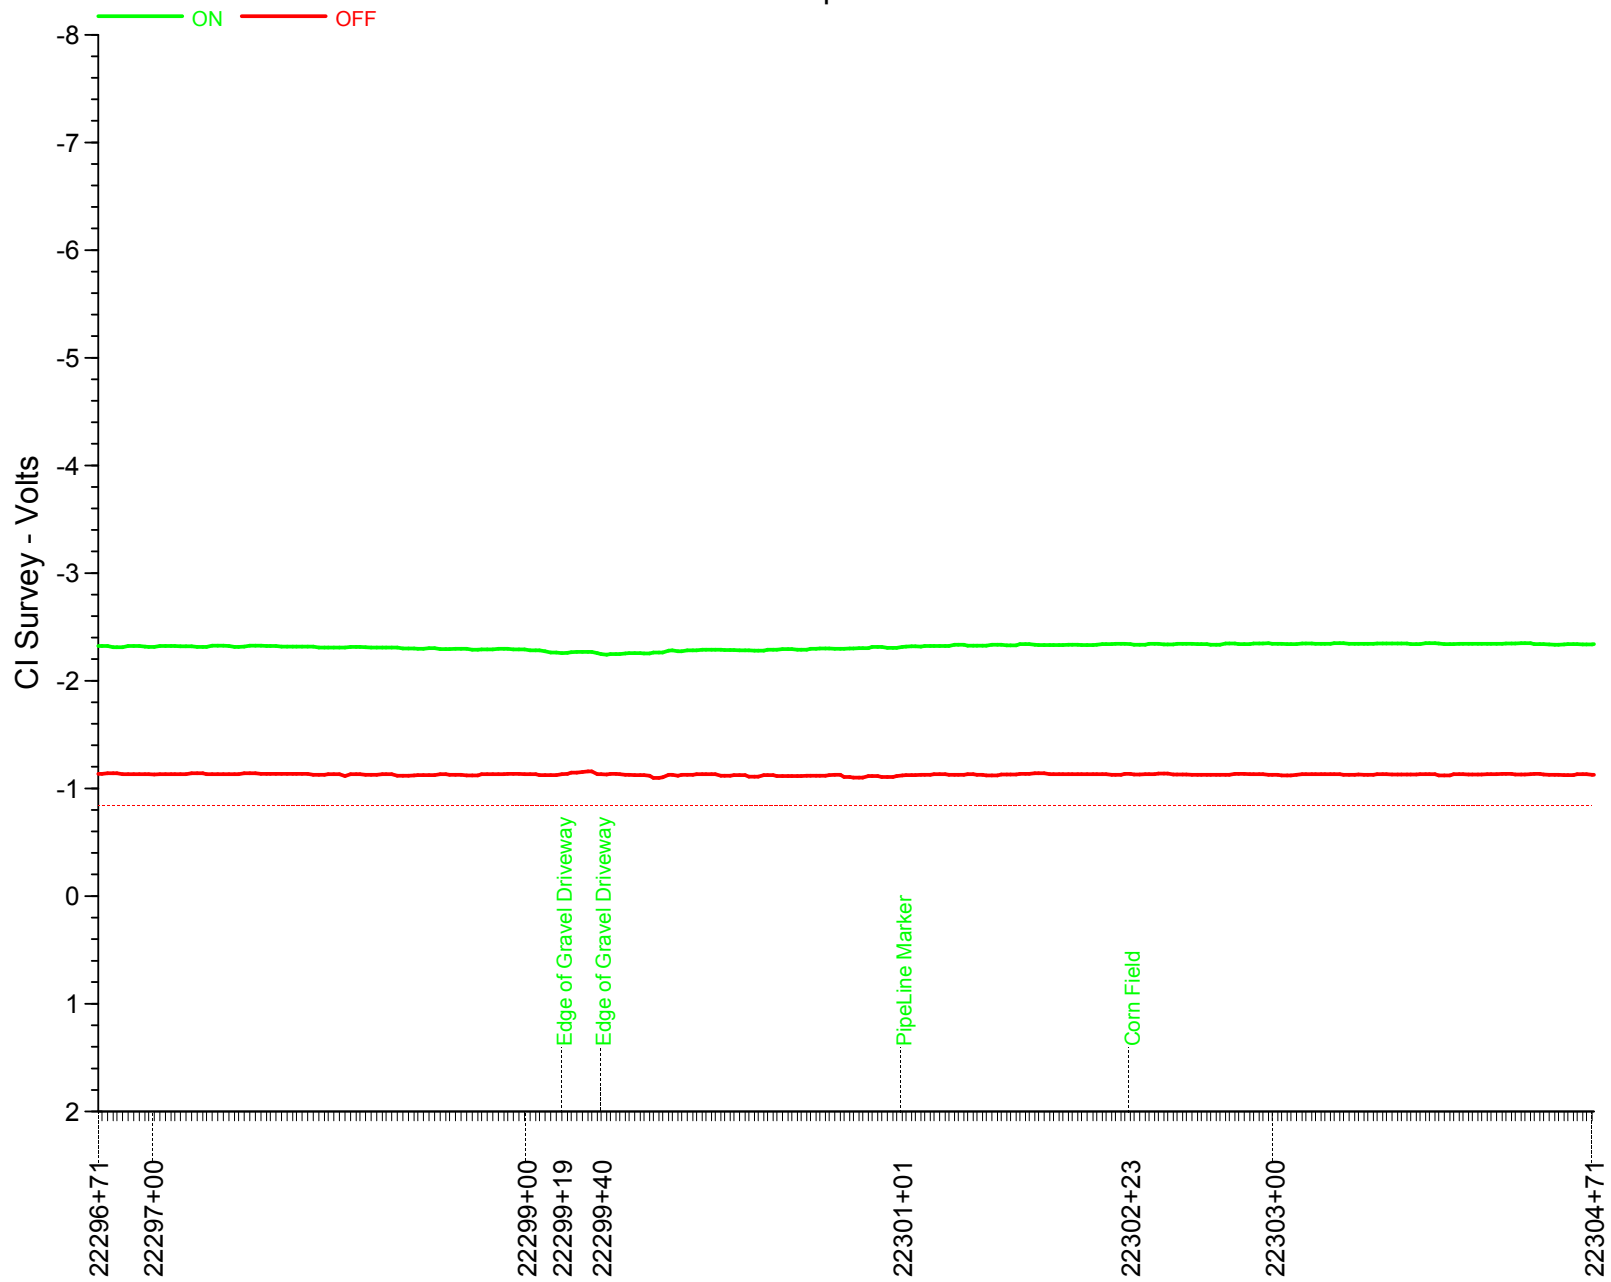

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

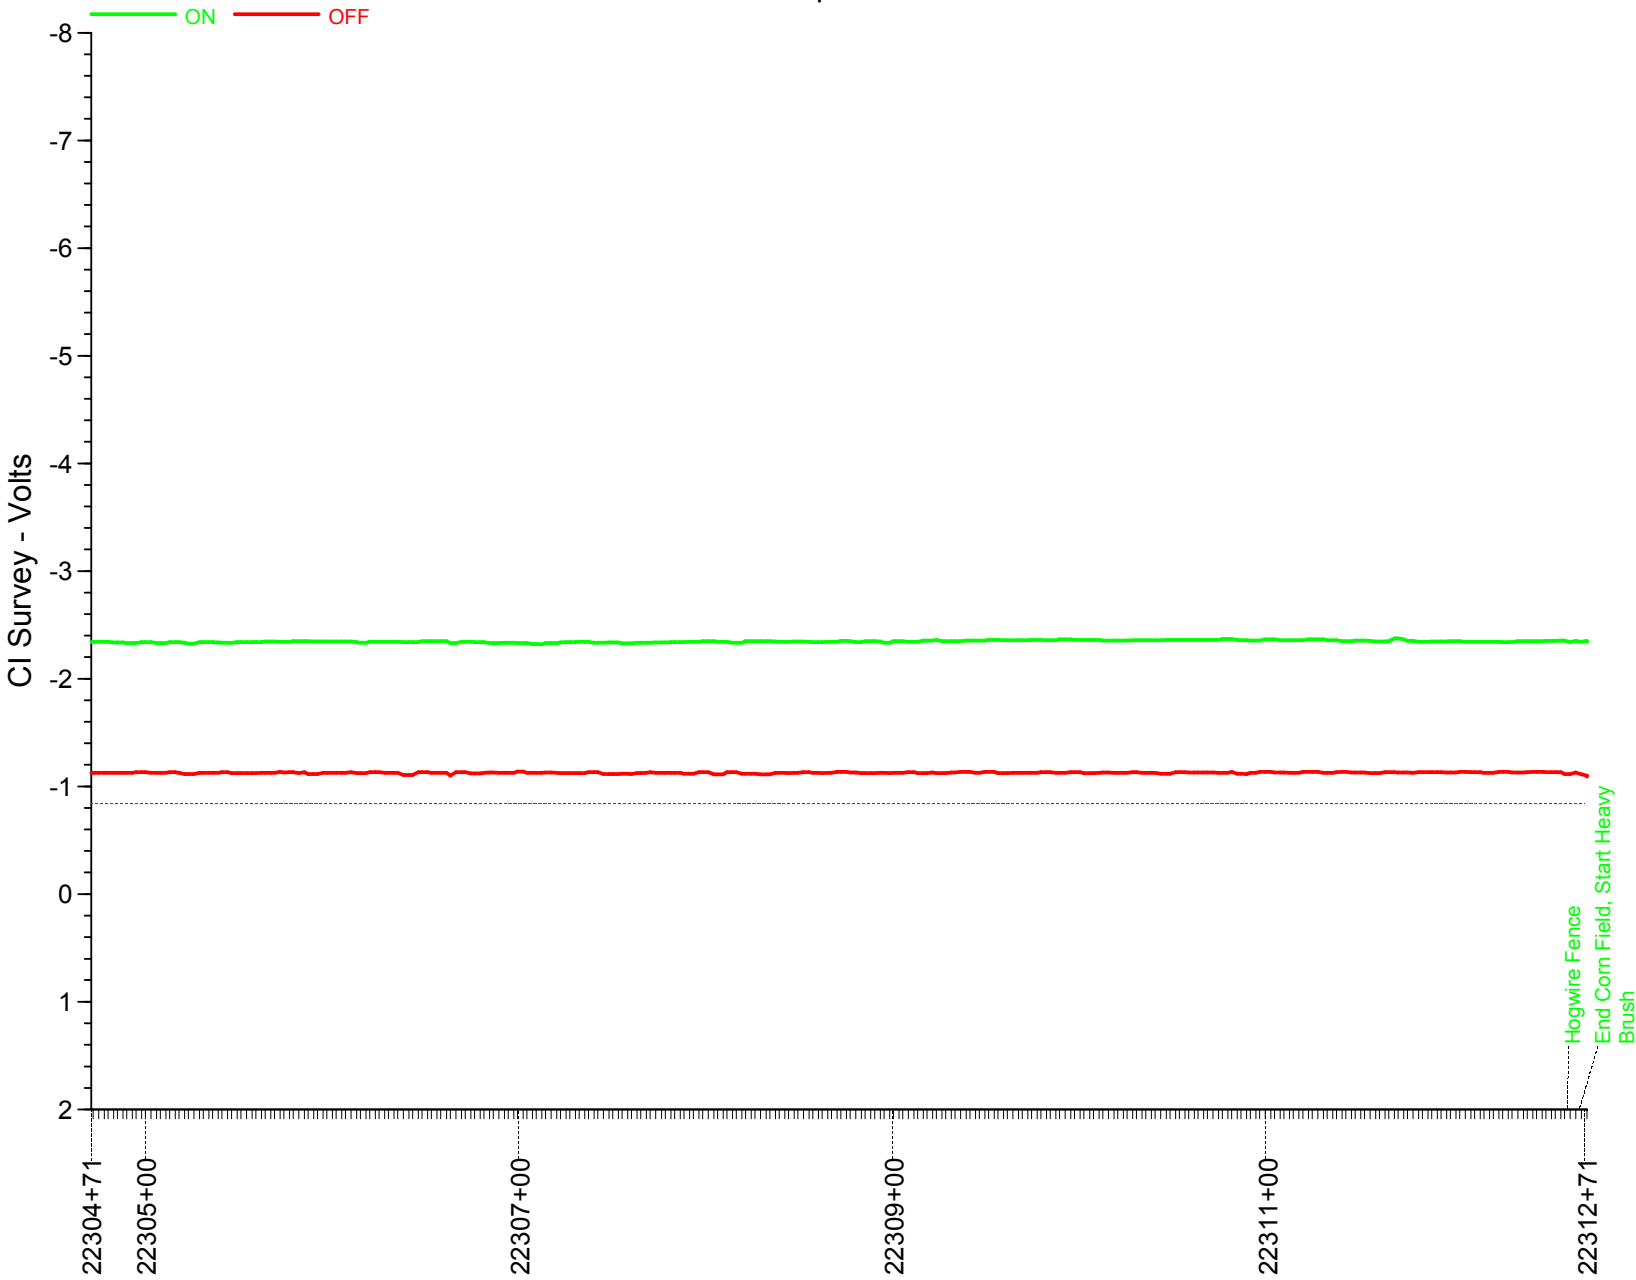

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

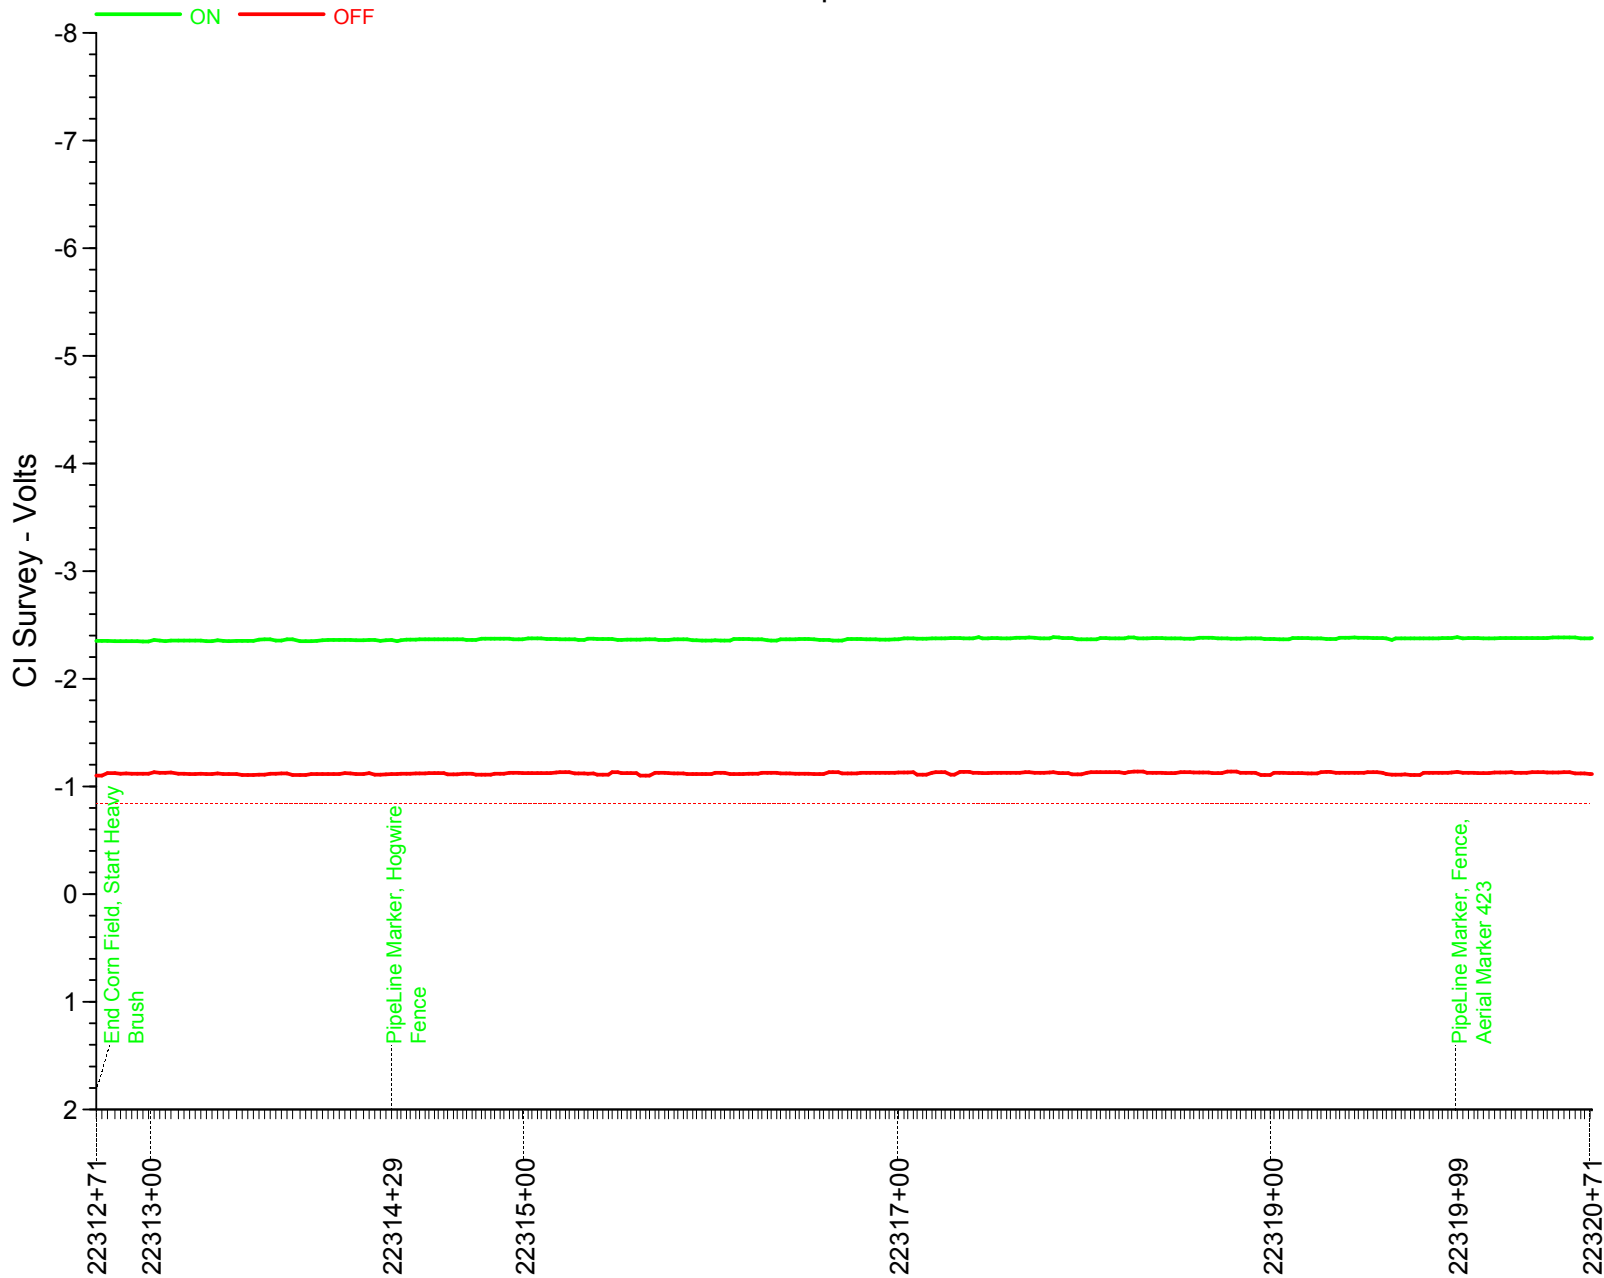

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

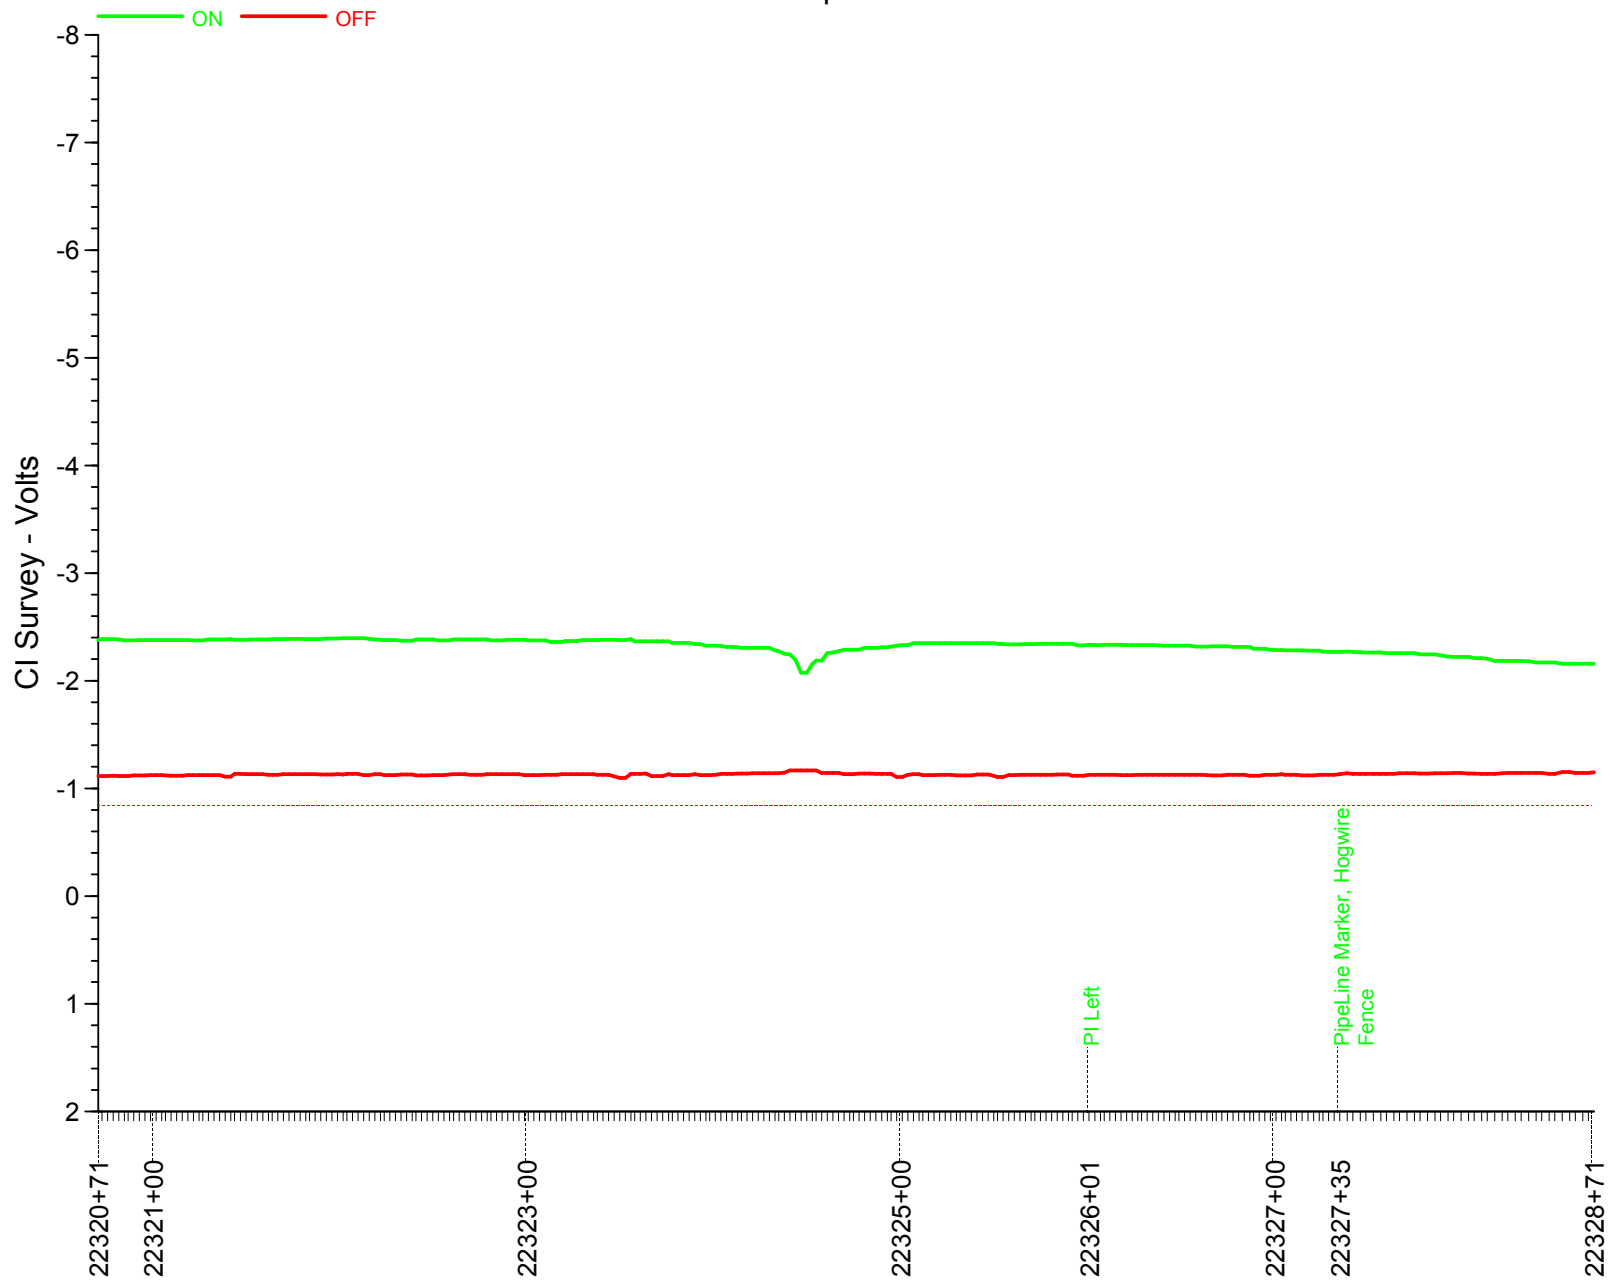


100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION




Pipe: 1

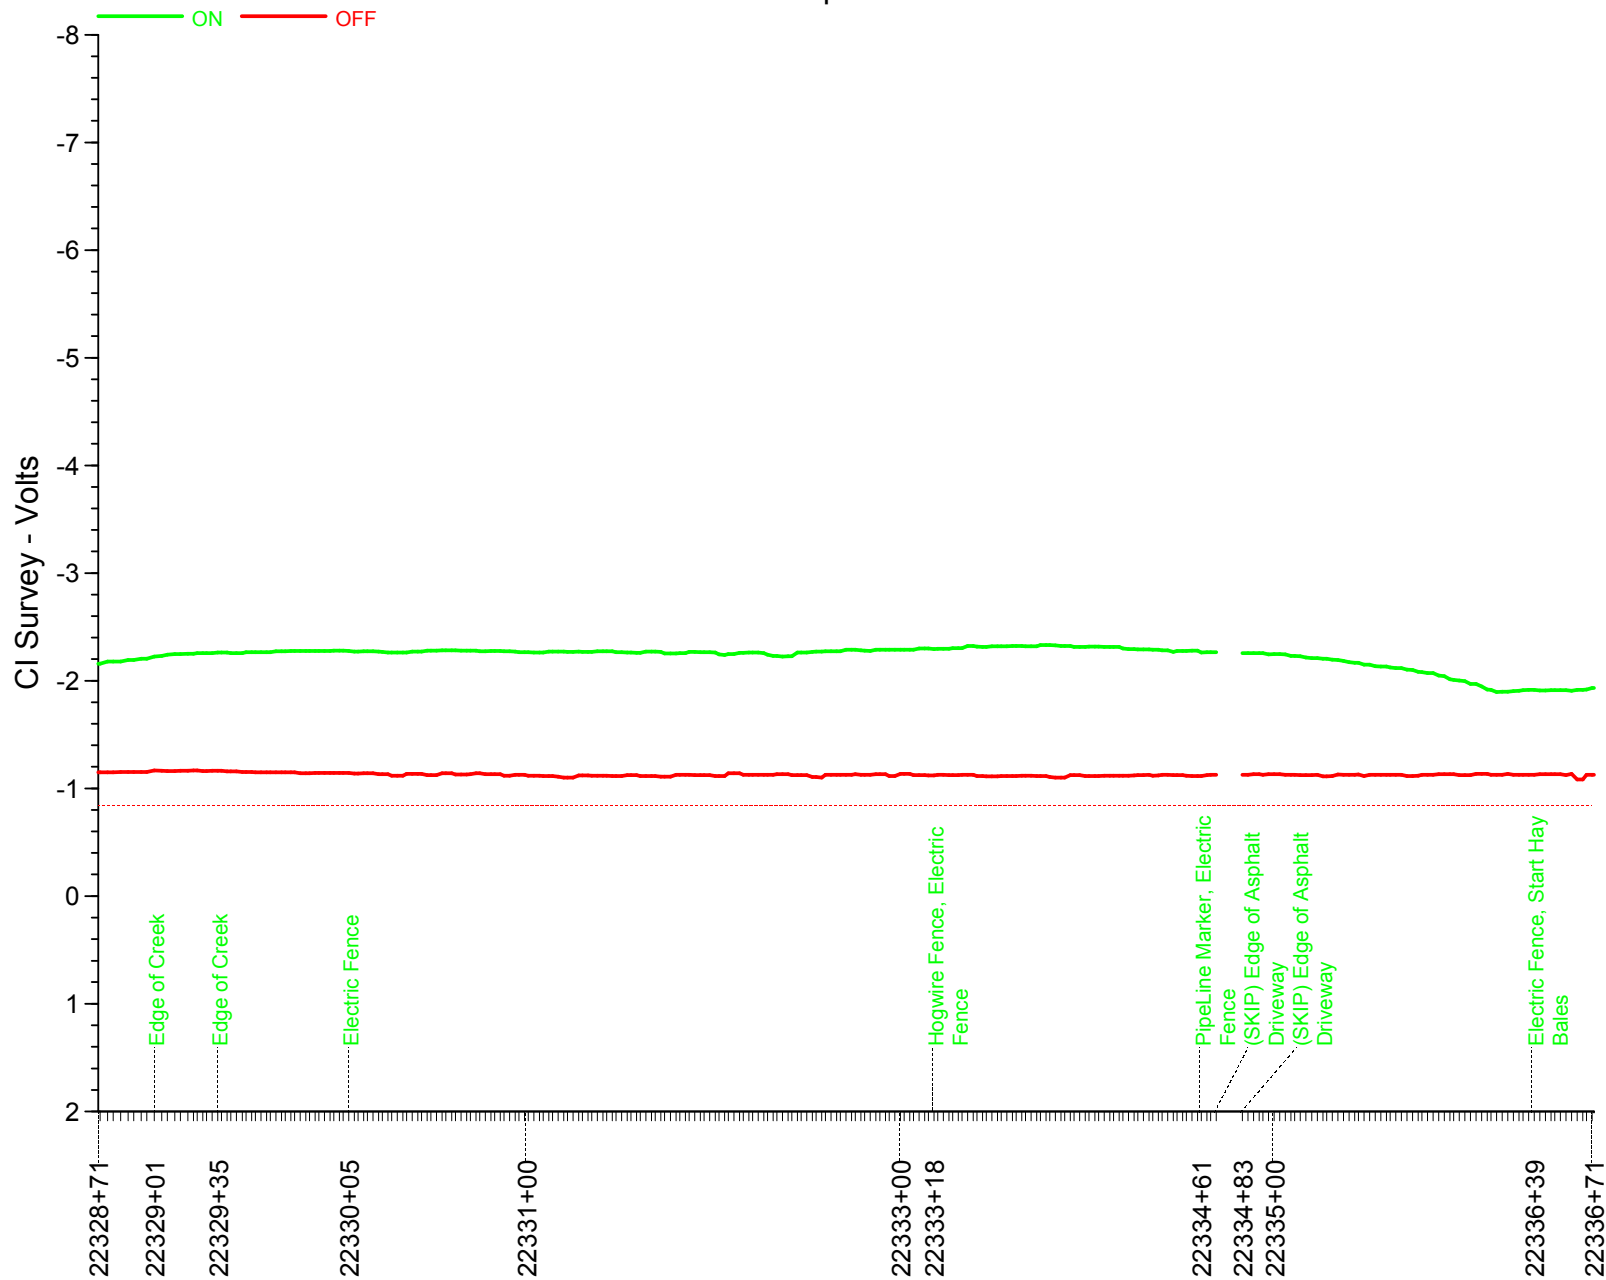

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

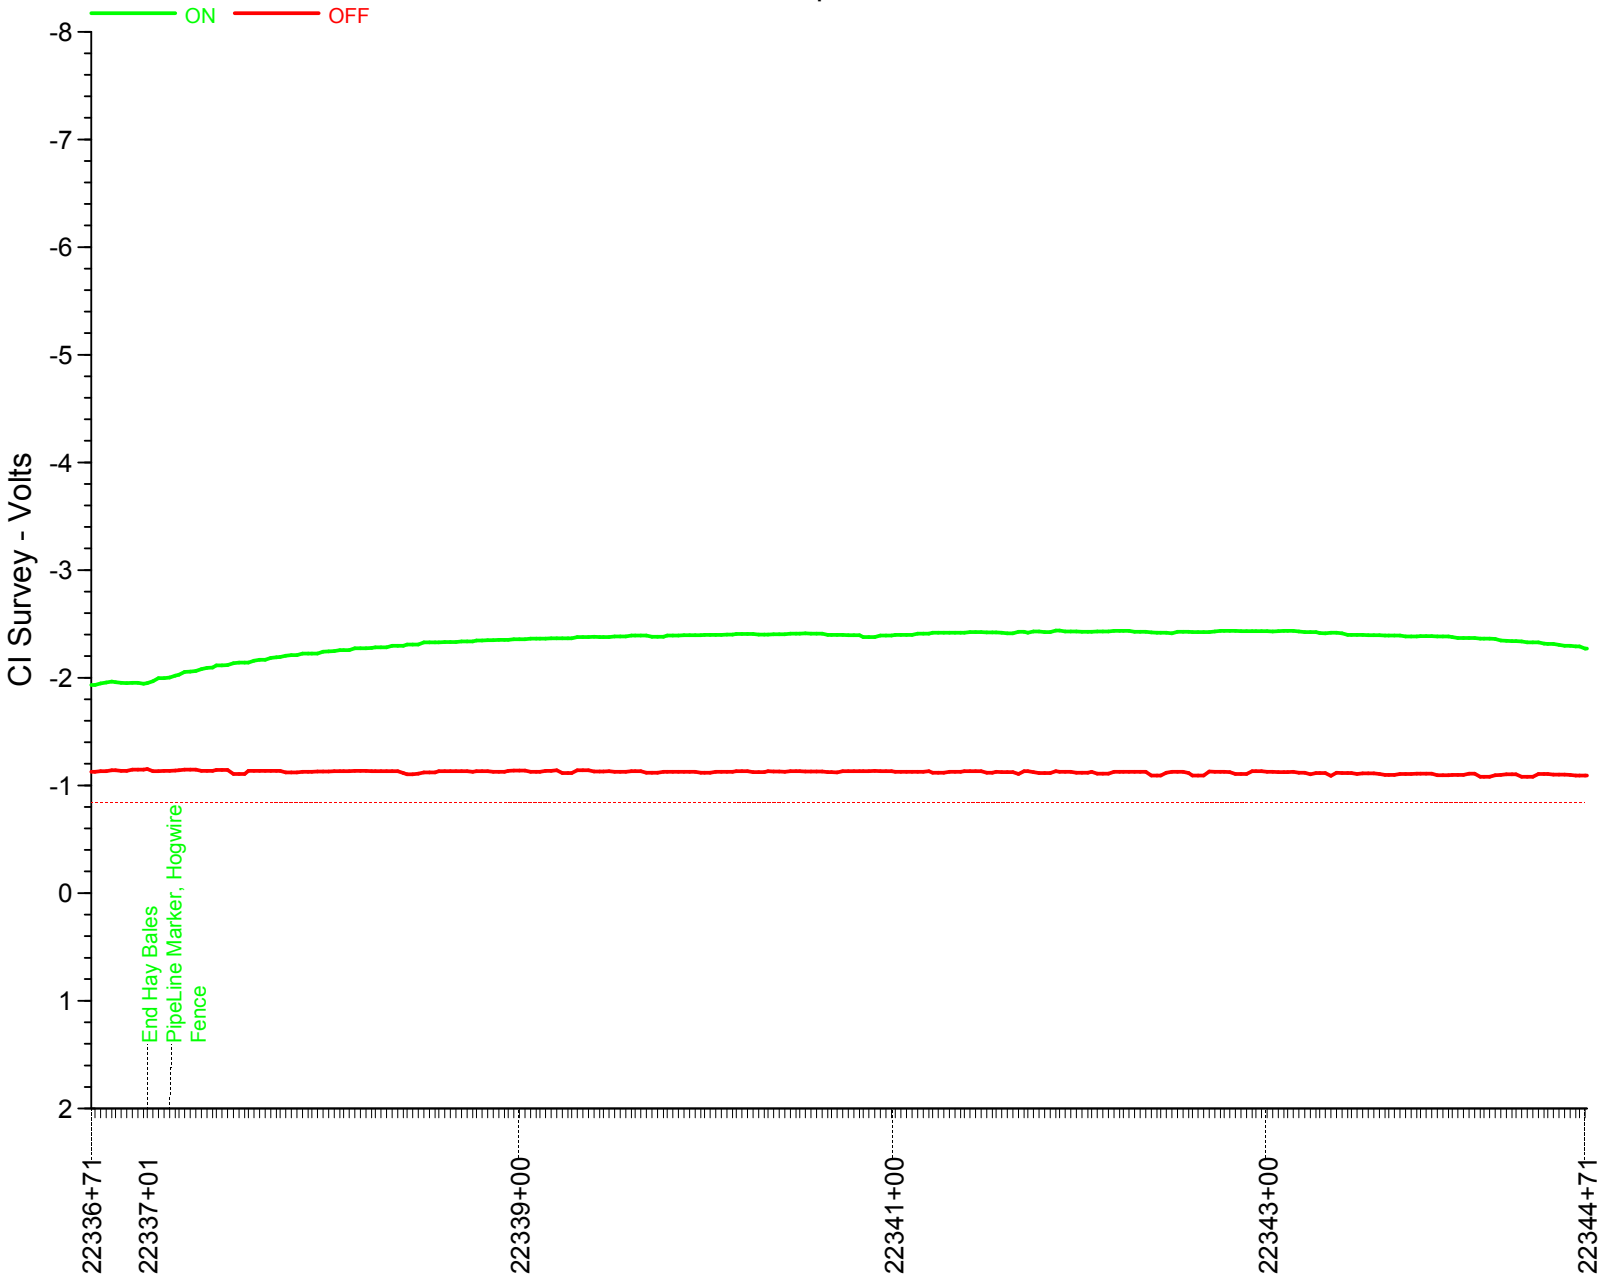

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

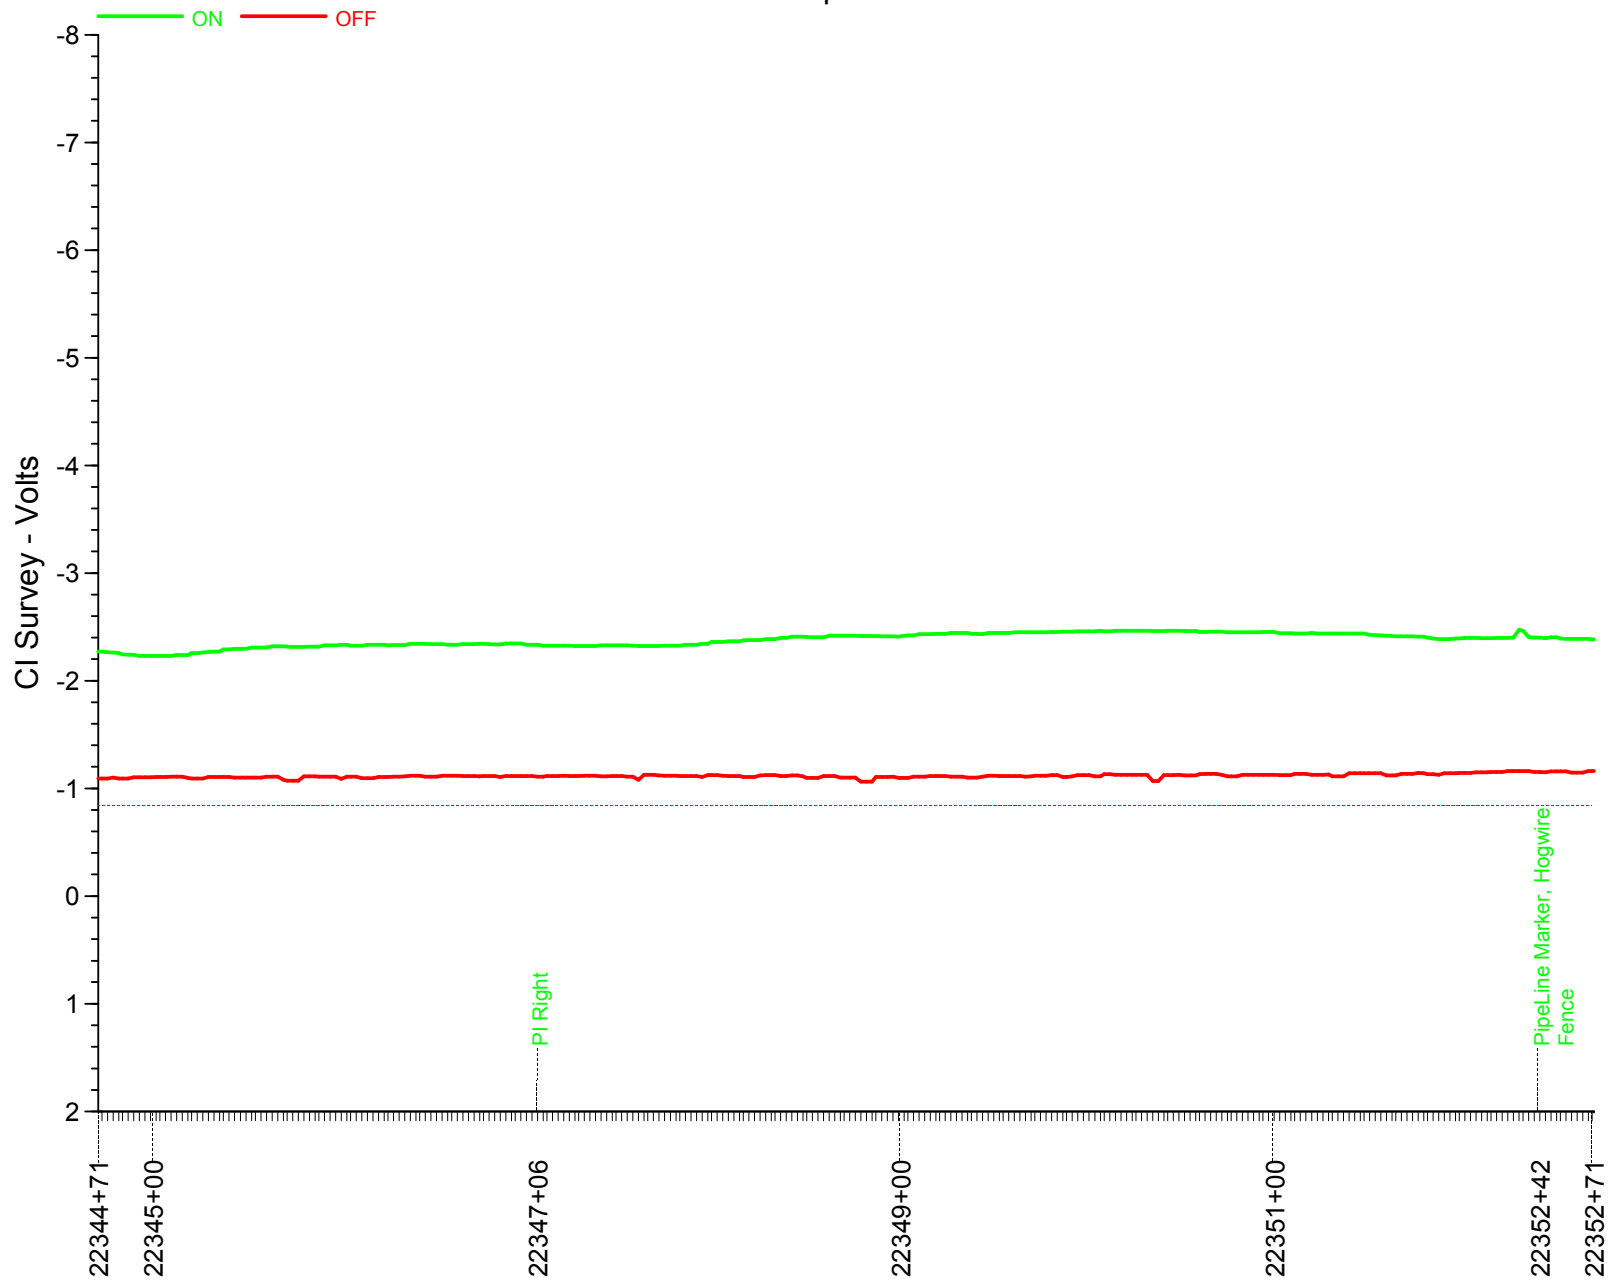

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

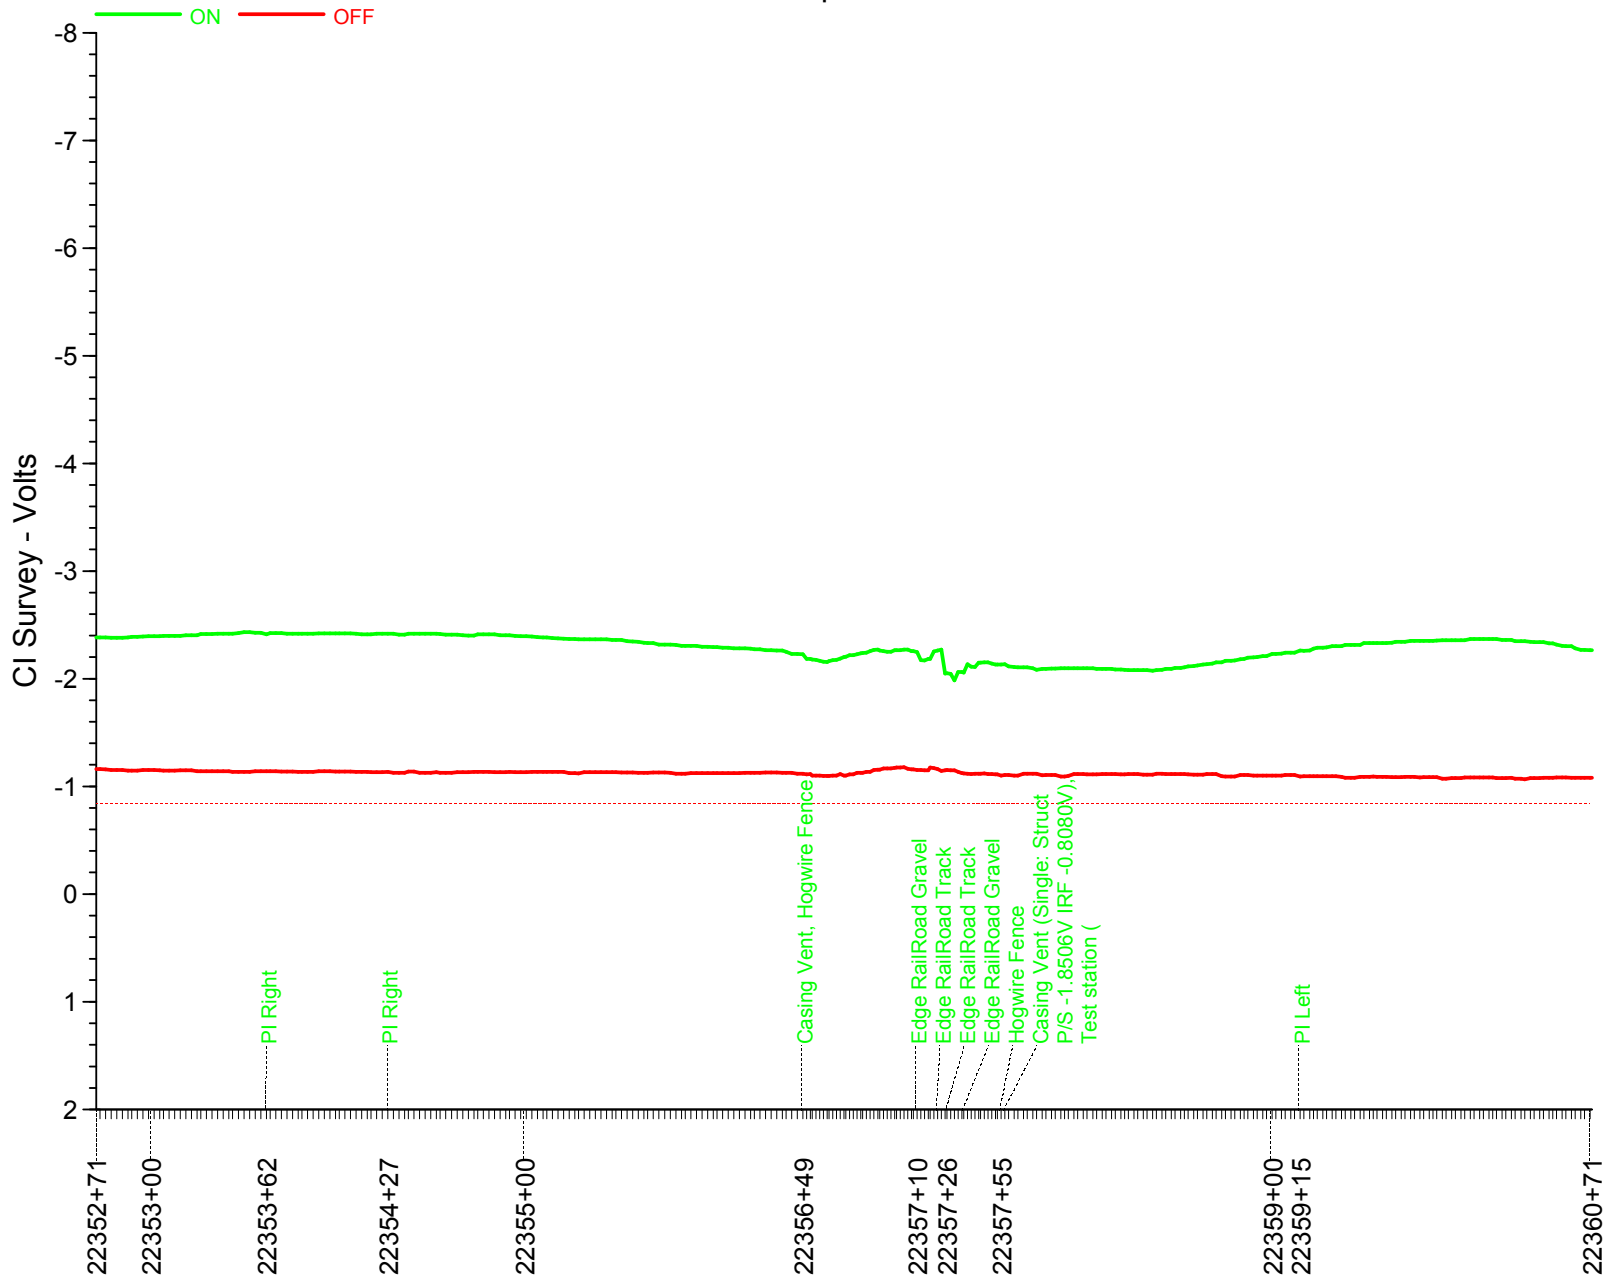

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

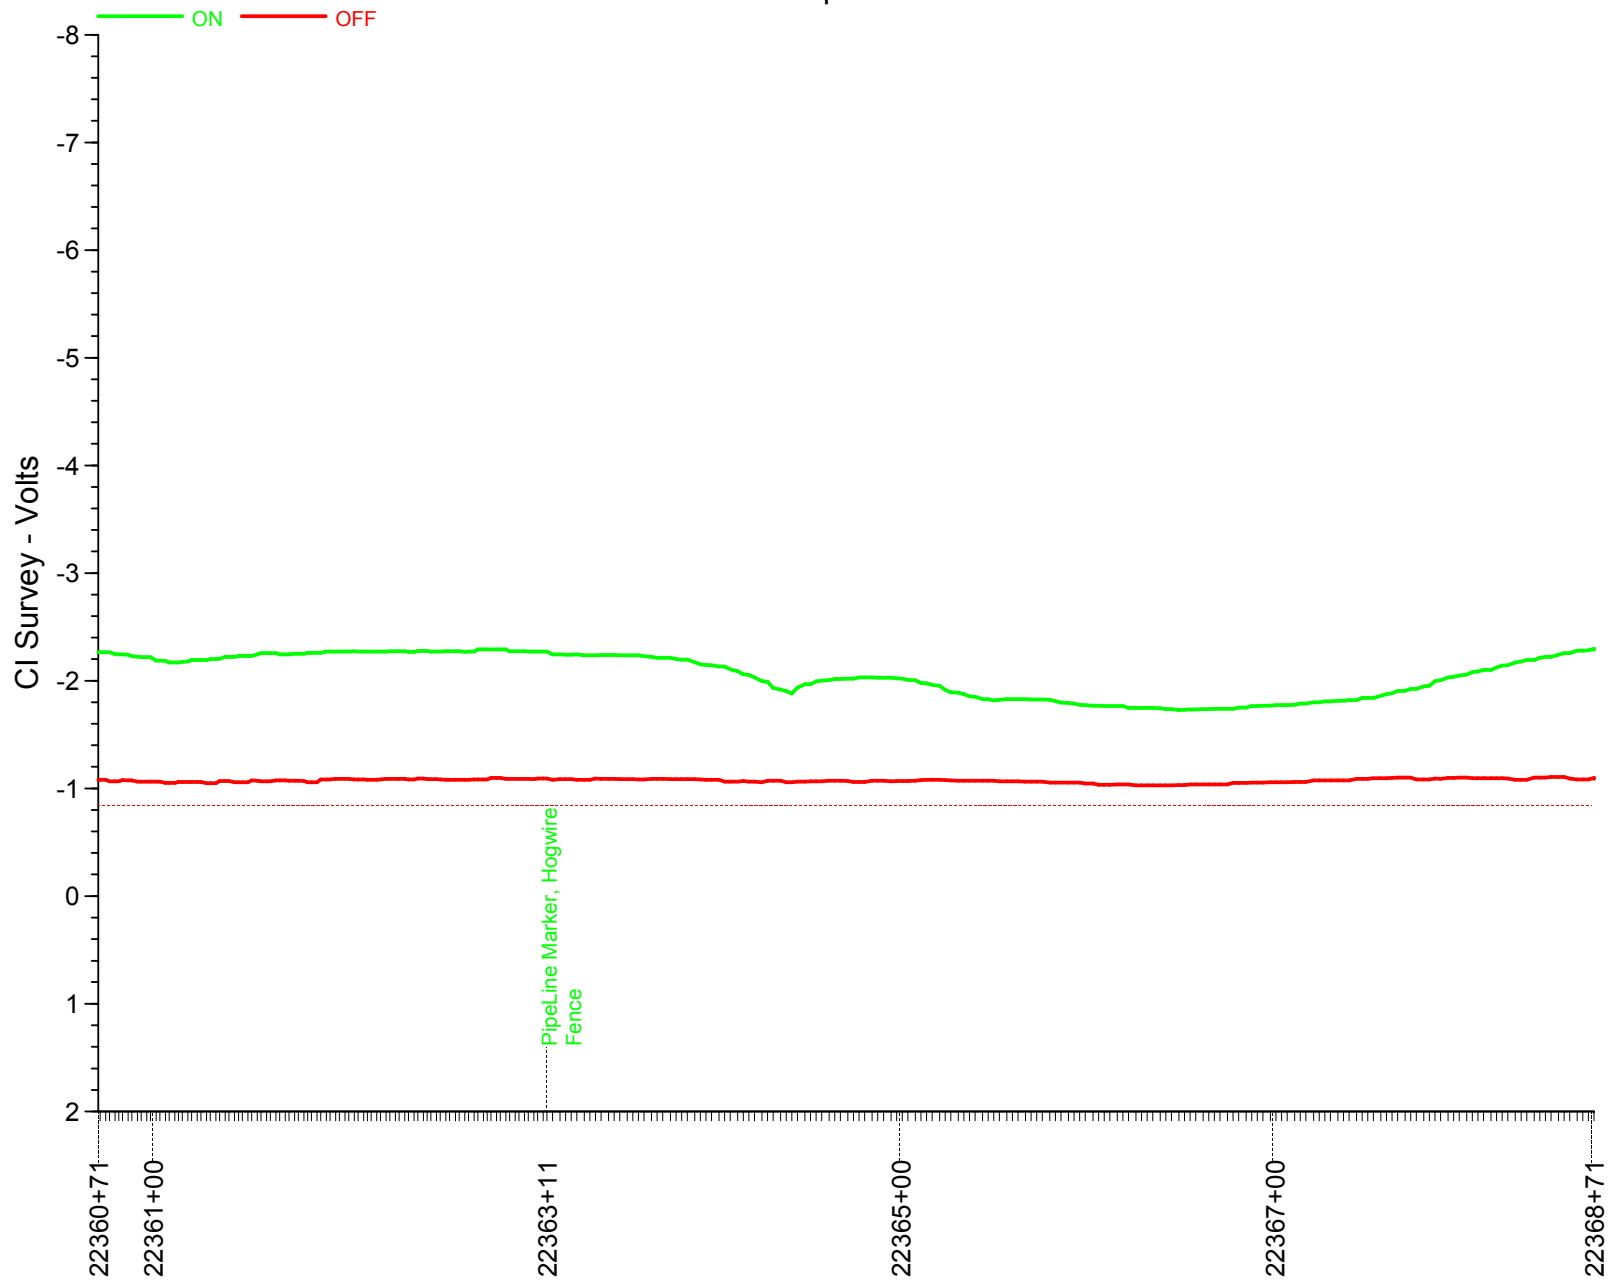


100 Feet/Inch

CP Data Manager 11/28/12 Page 100

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

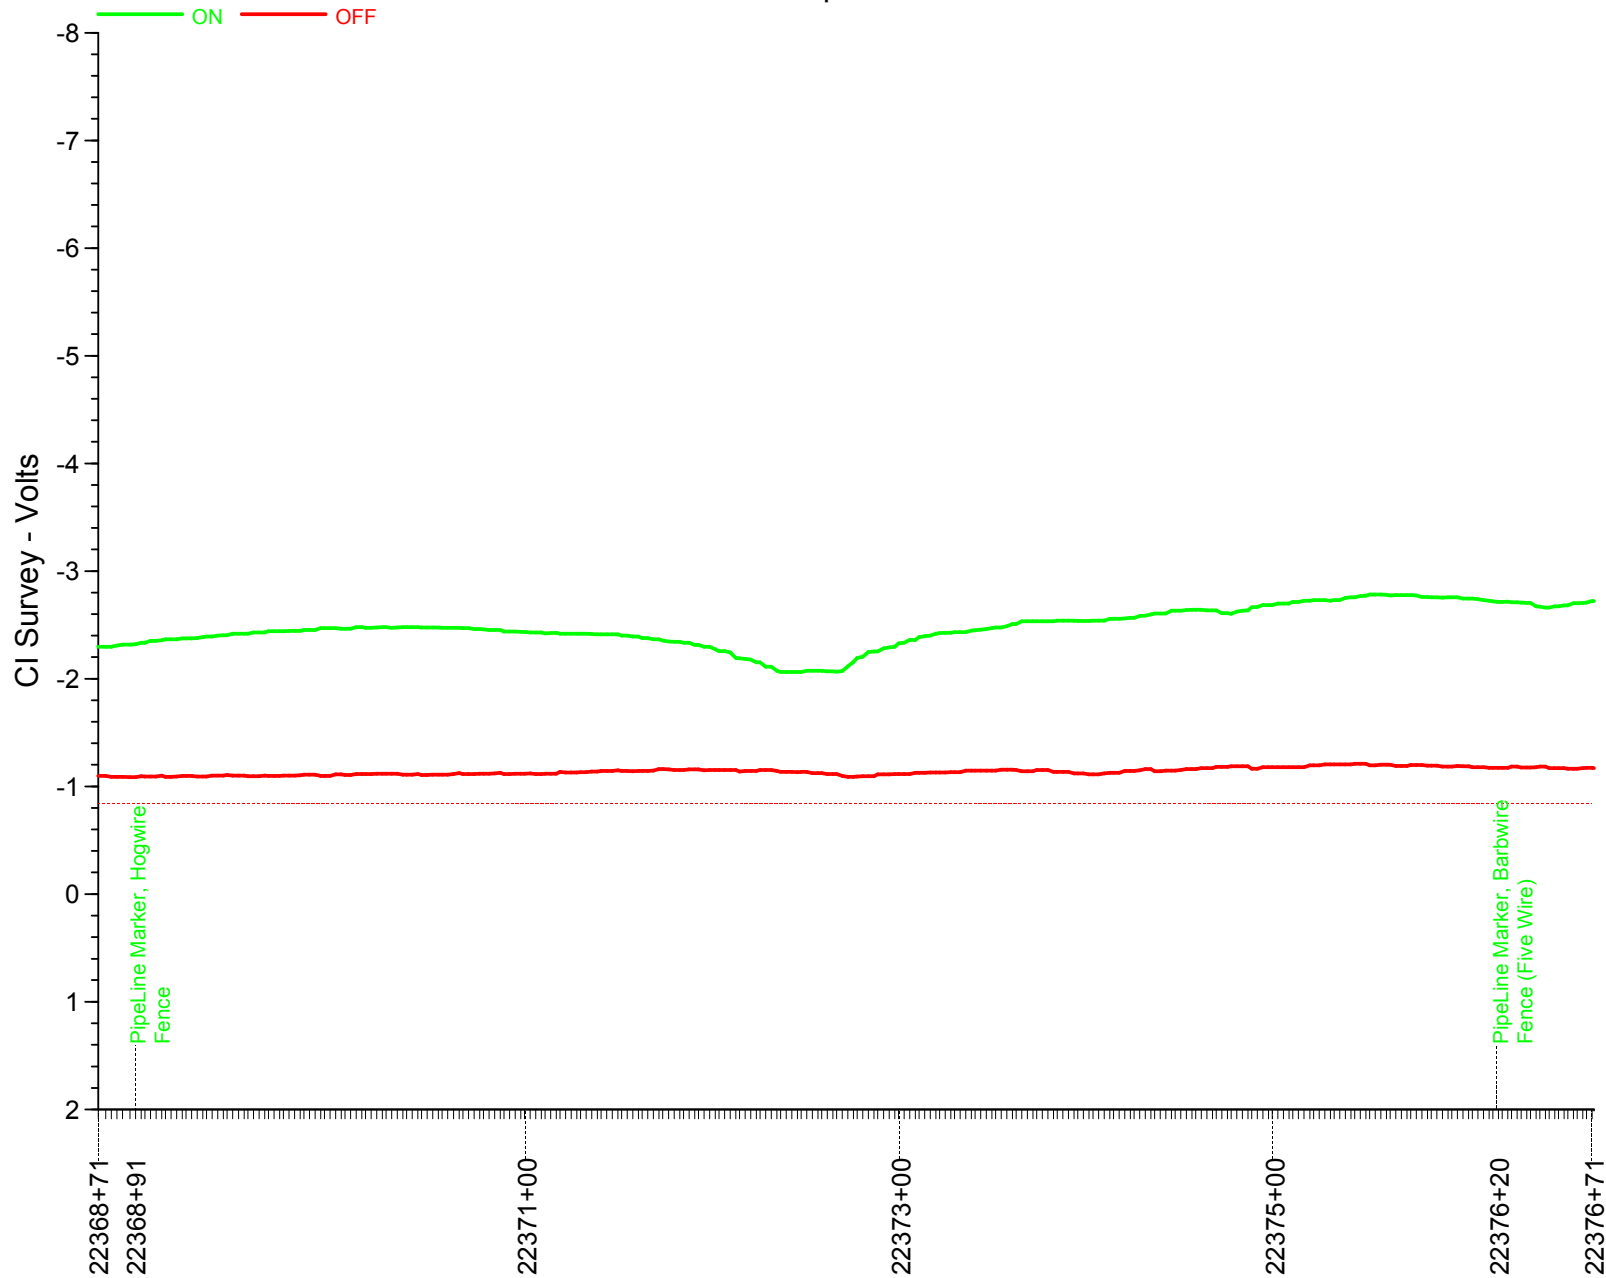

100 Feet/Inch

CP Data Manager 11/28/12 Page 101

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1




100 Feet/Inch

CP Data Manager 11/28/12 Page 102

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

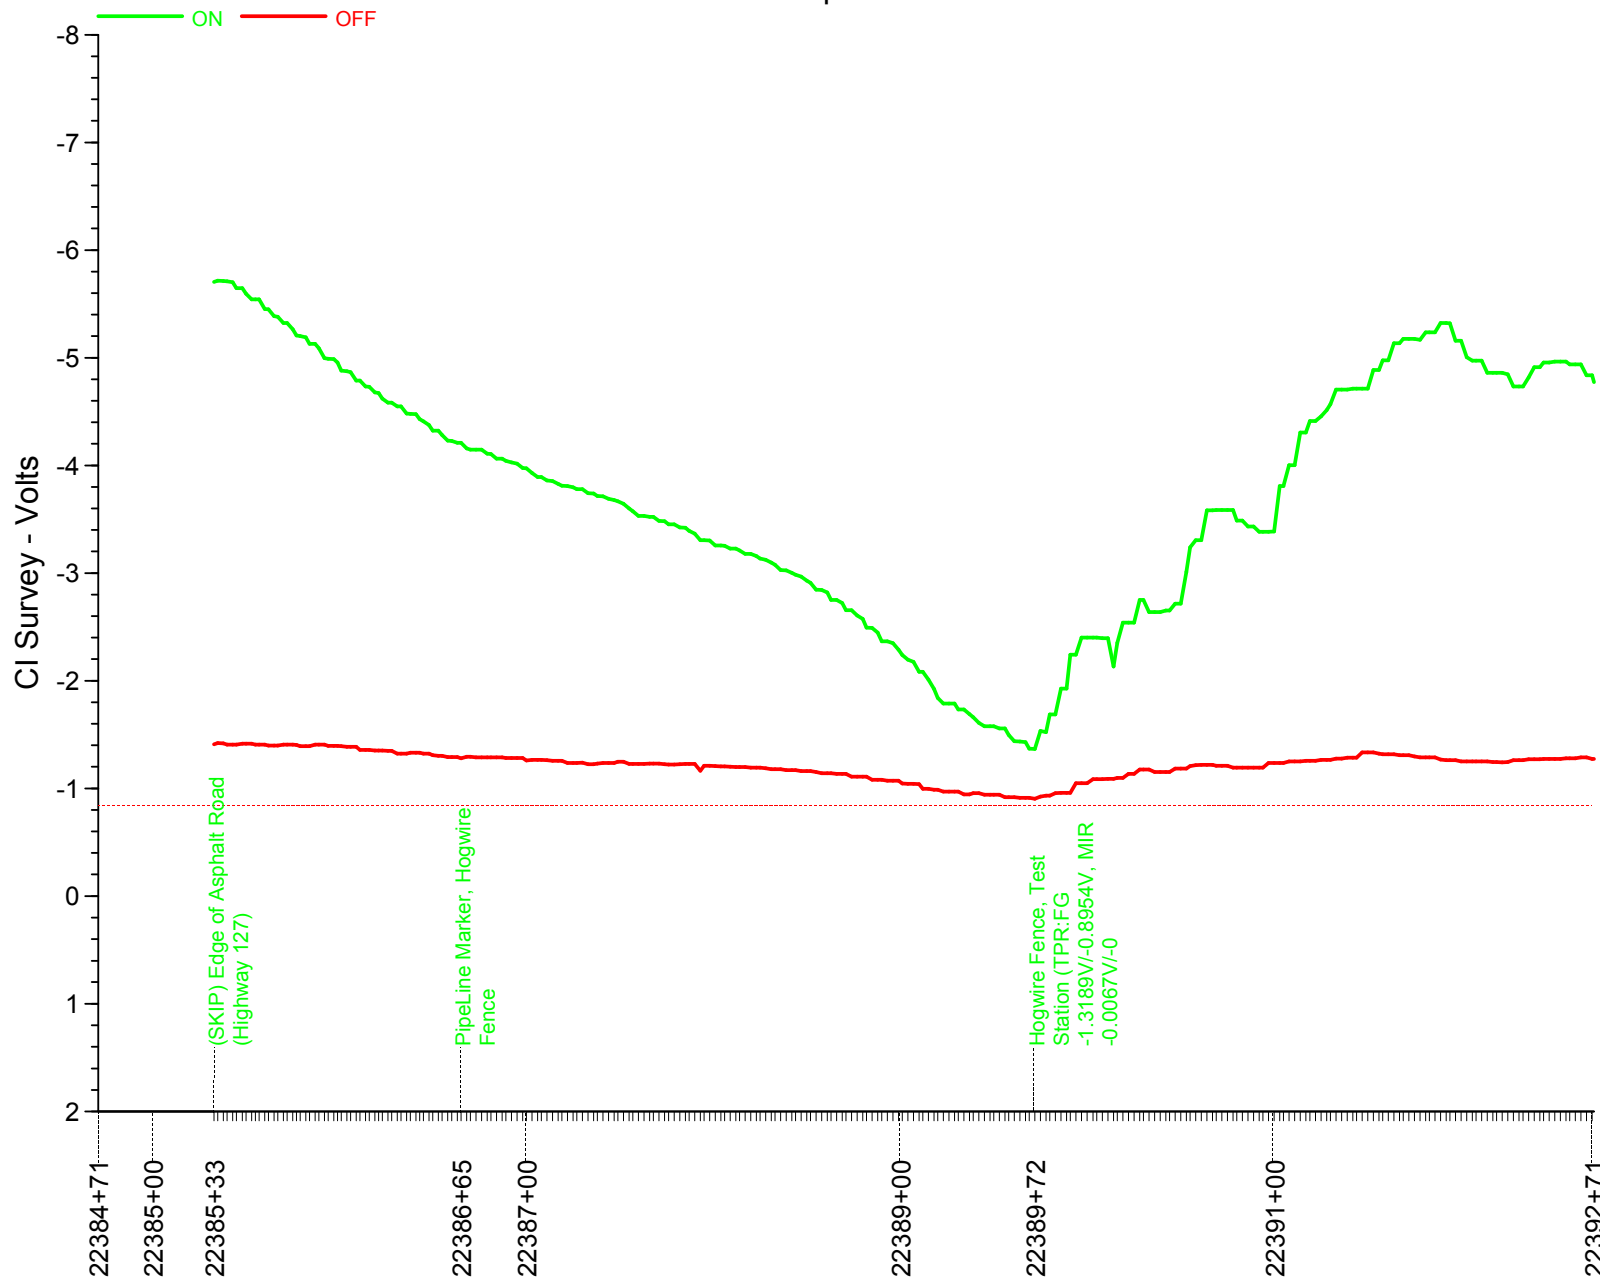


100 Feet/Inch

CP Data Manager 11/28/12 Page 103

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION



Pipe: 1

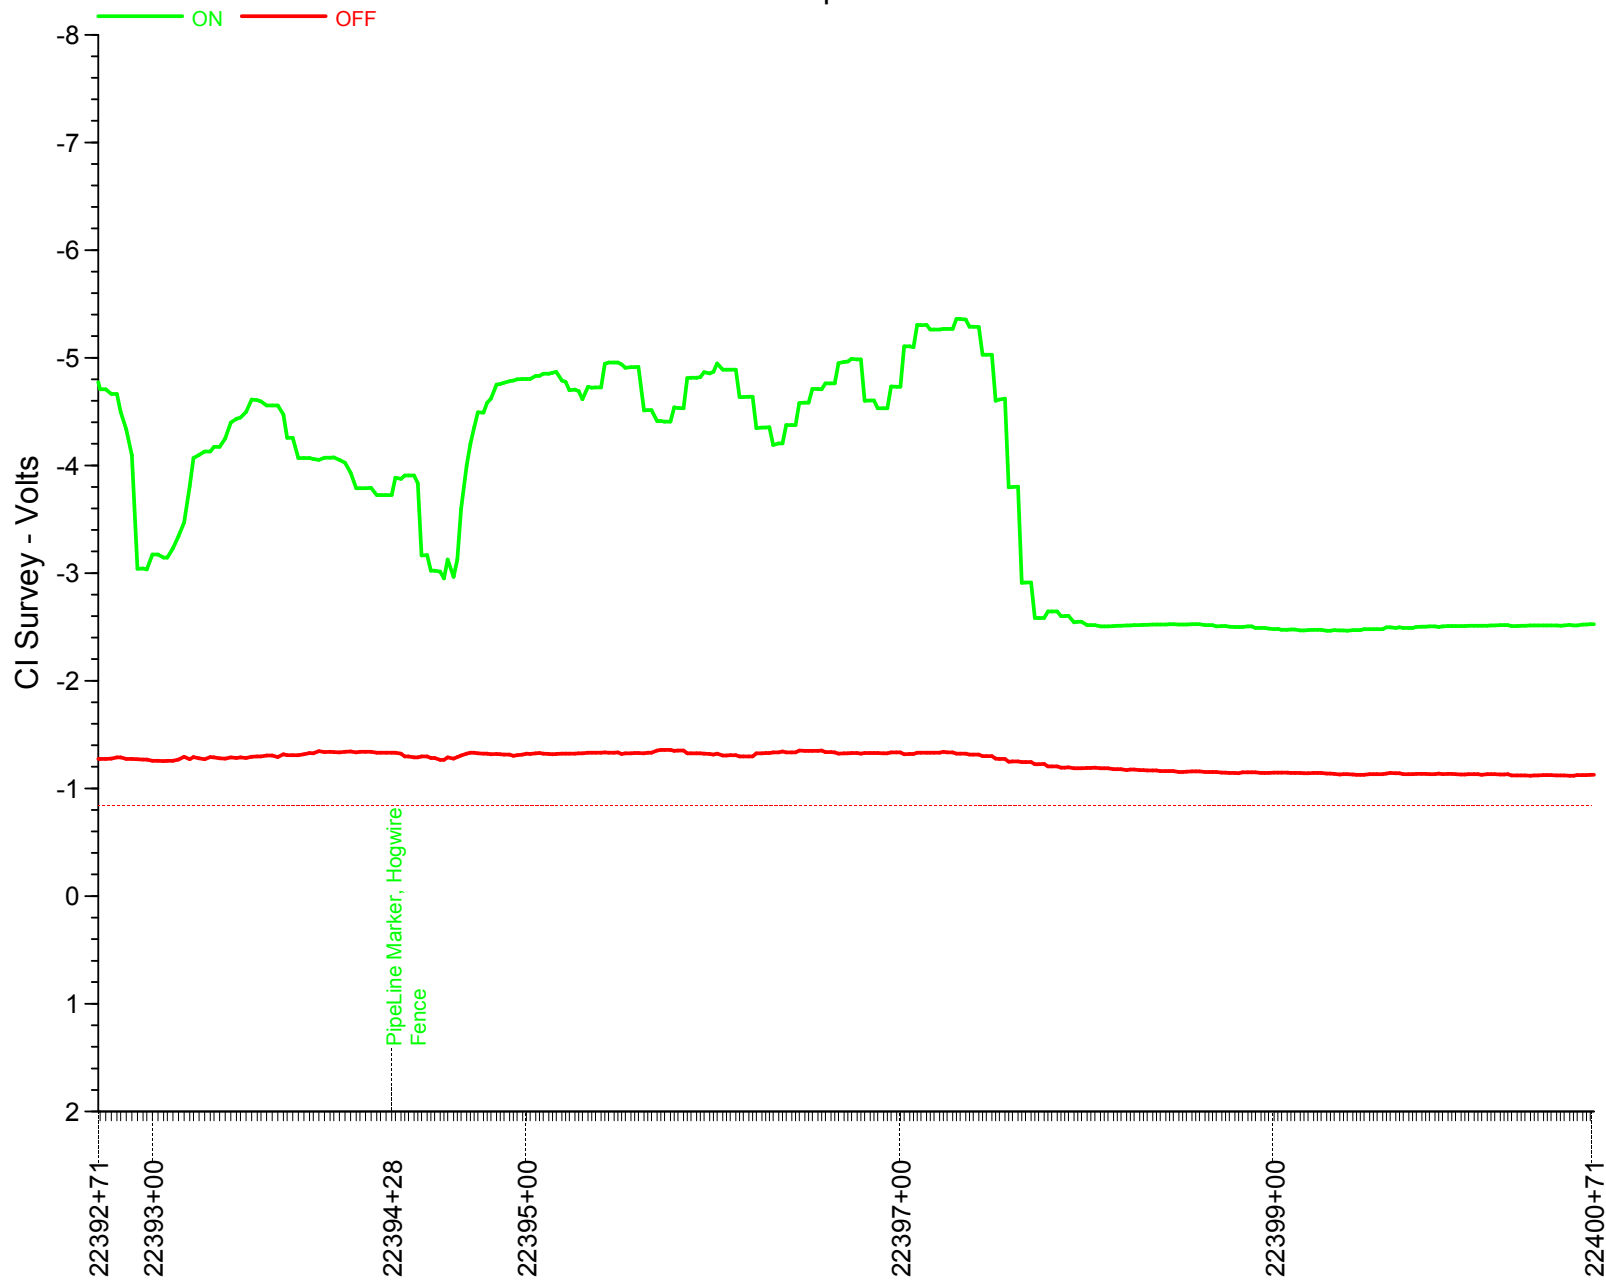


100 Feet/Inch

CP Data Manager 11/28/12 Page 104

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

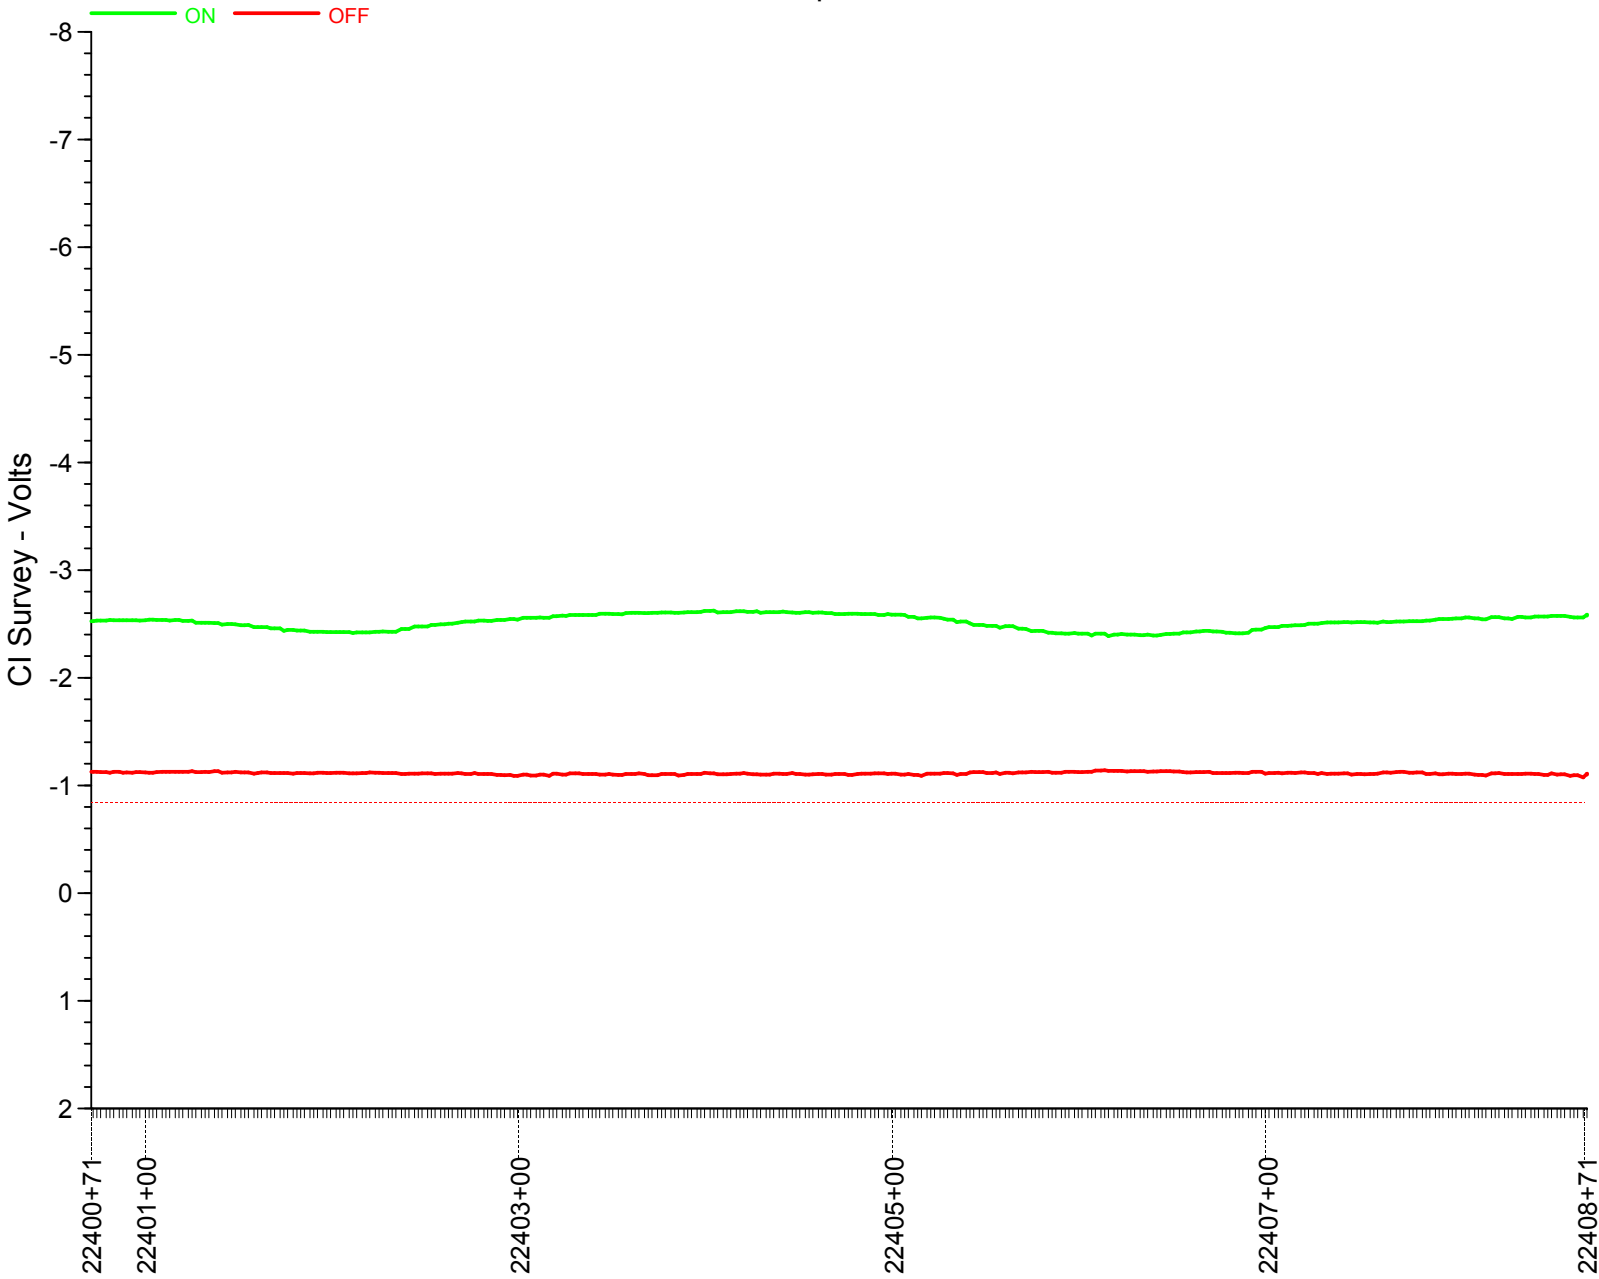

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

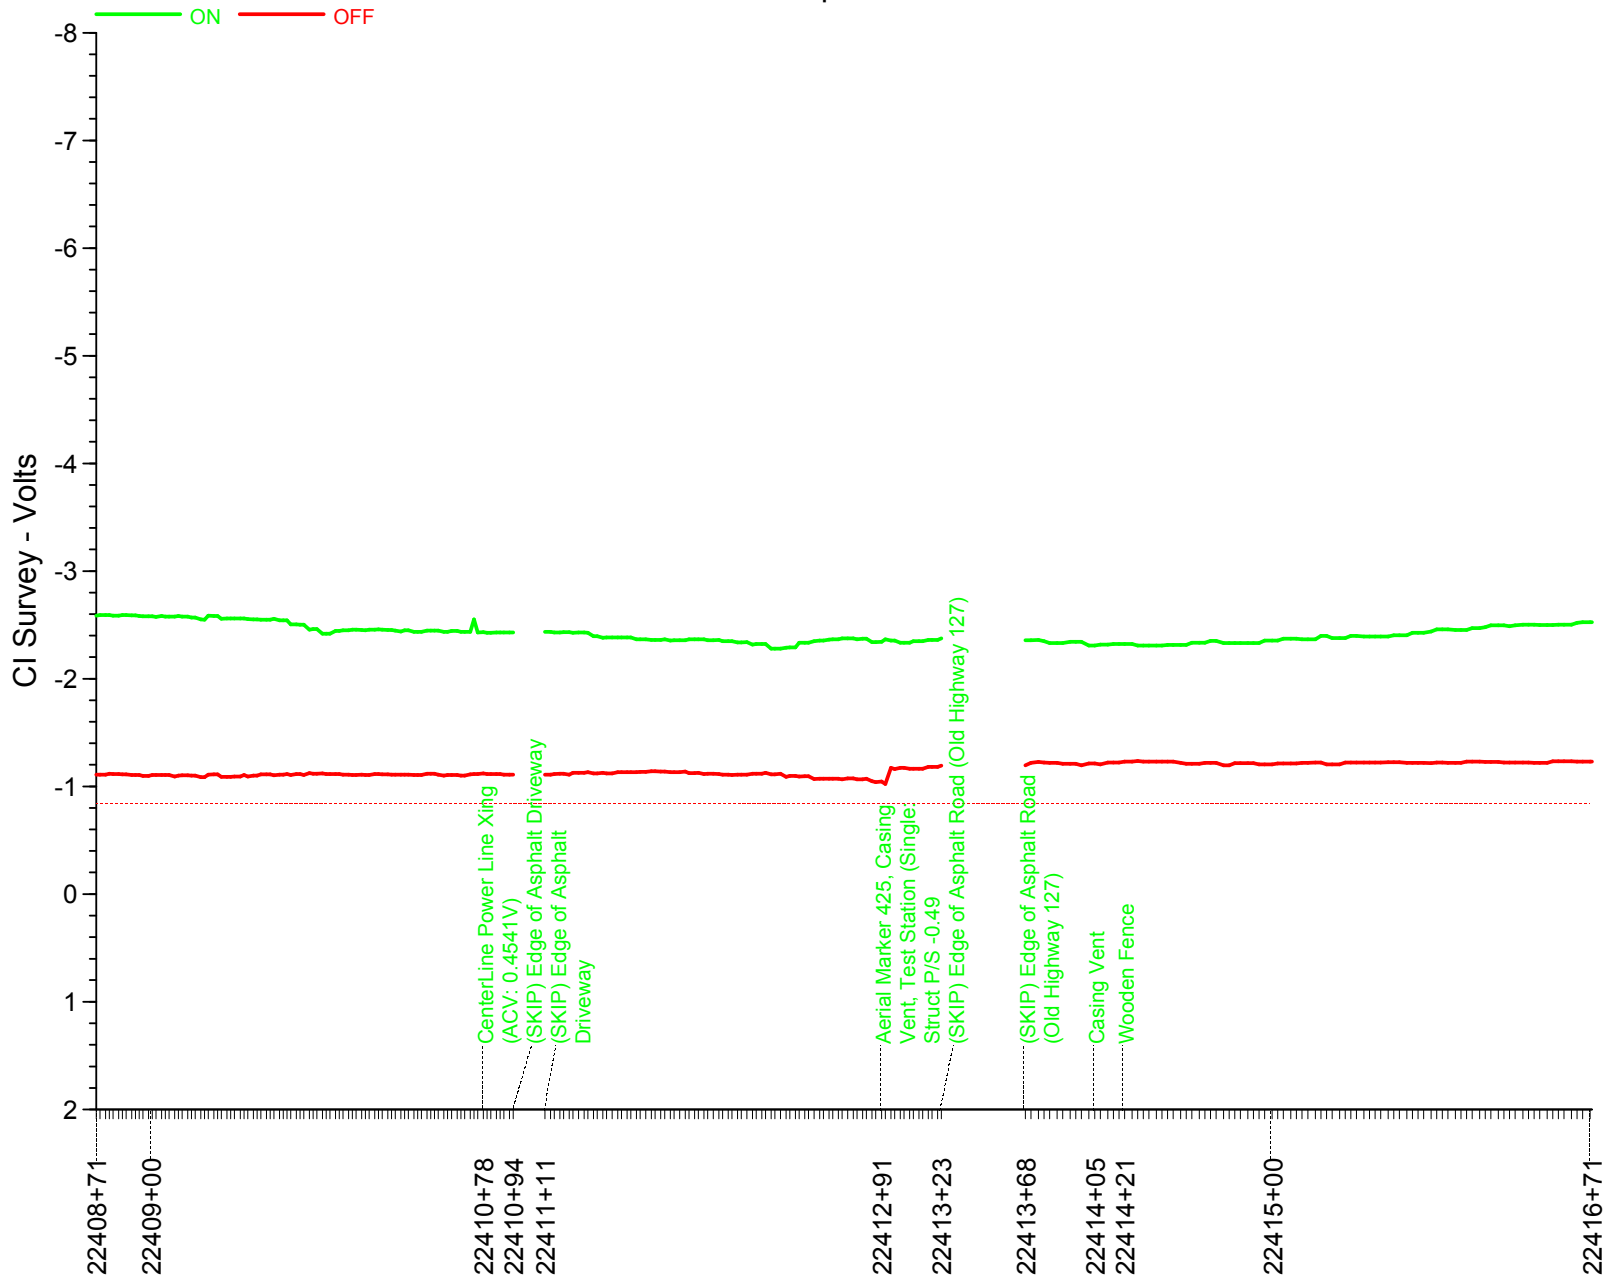

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

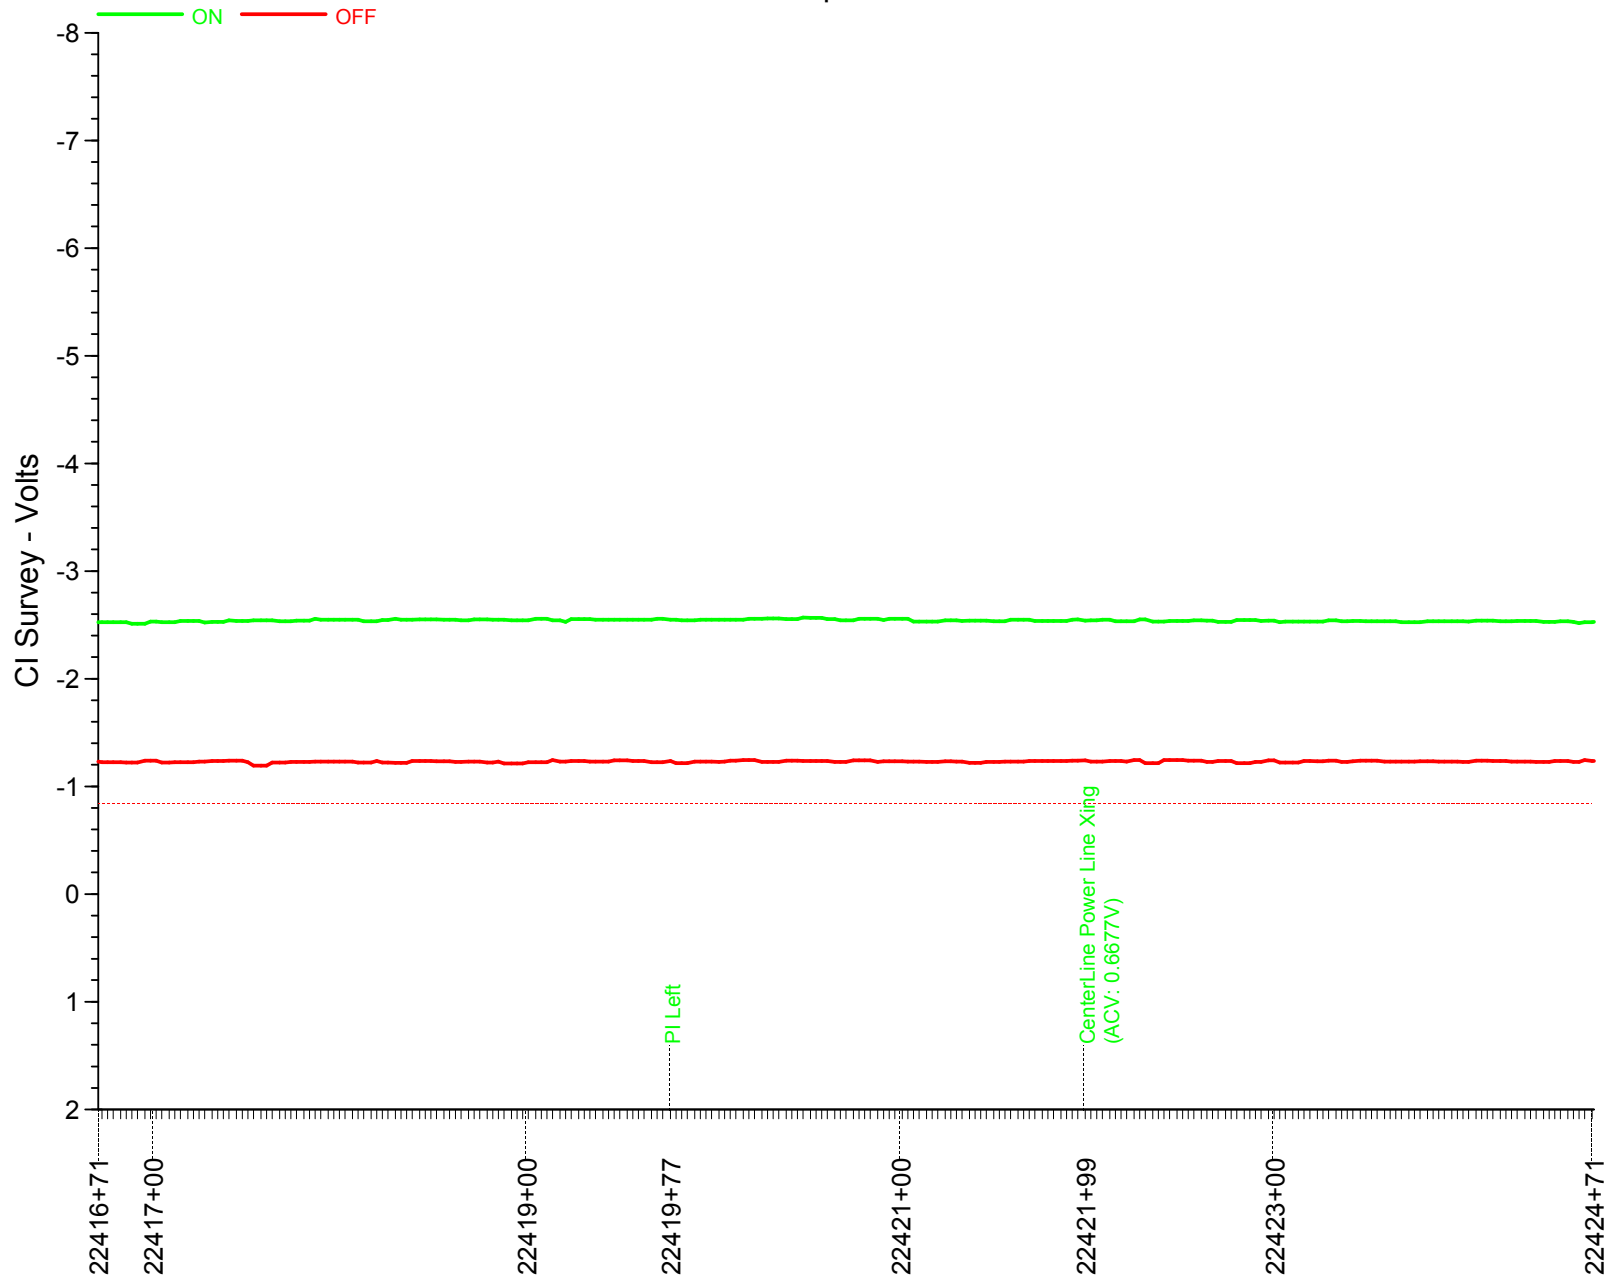

100 Feet/Inch

CP Data Manager 11/28/12 Page 107

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1



100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

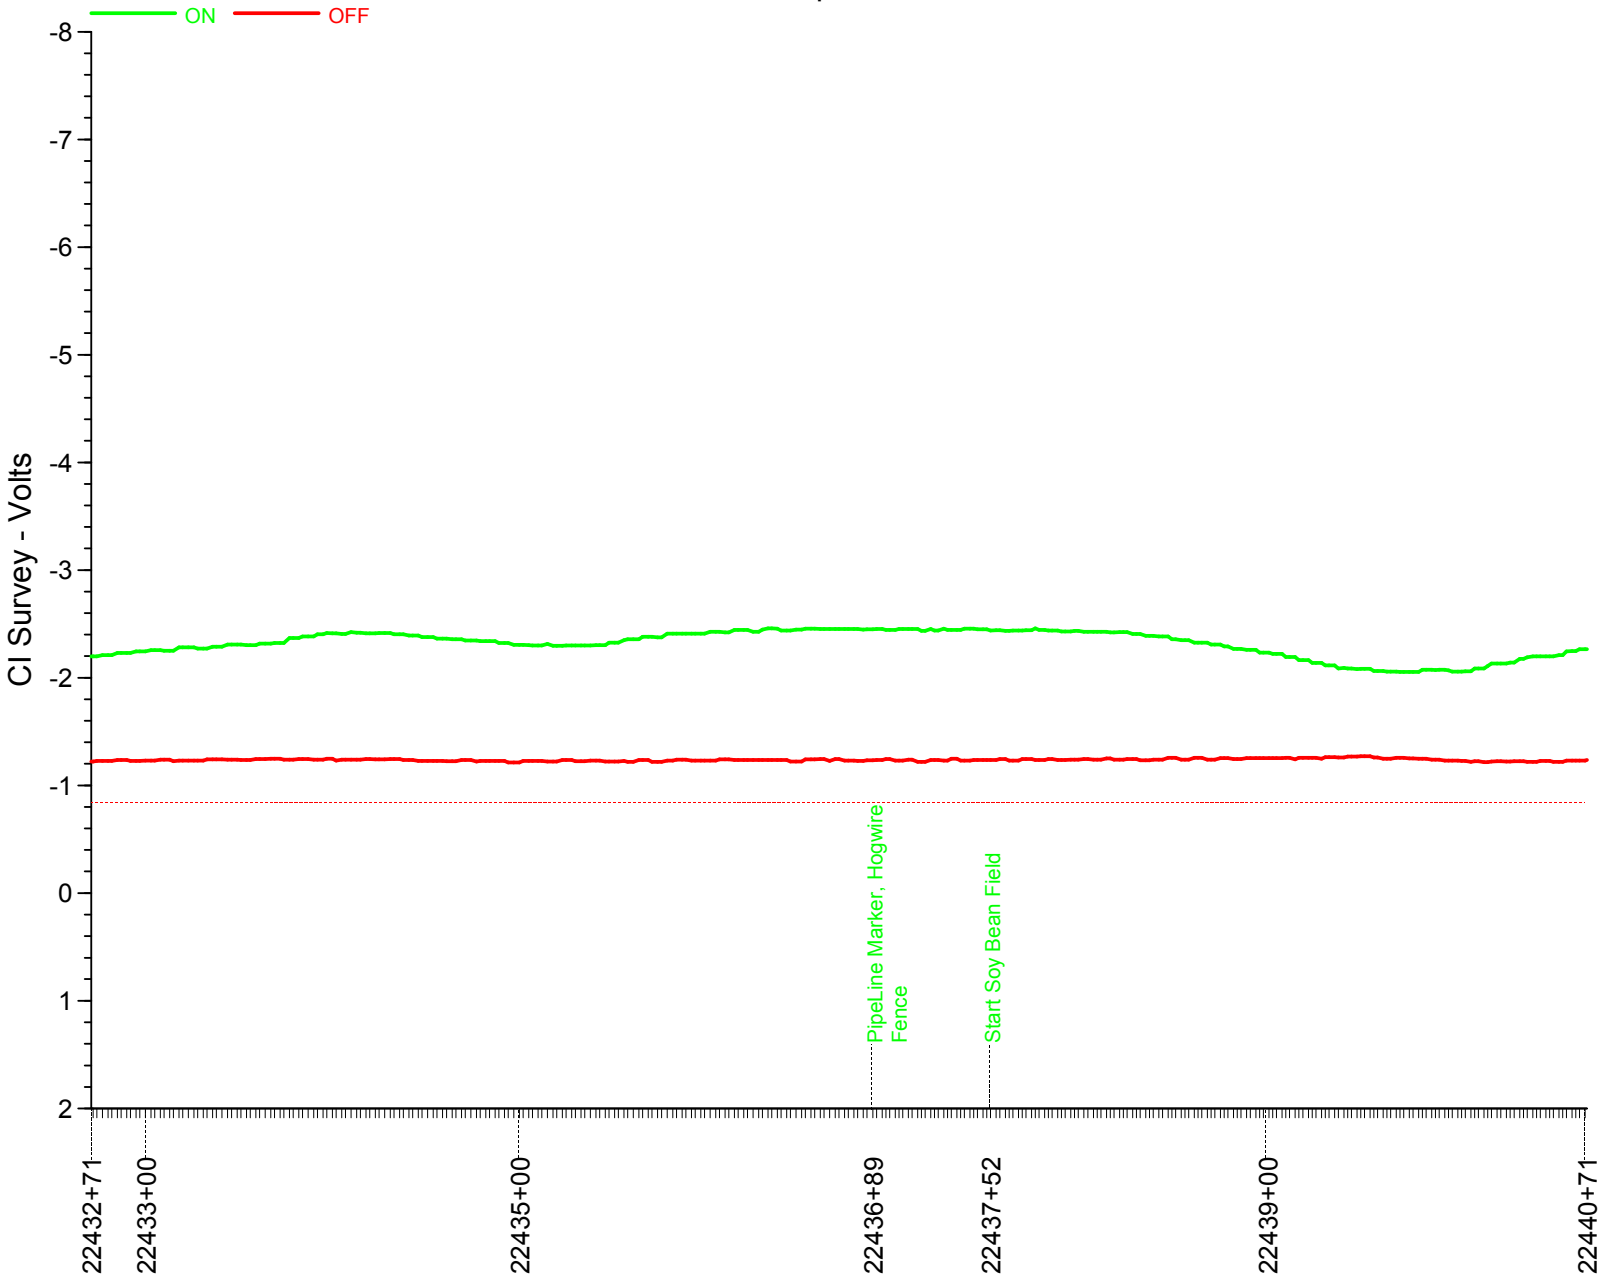

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

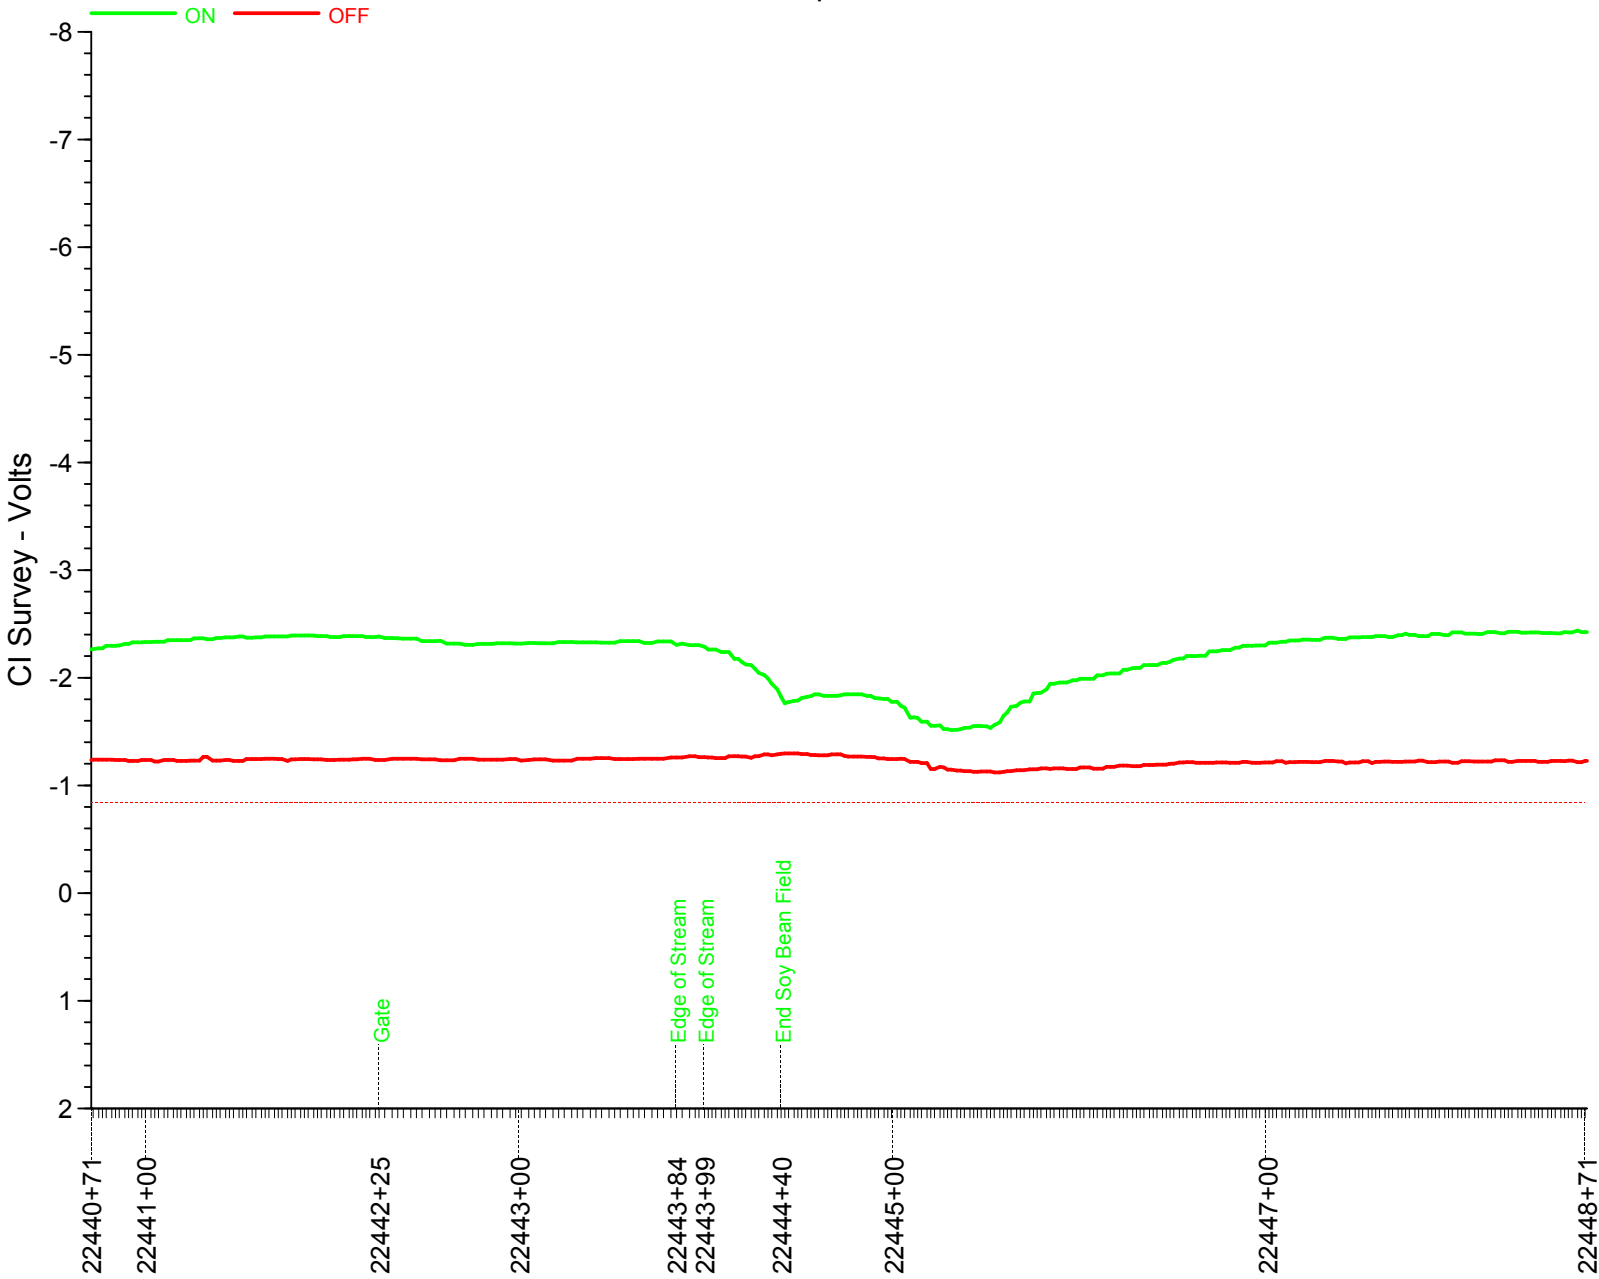

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

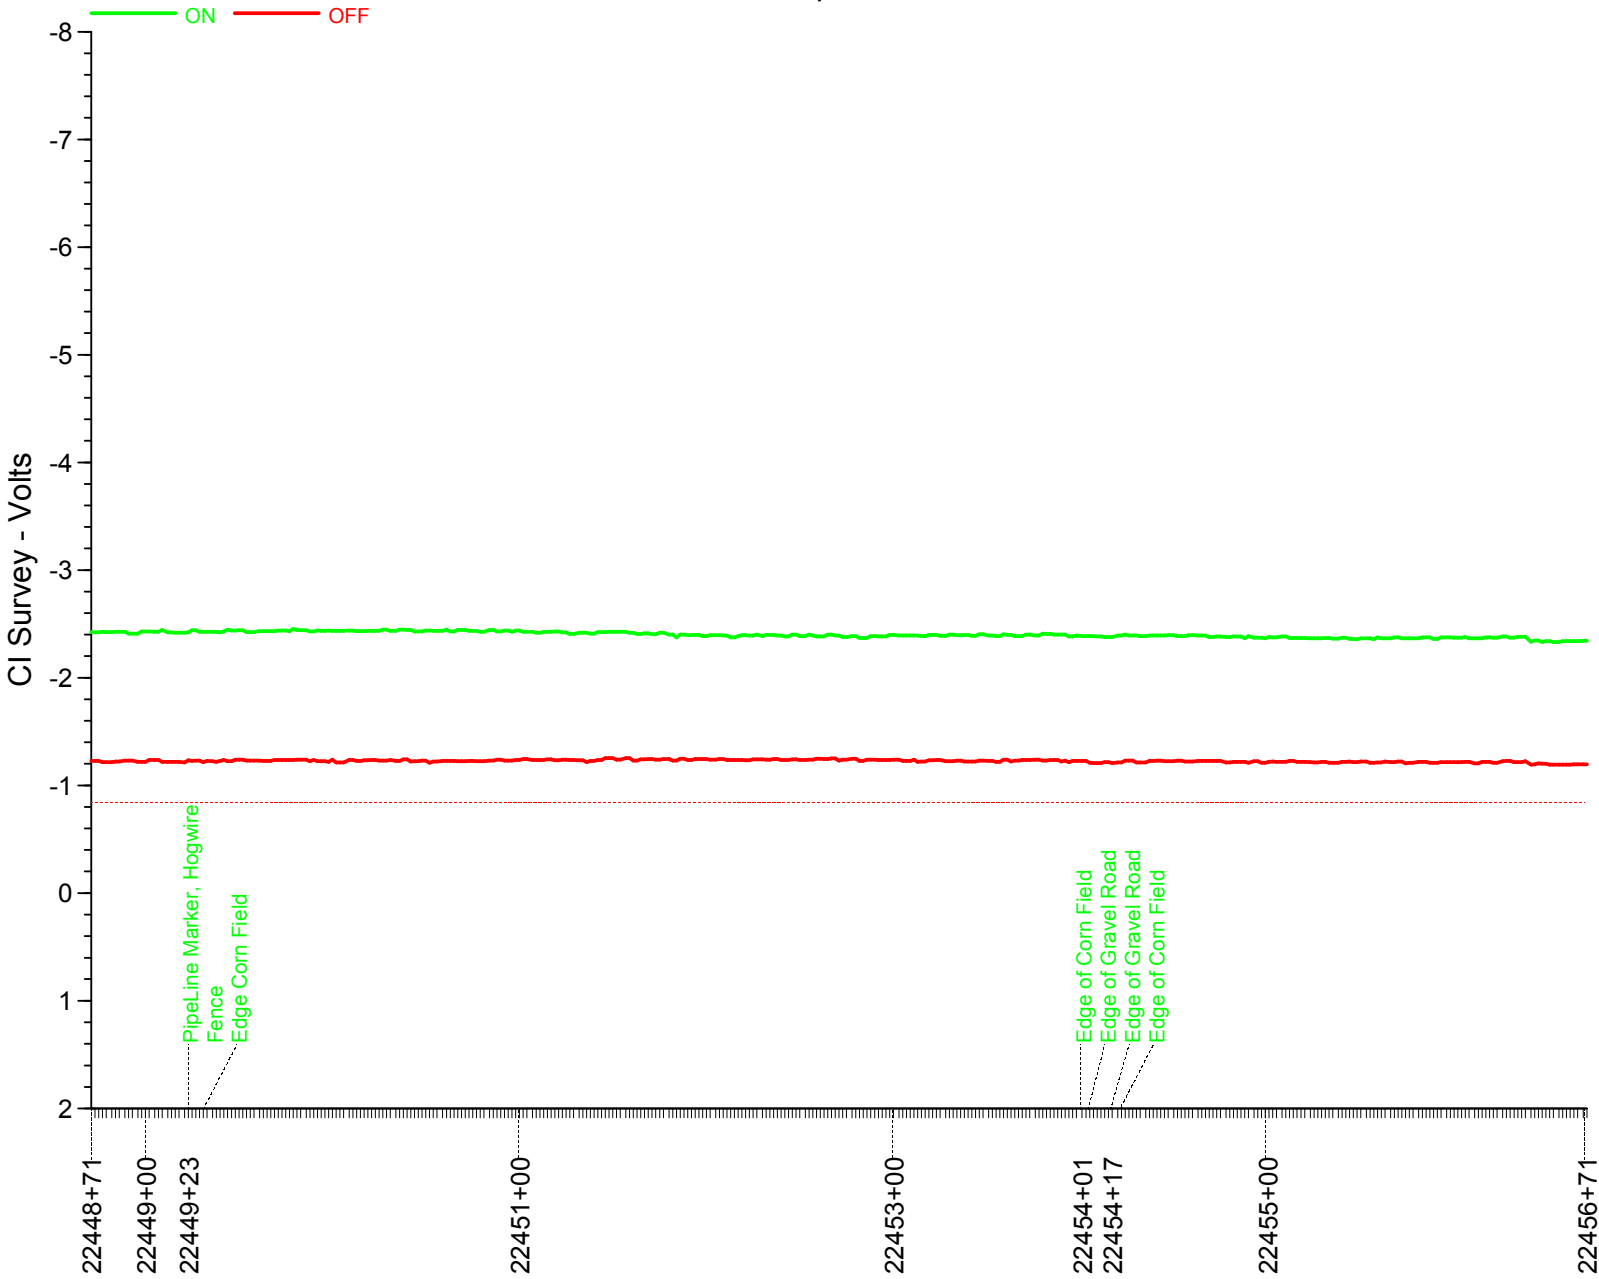


100 Feet/Inch

CP Data Manager 11/28/12 Page 111

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION



Pipe: 1

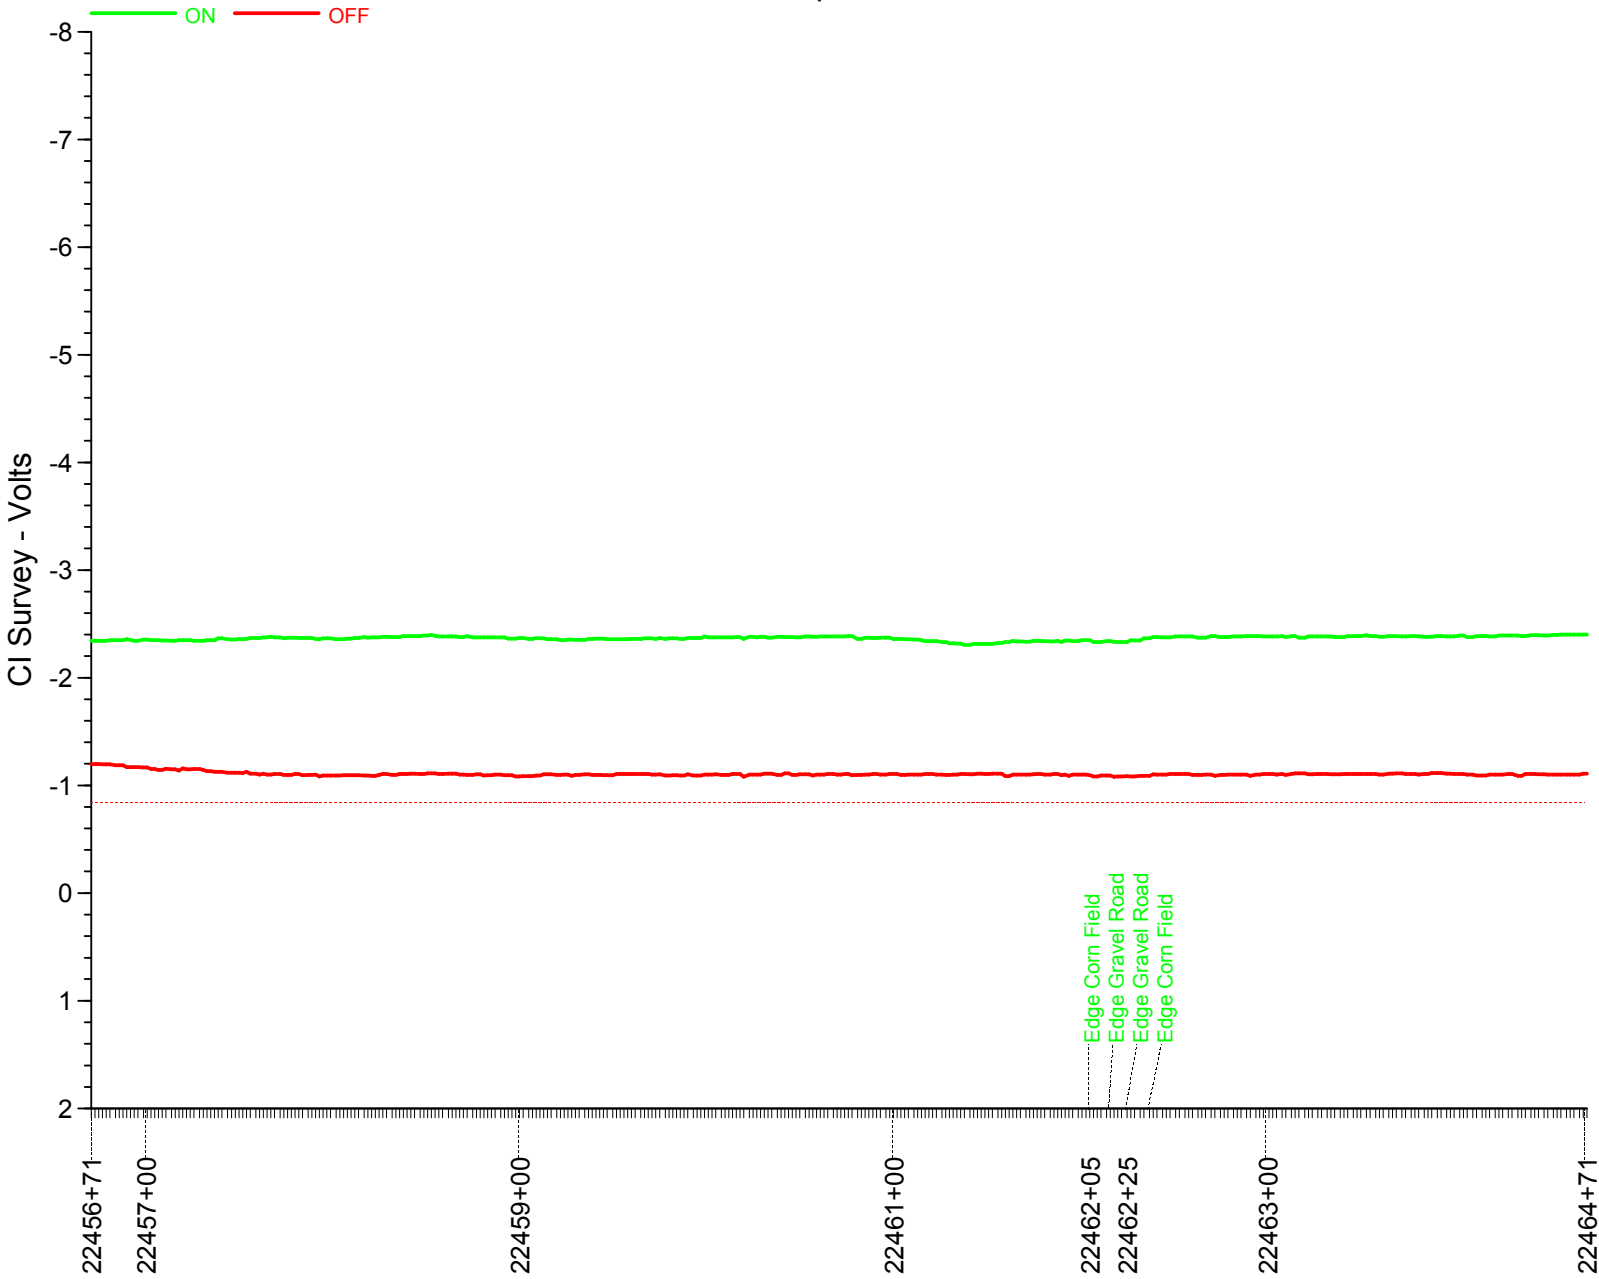


100 Feet/Inch

CP Data Manager 11/28/12 Page 112

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

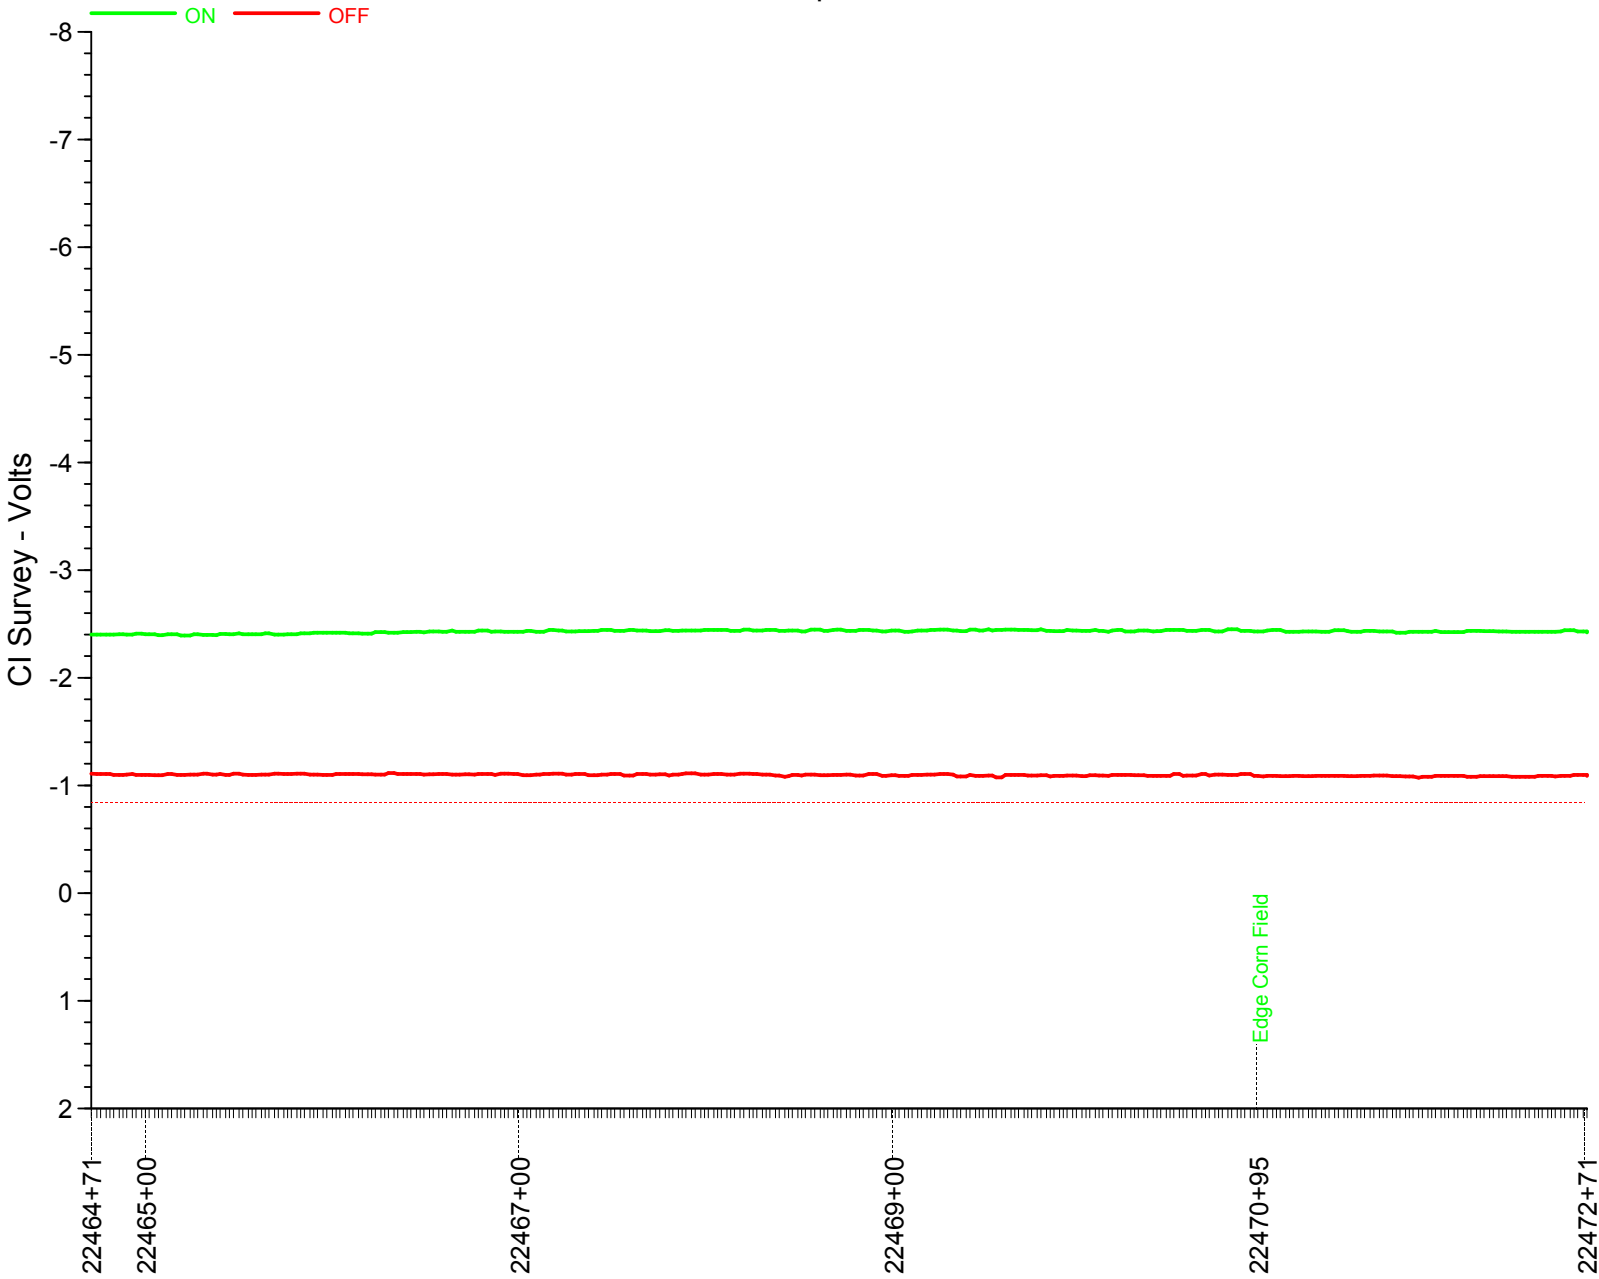

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

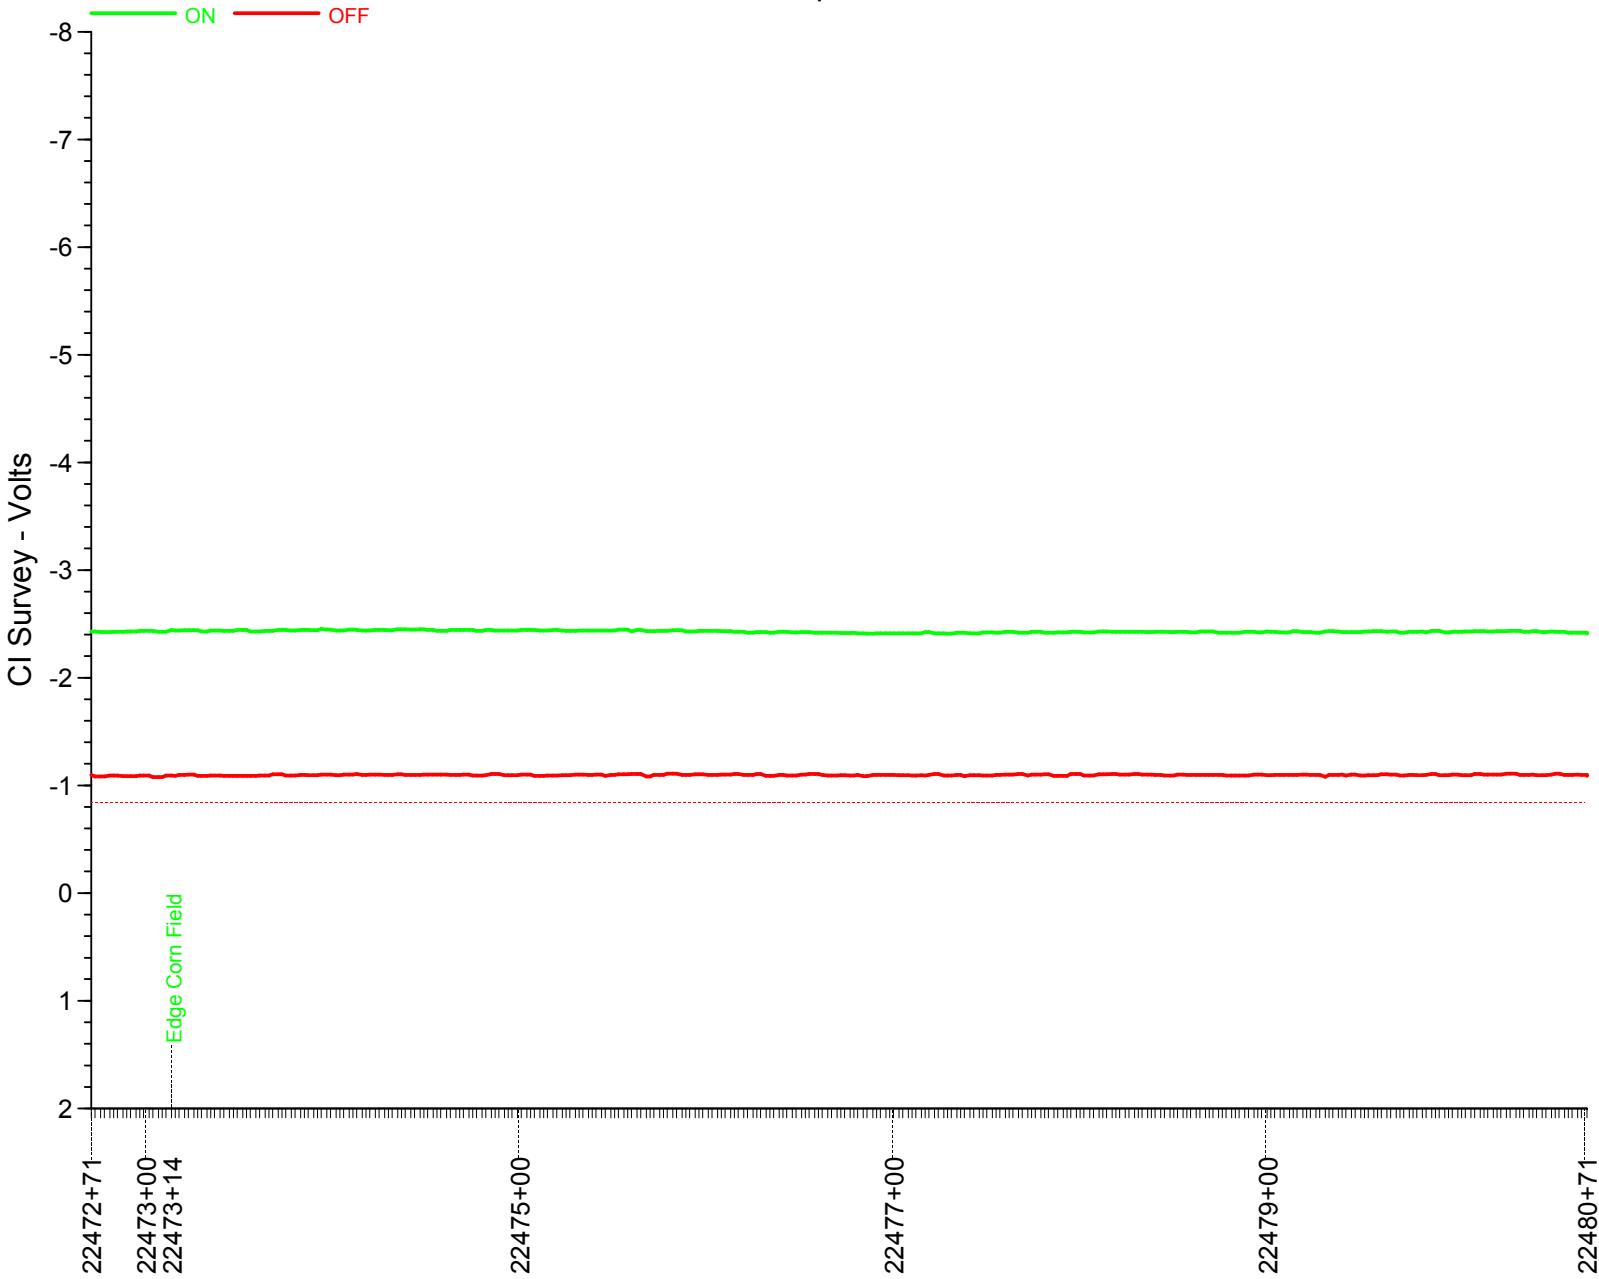

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

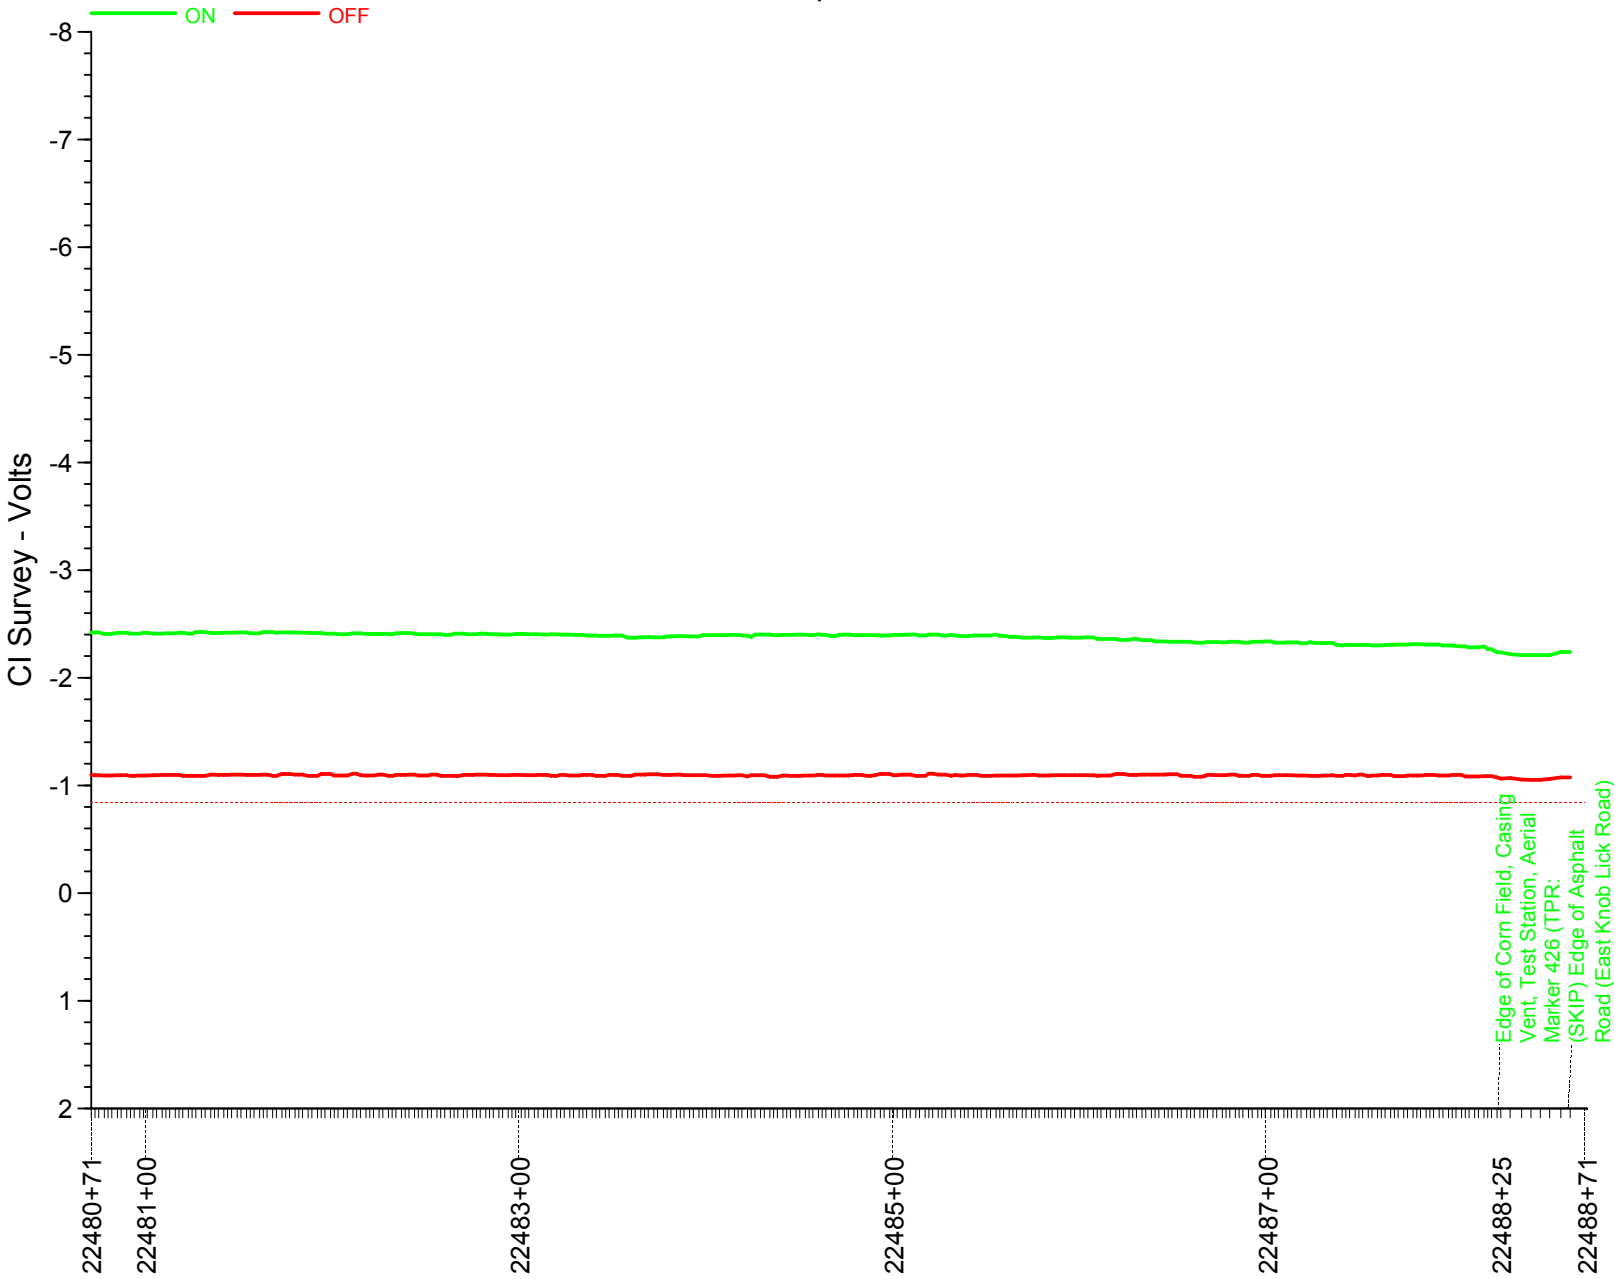

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

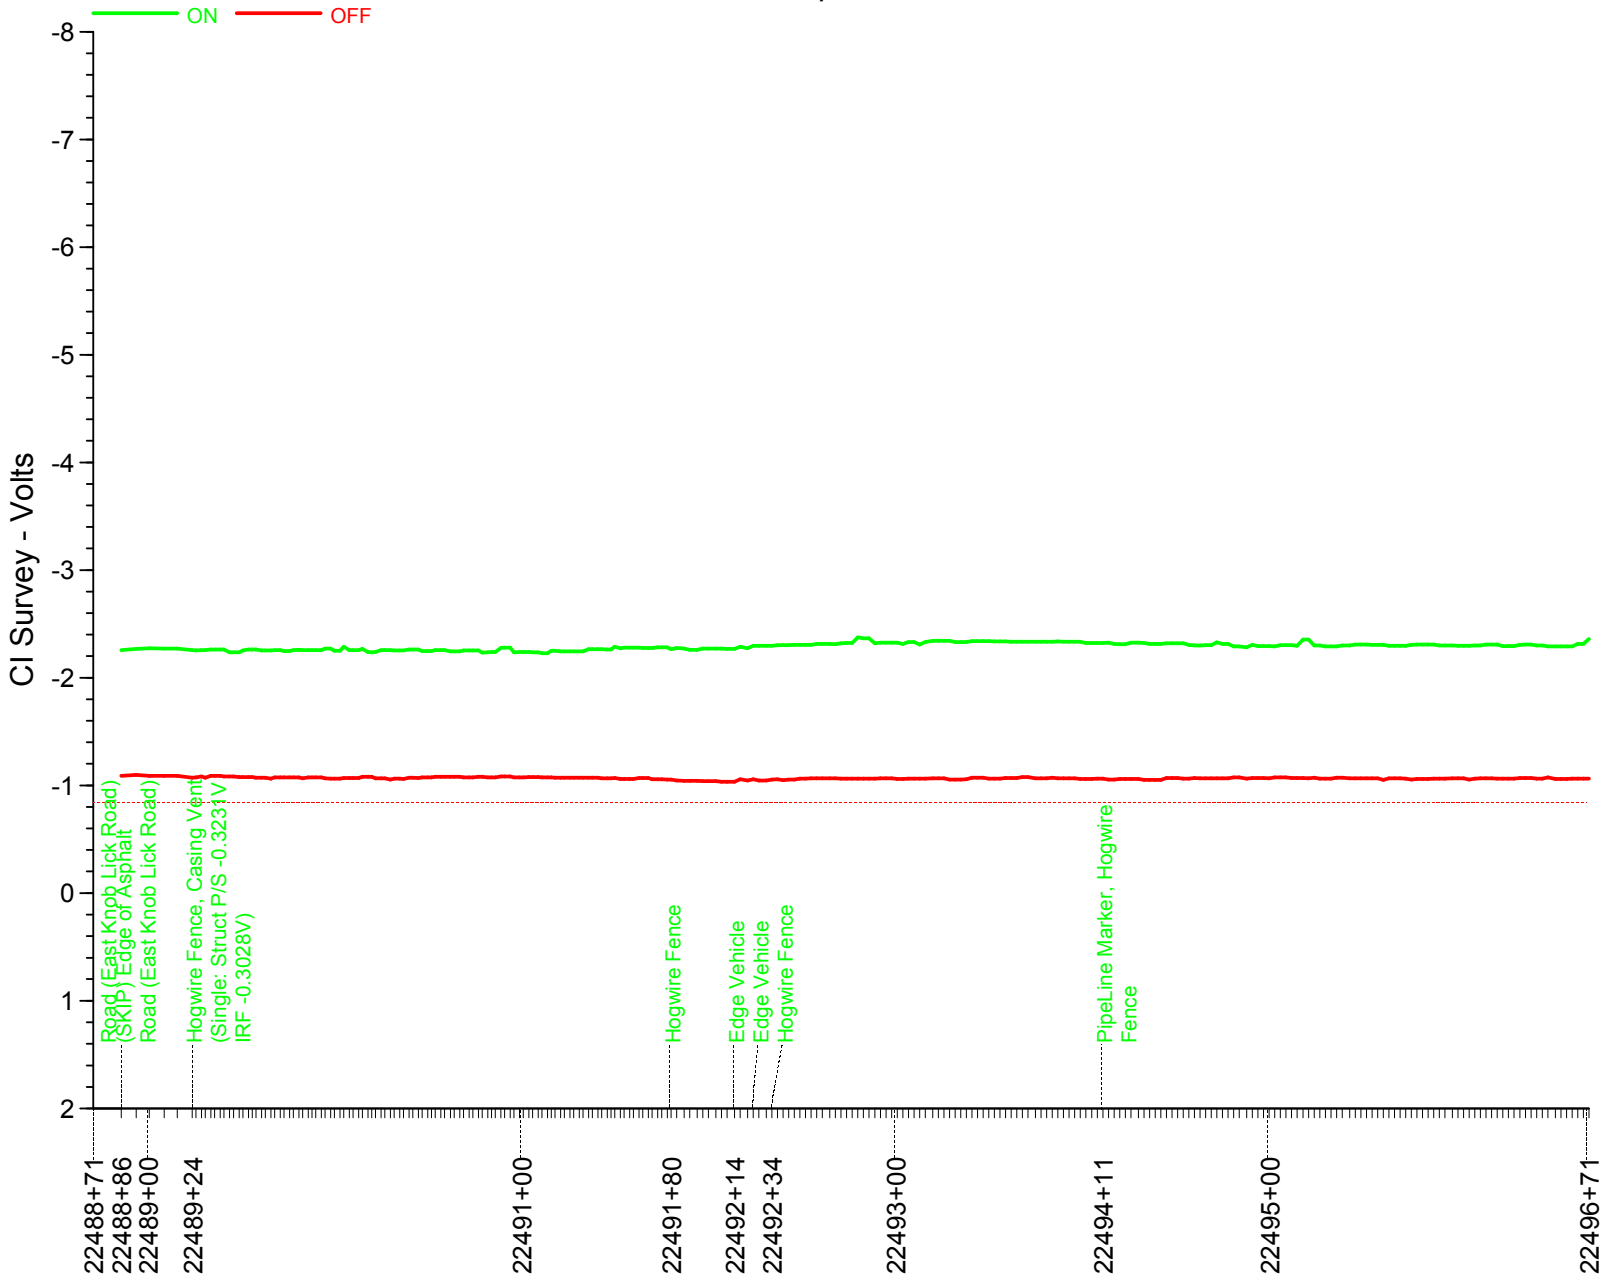


100 Feet/Inch

CP Data Manager 11/28/12 Page 116

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

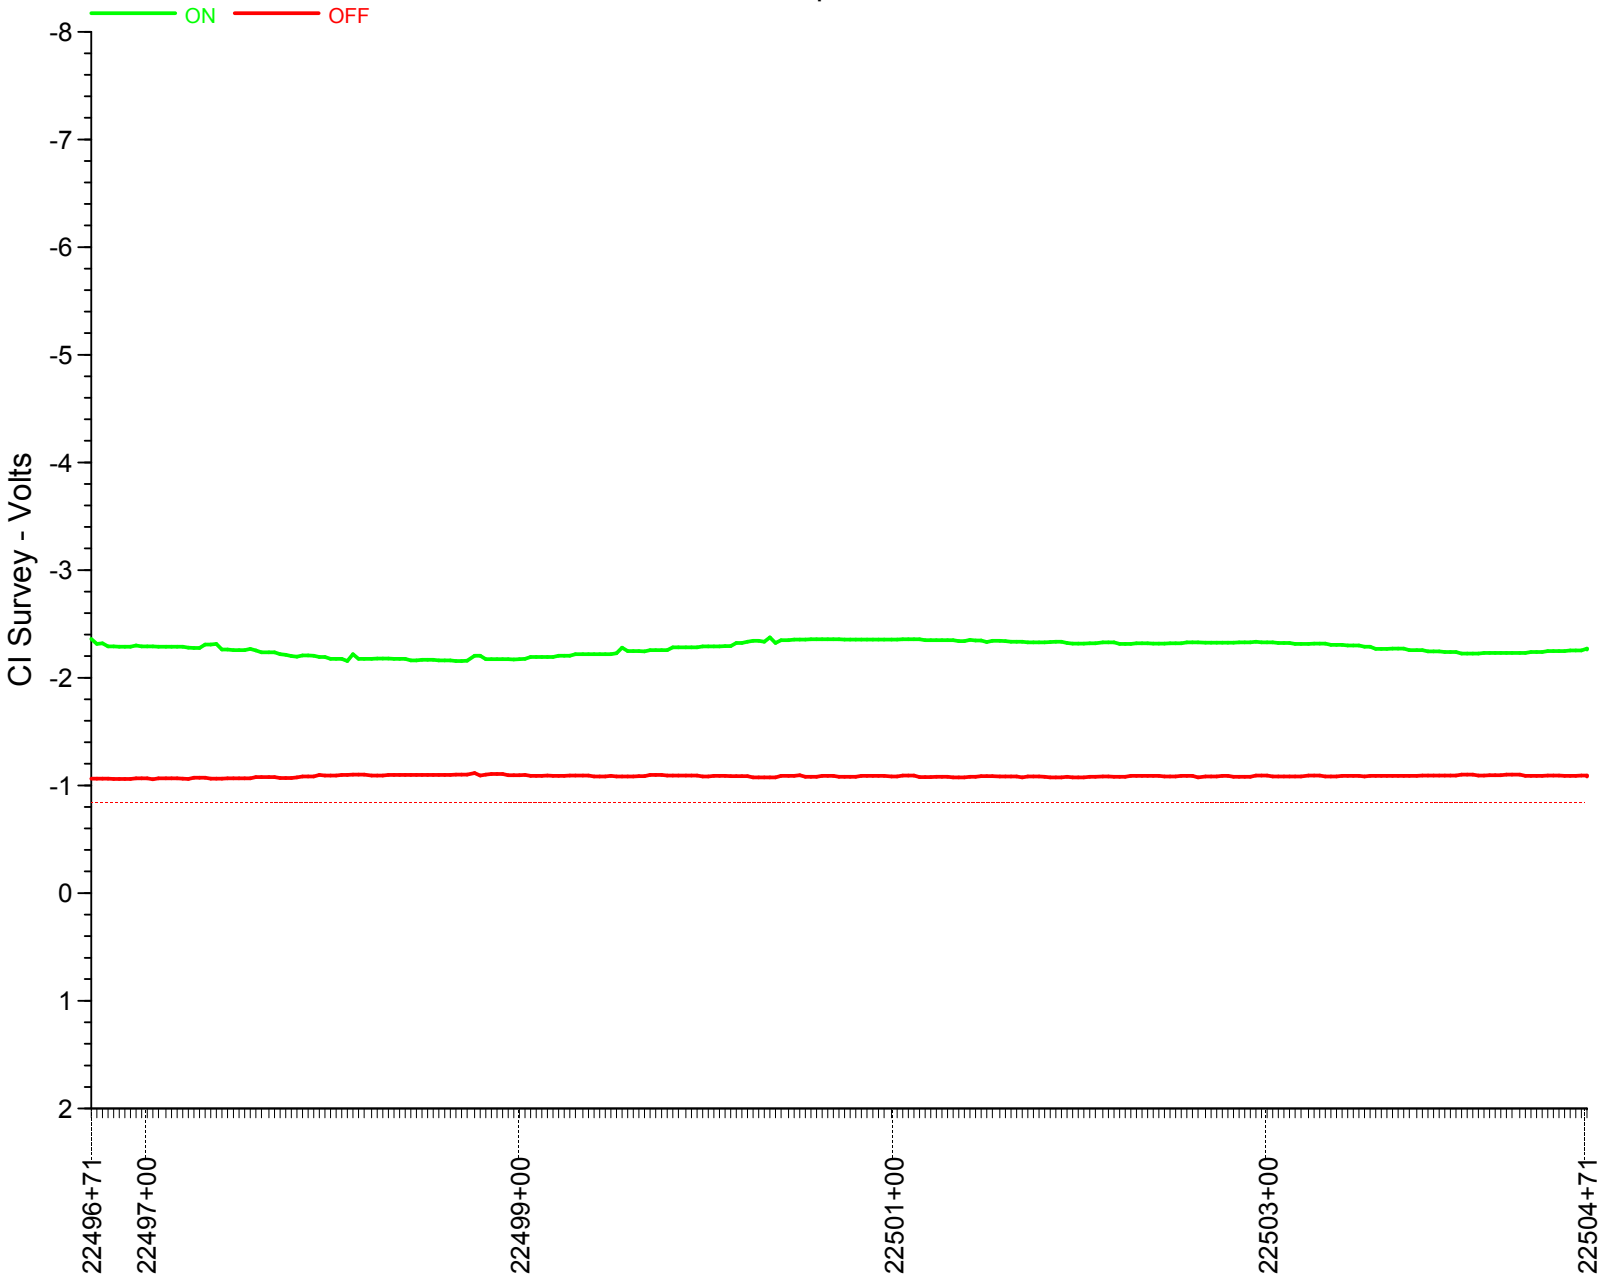

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

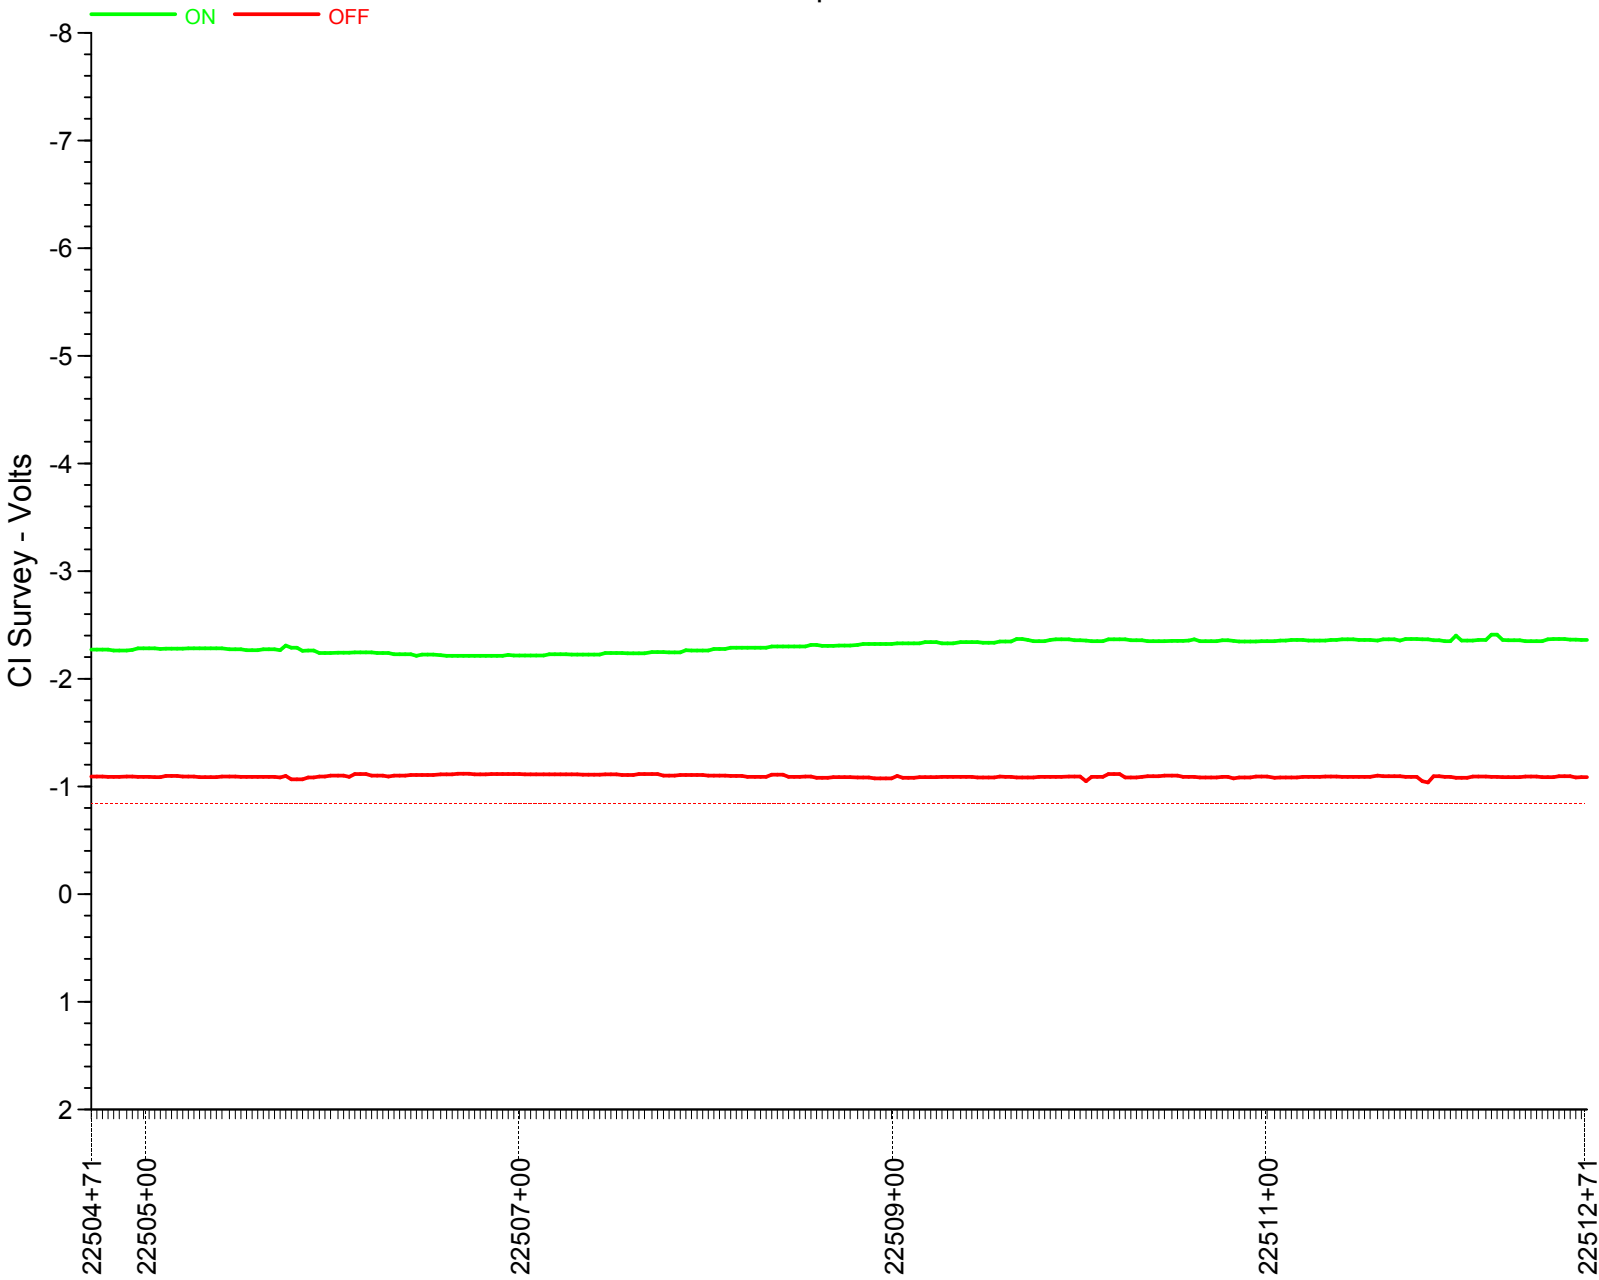

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

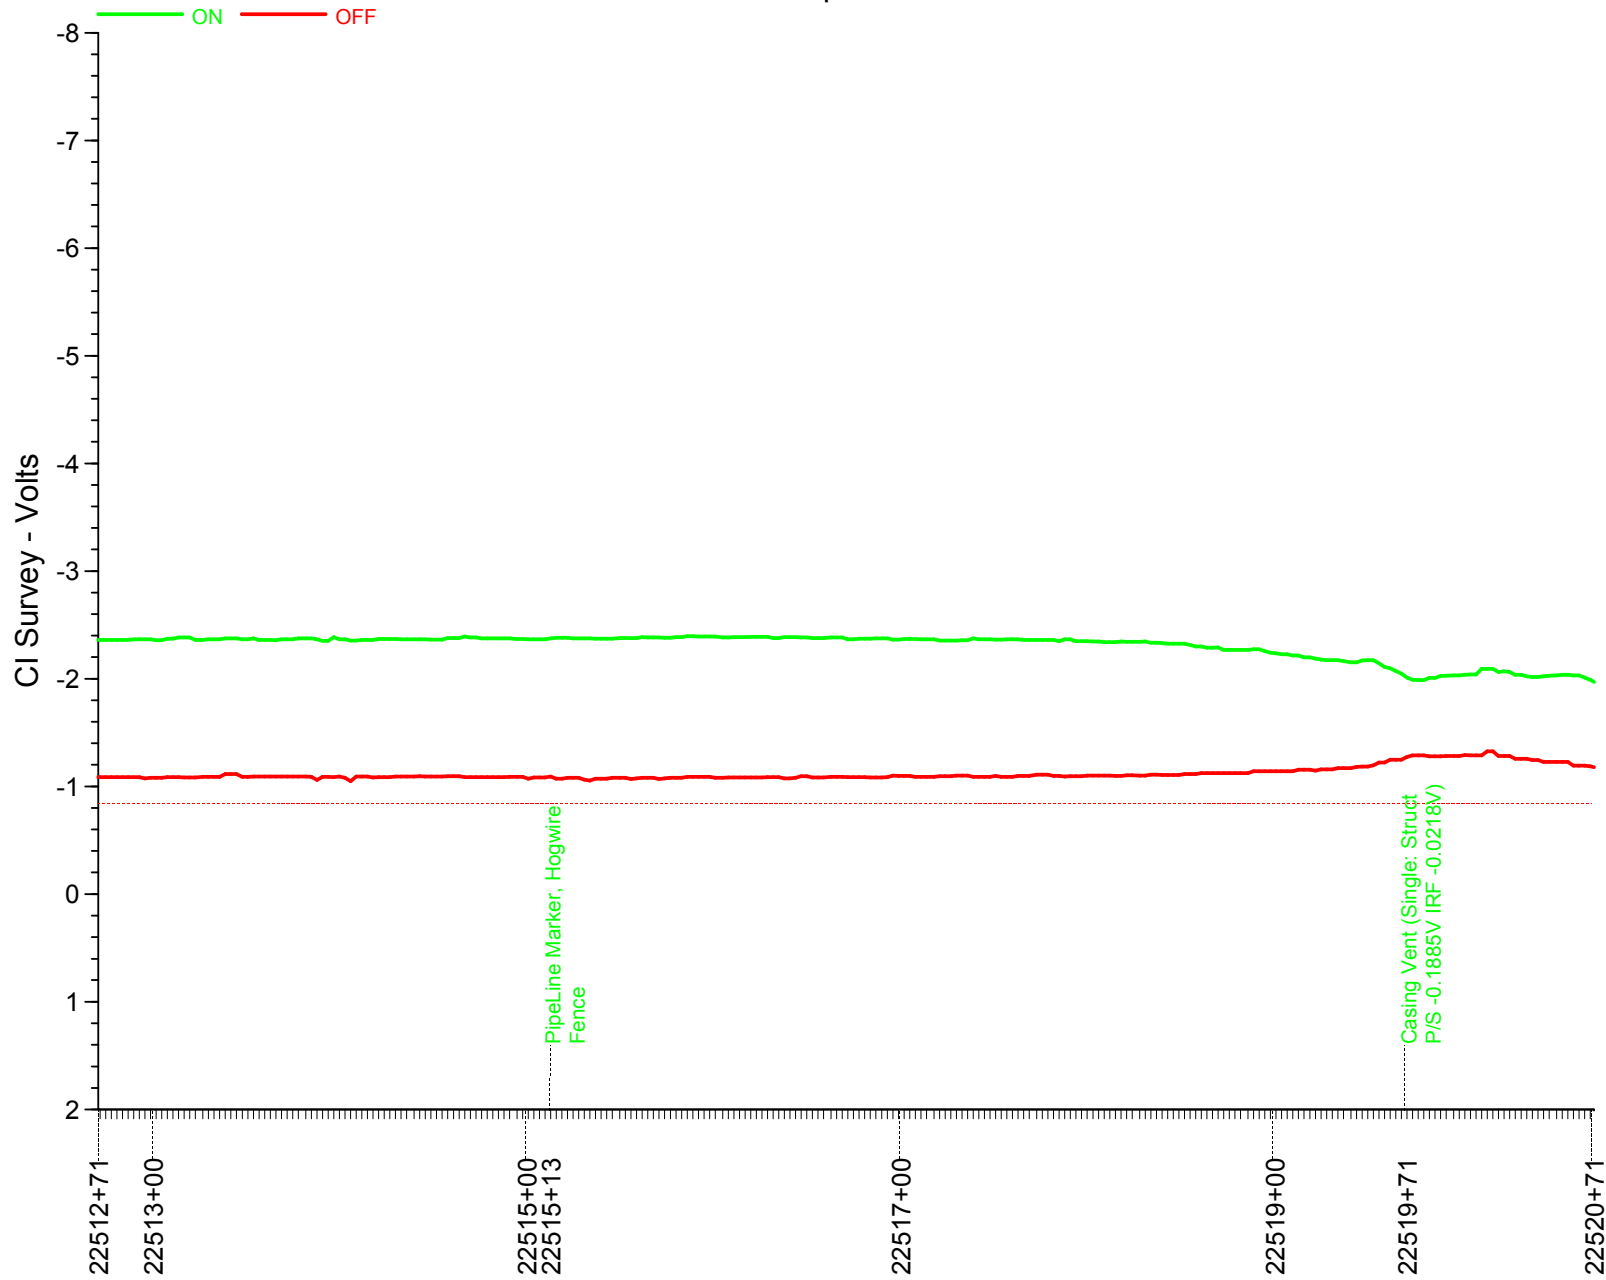


100 Feet/Inch

CP Data Manager 11/28/12 Page 119

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION




Pipe: 1

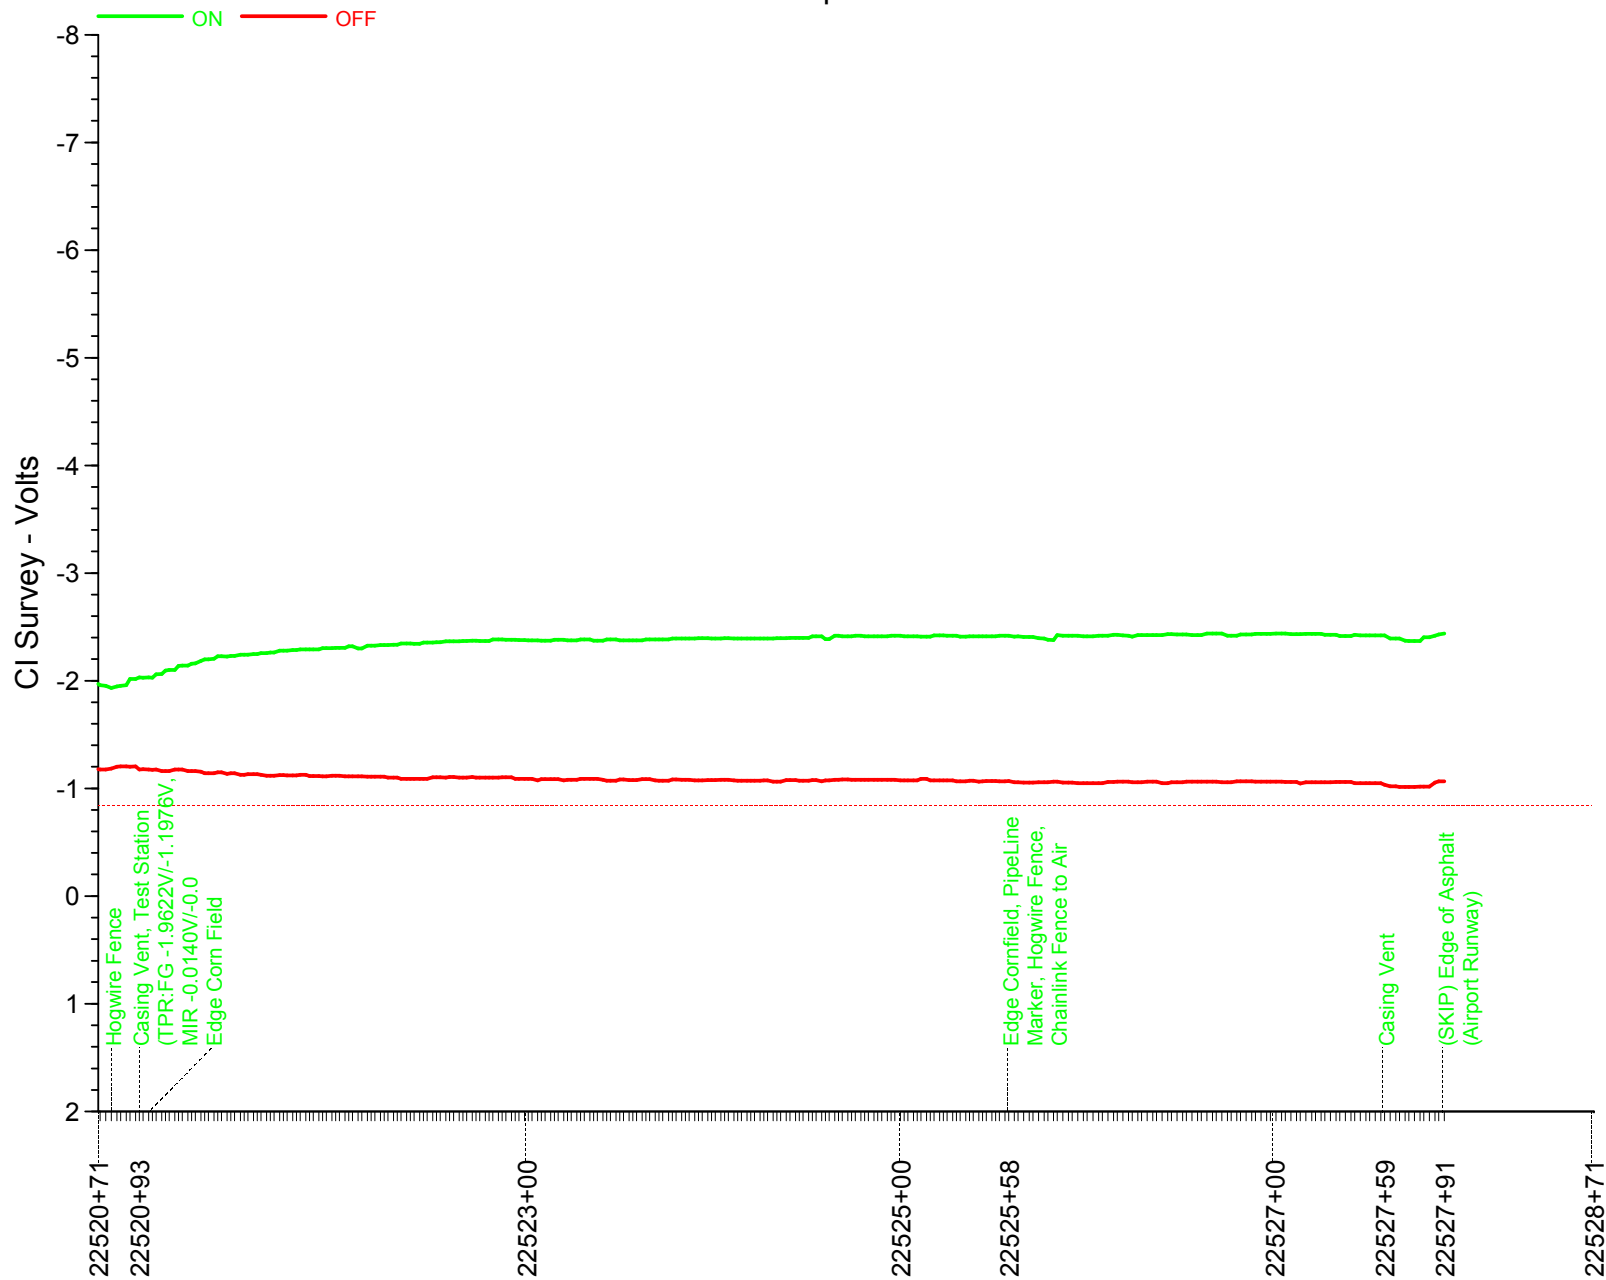

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

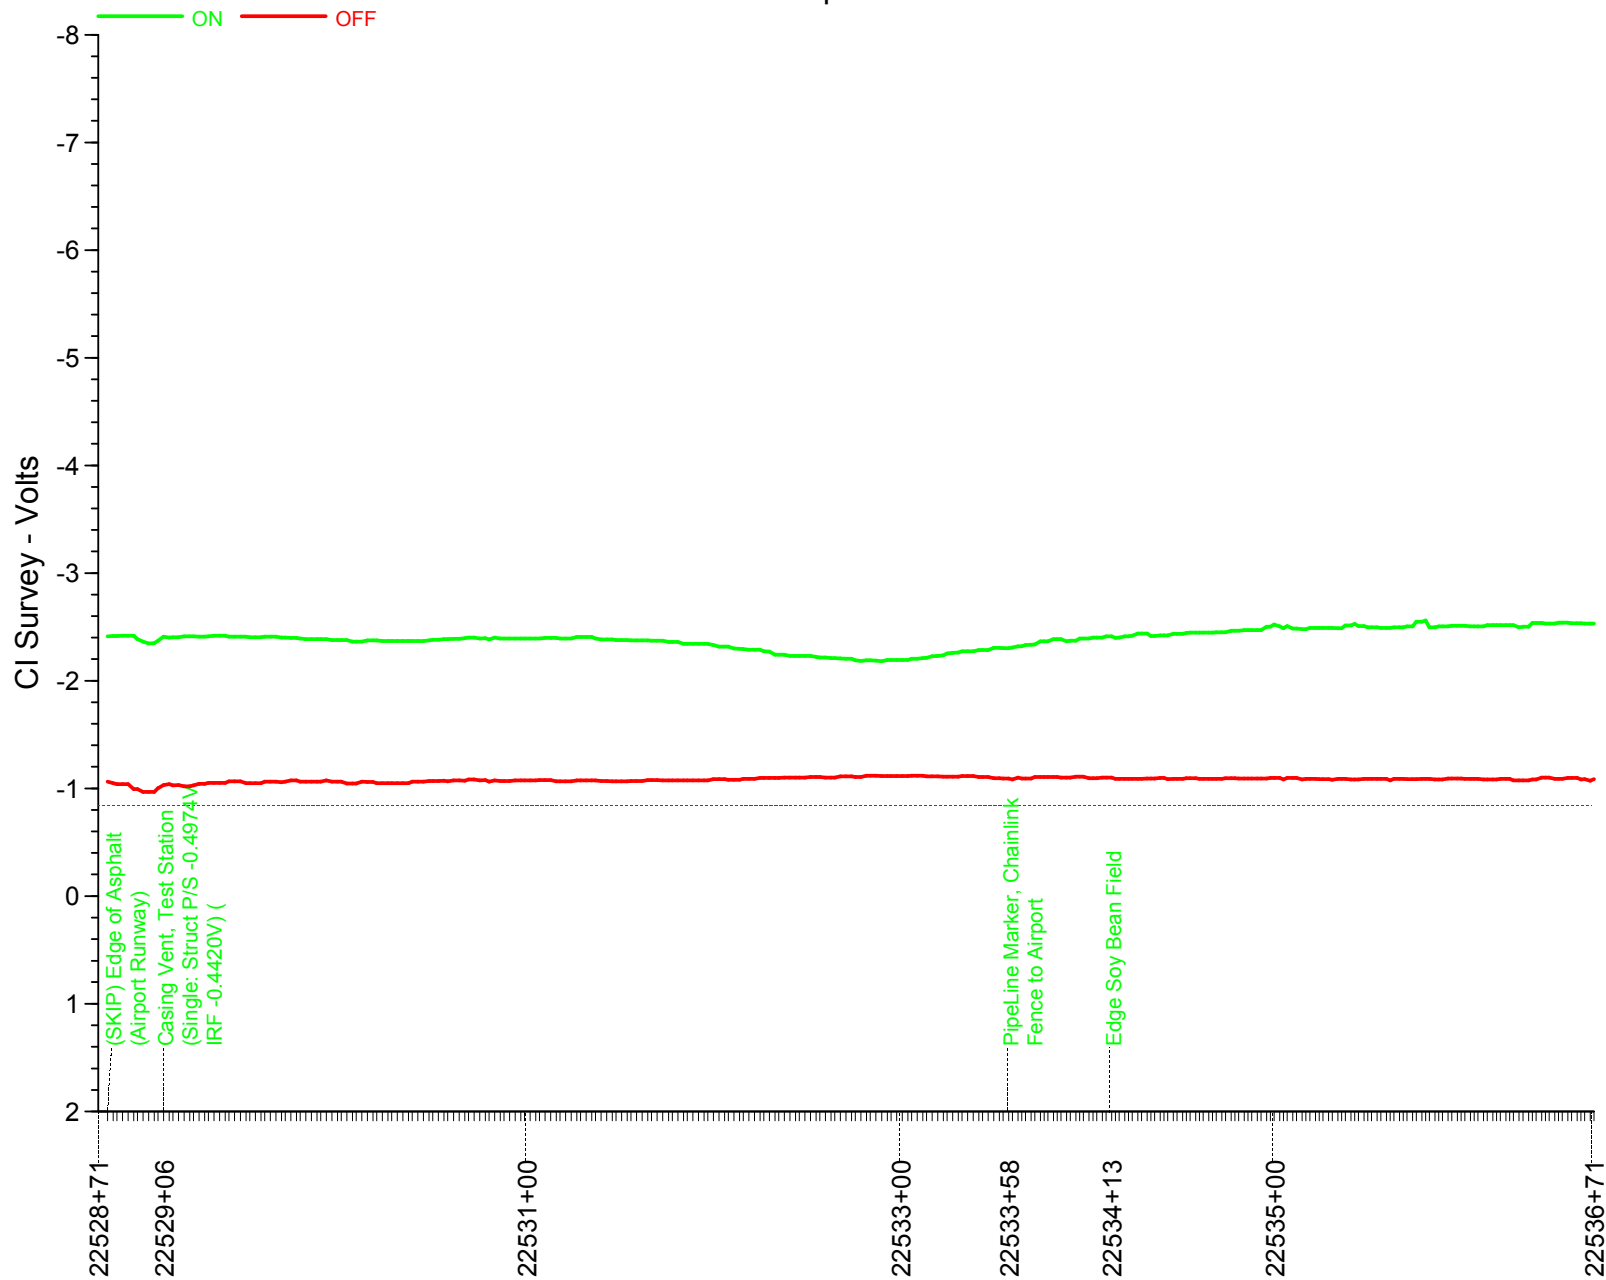


100 Feet/Inch

CP Data Manager 11/28/12 Page 121

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

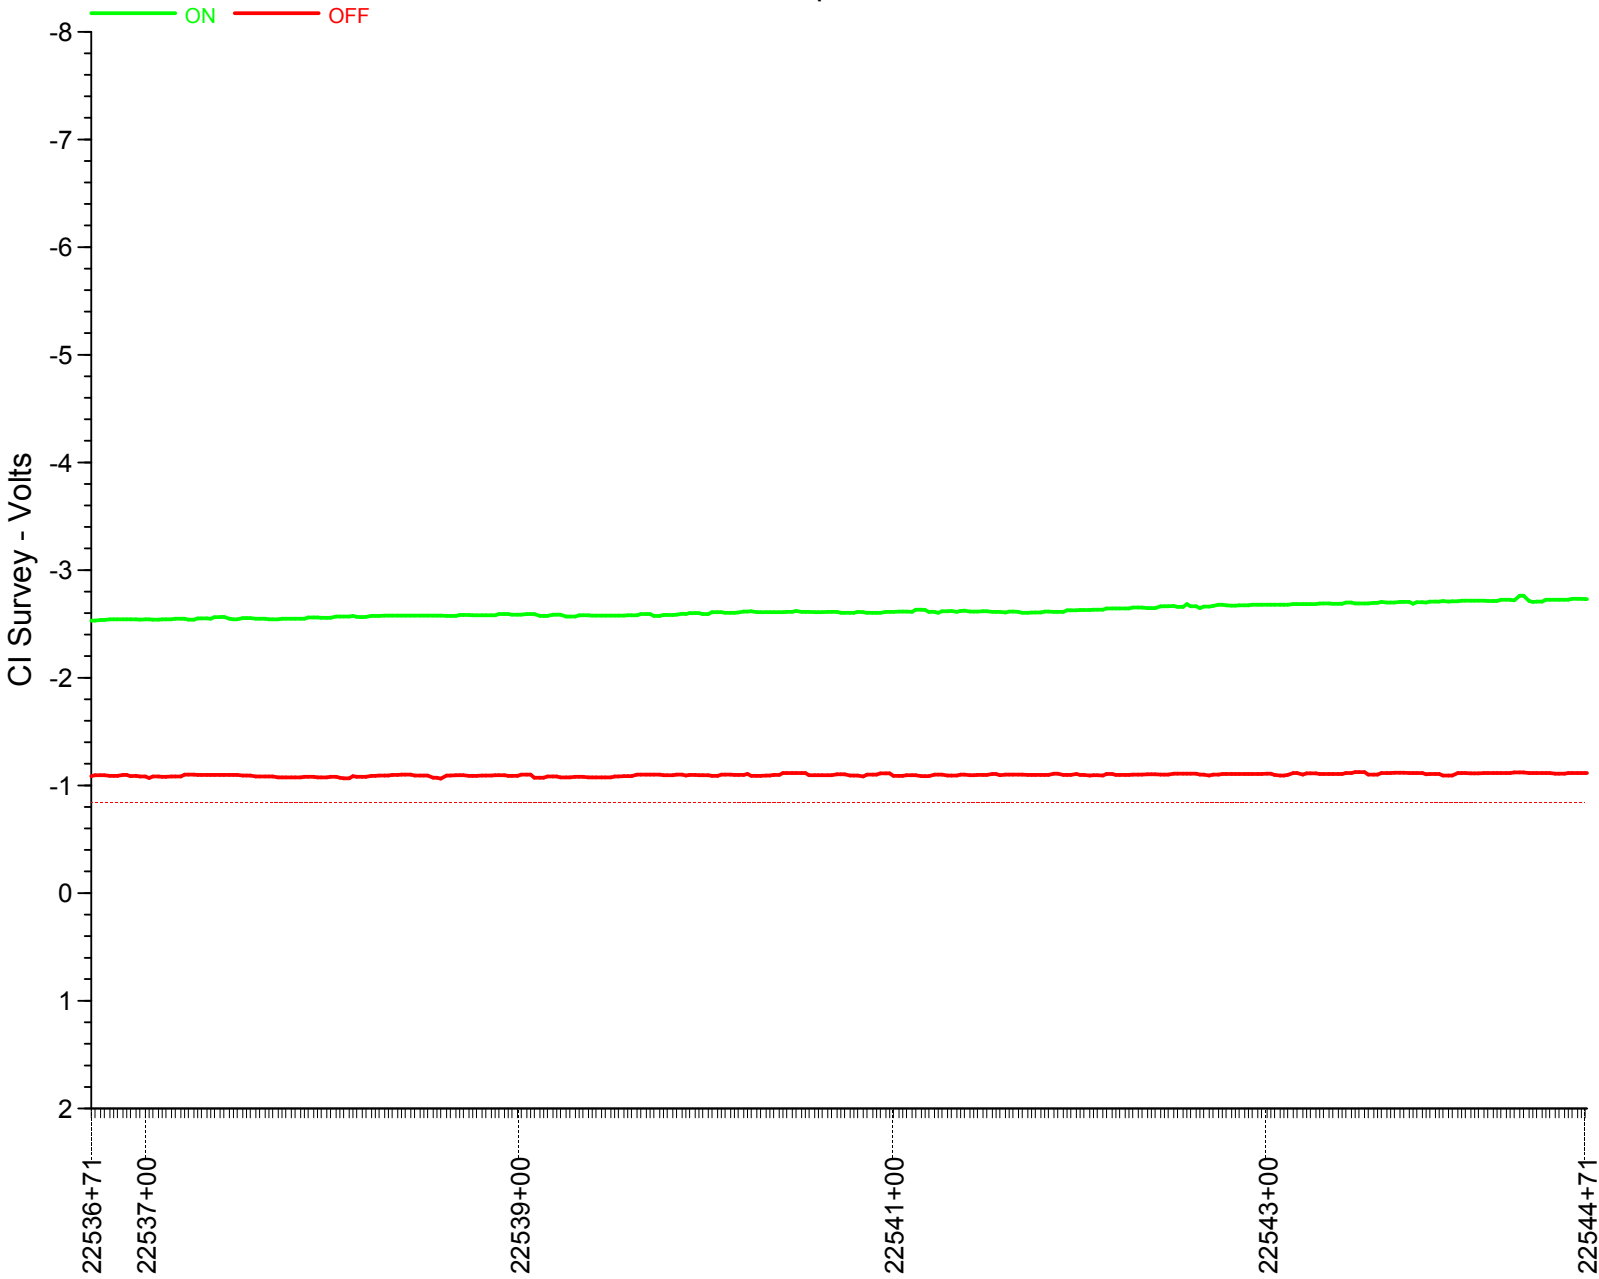

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

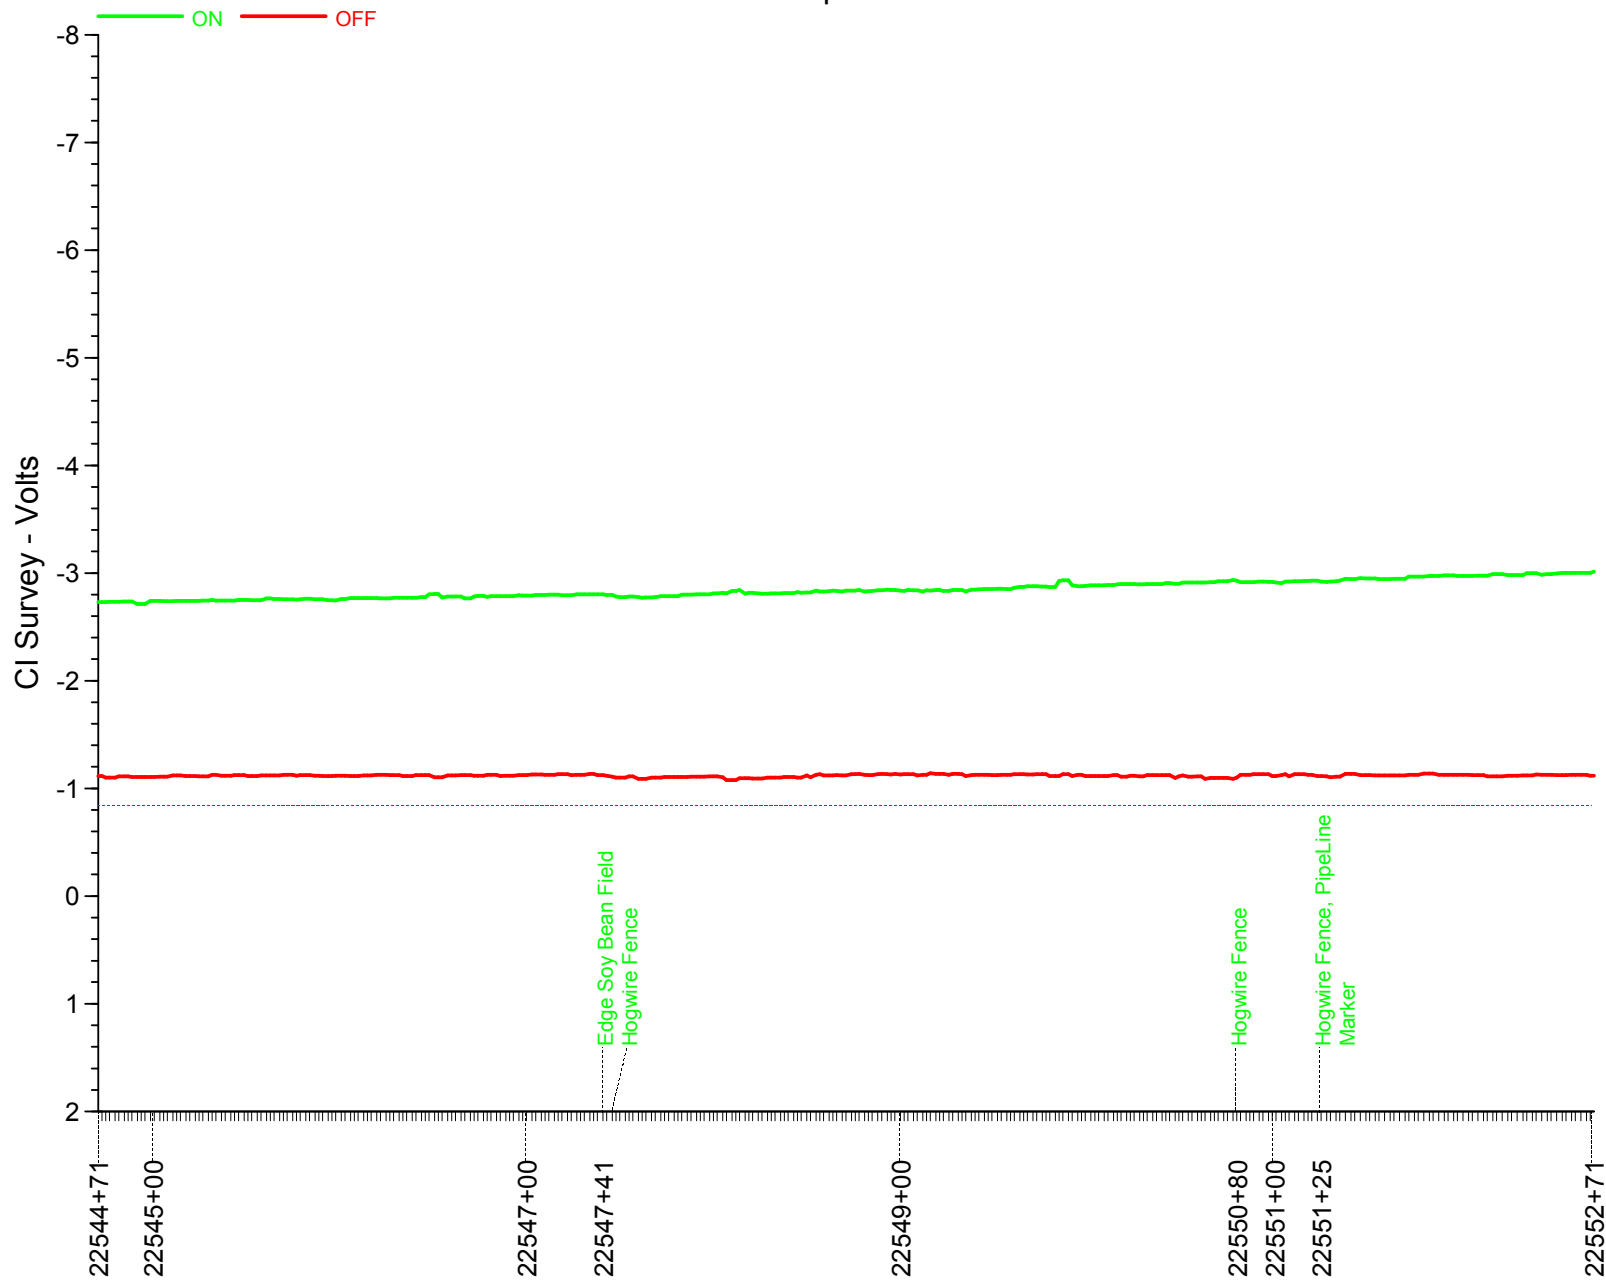

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION


Pipe: 1

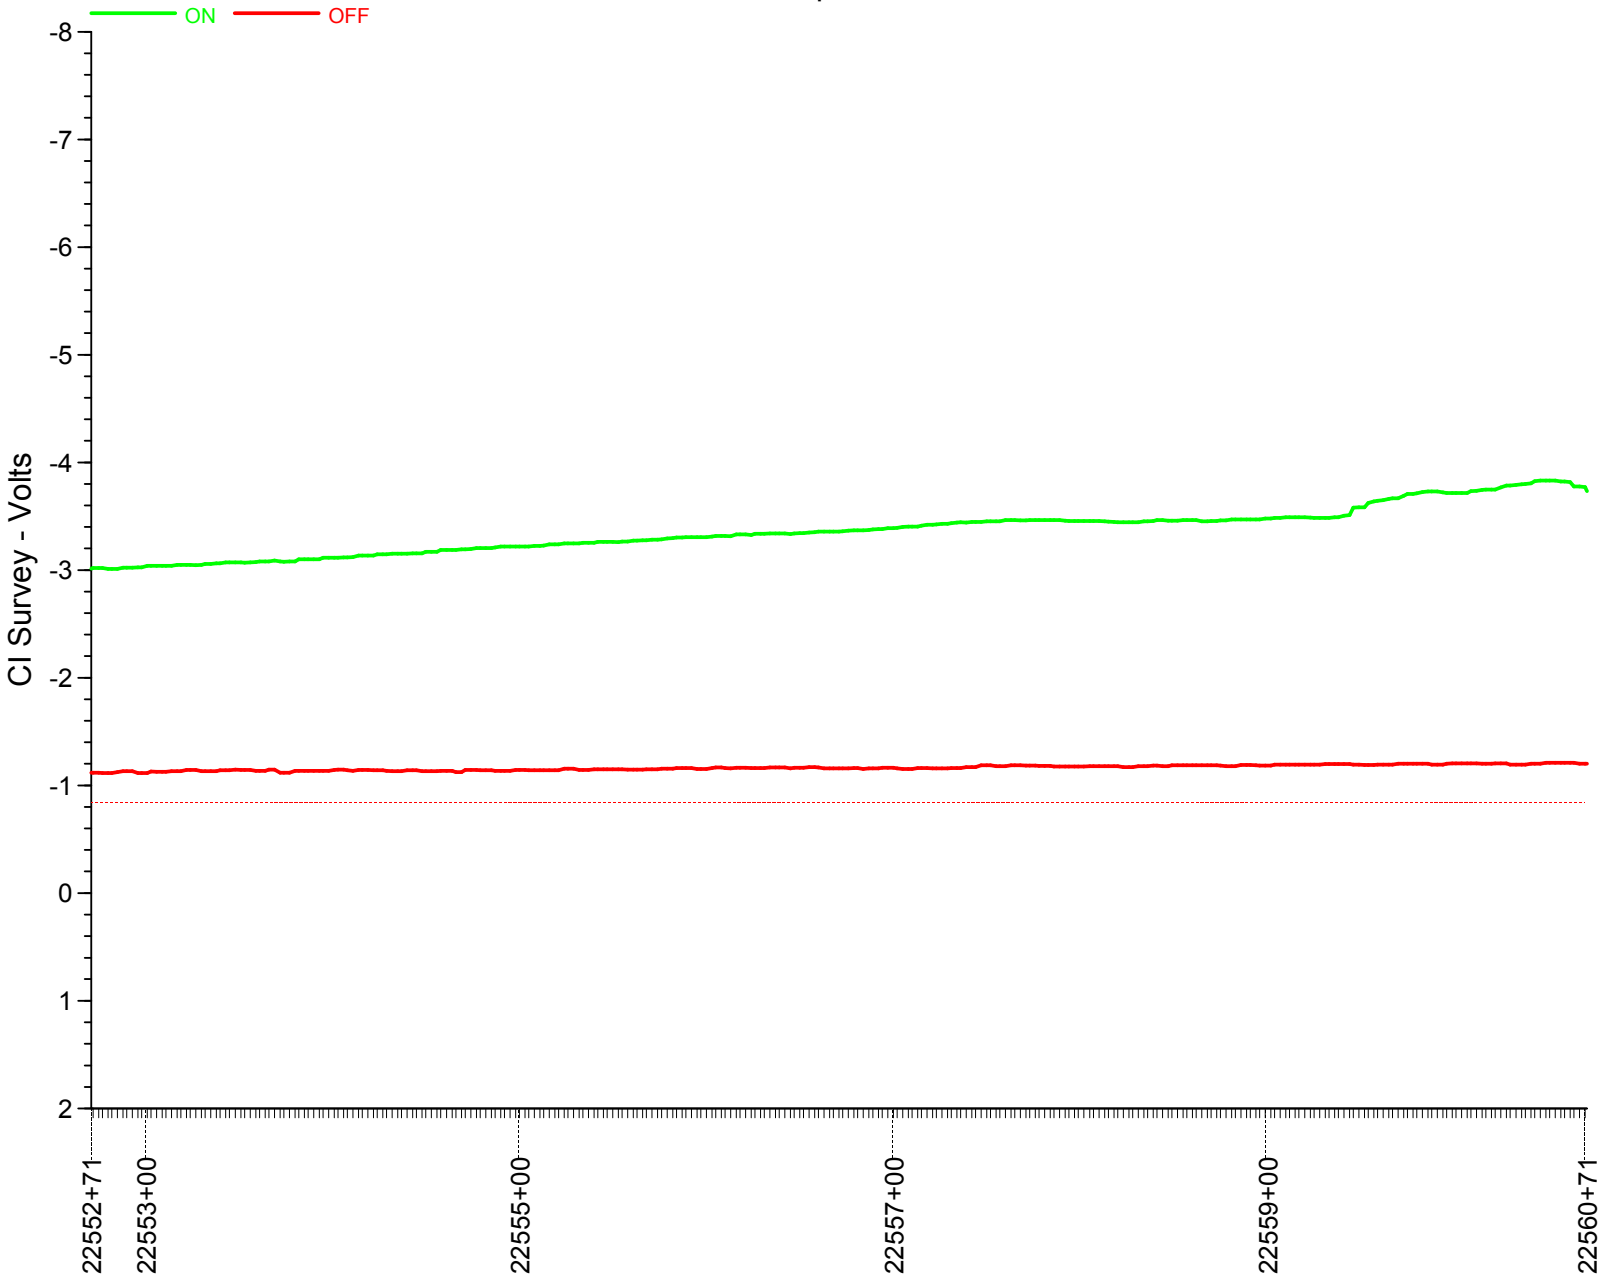

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

Pipe: 1

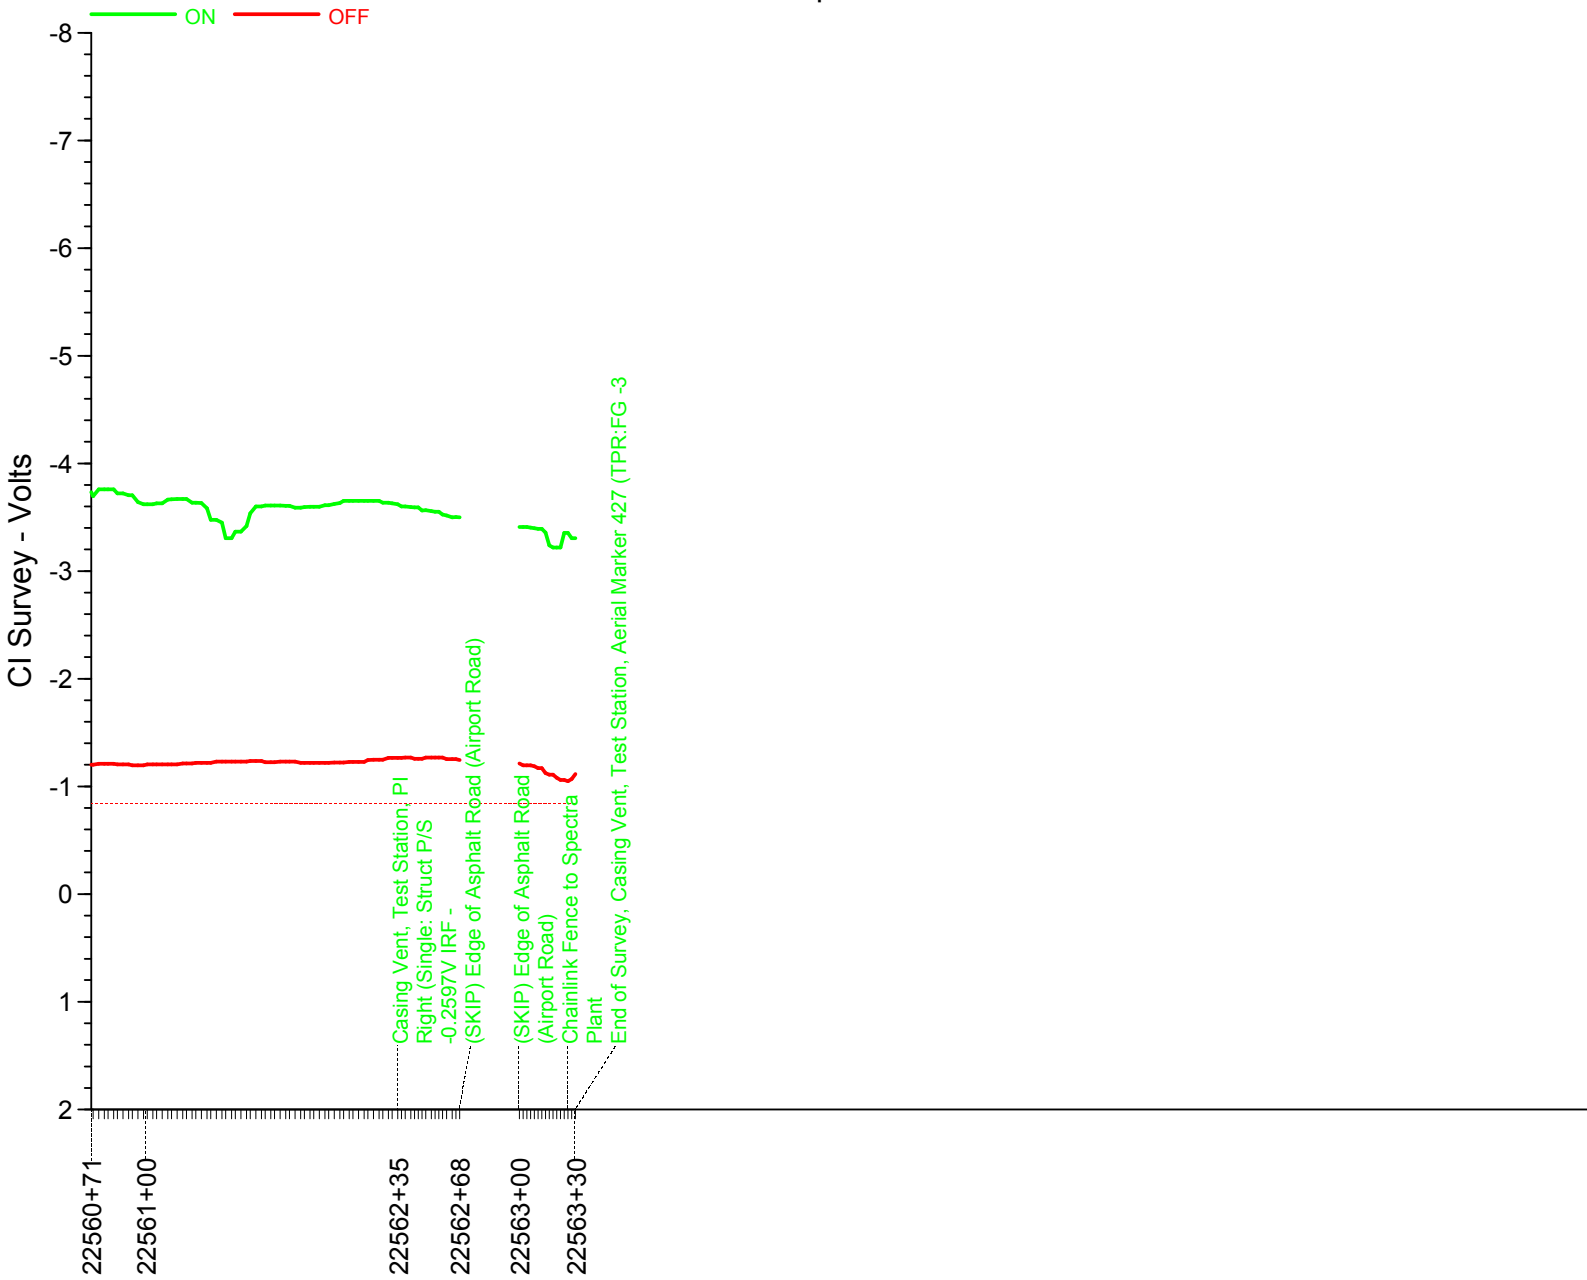

100 Feet/Inch

TEXAS EASTERN TRANSMISSION, L.P.
LINE 15; 30 INCH
TOMPKINSVILLE TO DANVILLE
COMPRESSOR STATION

ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION





ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

21752+66	21757+50
21757+53	21762+49
21762+52	21767+95
21767+98	21773+24
21773+26	21778+52
21778+54	21783+80
21783+83	21789+08
21789+11	21794+36
21794+39	21799+65

ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

21799+67	21804+93
21804+96	21810+21
21810+24	21815+49
21815+52	21820+78
21820+80	21826+06
21826+08	21831+34
21831+37	21836+62
21836+65	21841+91
21841+93	21847+20

ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

21996+14	22001+63
22001+65	22007+14
22007+16	22012+65
22012+68	22018+32
22018+35	22024+33
22024+36	22030+34
22030+37	22035+92
22035+94	22040+86
22040+89	22046+02



ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22046+05	22051+18
22051+21	22056+35
22056+37	22061+51
22061+53	22066+67
22066+69	22071+83
22071+86	22076+99
22077+02	22082+15
22082+18	22087+31
22087+34	22092+48

ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22092+50	22097+59
22097+62	22102+70
22102+73	22108+38
22108+41	22113+89
22113+91	22118+79
22118+82	22123+70
22123+72	22128+69
22128+72	22134+25
22134+28	22139+54

ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22139+57	22144+82
22144+85	22150+11
22150+13	22155+39
22155+42	22160+81
22160+84	22166+29
22166+31	22171+76
22171+78	22177+23
22177+25	22182+70
22182+73	22188+17

ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22188+20	22193+64
22193+67	22199+11
22199+14	22204+58
22204+61	22210+05
22210+08	22215+62
22215+64	22220+80
22220+85	22226+18
22226+20	22231+18
22231+21	22236+69

ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22236+72	22242+36
22242+39	22248+22
22248+25	22254+27
22254+30	22259+96
22259+98	22265+74
22265+76	22271+14
22271+16	22276+16
22276+18	22281+75
22281+78	22287+23

ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22287+26	22292+43
22292+45	22298+00
22298+03	22303+22
22303+25	22308+32
22308+34	22313+58
22313+61	22318+73
22318+76	22324+27
22324+30	22330+26
22330+28	22335+65

ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22335+68	22341+33
22341+36	22347+00
22347+03	22352+68
22352+70	22357+72
22357+74	22362+64
22362+67	22369+02
22369+05	22374+50
22374+53	22379+63
22379+65	22386+70

ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22386+73	22392+19
22392+22	22397+18
22397+21	22401+83
22401+85	22406+48
22406+50	22411+29
22411+32	22417+71
22417+74	22424+24
22424+27	22430+77
22430+80	22436+05



ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22436+07	22440+82
22440+84	22445+96
22445+98	22450+42
22450+44	22454+60
22454+63	22458+90
22458+92	22463+29
22463+32	22468+04
22468+06	22472+78
22472+81	22477+53

ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



ON CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22527+70	22533+89
22533+91	22538+63
22538+66	22543+38
22543+40	22548+12
22548+14	22553+03
22553+06	22558+28
22558+31	22563+30

OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

21568+74	21574+22
21574+24	21579+09
21579+11	21583+95
21583+98	21588+94
21588+97	21594+06
21594+08	21599+06
21599+08	21604+06
21604+08	21609+06
21609+08	21614+12


OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

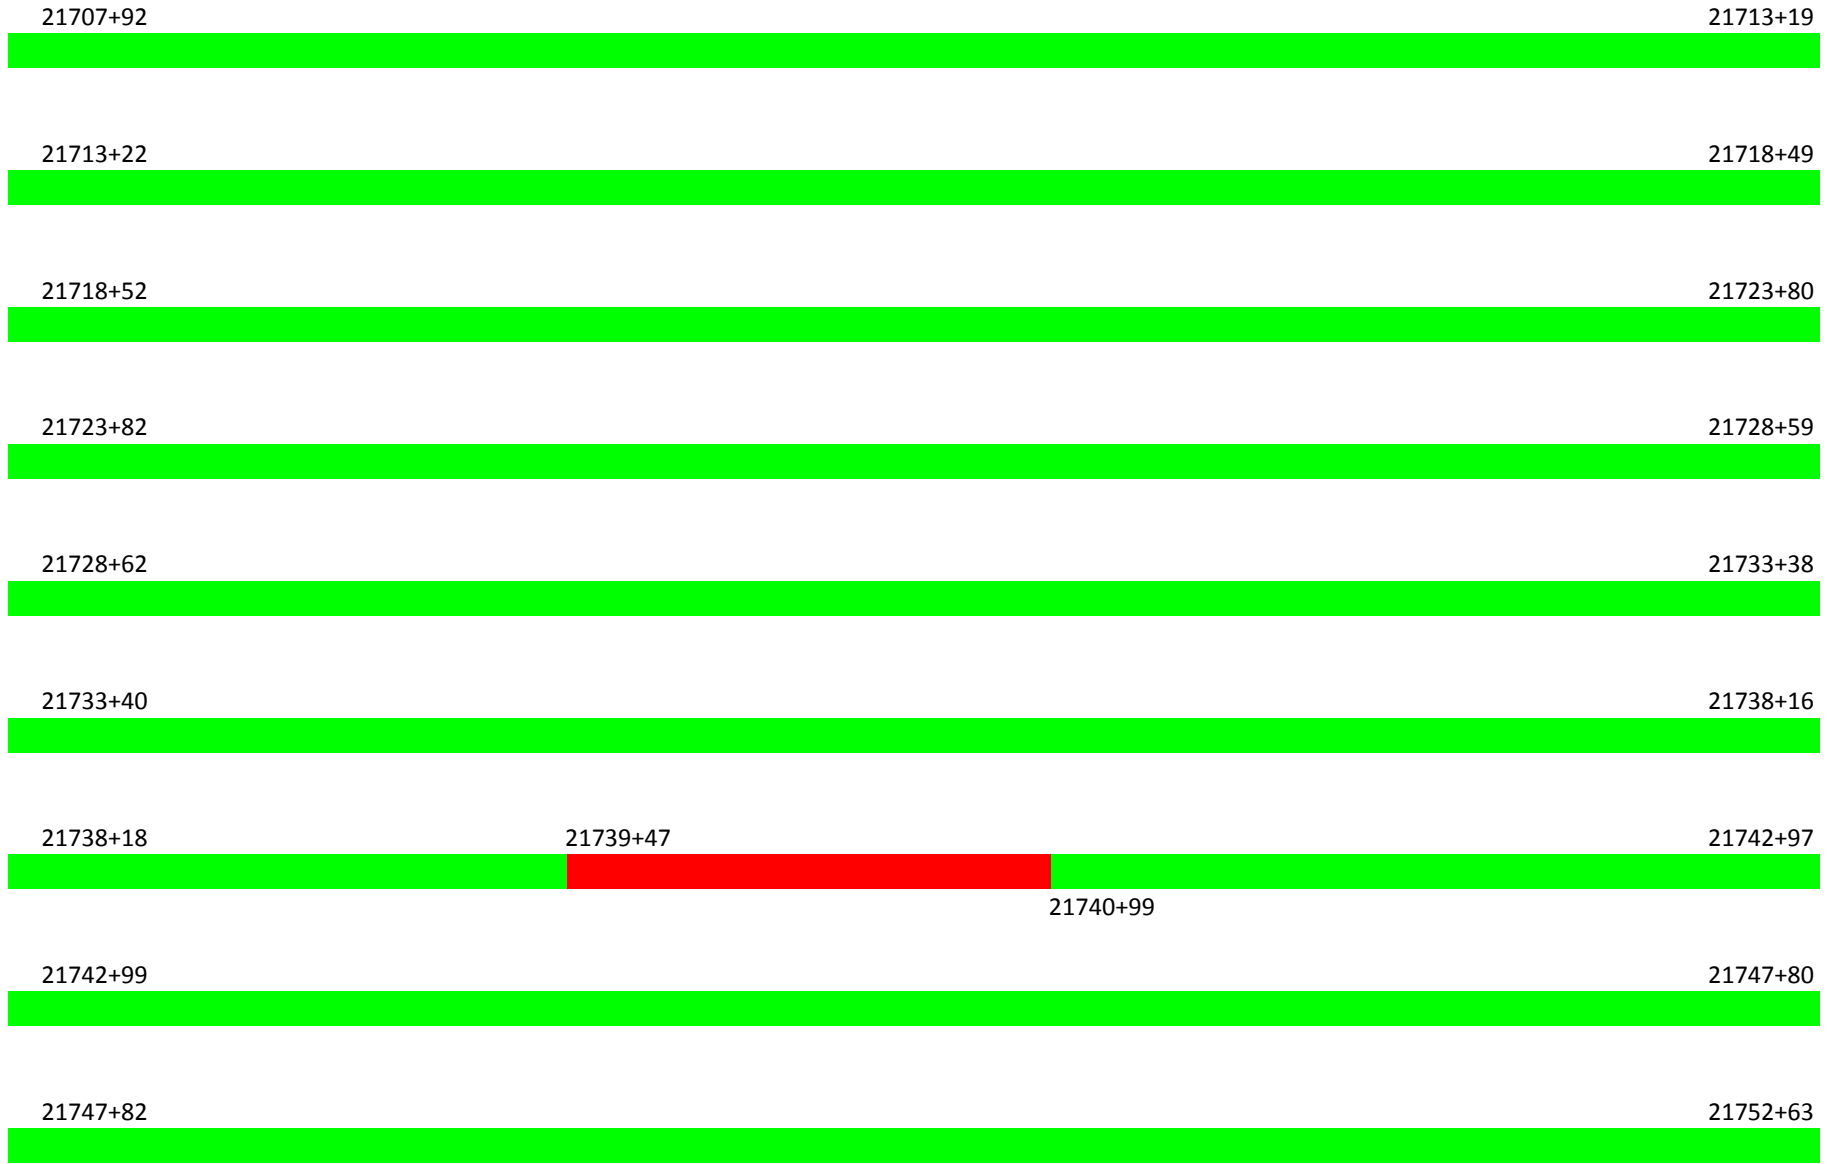

OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION





OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

21799+67	21804+93
21804+96	21810+21
21810+24	21815+49
21815+52	21820+78
21820+80	21826+06
21826+08	21831+34
21831+37	21836+62
21836+65	21841+91
21841+93	21847+20

OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

21894+76	21900+90
21900+93	21906+77
21906+80	21912+65
21912+68	21918+52
21918+55	21924+39
21924+42	21929+98
21930+01	21935+49
21935+52	21941+01
21941+03	21946+52

OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

21996+14	22001+63
22001+65	22007+14
22007+16	22012+65
22012+68	22018+32
22018+35	22024+33
22024+36	22030+34
22030+37	22035+92
22035+94	22040+86
22040+89	22046+02

OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22046+05	22051+18
22051+21	22056+35
22056+37	22061+51
22061+53	22066+67
22066+69	22071+83
22071+86	22076+99
22077+02	22082+15
22082+18	22087+31
22087+34	22092+48

OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22092+50	22097+59
22097+62	22102+70
22102+73	22108+38
22108+41	22113+89
22113+91	22118+79
22118+82	22123+70
22123+72	22128+69
22128+72	22134+25
22134+28	22139+54

OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22139+57

22144+82



22144+85

22150+11



22150+13

22155+39



22155+42

22160+81



22160+84

22166+29



22166+31

22171+76



22171+78

22177+23



22177+25

22182+70




22182+73

22188+17






OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

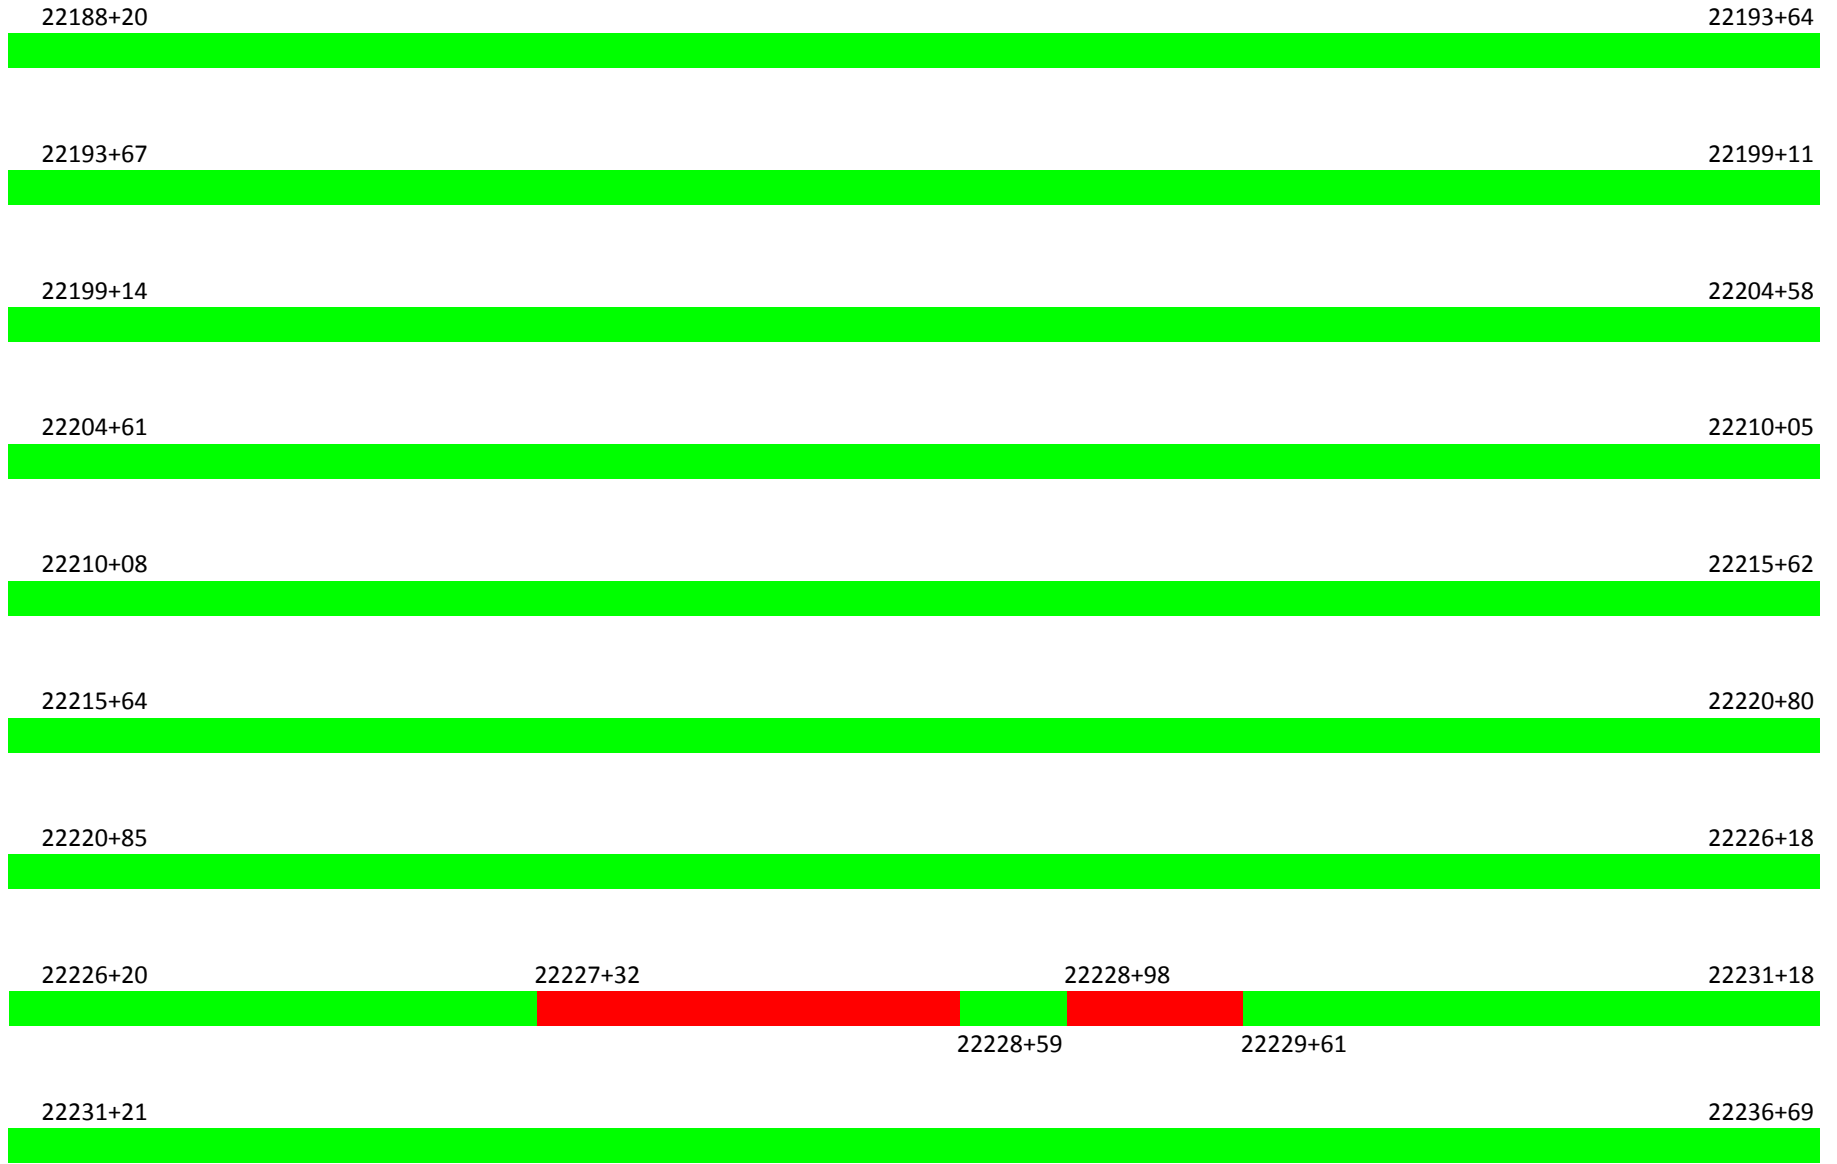

**OFF CLOSE INTERVAL SURVEY OVERVIEW  
 TEXAS EASTERN TRANSMISSION, L.P.  
 LINE 15; 30 INCH  
 TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION**

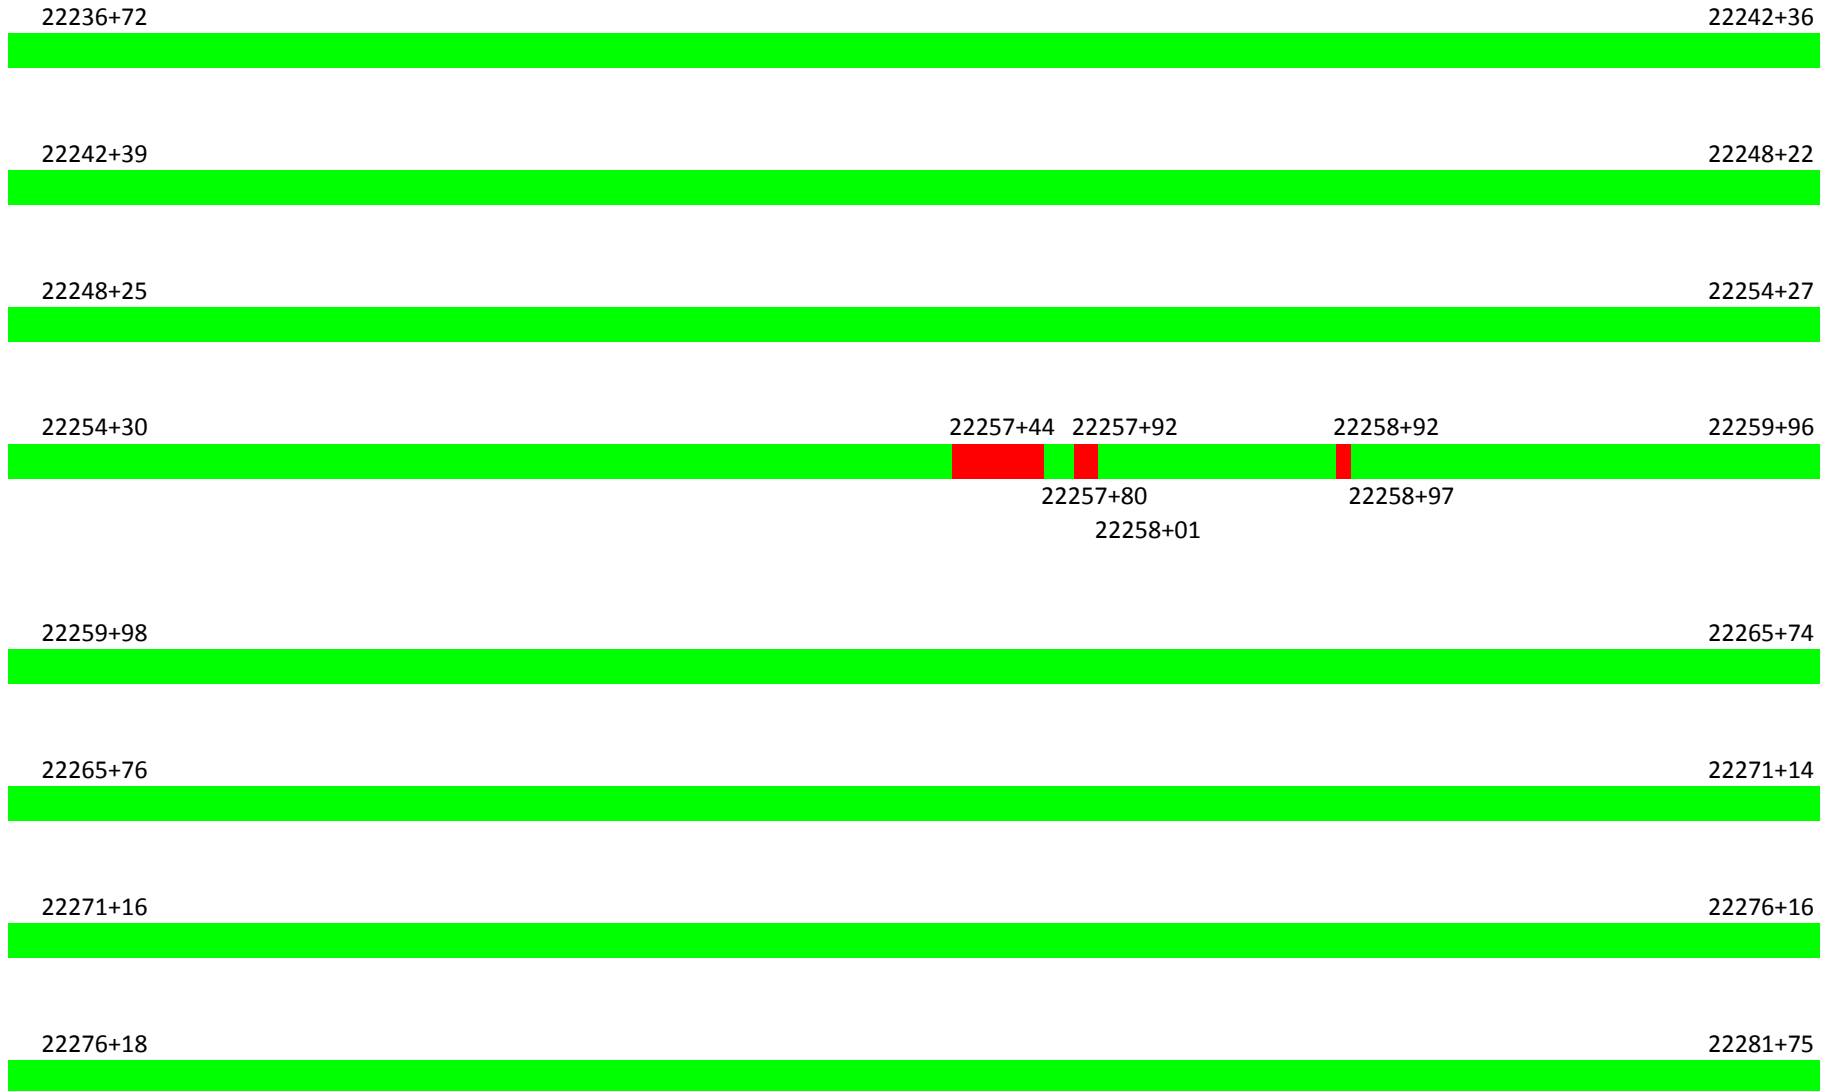

OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22281+78	22287+23
22287+26	22292+43
22292+45	22298+00
22298+03	22303+22
22303+25	22308+32
22308+34	22313+58
22313+61	22318+73
22318+76	22324+27
22324+30	22330+26

OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22379+65	22386+70
22386+73	22392+19
22392+22	22397+18
22397+21	22401+83
22401+85	22406+48
22406+50	22411+29
22411+32	22417+71
22417+74	22424+24
22424+27	22430+77

OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22430+80	22436+05
22436+07	22440+82
22440+84	22445+96
22445+98	22450+42
22450+44	22454+60
22454+63	22458+90
22458+92	22463+29
22463+32	22468+04
22468+06	22472+78

OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

22472+81	22477+53
22477+55	22482+27
22482+30	22487+02
22487+04	22492+80
22492+83	22498+91
22498+94	22505+02
22505+05	22511+13
22511+16	22517+24
22517+27	22522+75

OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION






**OFF CLOSE INTERVAL SURVEY OVERVIEW  
 TEXAS EASTERN TRANSMISSION, L.P.  
 LINE 15; 30 INCH  
 TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION**



OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

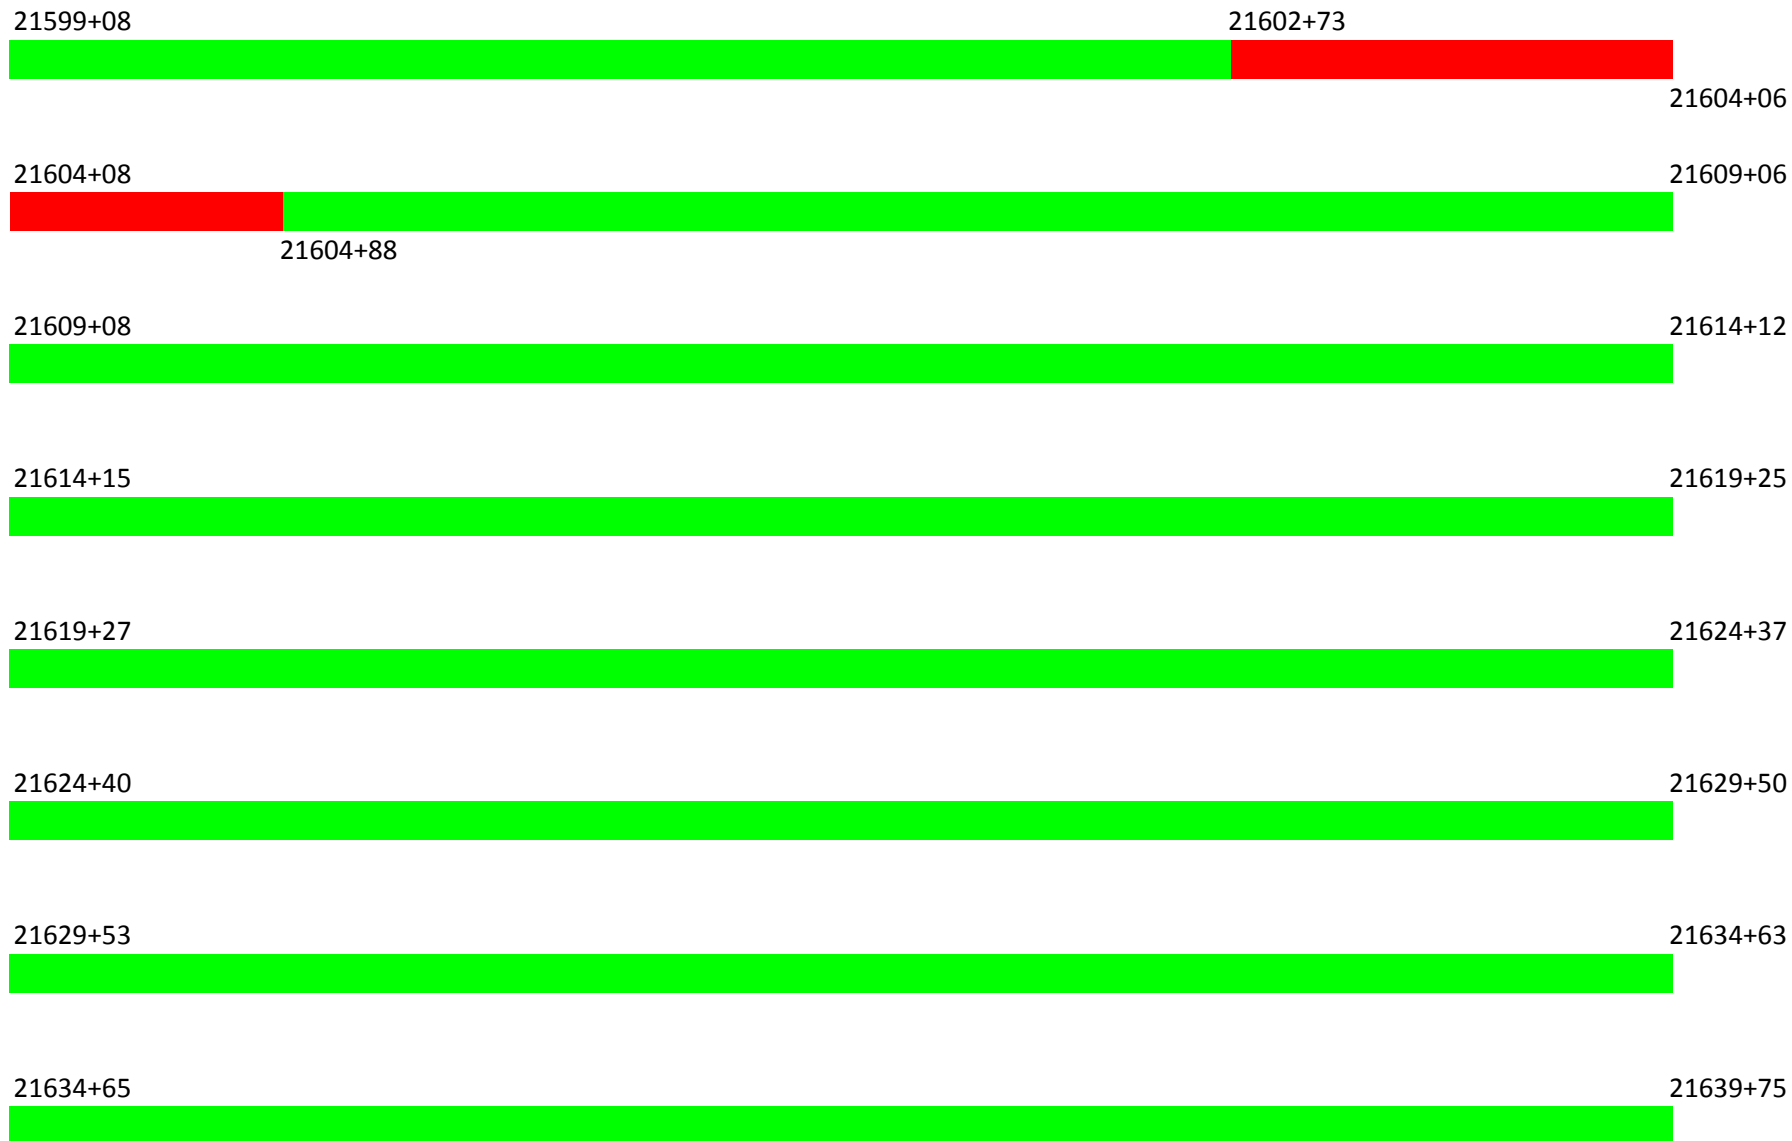

OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

21723+82 21728+59  


21728+62 21733+38  


21733+40 21738+16  


21738+18 21742+97  



21742+99 21747+80  


21747+82 21752+63  


21752+66 21757+50  


21757+53 21762+49  


**OFF CLOSE INTERVAL SURVEY OVERVIEW  
 TEXAS EASTERN TRANSMISSION, L.P.  
 LINE 15; 30 INCH  
 TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION**

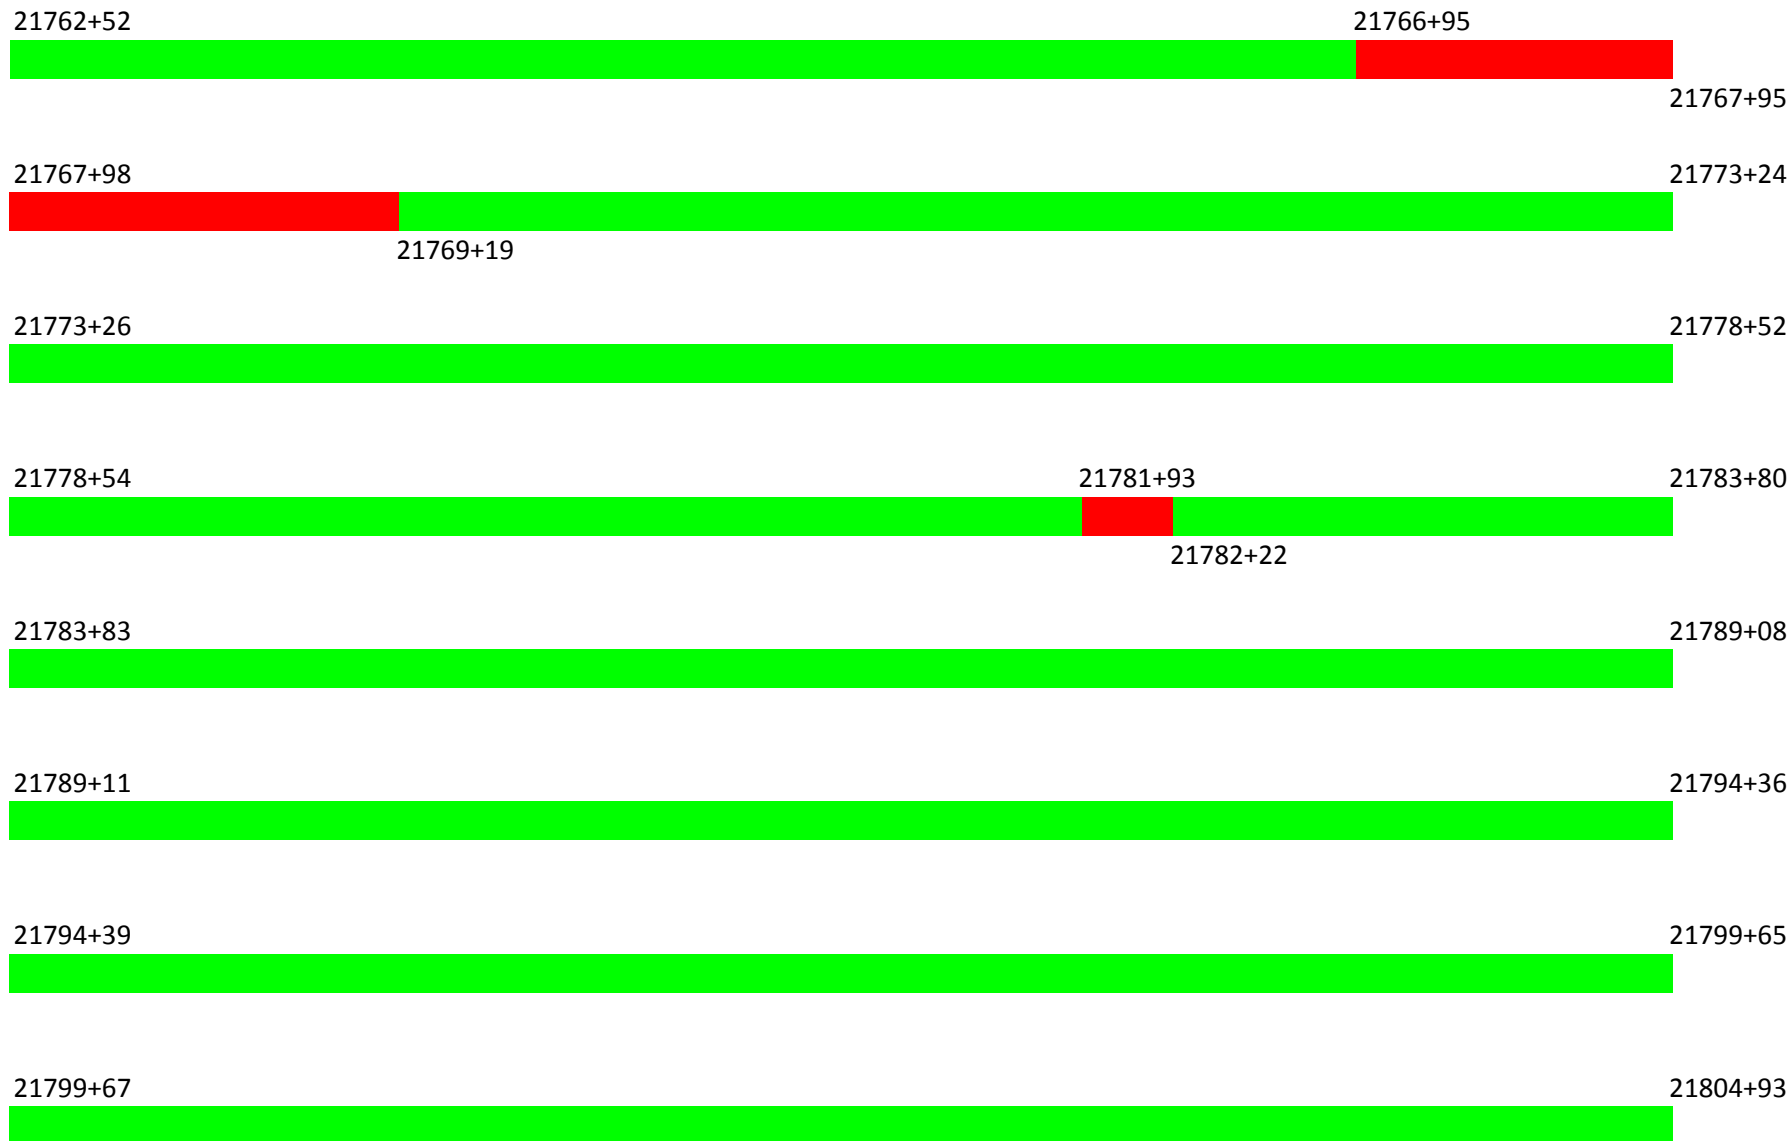

OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION






OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



**OFF CLOSE INTERVAL SURVEY OVERVIEW  
 TEXAS EASTERN TRANSMISSION, L.P.  
 LINE 15; 30 INCH  
 TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION**

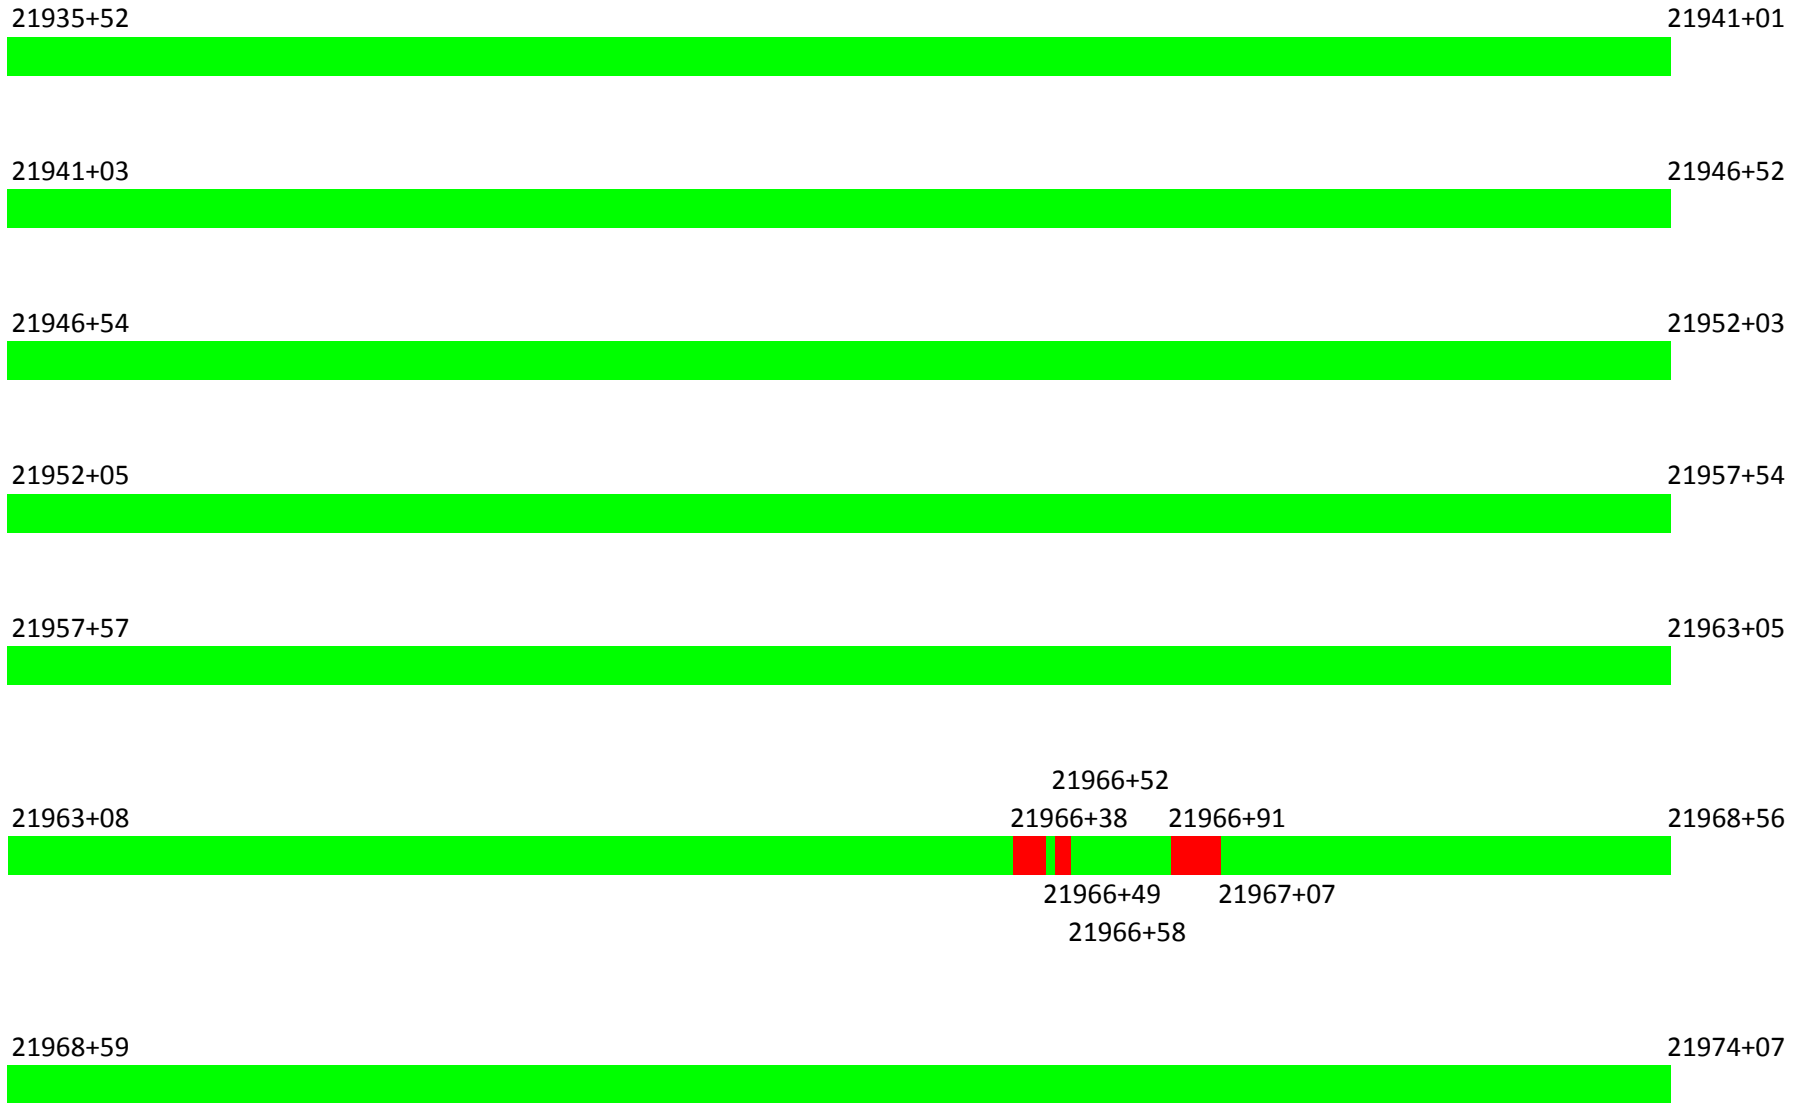

OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION




OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION



**OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION**

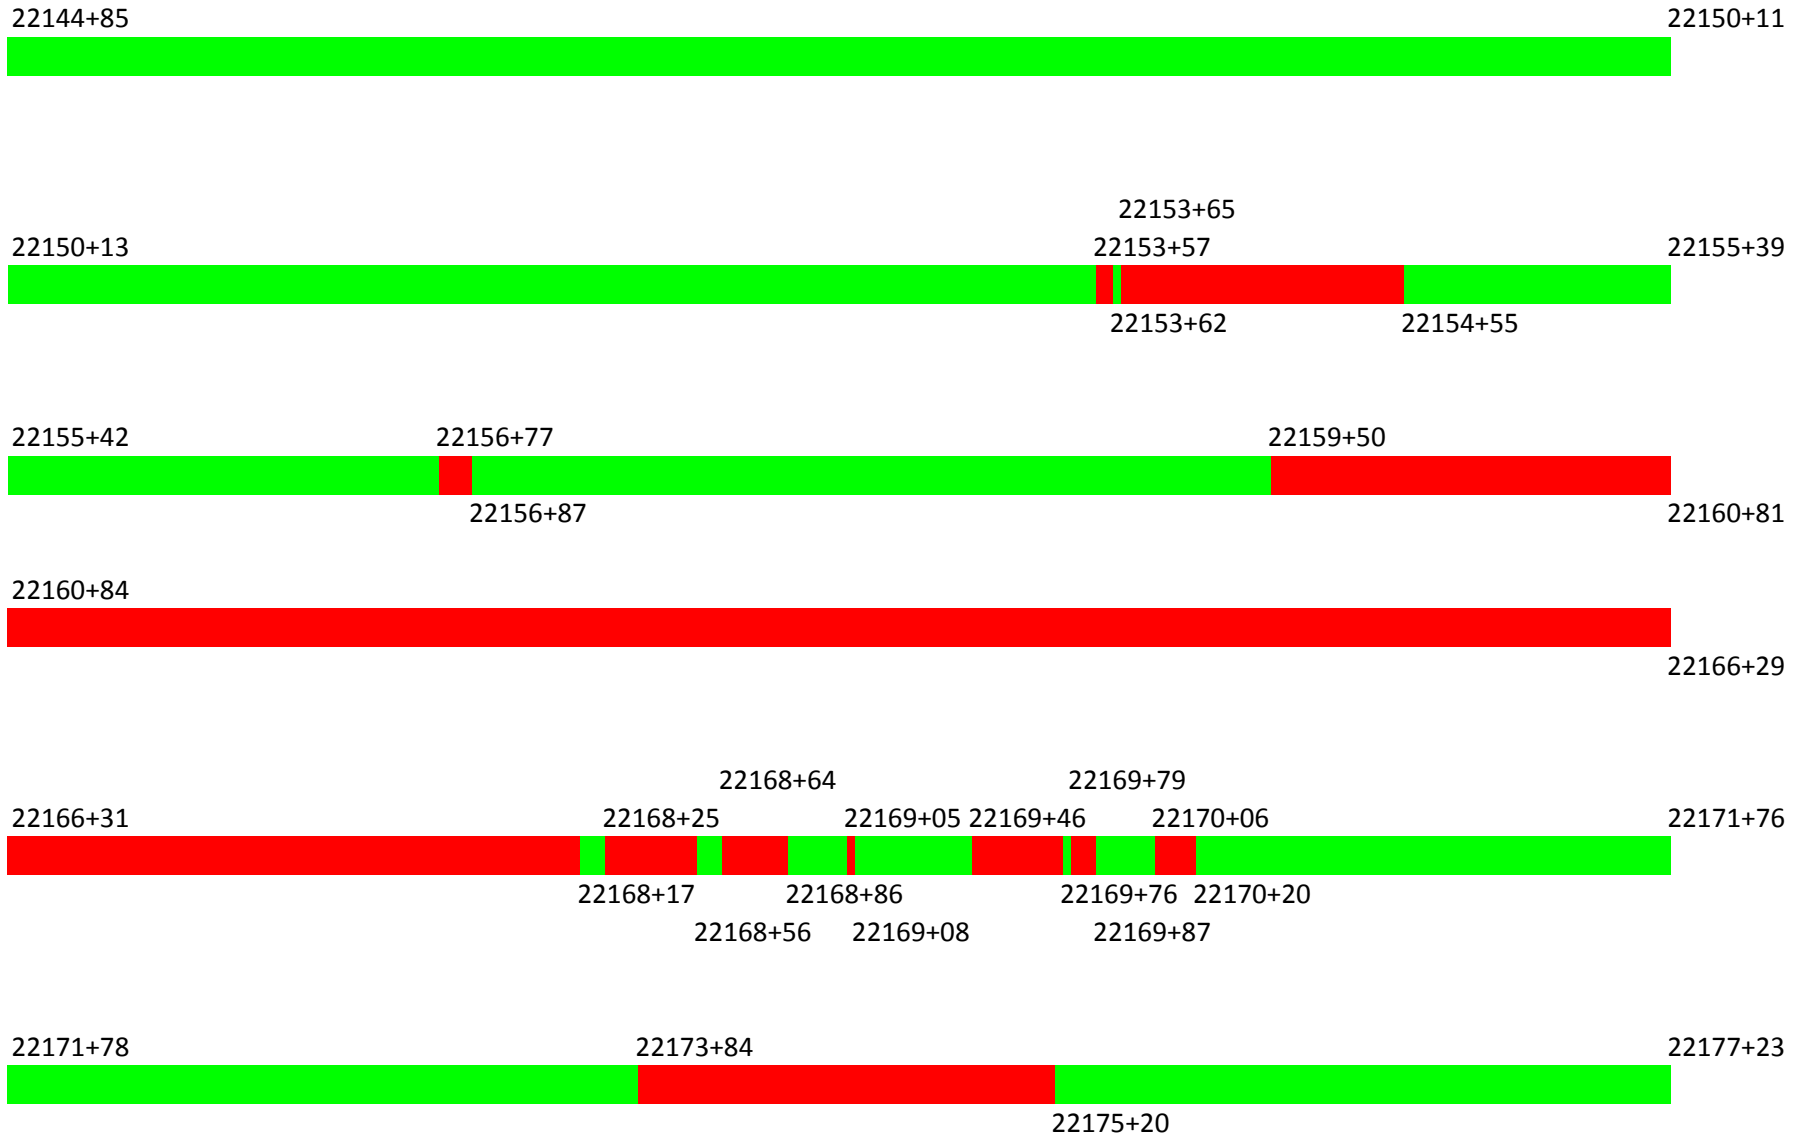

**OFF CLOSE INTERVAL SURVEY OVERVIEW  
 TEXAS EASTERN TRANSMISSION, L.P.  
 LINE 15; 30 INCH  
 TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION**





**OFF CLOSE INTERVAL SURVEY OVERVIEW  
 TEXAS EASTERN TRANSMISSION, L.P.  
 LINE 15; 30 INCH  
 TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION**



OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION




OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION




OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION




**OFF CLOSE INTERVAL SURVEY OVERVIEW  
 TEXAS EASTERN TRANSMISSION, L.P.  
 LINE 15; 30 INCH  
 TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION**

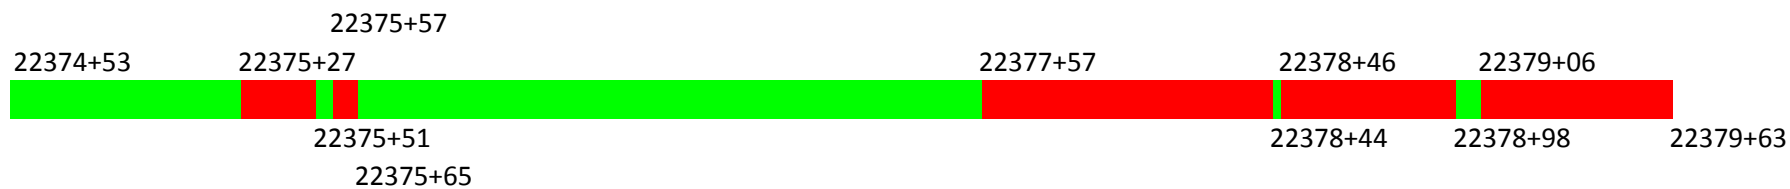

**OFF CLOSE INTERVAL SURVEY OVERVIEW  
 TEXAS EASTERN TRANSMISSION, L.P.  
 LINE 15; 30 INCH  
 TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION**

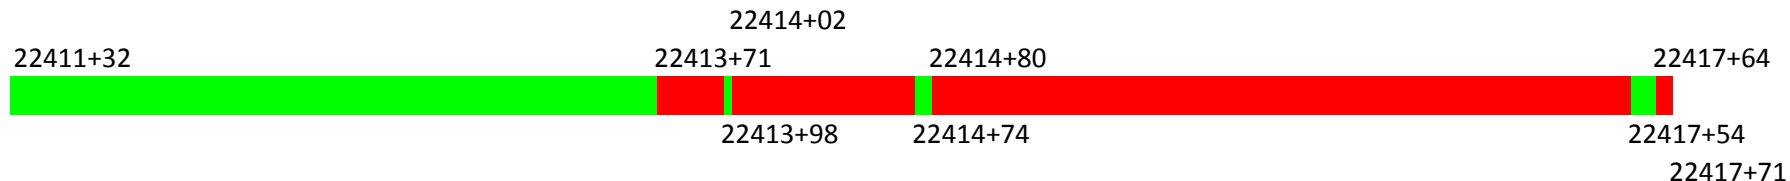

**OFF CLOSE INTERVAL SURVEY OVERVIEW  
 TEXAS EASTERN TRANSMISSION, L.P.  
 LINE 15; 30 INCH  
 TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION**

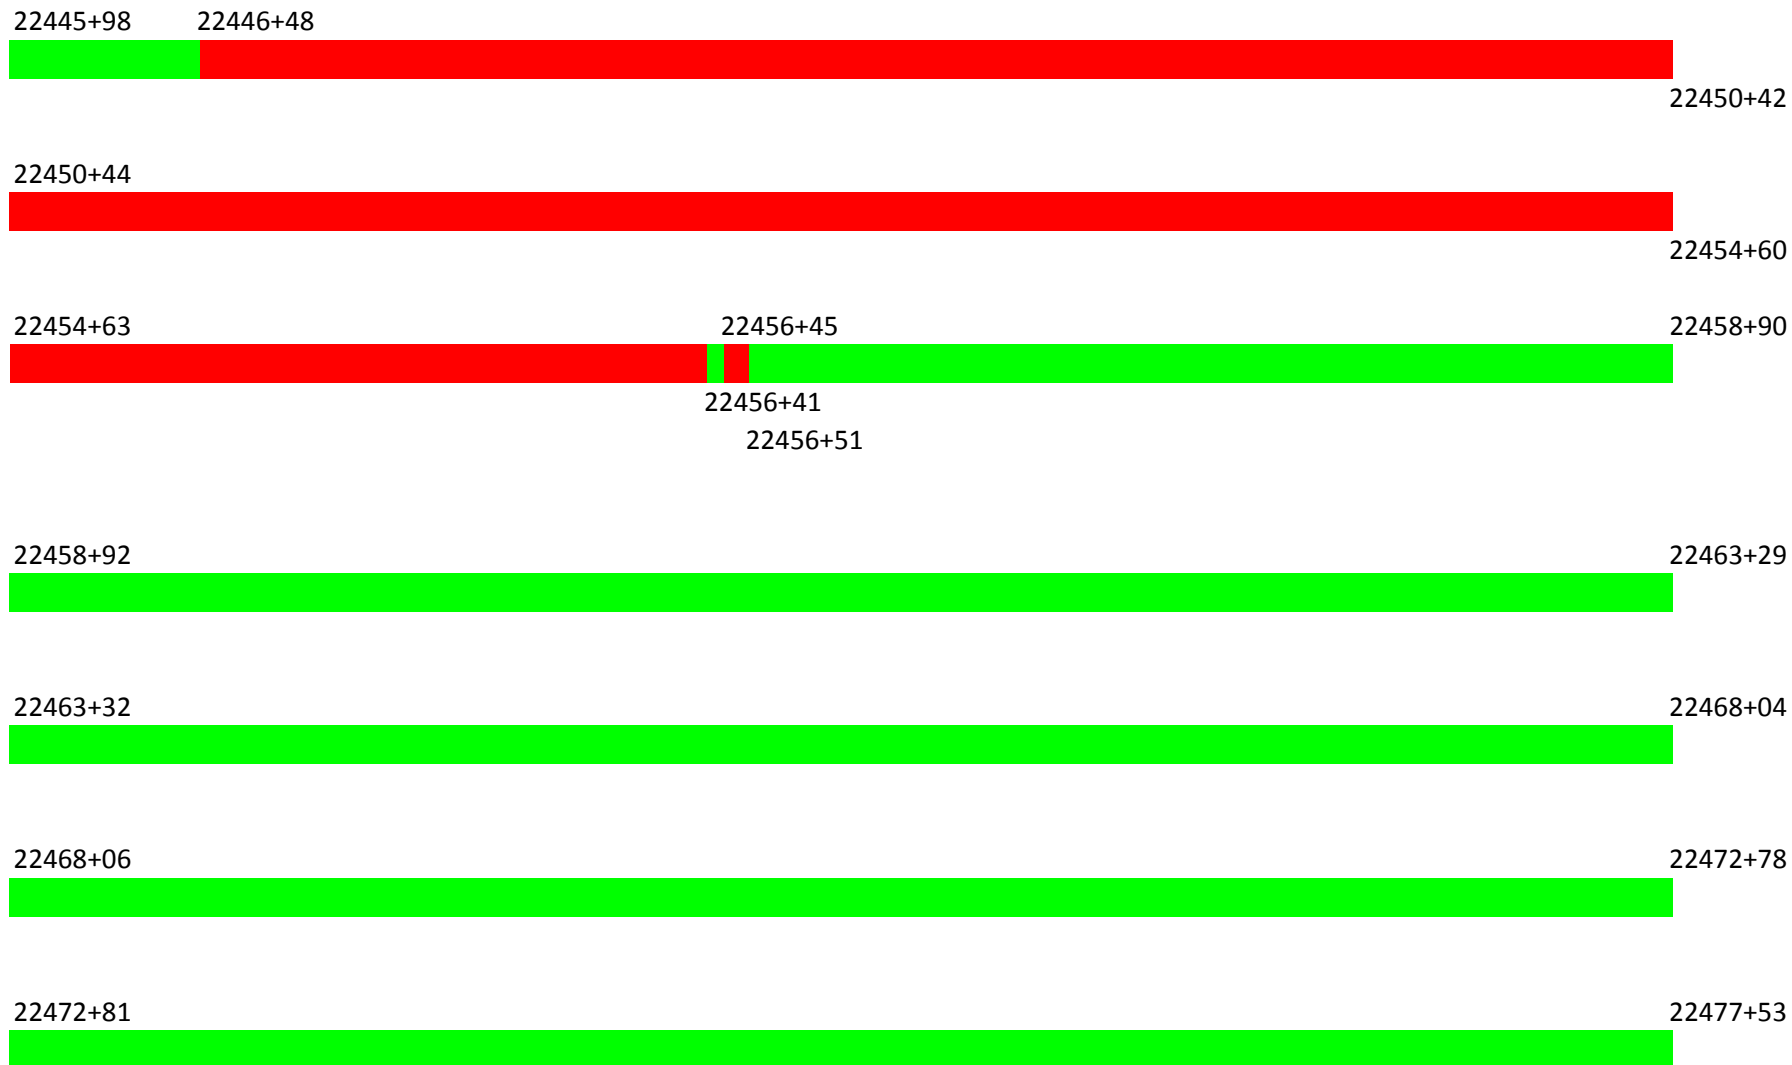


OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION






OFF CLOSE INTERVAL SURVEY OVERVIEW  
TEXAS EASTERN TRANSMISSION, L.P.  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION

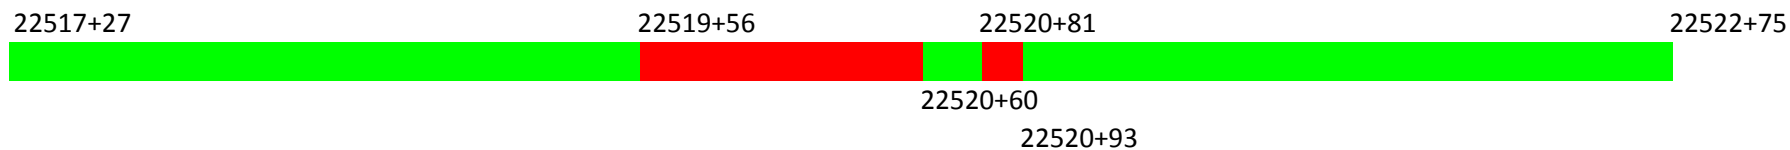

**OFF CLOSE INTERVAL SURVEY OVERVIEW  
 TEXAS EASTERN TRANSMISSION, L.P.  
 LINE 15; 30 INCH  
 TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION**

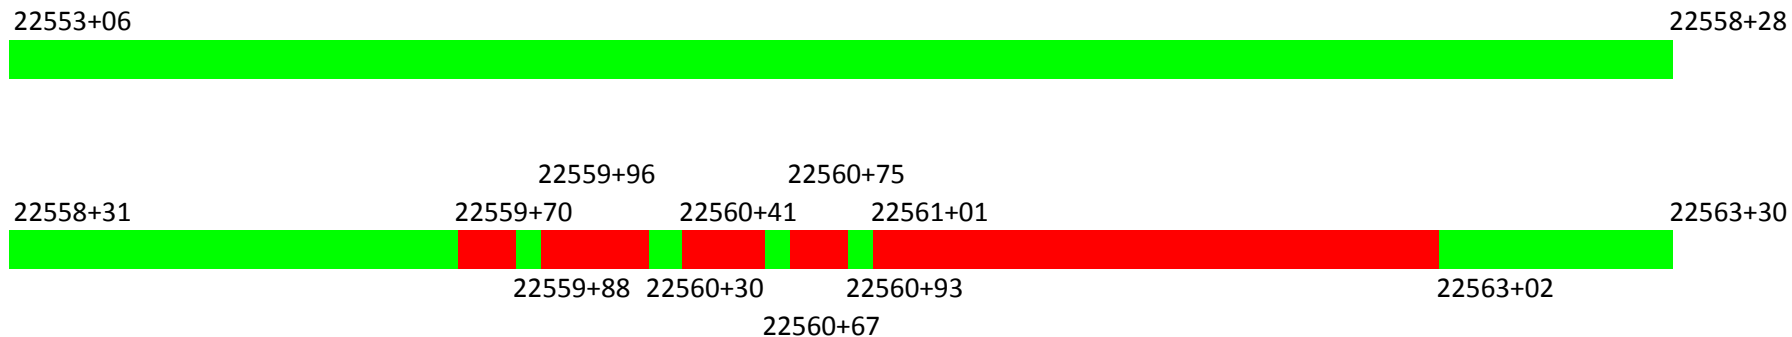

**EXCEPTION REPORT  
TEXAS EASTERN TRANSMISSION, LP  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE  
COMPRESSOR STATION**

ON POTENTIALS LESS NEGATIVE THAN 850mV								
Beginning				Ending				Segment Length (Ft)
MP	Stationing	Latitude	Longitude	MP	Stationing	Latitude	Longitude	
411.7375	21739+74			411.7402	21739+88			14
411.7443	21740+10			411.7492	21740+36			26

OFF POTENTIALS LESS NEGATIVE THAN 850mV								
Beginning				Ending				Segment Length (Ft)
MP	Stationing	Latitude	Longitude	MP	Stationing	Latitude	Longitude	
409.6481	21629+42			409.6511	21629+58			16
409.6530	21629+68			409.6540	21629+73			5
410.0536	21650+83			410.0574	21651+03			20
411.7324	21739+47			411.7606	21740+96			149
413.8848	21853+12			413.8898	21853+38			26
420.9720	22227+32			420.9955	22228+56			124
421.0017	22228+89			421.0148	22229+58			69
421.5424	22257+44			421.5487	22257+77			33
421.5515	22257+92			421.5527	22257+98			6
421.5705	22258+92			421.5710	22258+95			3

**EXCEPTION REPORT  
TEXAS EASTERN TRANSMISSION, LP  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE  
COMPRESSOR STATION**

OFF POTENTIALS MORE NEGATIVE THAN 1200mV								
Beginning				Ending				Segment Length (Ft)
MP	Stationing	Latitude	Longitude	MP	Stationing	Latitude	Longitude	
408.5223	21569+98			408.5267	21570+21			23
408.5278	21570+27			408.6045	21574+32			405
408.6063	21574+41			408.6072	21574+46			5
408.9068	21590+28			408.9405	21592+06			178
408.9498	21592+55			409.0097	21595+71			316
409.1426	21602+73			409.1830	21604+86			213
412.2528	21766+95			412.2949	21769+17			222
412.5366	21781+93			412.5415	21782+19			26
415.1445	21919+63			415.1485	21919+84			21
416.0299	21966+38			416.0316	21966+47			9
416.0326	21966+52			416.0331	21966+55			3
416.0400	21966+91			416.0424	21967+04			13
417.3036	22033+63			417.3051	22033+71			8
417.9006	22065+15			417.9044	22065+35			20
419.5752	22153+57			419.5758	22153+60			3
419.5767	22153+65			419.5932	22154+52			87
419.6358	22156+77			419.6373	22156+85			8
419.6875	22159+50			419.8513	22168+15			865
419.8532	22168+25			419.8585	22168+53			28
419.8606	22168+64			419.8642	22168+83			19
419.8684	22169+05							Single
419.8761	22169+46			419.8813	22169+73			27
419.8824	22169+79			419.8833	22169+84			5
419.8875	22170+06			419.8896	22170+17			11
419.9591	22173+84			419.9845	22175+18			134
420.6377	22209+67			420.6392	22209+75			8

**EXCEPTION REPORT  
TEXAS EASTERN TRANSMISSION, LP  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE  
COMPRESSOR STATION**

OFF POTENTIALS MORE NEGATIVE THAN 1200mV								
Beginning				Ending				Segment Length (Ft)
MP	Stationing	Latitude	Longitude	MP	Stationing	Latitude	Longitude	
420.6403	22209+81			420.6419	22209+89			8
420.6439	22210+00			420.6475	22210+19			19
420.6496	22210+30			420.6527	22210+46			16
420.6553	22210+60			420.6564	22210+66			6
420.6956	22212+73			420.7314	22214+62			189
420.7326	22214+68			420.7333	22214+72			4
420.7386	22215+00			420.7549	22215+86			86
420.7604	22216+15			420.7631	22216+29			14
420.7737	22216+85			420.7792	22217+14			29
420.7811	22217+24			420.8100	22218+77			153
420.8110	22218+82			420.8184	22219+21			39
420.8233	22219+47							Single
420.8273	22219+68			420.8691	22221+89			221
423.7741	22375+27			423.7782	22375+49			22
423.7797	22375+57			423.7807	22375+62			5
423.8176	22377+57			423.8335	22378+41			84
423.8345	22378+46			423.8439	22378+96			50
423.8458	22379+06			424.0133	22387+90			884
424.0142	22387+95			424.0169	22388+09			14
424.0634	22390+55			424.0672	22390+75			20
424.0714	22390+97			424.2015	22397+84			687
424.5021	22413+71			424.5066	22413+95			24
424.5080	22414+02			424.5208	22414+70			68
424.5227	22414+80			424.5741	22417+51			271
424.5765	22417+64			425.0981	22445+18			2754
425.1227	22446+48			425.3102	22456+38			990

**EXCEPTION REPORT  
TEXAS EASTERN TRANSMISSION, LP  
LINE 15; 30 INCH  
TOMPKINSVILLE TO DANVILLE  
COMPRESSOR STATION**

OFF POTENTIALS MORE NEGATIVE THAN 1200mV								
Beginning				Ending				Segment Length (Ft)
MP	Stationing	Latitude	Longitude	MP	Stationing	Latitude	Longitude	
425.3116	22456+45			425.3123	22456+49			4
426.5068	22519+56			426.5259	22520+57			101
426.5305	22520+81			426.5324	22520+91			10
427.2670	22559+70			427.2701	22559+86			16
427.2720	22559+96			427.2780	22560+28			32
427.2805	22560+41			427.2848	22560+64			23
427.2869	22560+75			427.2900	22560+91			16
427.2919	22561+01			427.3295	22563+00			199



**RECTIFIER INTERRUPTION LOG**  
**TEXAS EASTERN TRANSMISSION, L.P.**  
**TOMPKINSVILLE TO DANVILLE COMPRESSOR STATION**

Dates Interrupted		Rectifier			Tap Settings		Volts @ +/- Terminal	mV @ Shunt	Shunt Size	Amps	Rect. Rating V/A	P/S Potentials @ Rectifier	
		ID #	Location/ Description	GPS Coordinates	Coarse	Fine						ON	OFF
Action	Date												
Set	10/9/2012	730111	Sugar Creek Rd.		1 of 3	5 of 6	10.78 V	3.9 mV	50/50	3.9 A	60V/ 24A		
Pulled	10/26/2012				1 of 3	5 of 6	11.15 V	4.0 mV	50/50	4.0 A	60V/ 24A		
Set	10/9/2012	42869	Case Deep Farm		1 of 4	2 of 6	6.10 V	5.4 mV	50/50	5.4 A	80V/ 20A		
Pulled	10/26/2012				1 of 4	2 of 6	6.09 V	5.2 mV	50/50	5.2 A	80V/ 20A		
Set	10/9/2012	730110	Control Room		3 of 3	3 of 6	19.87 V	23.9 mV	50/50	23.9 A	24V/30A		
Pulled	10/26/2012				3 of 3	3 of 6	20.43 V	23.7 mV	50/50	23.7 A	24V/30A		
Set	10/9/2012	70665	Harris Creek Rd.		3 of 3	2 of 6	20.75 V	18.2 mV	50/50	18.2 A	24V/20A		
Pulled	10/26/2012				3 of 3	2 of 6	20.52 V	17.9 mV	50/50	17.9 A	24V/20A		
Set	10/9/2012	60994	Richard's Hollow Remote		3 of 4	5 of 6	56.09V	14.0 mV	50/50	14.0A	60 V/40A		
Pulled	10/26/2012				3 of 4	5 of 6	55.65 V	13.5 mV	50/50	13.5 A	60 V/40A		
Set	10/9/2012	56-6	Hwy 49		3 of 4	5 of 6	82.01 V	11.9 mV	50/50	11.9 A	100V/30A		
Pulled	10/26/2012				3 of 4	5 of 6	85.3 V	10.9 mV	50/50	10.9 A	100V/30A		
Set	10/9/2012	56-7	Hwy 49		2 of 4	1 of 6	7.2 V	3.9mV	50/50	3.9 A	24V/20A		
Pulled	10/26/2012				2 of 4	1 of 6	7.21 V	4.0 mV	50/50	4.0A	24V/20A		
Set	10/9/2012	771168	Knifely		D of E	4 of 4	60.24V	10.6mV	50/50	10.6 A	60V/15A		
Pulled	10/26/2012				D of E	4 of 4	60.59 V	10.6 mV	50/50	10.6 A	60V/15A		

11/29/2012