


Orig-A 98225

GPS RWY 11

400

NC-3, 4 NOV 1999

POINT LOOKOUT/M. GRAHAM CLARK (PLK)
AL-5750 (FAA) POINT LOOKOUT, MISSOURI

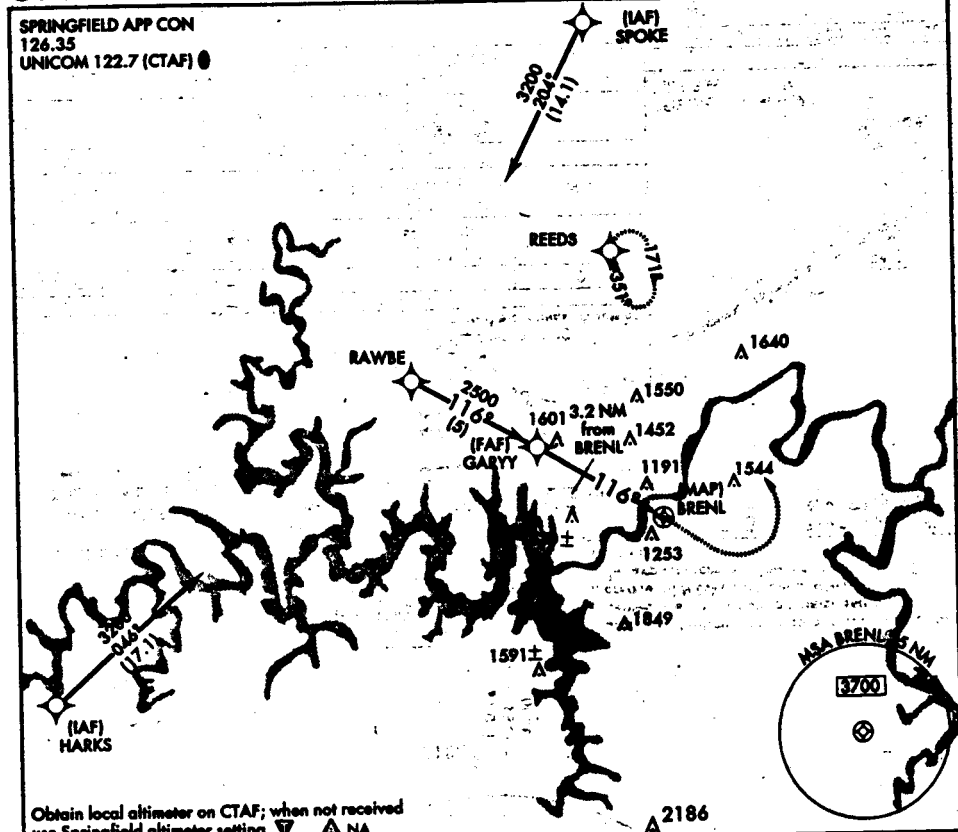

Obtain local altimeter on CTAF; when not received use Springfield altimeter setting. ▽ ▲ NA

RAWBE

3200

Procedure Turn NA

116°

2500

2000

* 2100 when using Springfield altimeter setting

5 NM 1.8 NM 3.2 NM

GARY BRENL

3.2 NM from BRENL

MISSED APPROACH
Climb to 2000 then climbing left turn to 3000 direct REEDS WPT and hold.

ELEV 938

Rwy 11 ldg 3625'
Rwy 29 ldg 3653'

116° to BRENL

TDZE 938

3700 X 100

REIL Rwy 11 and 29
MIRL Rwy 11-29

CATEGORY	A	B	C	D
S-11	1460-1 522 (600-1)		1460-1½ 522 (600-1½)	NA
CIRCLING	1600-1 662 (700-1)		1600-1¾ 662 (700-1¾)	NA
SPRINGFIELD ALTIMETER SETTING MINIMUMS				
S-11	1580-1 642 (700-1)		1580-1¾ 642 (700-1¾)	NA
CIRCLING	1740-1 802 (900-1)	1740-1¼ 802 (900-1¼)	1740-2¼ 802 (900-2¼)	NA

GPS RWY 11

36°38'N-93°14'W

POINT LOOKOUT, MISSOURI