




CABIN HEATER

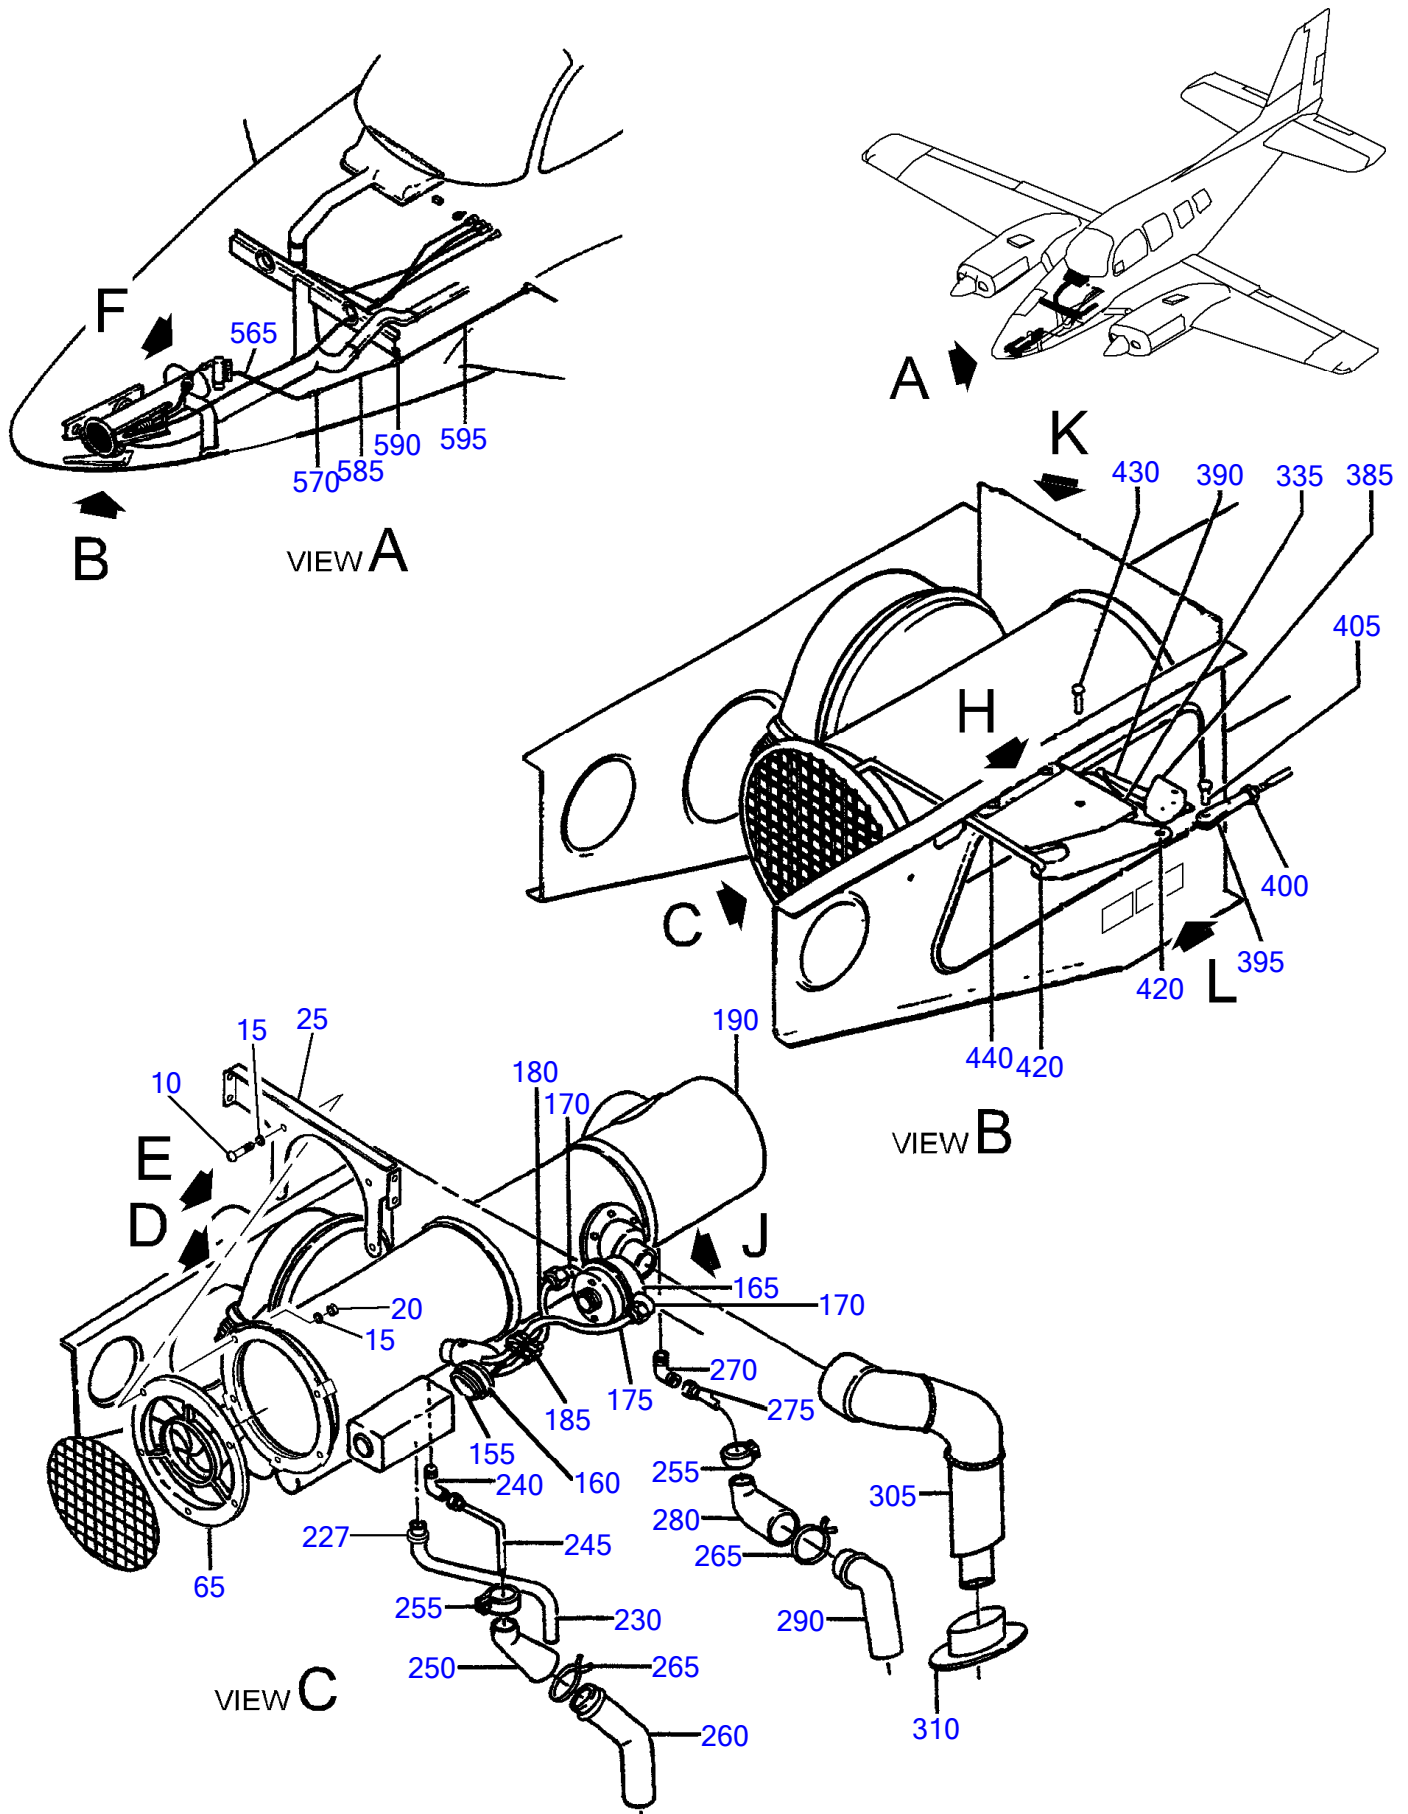



TH-21400003-01-AB




CABIN HEATER

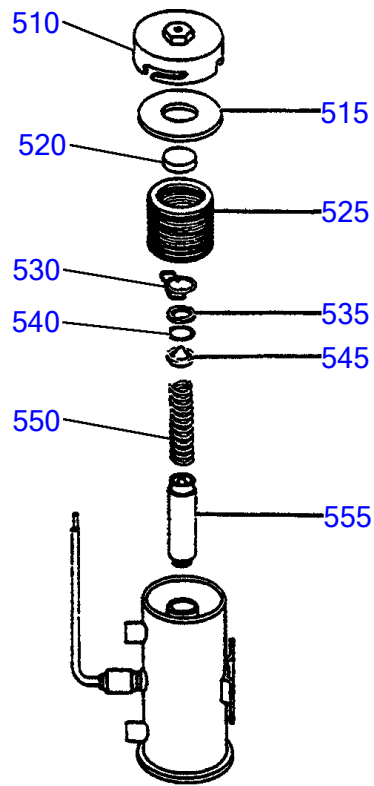


VIEW G

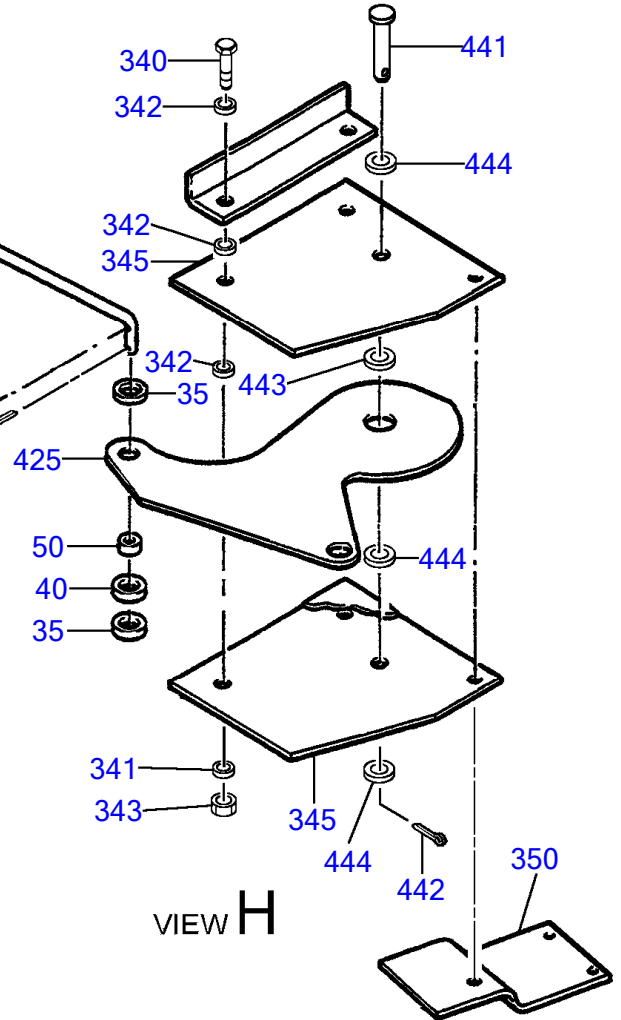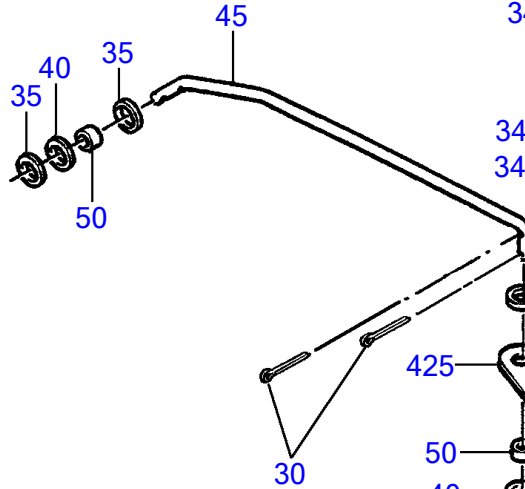


VIEW H

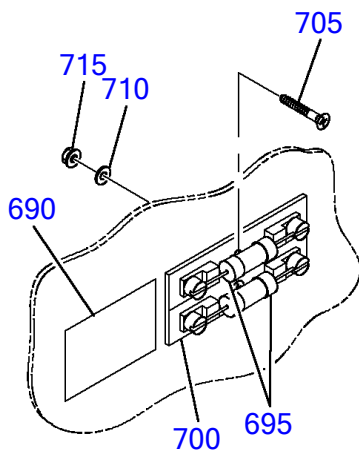

VIEW L

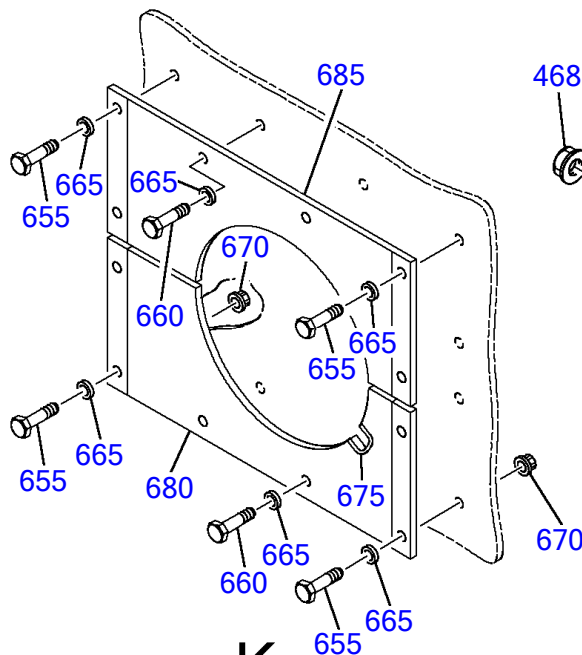

VIEW K

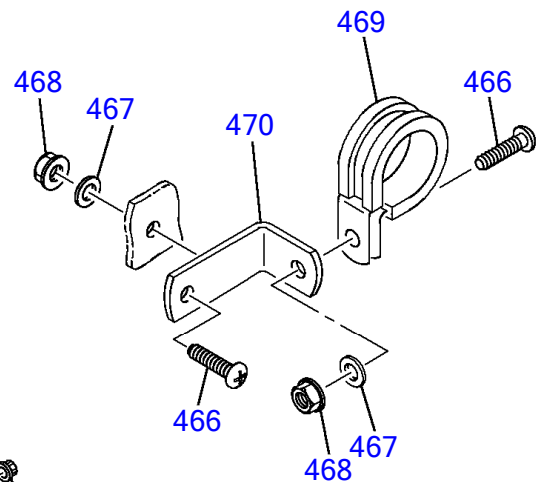

VIEW J

TH-21400003-03-AA

21-40-00-03

3 OF 3

CABIN HEATER

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
		CABIN HEATER	FE	
- 5	58-550021-69	HEATER INSTL-CABIN	B	RF
- 5	58-550021-71	HEATER INSTL-CABIN	C	RF
- 5	58-550021-75	HEATER INSTL-CABIN	E	RF
- 5	58-550021-77	HEATER INSTL-CABIN	F	RF
- 5	58-550021-79	HEATER INSTL-CABIN	G	RF
- 5	58-550021-85	HEATER INSTL-CABIN	D	RF
- 5	58-550021-105	HEATER INSTL-CABIN	H	RF
- 5	58-550021-107	HEATER INSTL-CABIN	J	RF
- 5	58-550021-109	HEATER INSTL-CABIN	K	RF
- 5	58-550021-121	HEATER INSTL-CABIN	T	RF
- 5	58-550021-123	HEATER INSTL-CABIN	V	RF
- 5	58-550021-125	HEATER INSTL-CABIN	W	RF
- 6	58-550021-127	PUMP INSTL-FUEL	T	RF
- 6	58-550021-129	PUMP INSTL-FUEL	AF	RF
10	MS35207-267	• SCREW	W	5
10	AN520-10R	• SCREW	AD	5
15	NAS1149F0363P	• WASHER	FE	10
20	130909N29	• NUT	FE	5
25	58-550020-15	• SUPPORT-UPPER, FWD	FE	1
30	MS24665-132	• PIN-COTTER	FE	2
35	NAS1149F0363P	• WASHER	FE	4
40	NAS1149F0332P	• WASHER	FE	AR
45	58-550021-21	• LINK	FE	1
50	95-550002-23	• BUSHING	FE	2
65	95-550002-17	• VALVE ASSY-IRIS, CABIN HEATER	FE	1
66	MS21919WDG24	• CLAMP- FOR SPARES ORDER: AS21919WDG24	FE	1
66	AS21919WDG24	• CLAMP- SPARES REPLACEMENT FOR: MS21919WDG24	FE	1
		ATTACHING PARTS		
- 67	MS27039-1-08	• SCREW	W	1
- 67	MS27039-1-10	• SCREW	AD	1
- 68	130909N29	• NUT	FE	1
		-----★-----		
70	58-550022-1	• DUCT-COMBUSTION AIR INTAKE FOR SPARES ORDER: 58-550022-3	AA	1
70	58-550022-3	• DUCT-COMBUSTION AIR INTAKE SPARES REPLACEMENT FOR: 58-550022-1	Z	1
75	MS27405-12P	• CLAMP	AD	1
75	AN737TW56-66	• CLAMP- ALTERNATE SPARE: AN737TW56-66BLIN FOR SPARES ORDER: 132742-56L	W	1
75	AN737TW56-66BLIN	• CLAMP- ALTERNATE SPARE: AN737TW56-66	W	1
75	132742-56L	• CLAMP- SPARES REPLACEMENT FOR: AN737TW56-66	W	1
80	130909B36	• BOLT	AD	1
85	NAS1149F0432P	• WASHER	AD	1
90	130909N32	• NUT	AD	1
- 95	83D91-1	• BLOWER ASSY-COMBUSTION AIR	FE	1
100	84D38-2	• • ADAPTER-INLET	FE	1
105	84D43-3	• • HOUSING-WITH BRACKET	FE	1
110	35D41	• • WHEEL	FE	1
115	86D72-1	• • HOUSING	FE	1

CABIN HEATER

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
- 120	86D38-1	• SCREW-HOUSING ATTACH	FE	5
125	27D39	• MOTOR-COMBUSTION AIR BLOWER	FE	1
- 130	86D35-1	• SCREW-MOTOR ATTACH	FE	1
135	58-550021-15	• CUSHION-COMBUSTION AIR BLWR MOTOR	FE	1
140	115798-18	• CLAMP-COMBUSTION AIR BLWR MOTOR	AD	2
140	MS35842-15	• CLAMP-COMBUSTION AIR BLWR MOTOR FOR SPARES ORDER: 20060S	W	2
140	20060S	• CLAMP-COMBUSTION AIR BLWR MOTOR SPARES REPLACEMENT FOR: MS35842-15	W	2
145	58-550020-9	• SUPPORT ASSY-COMBUSTION AIR BLWR MOTOR	FE	1
150	130909B14	• BOLT-SUPPORT ASSY ATTACH	FE	6
155	109645-025-4A	• DUCT-COMBUSTION AIR BLOWER	FE	1
160	NAS1924-66	• CLAMP- ALTERNATE SPARE: 132742-66L	FE	2
160	132742-66L	• CLAMP- ALTERNATE SPARE: NAS1924-66	FE	2
165	R76B1G12	• SWITCH-COMBUSTION AIR PRESSURE	A	1
165	94E42-2	• SWITCH-COMBUSTION AIR PRESSURE	X	1
170	69F_3/16_X_1/8	• ELBOW- FOR SPARES ORDER: 69-F-03X02 169HD-3-2	AJ	2
170	69-F-03X02	• ELBOW- SPARES REPLACEMENT FOR: 69F_3/16_X_1/8 FOR SPARES ORDER: 169HD-3-2	AK	2
170	169HD-3-2	• ELBOW- SPARES REPLACEMENT FOR: 69F_3/16_X_1/8 69-F-03X02	FE	2
175	58-550021-67	• TUBE-HIGH PRESSURE PORT	A	1
175	58-550021-145	• TUBE-HIGH PRESSURE PORT	X	1
180	58-550021-65	• TUBE-LOW PRESSURE PORT	A	1
180	58-550021-143	• TUBE-LOW PRESSURE PORT	X	1
185	62-CM-03	• UNION- ALTERNATE SPARE: 62C-3	FE	2
185	62C-3	• UNION- ALTERNATE SPARE: 62-CM-03	FE	2
190	58-380057-7	• HEATER ASSY- FOR SPARES ORDER: 58-380057-9 FOR DETAILS SEE: 21-40-00-02	Y	1
190	58-380057-9	• HEATER ASSY- SPARES REPLACEMENT FOR: 58-380057-7 FOR DETAILS SEE: 21-40-00-02	Z	1

21-40-00-03

Missing Item Not Applicable

CABIN HEATER

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
- 195	35-380138-5	• METER-HEATER HR NOSE	U	1
		BAGGAGE COMPARTMENT		
- 200	102-550056-1	• PLATE-IDENTIFICATION	U	1
		HEATER HOURS		
- 205	87D24-5	• IGNITION ASSY	FE	1
- 210	57D27	• • FILTER-RADIO NOISE	FE	1
- 215	10D48	• • VIBRATOR	FE	1
- 220	81D13-1	• • CONDENSER	FE	1
- 225	93C31	• • COIL	FE	1
227	A-8	• CLAMP-FWD HEATER VENT	AD	1
227	GS-4	• CLAMP-FWD HEATER VENT	W	1
		ALTERNATE SPARE:		
		3604		
227	3604	• CLAMP-FWD HEATER VENT	W	1
		ALTERNATE SPARE:		
		GS4		
230	58-550021-39	• HOSE-FLEX, HEATER VENT	FE	1
- 235	130292A8	• CLAMP-FLEX HOSE	FE	1
240	MS20823-5D	• ELBOW-FWD HEATER DRAIN	AB	1
240	MS20823-5J	• ELBOW-FWD HEATER DRAIN	AC	1
245	58-550021-7	• TUBE ASSY-FWD HEATER DRAIN	FE	1
250	58-550021-41	• HOSE-FWD HEATER DRAIN	FE	1
255	GS5	• CLAMP-FWD AND AFT DRAIN HOSE	FE	2
		ALTERNATE SPARE:		
		3608		
255	3608	• CLAMP-FWD AND AFT DRAIN HOSE	FE	2
		ALTERNATE SPARE:		
		GS5		
260	58-550021-43	• TUBE-FWD HEATER DRAIN	FE	1
265	A-16	• CLAMP-FWD AND AFT HEATER	FE	2
		DRAIN TUBE		
270	AS5195D0502	• ELBOW-AFT HEATER DRAIN	AB	1
270	AS5195J0502	• ELBOW-AFT HEATER DRAIN	AC	1
275	58-550021-9	• TUBE ASSY-AFT HEATER DRAIN	FE	1
280	58-550021-47	• HOSE-AFT HEATER DRAIN	FE	1
- 285	AN737TW34-38	• CLAMP-	FE	1
		FOR SPARES ORDER:		
		AN737TW34-38BLIN		
- 285	AN737TW34-38BLIN	• CLAMP-	FE	1
		SPARES REPLACEMENT FOR:		
		AN737TW34-38		
290	58-550021-45	• TUBE-AFT HEATER DRAIN	FE	1
- 295	MS35489-20	• GROMMET	FE	1
- 300	NAS557-16	• GROMMET	FE	1
305	58-550023-21	• EXHAUST ASSY-HEATER	FE	1
		SPARES REPLACEMENT FOR:		
		58-550023-1		
310	58-550024-1	• PLATE-HEATER EXHAUST	FE	1
- 315	MS27039-1-08	• SCREW-EXHAUST PLATE ATTACH	FE	6
- 330	55-4362-2155	• CONTROL-IRIS VALVE	R	1
- 330	95-550002-33	• CONTROL-IRIS VALVE	N	1
- 330	95-550002-229	• CONTROL-IRIS VALVE	Q	1
335	95-550002-27	• PLATE-HEATER CONTROL	FE	2
340	130909B14	• BOLT	AD	2
340	130909B15	• BOLT	W	2
341	NAS1149F0332P	• WASHER	W	2
342	NAS1149F0363P	• WASHER	W	6
343	130909N29	• NUT	W	2
345	95-550002-21	• GUIDE-PHENOLIC	FE	2
350	95-550002-19	• BRACKET-MICROSWITCH MOUNTING	FE	1
		ATTACHING PARTS		
- 355	MS35207-270	• SCREW	FE	1
- 365	NAS43DD3-48FC	• SPACER	FE	1

CABIN HEATER

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
- 370	NAS1149F0332P	• WASHER	FE	1
- 375	NAS1149F0363P	• WASHER	FE	2
- 380	130909N29	• NUT	FE	1
		-----★-----		
385	MS25026-1	• SWITCH-IRIS VALVE LIMIT	FE	1
390	AN3169	• ACTUATOR-MICROSWITCH	FE	1
395	AN665-21R	• CLEVIS	FE	1
		ATTACHING PARTS		
400	AN315-3R	• NUT	FE	1
405	MS20392-2C11	• PIN-CLEVIS	FE	1
- 410	NAS1149F0363P	• WASHER	FE	50
- 415	MS24665-132	• PIN-COTTER	FE	1
		-----★-----		
420	95-550002-23	• BUSHING	FE	3
425	95-550002-31	• BELLCRANK-HEAT CONTROL	FE	1
		ATTACHING PARTS		
430	MS20392-2C11	• PIN-CLEVIS	FE	1
- 435	MS24665-132	• PIN-COTTER	FE	1
		-----★-----		
440	95-550002-29	• LINK	FE	1
441	MS20392-2C11	• PIN-CLEVIS	W	1
442	MS24665-132	• PIN-COTTER	W	1
443	NAS1149F0332P	• WASHER	W	1
444	NAS1149F0363P	• WASHER	W	3
445	58-550021-35	• TUBE ASSY-HEATER FUEL	S	1
450	366-00-17	• CHECK VALVE-HEATER FUEL	AG	1
		ALTERNATE SPARE: 340000-4		
450	340000-4	• CHECK VALVE-HEATER FUEL	AG	1
		ALTERNATE SPARE: 366-00-17		
455	MS21919DF17	• CLAMP-	S	1
		ALTERNATE SPARE: AS21919DF17		
455	AS21919DF17	• CLAMP-	S	1
		ALTERNATE SPARE: MS21919DF17		
		ATTACHING PARTS		
- 460	MS35207-263	• SCREW	S	1
		-----★-----		
465	58-550021-31	• TUBE ASSY-HEATER FUEL	S	1
466	AN525-10R8	• SCREW	W	2
467	NAS1149F0363P	• WASHER	W	2
468	130909N29	• NUT	W	2
469	MS21919WDG4	• CLAMP	W	1
470	MS9600-12	• BRACKET	W	1
- 473	58-550021-19	• TUBE ASSY	AE	1
- 475	58-550021-131	• TUBE ASSY	AE	1
- 477	58-550021-135	• TUBE ASSY	T	1
- 479	58-550021-139	• TUBE ASSY	AE	1
481	MS20822-4D	• ELBOW-HEATER FUEL PUMP	FE	2
		FOR SPARES ORDER: AS5195D0402		
481	AS5195D0402	• ELBOW-HEATER FUEL PUMP	FE	2
		SPARES REPLACEMENT FOR: MS20822-4D		
483	7760598	• CONNECTOR-HEAT FUEL PUMP	FE	1
485	MS35207-266	• SCREW	AF	1
487	MS35207-268	• SCREW	AF	1
489	MS35333-39	• WASHER	AF	4
491	NAS1149F0363P	• WASHER	AF	6
493	NAS43HT3-16	• SPACER	AF	1
495	130909N29	• NUT	AF	2

21-40-00-03

Printed from Hawker Beechcraft Corporation Interactive Maintenance Library (IML).
P/N: 58-590000-19 Reissue P - October 1, 2011

Missing Item Not Applicable

CABIN HEATER

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
497	AN315-3R	• NUT	AF	2
- 500	58-550021-27	• WIRE ASSY-CONNECTOR	FE	1
- 505	476284	• PUMP ASSY-HEATER FUEL FOR SPARES ORDER: 58-920054-1	AE	1
- 505	58-920054-1	• PUMP ASSY-FUEL, ELECTRIC SPARES REPLACEMENT FOR: 476284 ALTERNATE SPARE: 58-920054-11	AE	1
- 505	58-920054-11	• PUMP ASSY-FUEL, ELECTRIC ALTERNATE SPARE: 58-920054-1	AE	1
510	478130	• • COVER	AE	1
515	479136	• • GASKET-COVER	AE	1
520	479012	• • MAGNET	AE	1
525	479135	• • FILTER	AE	1
530	479137	• • RETAINER-PLUNGER AND CUP	AE	1
535	479138	• • WASHER	AE	1
540	479139	• • SPRING-CUP GASKET	AE	1
545	479132	• • SPRING-CUP AND VALVE	AE	1
550	476285	• • SPRING-PLUNGER RETURN	AE	1
555	476474	• • PLUNGER	AE	1
565	95-550002-201	• TUBE ASSY	P	1
565	95-550000-23	• TUBE ASSY	N	1
570	MS24393D4	• UNION	FE	1
- 575	AN924-4	• NUT- ALTERNATE SPARE: AS5178-04	FE	4
- 575	AS5178-04	• NUT- ALTERNATE SPARE: AN924-4	FE	4
- 580	NAS1149F0763P	• WASHER	FE	1
585	95-550000-21	• TUBE ASSY-HEATER FUEL	FE	1
590	AS5174-0404	• UNION	FE	1
595	95-550000-57	• TUBE ASSY	N	1
595	95-550000-239	• TUBE ASSY	P	1
605	58-550021-89	• TUBE ASSY	M	1
610	MS24402D4	• TEE- FOR SPARES ORDER: AS1035D040404	M	1
610	AS1035D040404	• TEE- SPARES REPLACEMENT FOR: MS24402D4	M	1
615	58-550021-97	• TUBE ASSY	M	1
620	58-550021-93	• TUBE ASSY	M	1
625	366-00-17	• CHECK VALVE-HEATER FUEL ALTERNATE SPARE: 340000-4	M	2
625	340000-4	• CHECK VALVE-HEATER FUEL ALTERNATE SPARE: 366-00-17	M	2
630	MS21919DF17	• CLAMP	M	2
635	AN825-4	• TEE	M	1
640	58-550021-101	• TUBE ASSY	M	1
645	58-550021-31	• TUBE ASSY	FE	1
- 650	55-5015-1S	• KIT-HEATING MISCELLANEOUS DATA: ADDITION OF SECOND CHECK VALVE TO FUEL PLUMBING. SAME AS ABOVE LISTED ITEMS	L	1
655	130909B15	• BOLT	FE	8

21-40-00-03

Missing Item Not Applicable

CABIN HEATER

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
660	130909B14	• BOLT	FE	4
665	NAS1149F0363P	• WASHER	FE	12
670	130909N29	• NUT	FE	2
675	AN931-9-13	• GROMMET- ALTERNATE SPARE: MS21266-2N	FE	1
675	MS21266-2N	• GROMMET- ALTERNATE SPARE: AN931-9-13	FE	1
680	58-550020-17	• SUPPORT-LWR, AFT	FE	1
685	58-550020-19	• SUPPORT-UPR, AFT	FE	1
690	36-364028-77	• PLACARD	AH	1
695	AGC-2	• FUSE- REFERENCE DESIGNATOR NO.: F42	AH	2
700	4522	• BLOCK-FUSE HOLDER REFERENCE DESIGNATOR NO.: XF42	AH	1
		ATTACHING PARTS		
705	MS24693-S28	• SCREW	AH	2
710	NAS1149FN632P	• WASHER	AH	2
715	MS21042-06	• NUT	AH	2
		-----★-----		
A	C1927-C9999,E1076-E9999, H0713-H1844			
B	C1927-C1969,C1971-C2002			
C	E1076-E1080,E1082-E1083			
D	H0713-H0765,H0767-H0772			
E	C1970-C1970,C2003-C2014			
F	E1081-E1081,E1084-E1085			
G	H0766-H0766,H0773-H0781			
H	C2015-C2330			
J	E1086-E1178			
K	H0782-H1144			
L	C1927-C2014,E1076-E1085, H0713-H0781			
M	C2015-C9999,E1086-E9999, H0782-H9999			
N	C1927-C9999			
P	E1076-E9999,H0713-H9999			
Q	E1076-E1118,E1120-E1124, H0713-H0872,H0874-H0894			
R	E1119-E1119,E1125-E9999, H0873-H0873,H0895-H9999			
S	C1927-C2330,E1076-E1170, H0713-H1144			
T	C2331-C9999			
U	C2389-C9999,E1191-E9999, H1253-H9999			
V	E1179-E9999			
W	H1145-H9999			
X	H1845-H9999			
Y	C1927-C9999,E1076-E9999, H0713-H1801			
Z	H0713-H9999			
AA	C1927-C9999,E1076-E9999, H0713-H1471			
AB	C1927-C2393,E1076-E1190, H0713-H1259			
AC	C2394-C9999,E1191-E9999, H1260-H9999			
AD	C1927-C9999,E1076-E9999, H0713-H1144			

CABIN HEATER

ITEM	PART NUMBER	DESCRIPTION	USABLE ON CODE	UNITS PER ASSY
AE	C2331-C9999,E1179-E9999, H1145-H9999			
AF	E1179-E9999,H1145-H9999			
AG	C1927-C2014,C2331-C9999, E1076-E1085,E1179-E9999, H0713-H0781,H1145-H9999			
AH	H2240-H9999			
AJ	C1927-C9999,E1076-E9999, H0713-H1663			
AK	C1927-C9999,E1076-E9999, H0713-H2239			
FE	C1927-C9999,E1076-E9999, H0713-H9999			