


# ROBINSON ILLUSTRATED PARTS CATALOG

MODEL R44

FIGURE AND INDEX NUMBER	PART NUMBER	DESCRIPTION	PARTS AVAIL	USABLE ON CODE	QTY PER ASSY
FORWARD SERVOS INSTALLATION					
7-61-1	D200-1	Clevis .....	X		2
2	B330-19	Palnut .....	X		2
3	AN316-6R	Nut .....	X		2
4	D200-3	Washer .....	X		2
5	D200-2	Scissor .....	X		2
6	NAS1149FN832P	Washer .....	X		2
7	MS21042L08	Nut .....	X		1
8	MS27039C0806	Screw .....	X		1
9	B330-6	Palnut .....	X		1
10	NAS6604-2	Bolt .....	X		4
11	NAS1149F0432P	Washer .....	X		16
12	MS21042L4	Nut .....	X		8
13	NAS6604-16	Bolt .....	X		4
14	B330-13	Palnut .....	X		4
15	D212-1	Servo Assembly (forward) .....	X		2
16	D201-5	Support (Supersedes D201-1; <u>must</u> use D201-5 on R44 II)	X		1
17	B330-16	Palnut .....	X		2
18	AN316-5R	Nut .....	X		2
19	C121-28	Push-Pull Tube Assembly (Ref, see Figure 7-21F. Ship S/N 1001 and on.)			
	C121-24	Push-Pull Tube Assembly (Ref, see Figure 7-21B. Ship S/N 1000 and prior.)			

X - Available as separate spares item  
 0 - Available only as part of assembly

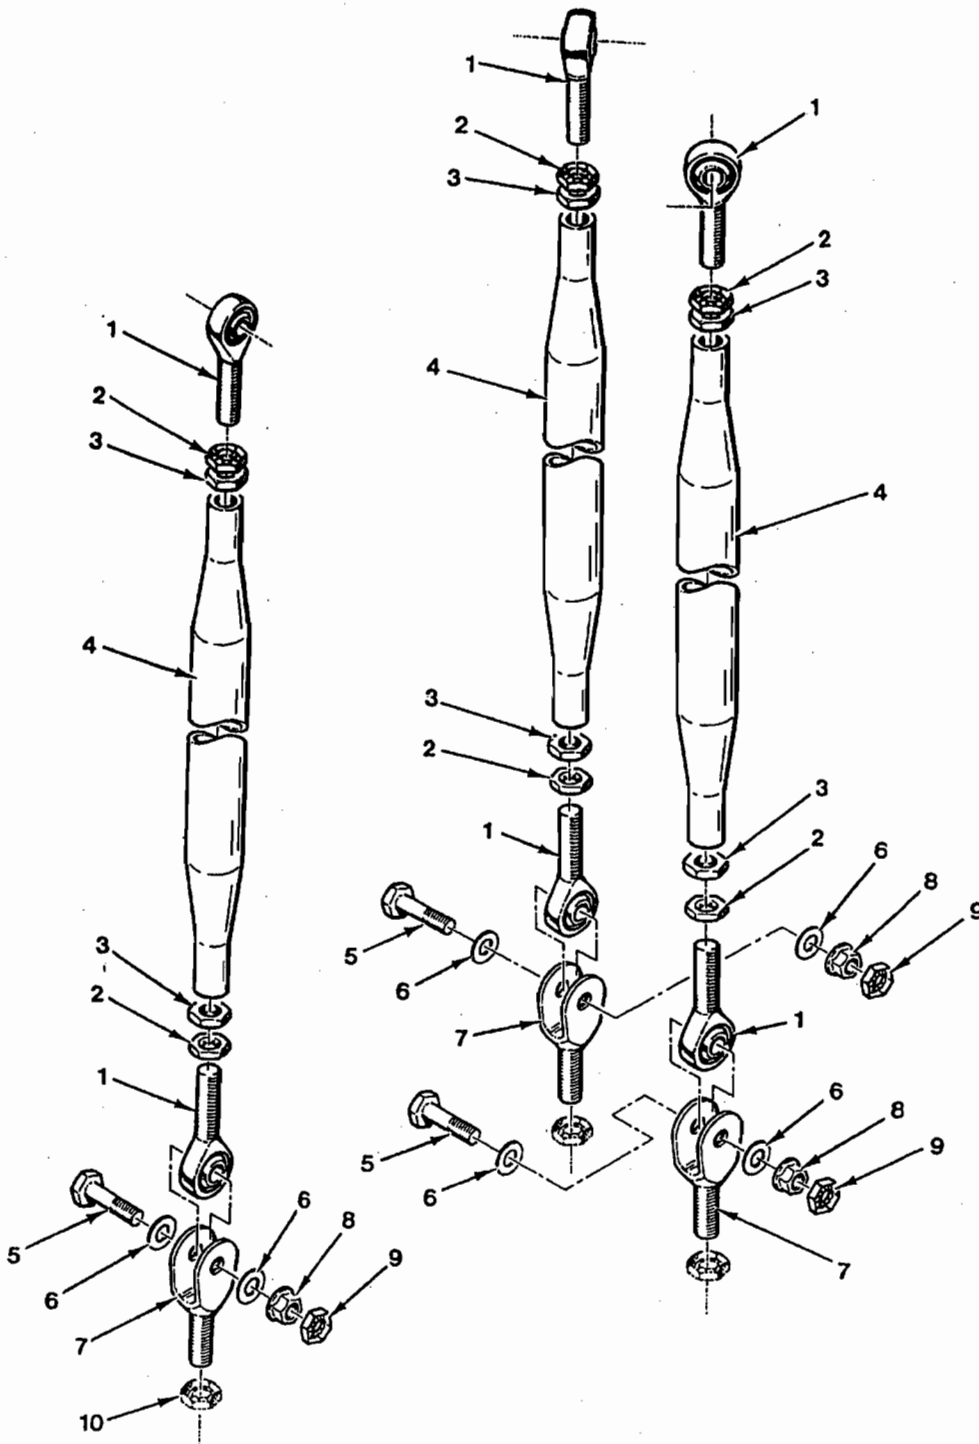

# ROBINSON ILLUSTRATED PARTS CATALOG

MODEL R44

FIGURE AND INDEX NUMBER	PART NUMBER	DESCRIPTION	PARTS AVAIL	USABLE ON CODE	QTY PER ASSY
<b>PUSH-PULL TUBE ASSEMBLIES</b>					
7-63-1	D173-2	Rod End .....	X		2
2	B330-19	Palnut .....	X		2
3	AN316-6R	Nut .....	X		2
4	C121-31	Push-Pull Tube Assembly (Incl items 1 thru 3) .....	X		3
5	NAS6605-9	Bolt .....	X		3
6	NAS1149F0532P	Washer .....	X		6
7	D200-1*	Clevis (Ref) .....	X		3
8	MS21042L5	Nut .....	X		3
9	B330-16	Palnut .....	X		3
10	B330-19*	Palnut (Ref)			
*See also Figures 7-55 and 7-61.					

X - Available as separate spares item  
 0 - Available only as part of assembly

REV FEB 2003

7-63